TOSHIBA

FILE NO. 813-200201
SUPPLEMENT

SERVICE MANUAL

DVD VIDEO/AUDIO PLAYER

SD-4800

– SUMMARY –

This service manual covers only the different points from the service manual, file no. 810-200210, for model SD-3800 since SD-4800 is basically the same designing as SD-3800.
Please refer to the file no. 810-200210 for other information.

Aug., 2002 Ⓢ

LASER BEAM CAUTION LABEL

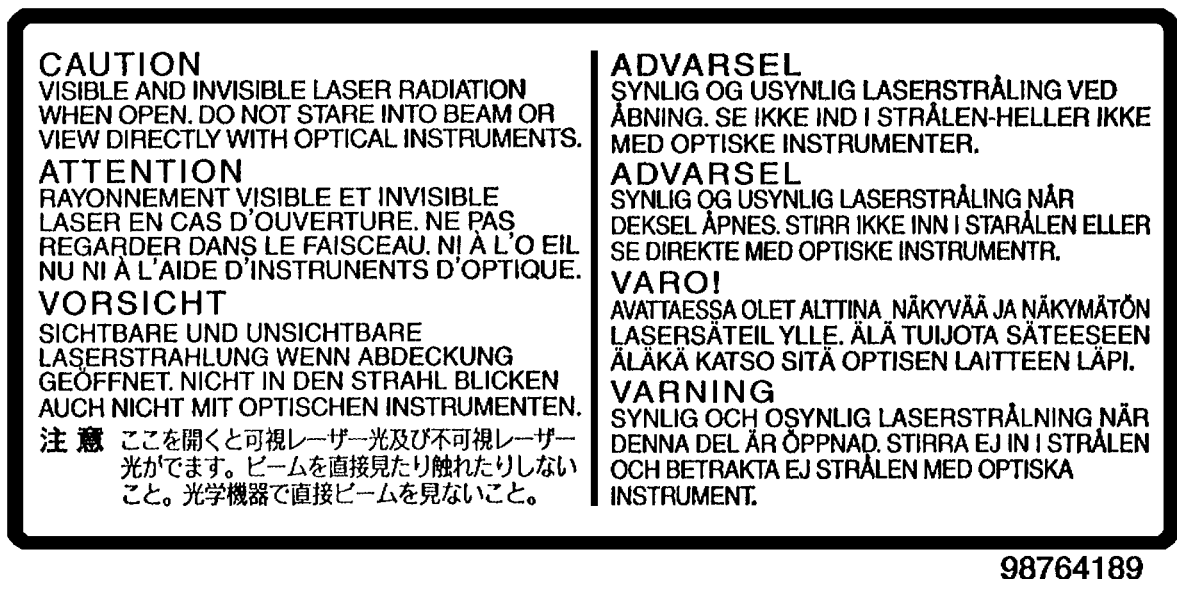

CAUTION
VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

ATTENTION
RAYONNEMENT VISIBLE ET INVISIBLE LASER EN CAS D'OUVERTURE. NE PAS REGARDER DANS LE FAISCEAU. NI À L'O EIL NU NI À L'AIDE D'INSTRUNENTS D'OPTIQUE.

VORSICHT
SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG WENN ABDECKUNG GEÖFFNET. NICHT IN DEN STRAHL BLICKEN AUCH NICHT MIT OPTISCHEN INSTRUMENTEN.

注 意 ここを開くと可視レーザー光及び不可視レーザー光がでます。ビームを直接見たり触れたりしないこと。光学機器で直接ビームを見ないこと。

ADVARSEL
SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. SE IKKE IND I STRÅLEN-HELLER IKKE MED OPTISKE INSTRUMENTER.

ADVARSEL
SYNLIG OG USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. STIRR IKKE INN I STARÅLEN ELLER SE DIREKTE MED OPTISKE INSTRUMENTR.

VARO!
AVATTAESSA OLET ALTTINA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEIL YLLE. ÄLÄ TUIJOTA SÄTEESEEN ÄLÄKÄ KATSO SITÄ OPTISEN LAITTEEN LÄPI.

VARNING
SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. STIRRA EJ IN I STRÅLEN OCH BETRAKTA EJ STRÅLEN MED OPTISKA INSTRUMENT.

98764189

When the power supply is being turned on, you may not remove this laser cautions label. If it removes, radiation of a laser may be received.

PREPARATION OF SERVICING

Pickup Head consists of a laser diode that is very susceptible to external static electricity.

Although it operates properly after replacement, if it was subject to electrostatic discharge during replacement, its life might be shortened. When replacing, use a conductive mat, soldering iron with ground wire, etc. to protect the laser diode from damage by static electricity.

And also, the LSI and IC are same as above.

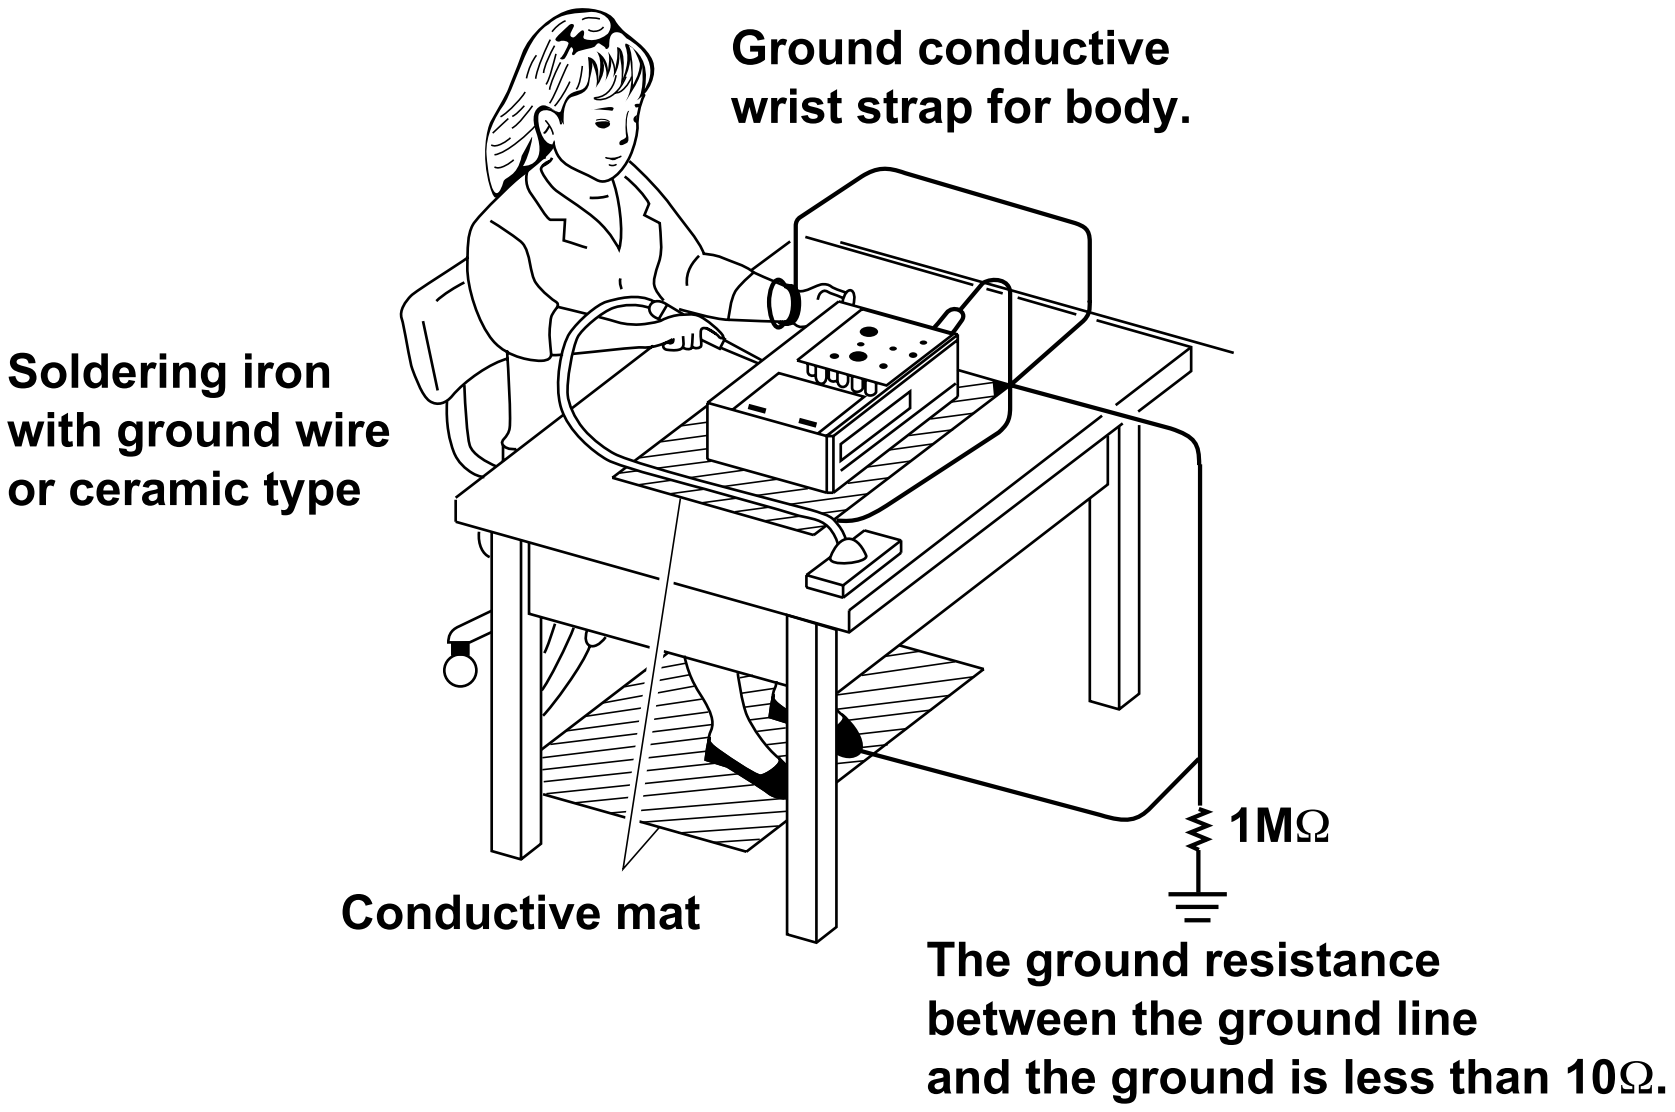
Ground conductive wrist strap for body.
Soldering iron with ground wire or ceramic type
1MΩ
Conductive mat
The ground resistance between the ground line and the ground is less than 10Ω.

CONTENTS

SECTION 3
SERVICING DIAGRAMS

1. PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM
2. BLOCK DIAGRAMS
    - 2-1. Overall Block Diagram
    - 2-2. Output Block Diagram
3. Circuit Diagram
    - 3-1. Output Circuit Diagram
4. PC Board
    - 4-1. Output PC Board

SECTION 4
PARTS LIST

SAFETY PRECAUTION
NOTICE
ABBREVIATIONS
    1. Integrated Circuit (IC)
    2. Capacitor (Cap)
    3. Resistor (Res)

4. EXPLODED VIEWS
    - 4-1. Chassis Assembly (Type A)
    - 4-2. Chassis Assembly (Type B)
5. PARTS LIST

1. PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM

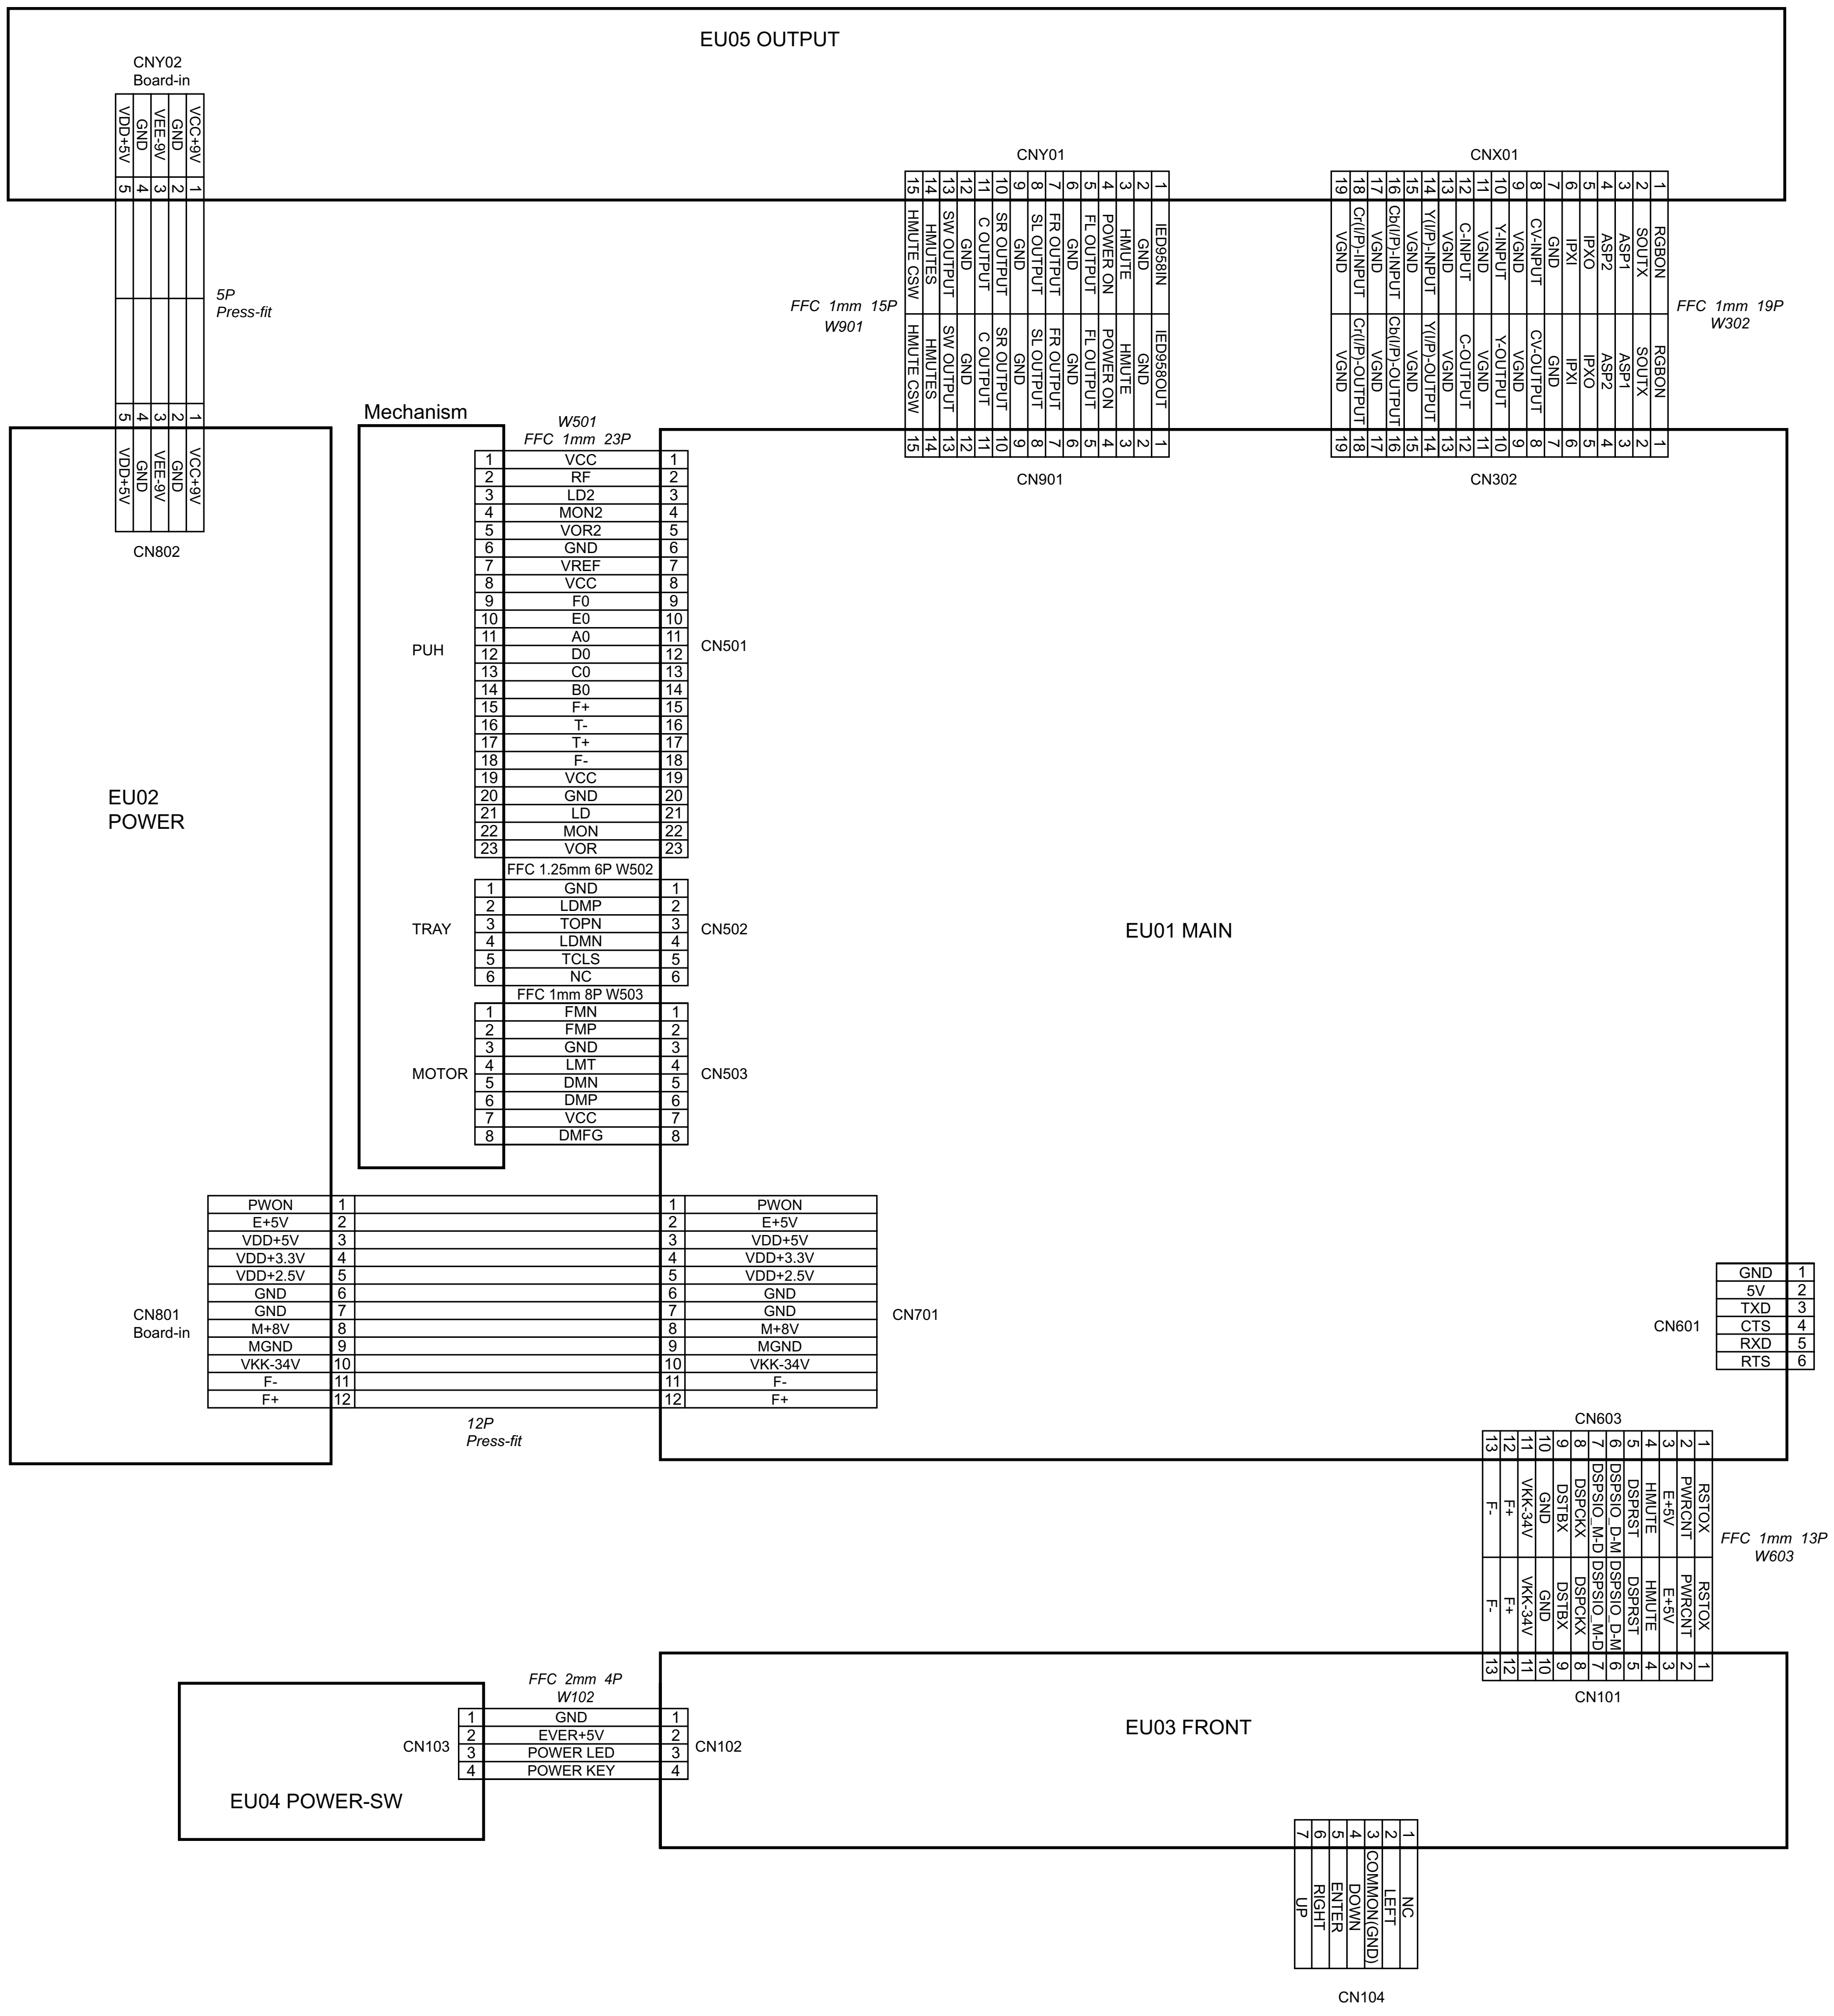
EU05 OUTPUT
CNY02
Board-in
1 VCC+9V
2 GND
3 VEE-9V
4 GND
5 VDD+5V
5P
Press-fit
CN802
EU02
POWER
CNY01
1 IED958IN
2 GND
3 HMUTE
4 POWER ON
5 FL OUTPUT
6 GND
7 FR OUTPUT
8 SL OUTPUT
9 GND
10 SR OUTPUT
11 C OUTPUT
12 GND
13 SW OUTPUT
14 HMUTES
15 HMUTE CSW
FFC 1mm 15P
W901
1 IED958OUT
2 GND
3 HMUTE
4 POWER ON
5 FL OUTPUT
6 GND
7 FR OUTPUT
8 SL OUTPUT
9 GND
10 SR OUTPUT
11 C OUTPUT
12 GND
13 SW OUTPUT
14 HMUTES
15 HMUTE CSW
CN901
CNX01
1 RGBON
2 SOUTX
3 ASP1
4 ASP2
5 IPXO
6 IPXI
7 GND
8 CV-INPUT
9 VGND
10 Y-INPUT
11 VGND
12 C-INPUT
13 VGND
14 Y(I/P)-INPUT
15 VGND
16 Cb(I/P)-INPUT
17 VGND
18 Cr(I/P)-INPUT
19 VGND
FFC 1mm 19P
W302
1 RGBON
2 SOUTX
3 ASP1
4 ASP2
5 IPXO
6 IPXI
7 GND
8 CV-OUTPUT
9 VGND
10 Y-OUTPUT
11 VGND
12 C-OUTPUT
13 VGND
14 Y(I/P)-OUTPUT
15 VGND
16 Cb(I/P)-OUTPUT
17 VGND
18 Cr(I/P)-OUTPUT
19 VGND
CN302
Mechanism
W501
FFC 1mm 23P
PUH
1 VCC
2 RF
3 LD2
4 MON2
5 VOR2
6 GND
7 VREF
8 VCC
9 F0
10 E0
11 A0
12 D0
13 C0
14 B0
15 F+
16 T-
17 T+
18 F-
19 VCC
20 GND
21 LD
22 MON
23 VOR
CN501
FFC 1.25mm 6P W502
TRAY
1 GND
2 LDMP
3 TOPN
4 LDMN
5 TCLS
6 NC
CN502
FFC 1mm 8P W503
MOTOR
1 FMN
2 FMP
3 GND
4 LMT
5 DMN
6 DMP
7 VCC
8 DMFG
CN503
EU01 MAIN
CN801
Board-in
1 PWON
2 E+5V
3 VDD+5V
4 VDD+3.3V
5 VDD+2.5V
6 GND
7 GND
8 M+8V
9 MGND
10 VKK-34V
11 F-
12 F+
12P
Press-fit
CN701
CN601
1 GND
2 5V
3 TXD
4 CTS
5 RXD
6 RTS
CN603
1 RSTOX
2 PWRCNT
3 E+5V
4 HMUTE
5 DSPRST
6 DSPSIO_D-M
7 DSPSIO_M-D
8 DSPCKX
9 DSTBX
10 GND
11 VKK-34V
12 F+
13 F-
FFC 1mm 13P
W603
CN101
EU03 FRONT
FFC 2mm 4P
W102
CN103
1 GND
2 EVER+5V
3 POWER LED
4 POWER KEY
CN102
EU04 POWER-SW
CN104
1 NC
2 LEFT
3 COMMON(GND)
4 DOWN
5 ENTER
6 RIGHT
7 UP

Fig. 3-1-1

2. BLOCK DIAGRAMS

2-1. Overall Block Diagram

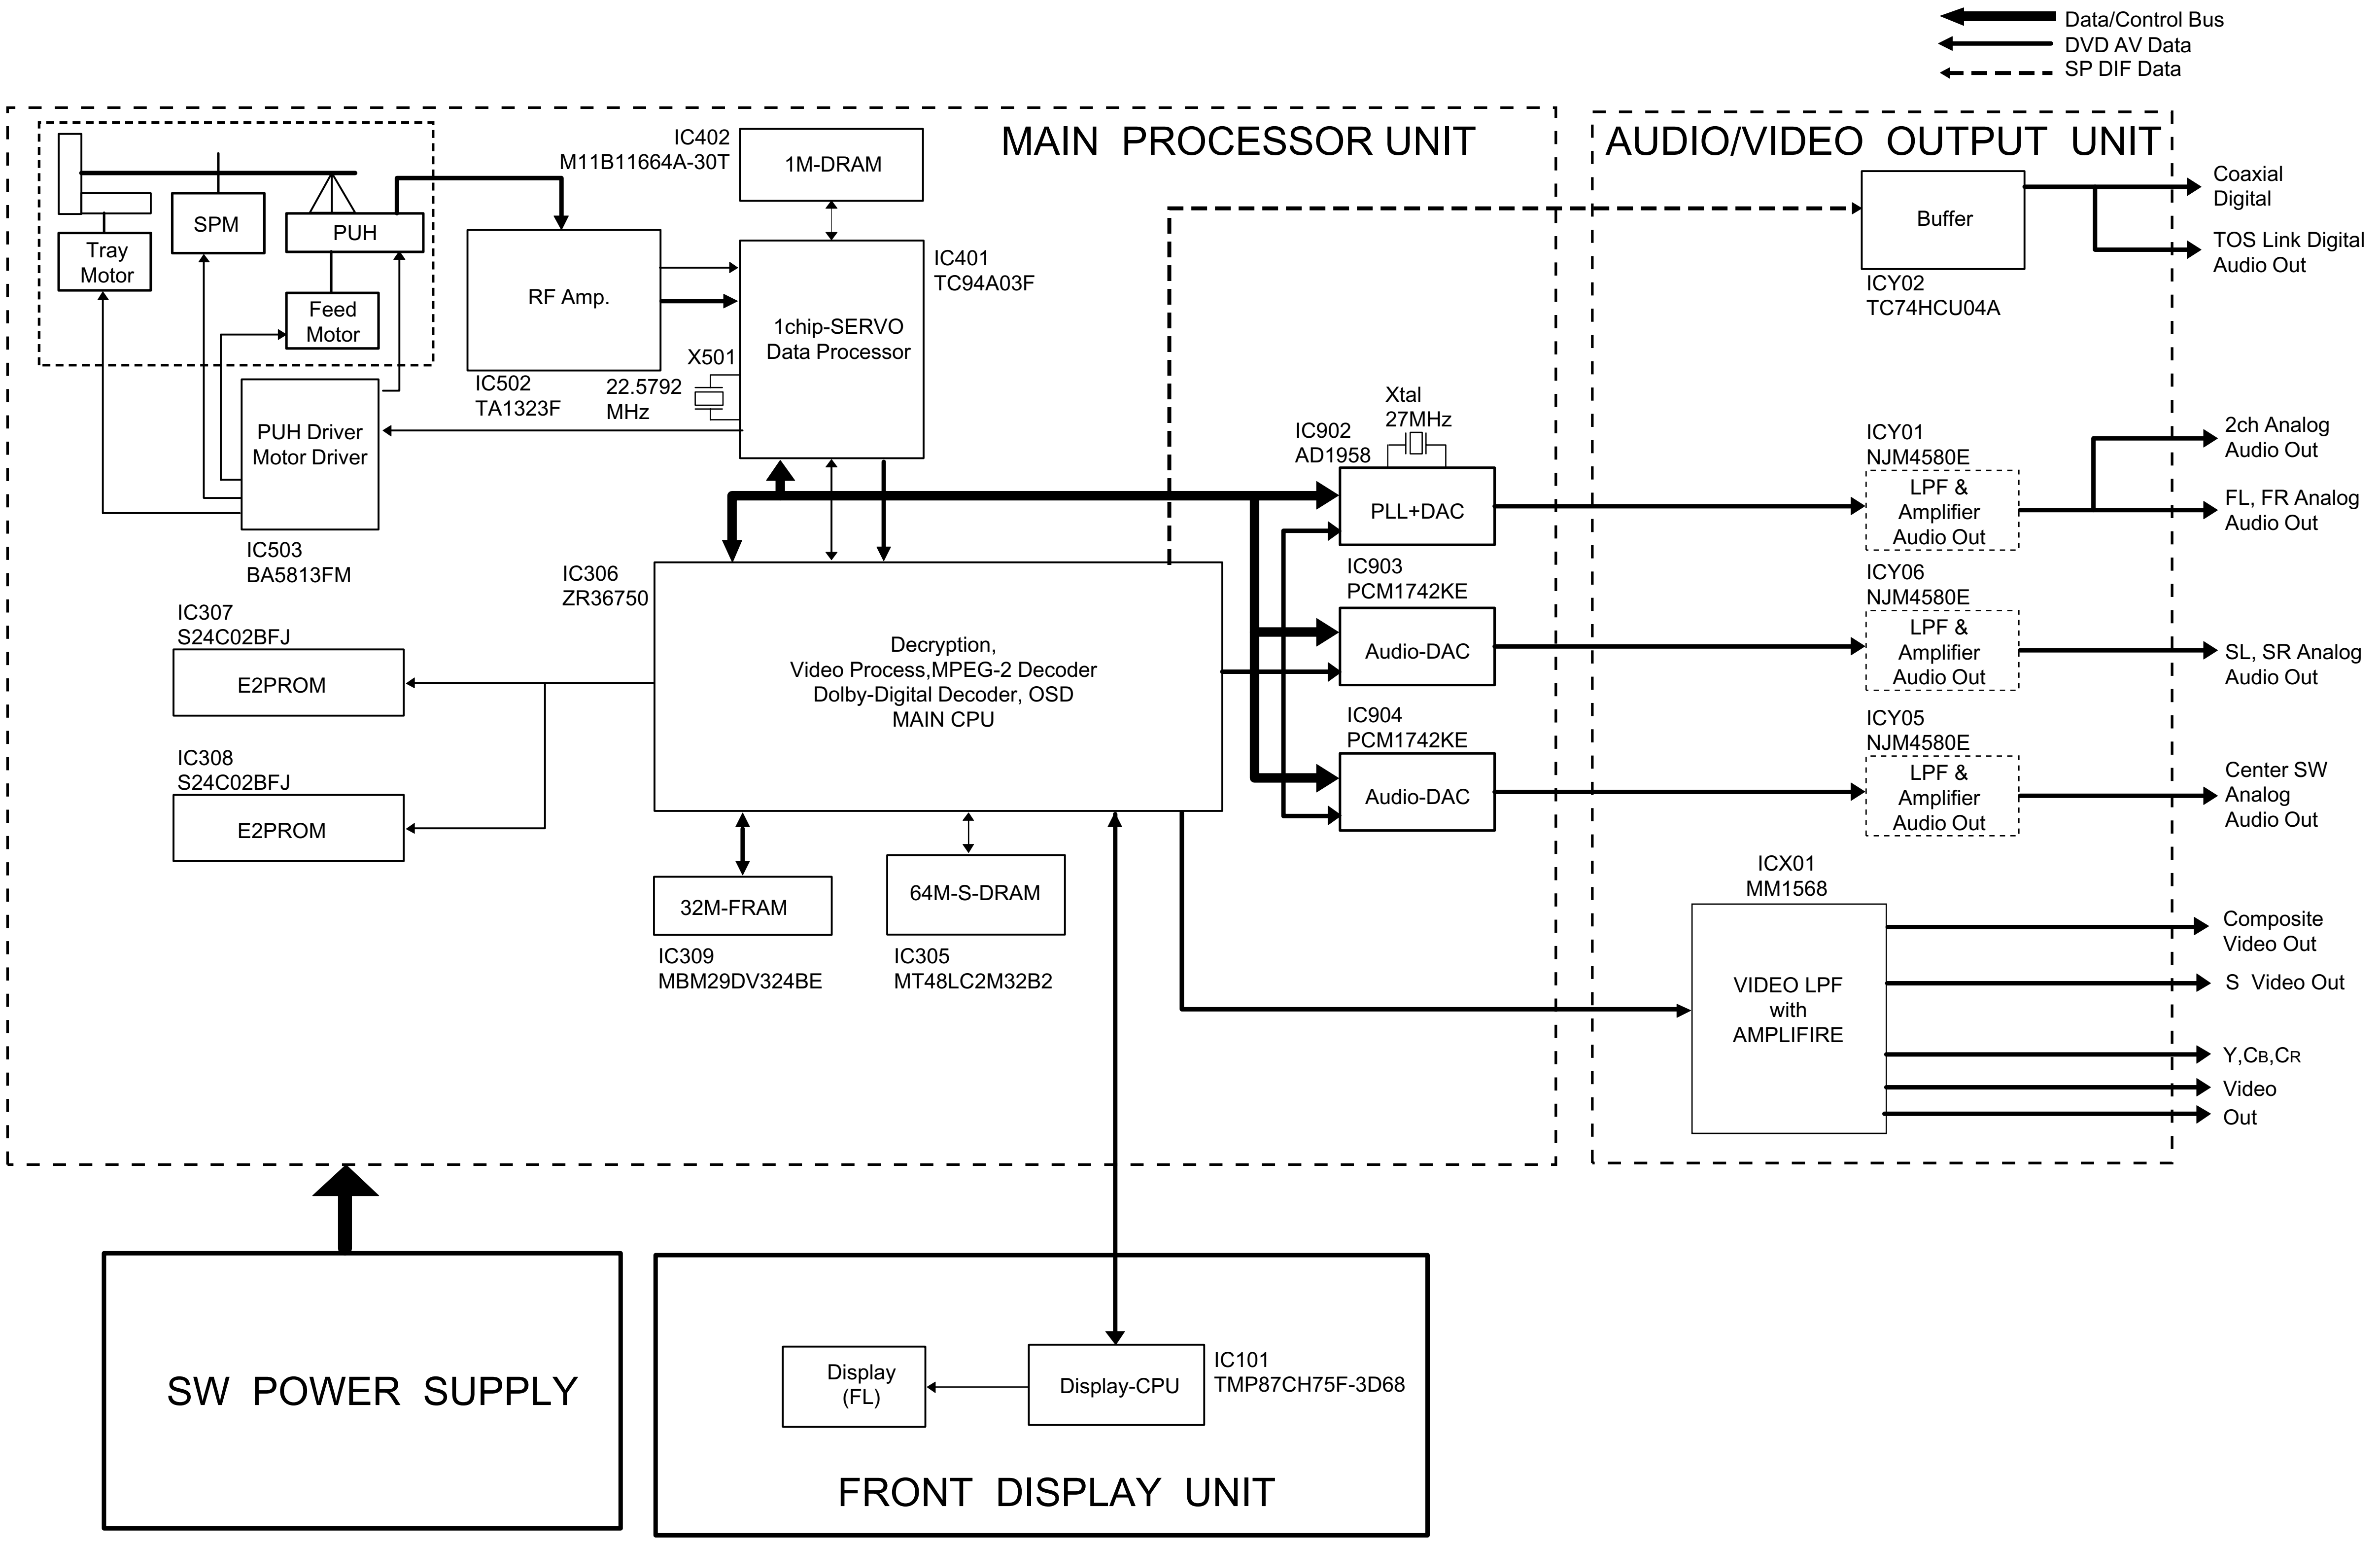
Data/Control Bus
DVD AV Data
SP DIF Data
MAIN PROCESSOR UNIT
AUDIO/VIDEO OUTPUT UNIT
Tray Motor
SPM
PUH
Feed Motor
PUH Driver Motor Driver
IC503
BA5813FM
IC402
M11B11664A-30T
1M-DRAM
RF Amp.
IC502
TA1323F
X501
22.5792 MHz
1chip-SERVO Data Processor
IC401
TC94A03F
IC306
ZR36750
Decryption, Video Process,MPEG-2 Decoder Dolby-Digital Decoder, OSD MAIN CPU
IC307
S24C02BFJ
E2PROM
IC308
S24C02BFJ
E2PROM
32M-FRAM
IC309
MBM29DV324BE
64M-S-DRAM
IC305
MT48LC2M32B2
IC902
AD1958
Xtal 27MHz
PLL+DAC
IC903
PCM1742KE
Audio-DAC
IC904
PCM1742KE
Audio-DAC
Buffer
ICY02
TC74HCU04A
Coaxial Digital
TOS Link Digital Audio Out
ICY01
NJM4580E
LPF & Amplifier Audio Out
2ch Analog Audio Out
FL, FR Analog Audio Out
ICY06
NJM4580E
LPF & Amplifier Audio Out
SL, SR Analog Audio Out
ICY05
NJM4580E
LPF & Amplifier Audio Out
Center SW Analog Audio Out
ICX01
MM1568
VIDEO LPF with AMPLIFIRE
Composite Video Out
S Video Out
Y,CB,CR Video Out
SW POWER SUPPLY
Display (FL)
Display-CPU
IC101
TMP87CH75F-3D68
FRONT DISPLAY UNIT

Fig.3-2-1

2-2. Output Block Diagram

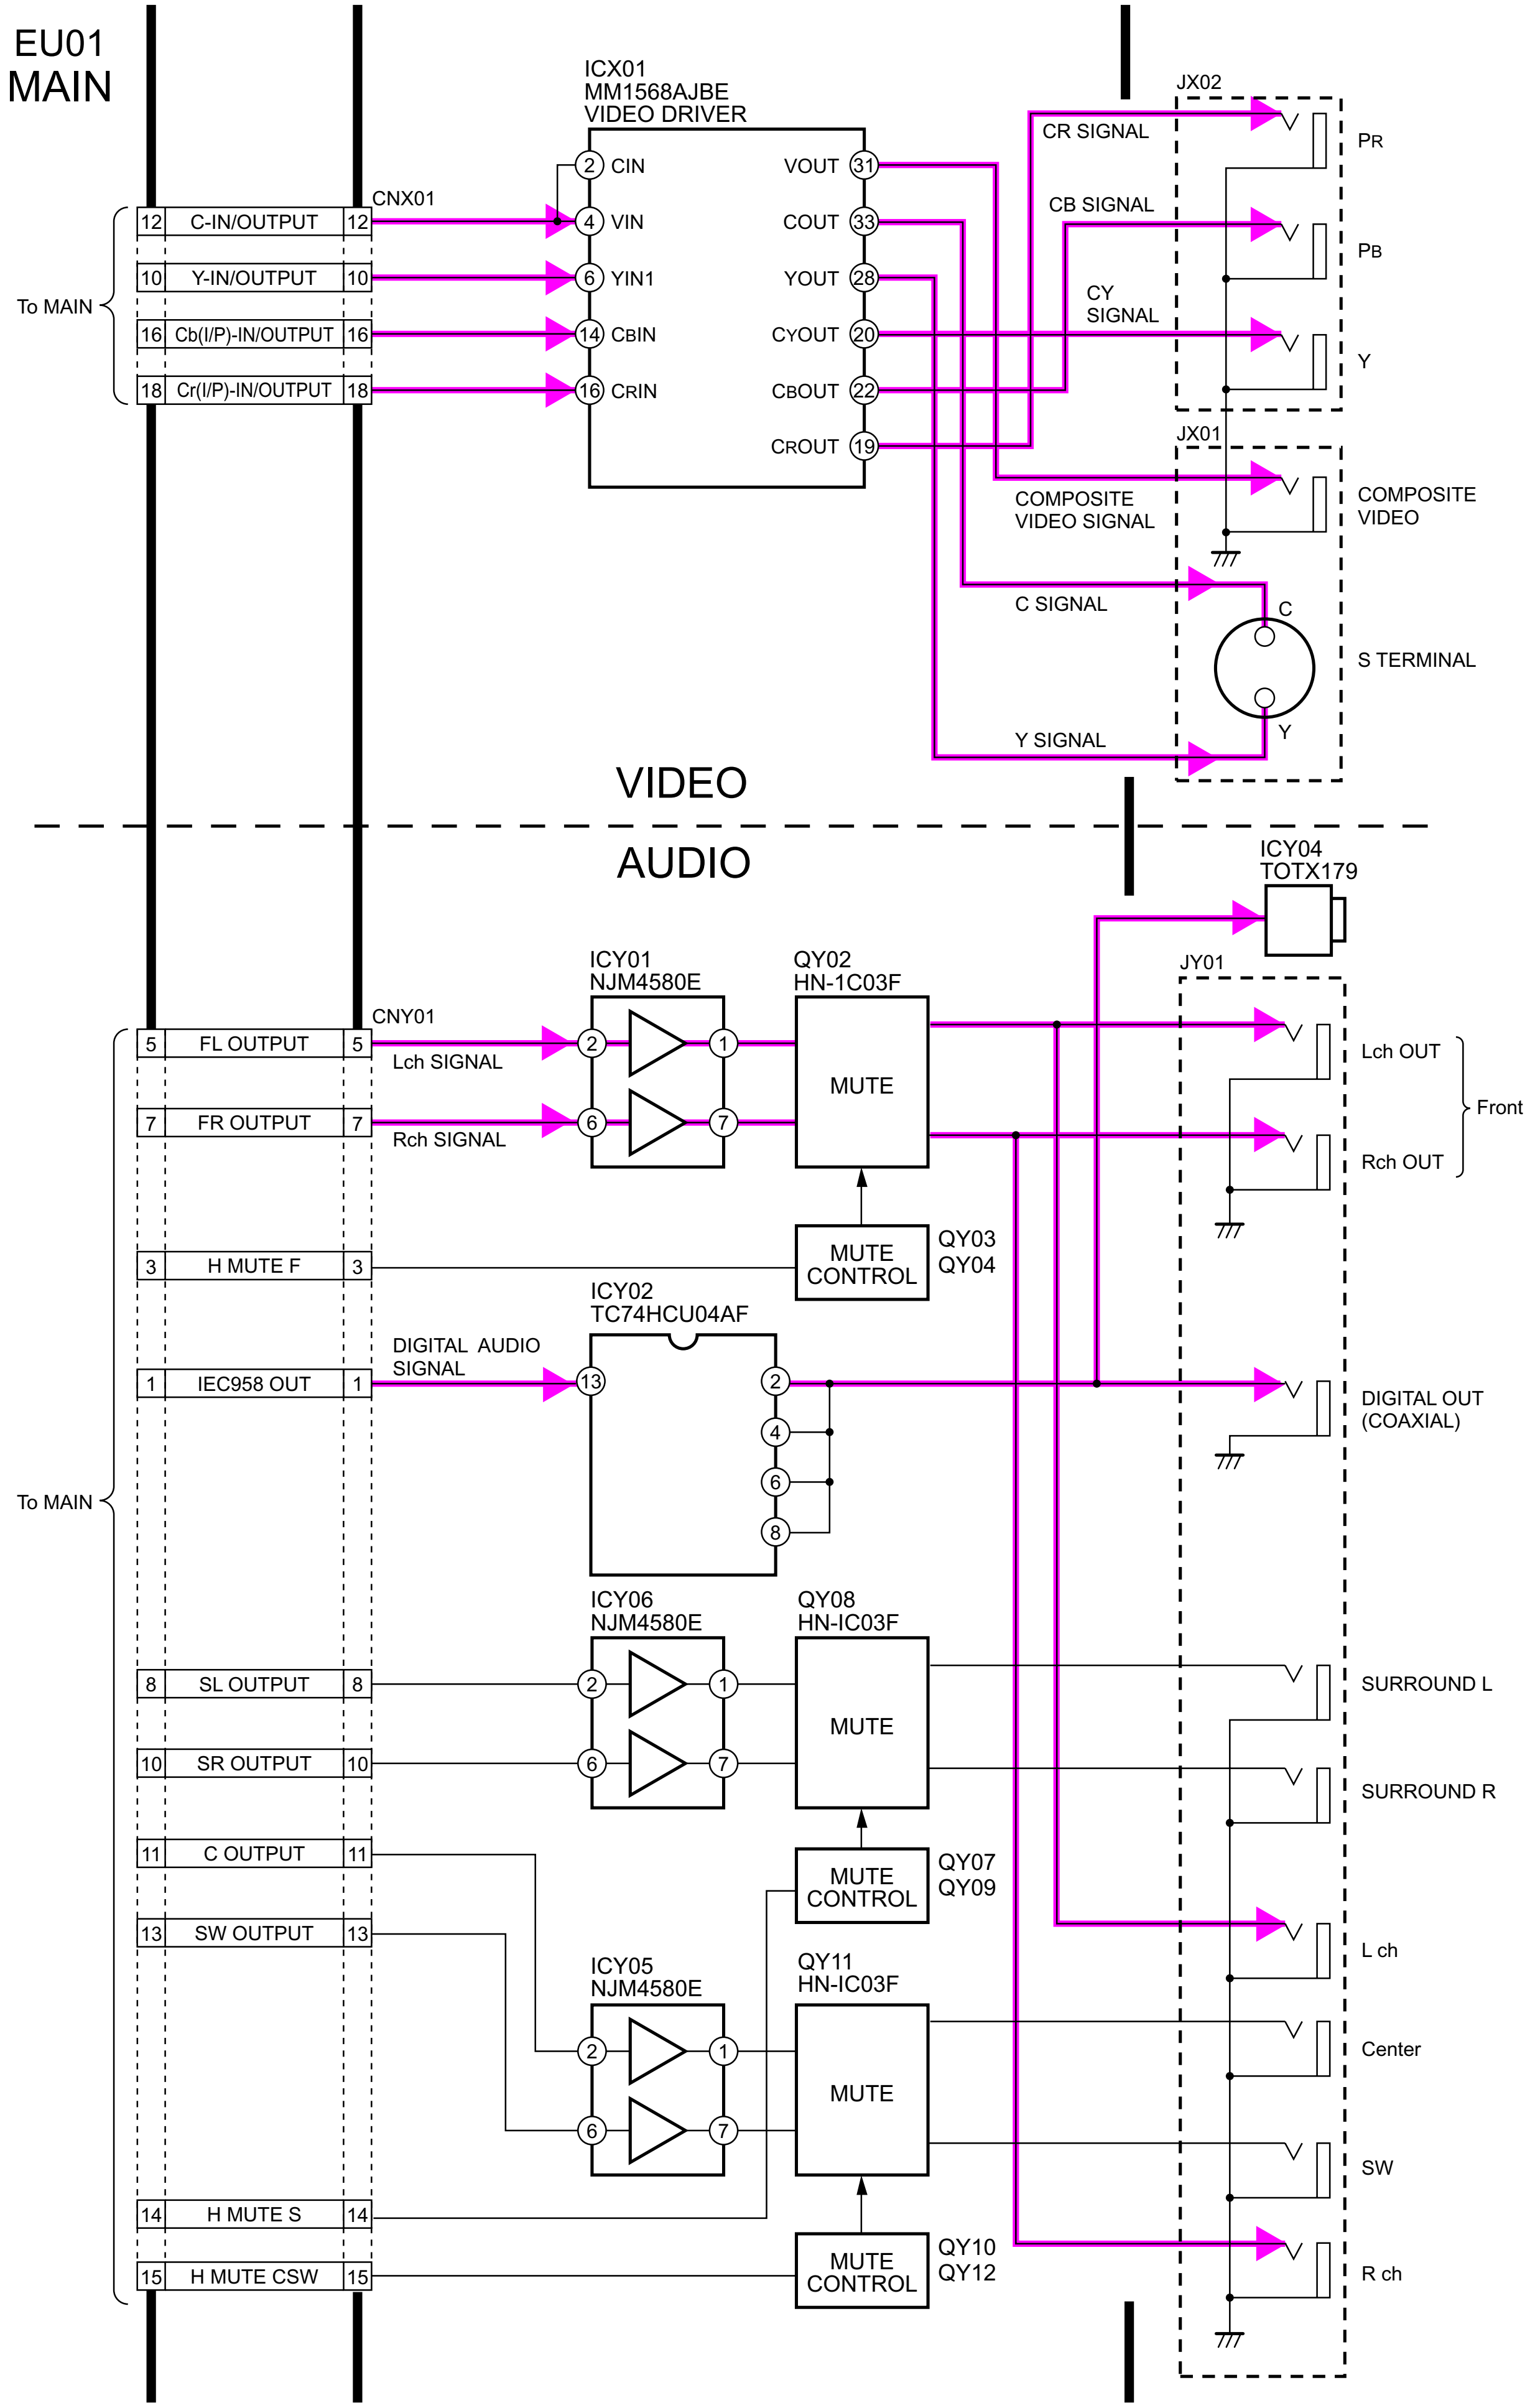
EU01
MAIN
To MAIN
12 C-IN/OUTPUT 12
10 Y-IN/OUTPUT 10
16 Cb(I/P)-IN/OUTPUT 16
18 Cr(I/P)-IN/OUTPUT 18
CNX01
ICX01
MM1568AJBE
VIDEO DRIVER
2 CIN
4 VIN
6 YIN1
14 CBIN
16 CRIN
VOUT 31
COUT 33
YOUT 28
CYOUT 20
CBOUT 22
CROUT 19
CR SIGNAL
CB SIGNAL
CY SIGNAL
COMPOSITE VIDEO SIGNAL
C SIGNAL
Y SIGNAL
JX02
PR
PB
Y
JX01
COMPOSITE VIDEO
C
Y
S TERMINAL
VIDEO
AUDIO
ICY04
TOTX179
ICY01
NJM4580E
QY02
HN-1C03F
CNY01
5 FL OUTPUT 5
7 FR OUTPUT 7
Lch SIGNAL
Rch SIGNAL
MUTE
MUTE CONTROL
QY03
QY04
3 H MUTE F 3
ICY02
TC74HCU04AF
DIGITAL AUDIO SIGNAL
1 IEC958 OUT 1
JY01
Lch OUT
Rch OUT
Front
DIGITAL OUT (COAXIAL)
To MAIN
ICY06
NJM4580E
QY08
HN-IC03F
8 SL OUTPUT 8
10 SR OUTPUT 10
11 C OUTPUT 11
13 SW OUTPUT 13
QY07
QY09
ICY05
NJM4580E
QY11
HN-IC03F
14 H MUTE S 14
15 H MUTE CSW 15
QY10
QY12
SURROUND L
SURROUND R
L ch
Center
SW
R ch

Fig. 3-2-2

3. CIRCUIT DIAGRAM

3-1. Output Circuit Diagram

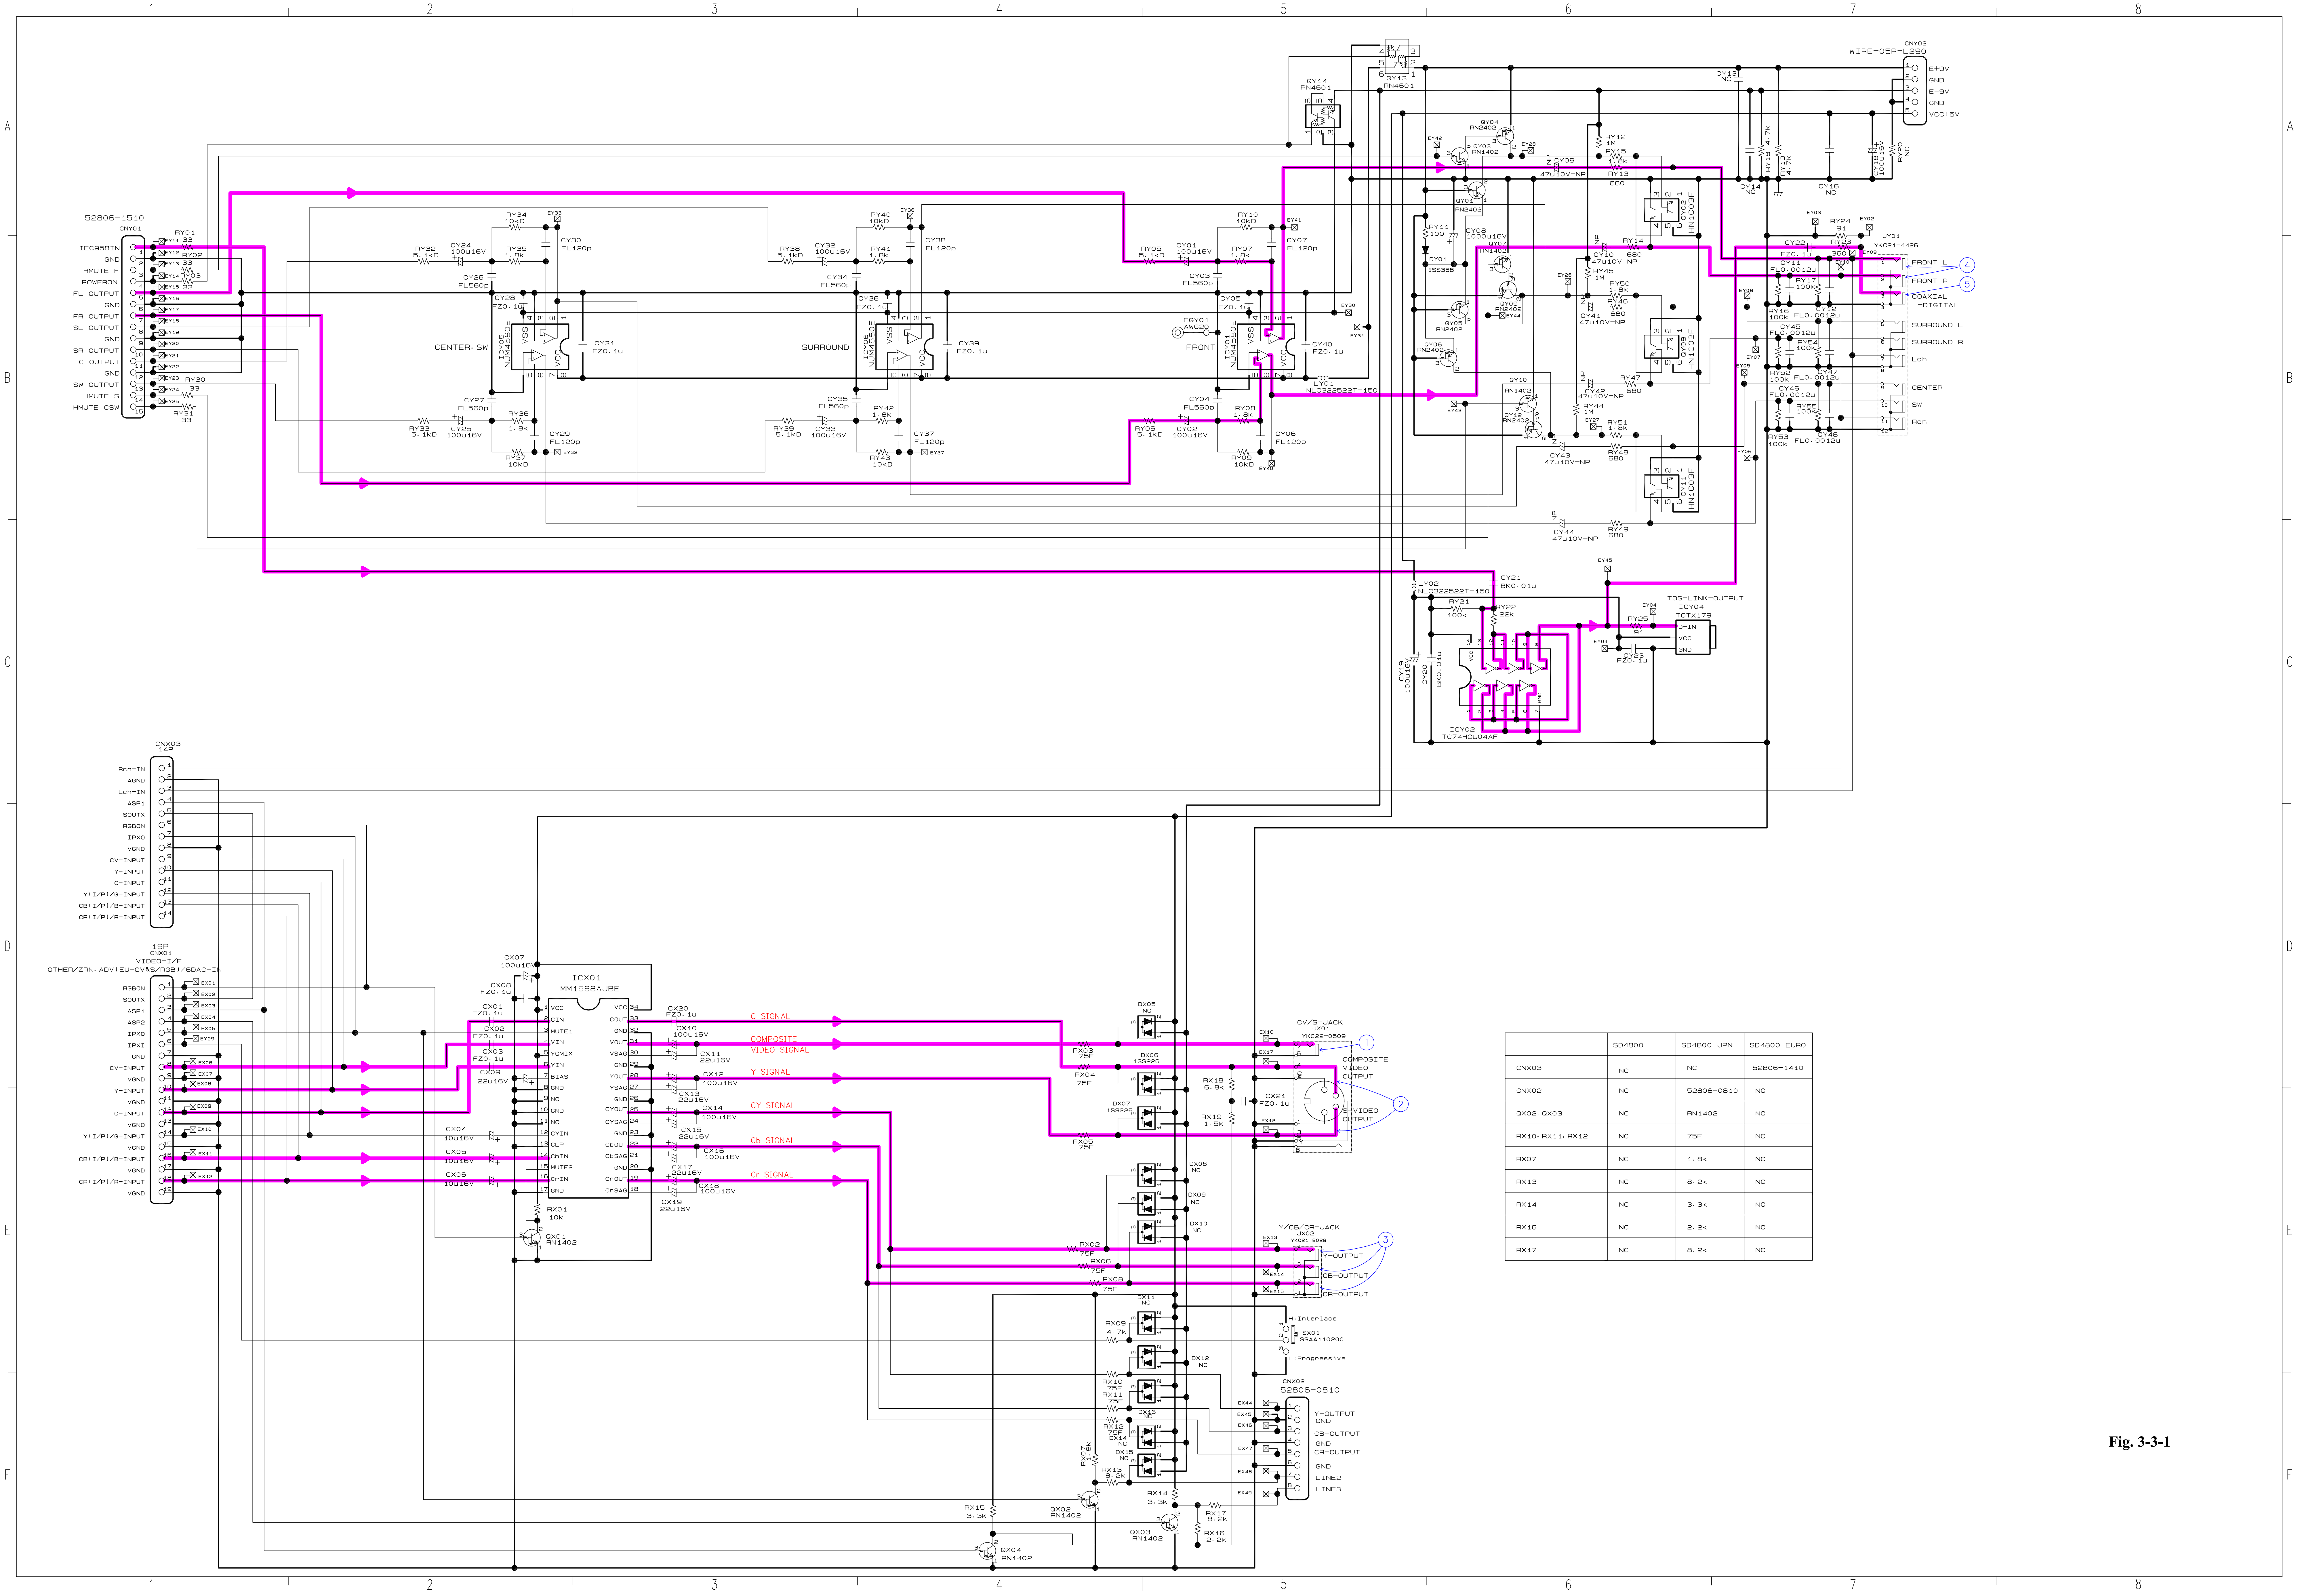
CNY01 52806-1510
IEC958IN
HMUTE F
POWERON
FL OUTPUT
FR OUTPUT
SL OUTPUT
SR OUTPUT
C OUTPUT
SW OUTPUT
HMUTE S
HMUTE CSW
CENTER, SW
SURROUND
FRONT
ICY05 NJM4580E
ICY06 NJM4580E
ICY01 NJM4580E
LY01 NLC322522T-150
LY02 NLC322522T-150
CNY02 WIRE-05P-L290
E+9V
GND
E-9V
VCC+5V
QY13 RN4601
QY14 RN4601
JY01 YKC21-4426
FRONT L
FRONT R
COAXIAL -DIGITAL
SURROUND L
SURROUND R
Lch
CENTER
SW
Rch
TOS-LINK-OUTPUT
ICY04 TOTX179
ICY02 TC74HCU04AF
CNX03 14P
Rch-IN
AGND
Lch-IN
ASP1
SOUTX
RGBON
IPXO
VGND
CV-INPUT
Y-INPUT
C-INPUT
Y(I/P)/G-INPUT
CB(I/P)/B-INPUT
CR(I/P)/R-INPUT
CNX01 19P
VIDEO-I/F
OTHER/ZRN ADV(EU-CV&S/RGB)/6DAC-IN
ICX01 MM1568AJBE
C SIGNAL
COMPOSITE VIDEO SIGNAL
Y SIGNAL
CY SIGNAL
Cb SIGNAL
Cr SIGNAL
CV/S-JACK JX01 YKC22-0509
COMPOSITE VIDEO OUTPUT
S-VIDEO OUTPUT
Y/CB/CR-JACK JX02 YKC21-8029
Y-OUTPUT
CB-OUTPUT
CR-OUTPUT
SX01 SSAA110200
H:Interlace
L:Progressive
CNX02 52806-0810
LINE2
LINE3
1
2
3
4
5

	SD4800	SD4800 JPN	SD4800 EURO
CNX03	NC	NC	52806-1410
CNX02	NC	52806-0810	NC
QX02, QX03	NC	RN1402	NC
RX10, RX11, RX12	NC	75F	NC
RX07	NC	1.8k	NC
RX13	NC	8.2k	NC
RX14	NC	3.3k	NC
RX16	NC	2.2k	NC
RX17	NC	8.2k	NC

Fig. 3-3-1

3. CIRCUIT DIAGRAM

3-1. Output Circuit Diagram

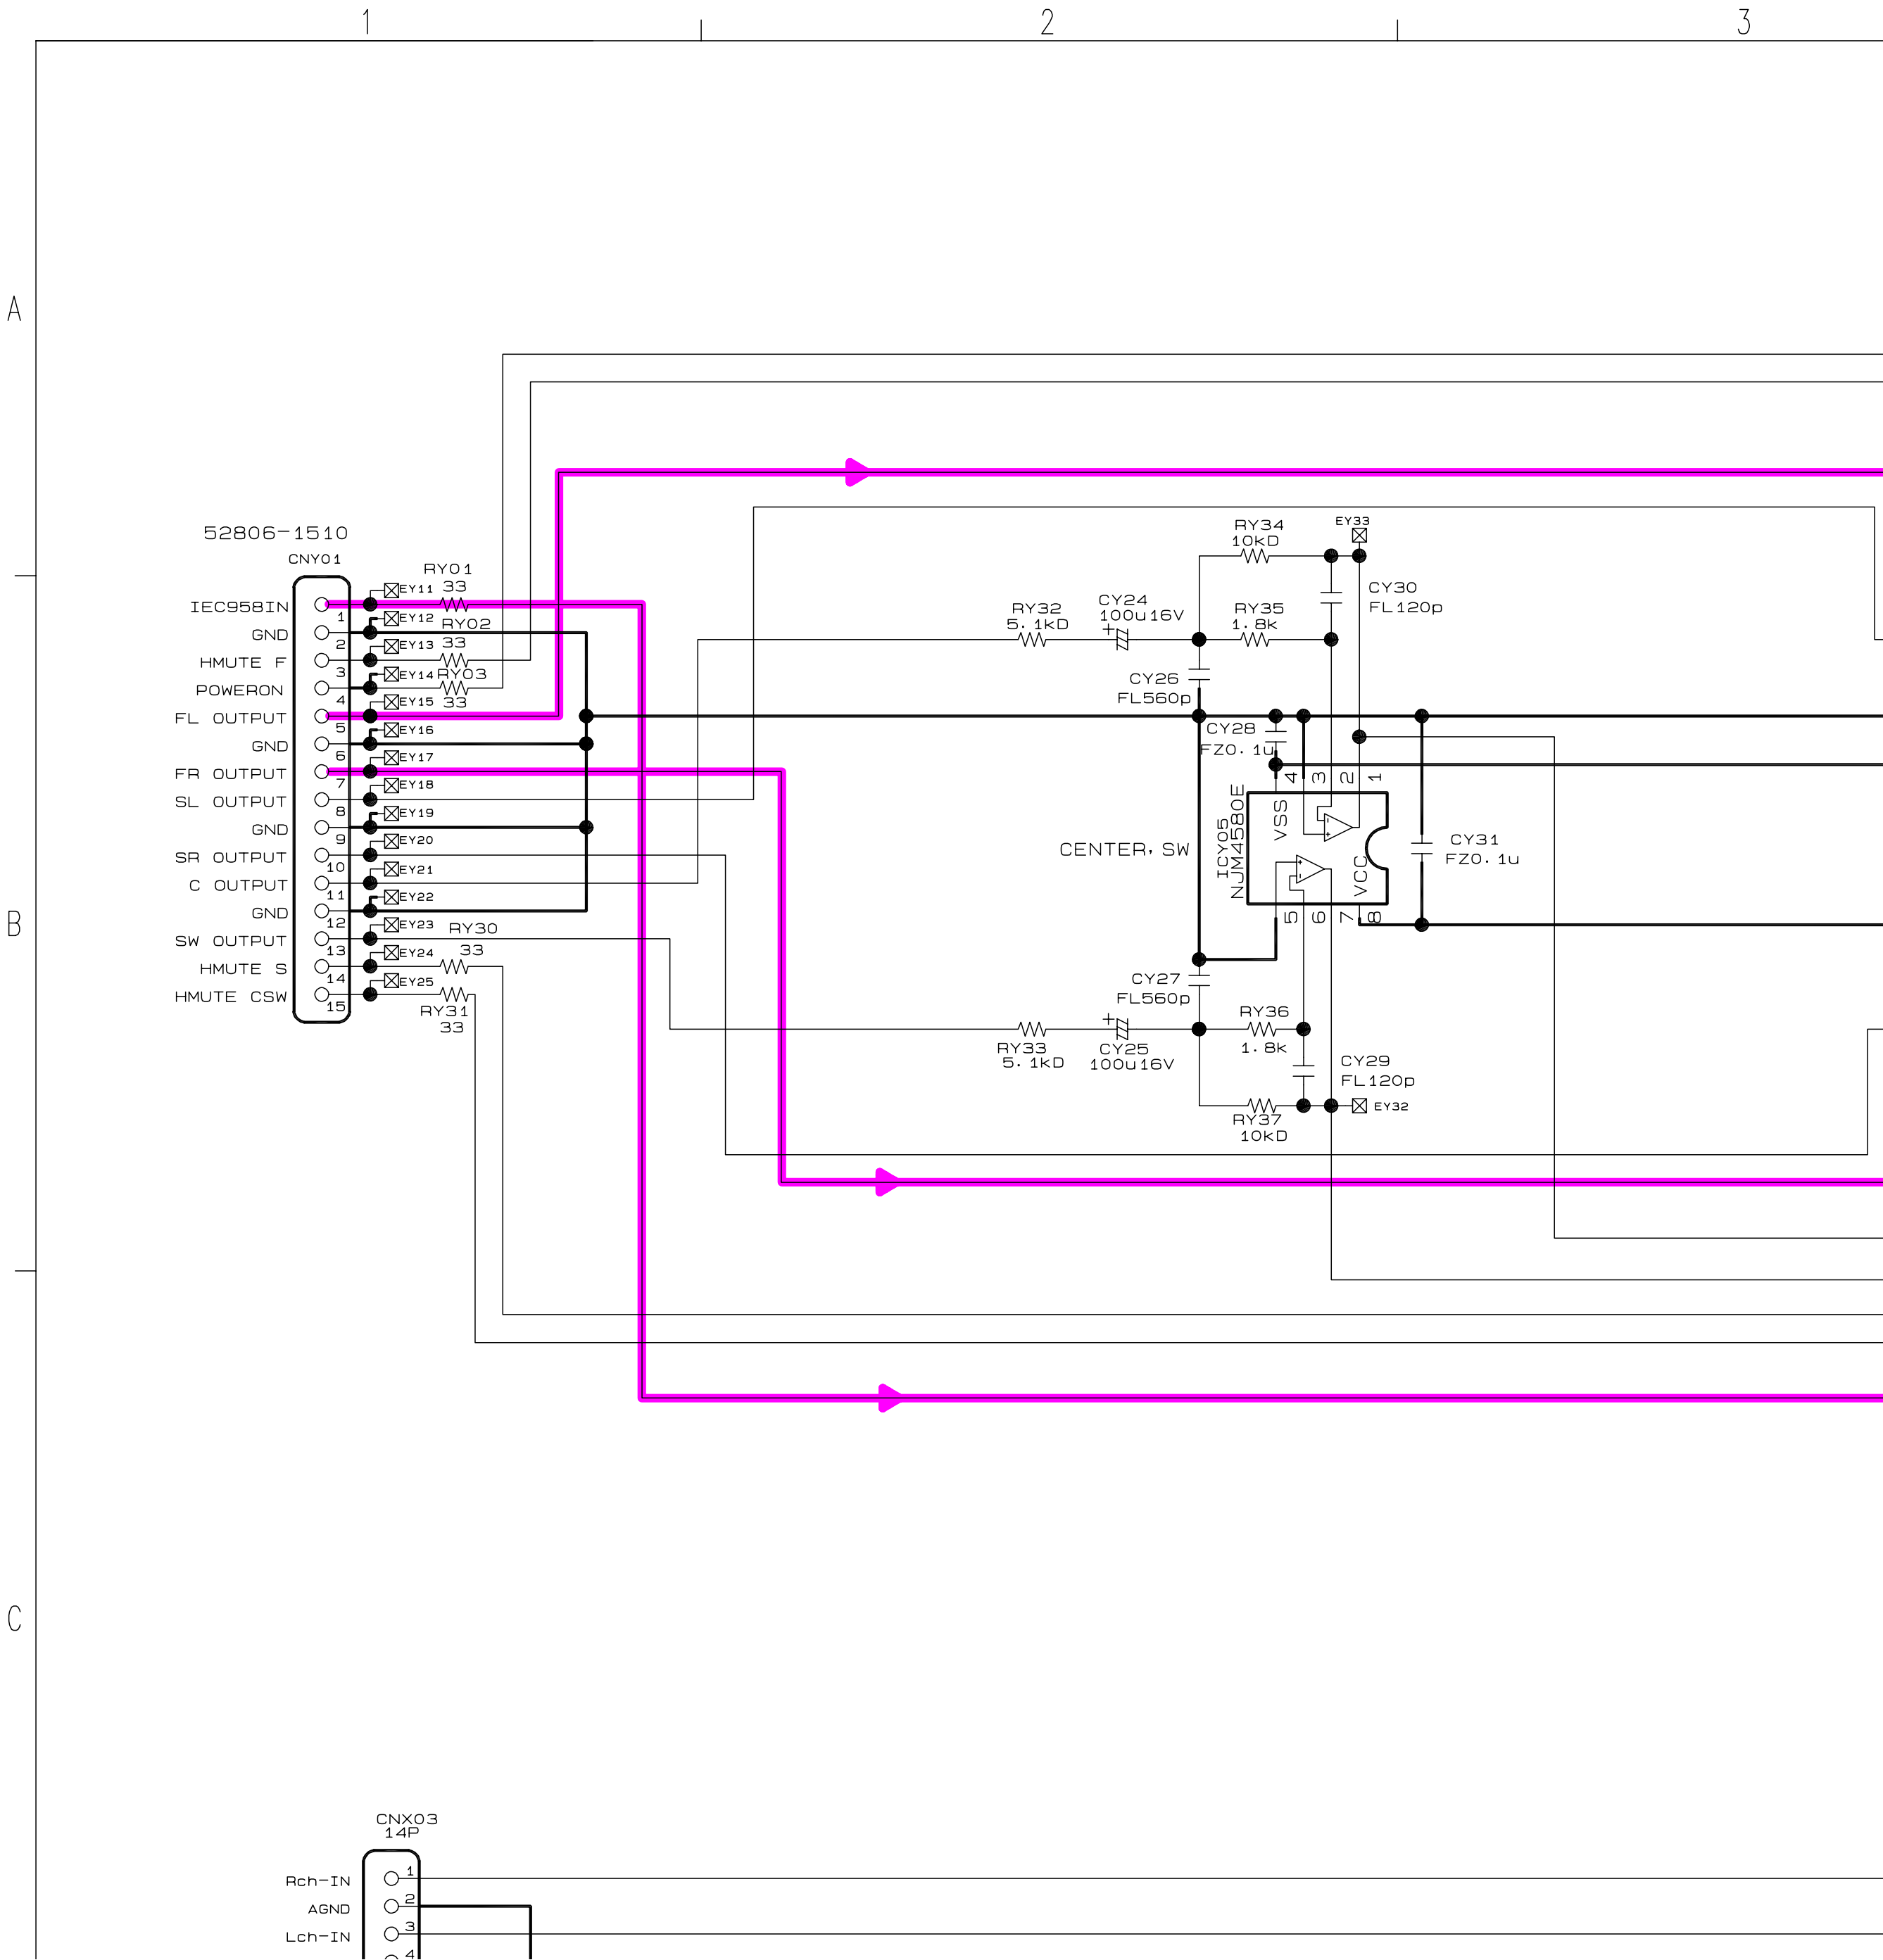
1
2
3
A
B
C
52806-1510
CNY01
IEC958IN
GND
HMUTE F
POWERON
FL OUTPUT
GND
FR OUTPUT
SL OUTPUT
GND
SR OUTPUT
C OUTPUT
GND
SW OUTPUT
HMUTE S
HMUTE CSW
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
EY11
EY12
EY13
EY14
EY15
EY16
EY17
EY18
EY19
EY20
EY21
EY22
EY23
EY24
EY25
RY01
33
RY02
33
RY03
33
RY30
33
RY31
33
RY32
5.1kD
CY24
100u16V
CY26
FL560p
RY34
10kD
EY33
RY35
1.8k
CY30
FL120p
CY28
FZ0.1u
CENTER, SW
ICY05
NJM4580E
VSS
VCC
4
3
2
1
5
6
7
8
CY31
FZ0.1u
CY27
FL560p
RY33
5.1kD
CY25
100u16V
RY36
1.8k
CY29
FL120p
RY37
10kD
EY32
CNX03
14P
Rch-IN
AGND
Lch-IN
1
2
3
4

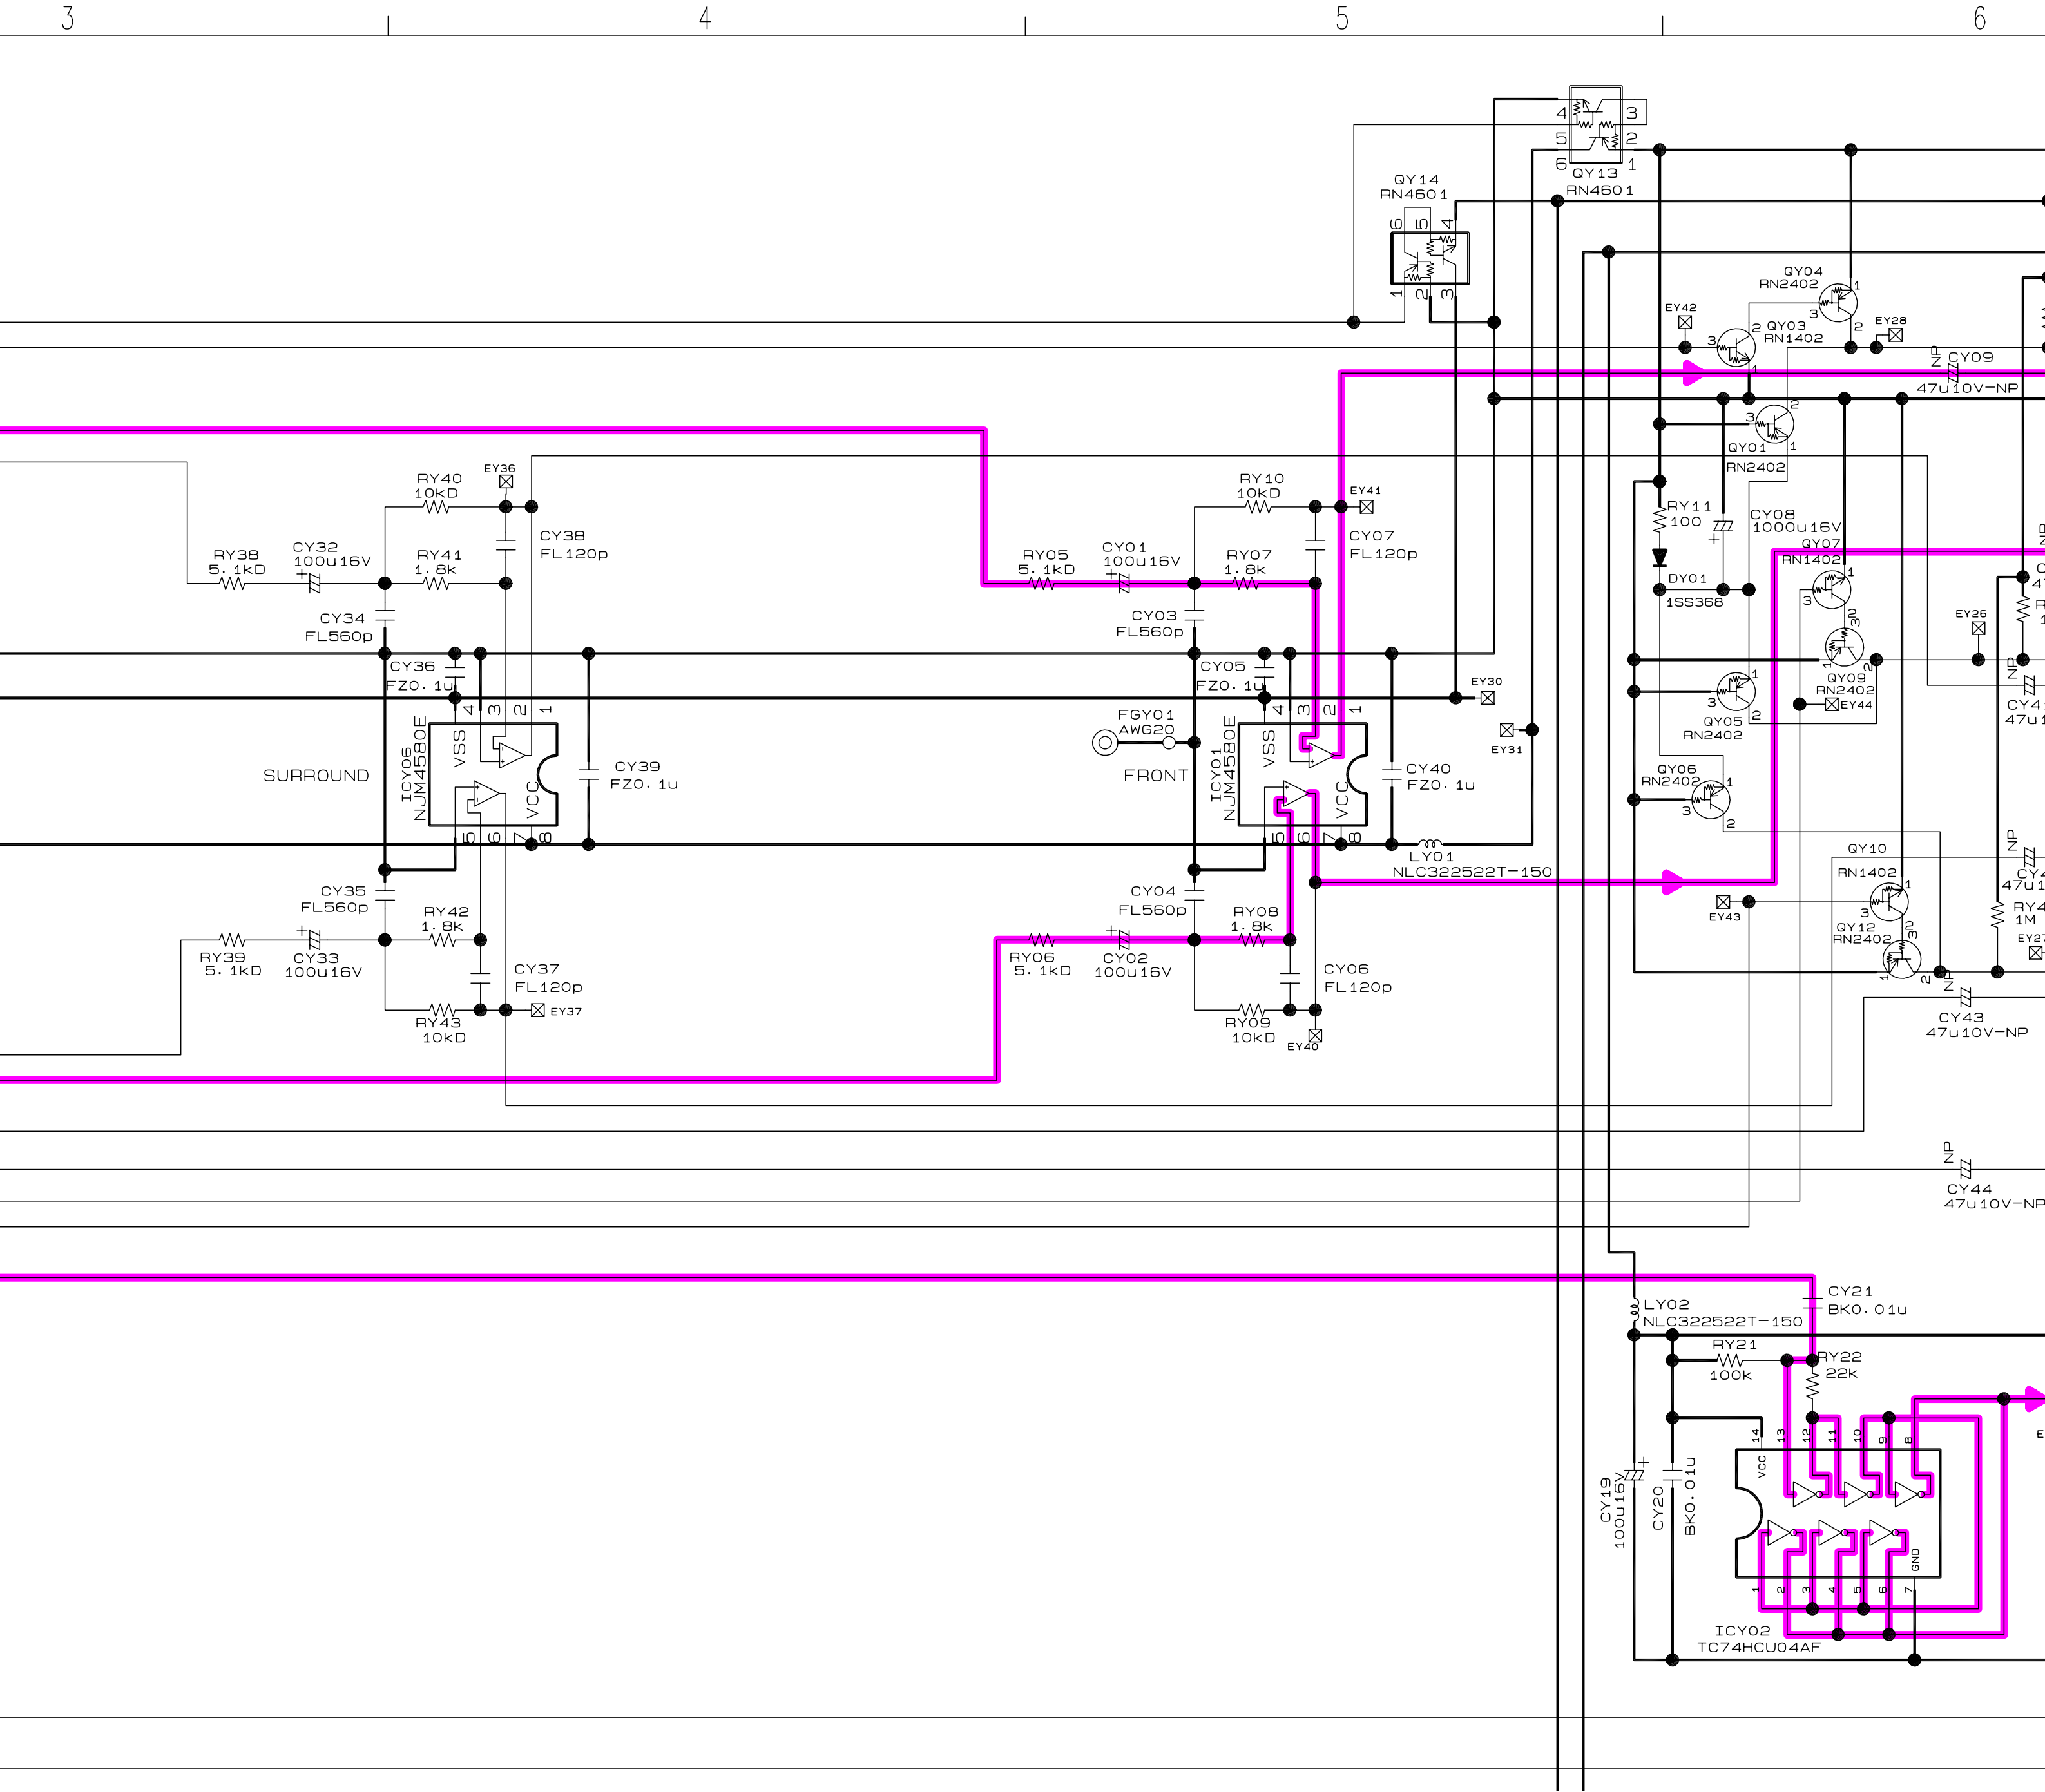
3
4
5
6
QY14
RN4601
QY13
RN4601
QY04
RN2402
QY03
RN1402
EY42
EY28
CY09
47u10V-NP
NP
QY01
RN2402
RY11
100
DY01
1SS368
CY08
1000u16V
QY07
RN1402
EY26
QY09
RN2402
QY05
RN2402
EY44
QY06
RN2402
QY10
RN1402
QY12
RN2402
EY43
CY43
47u10V-NP
CY44
47u10V-NP
RY40
10kD
EY36
CY38
FL120p
RY38
5.1kD
CY32
100u16V
RY41
1.8k
CY34
FL560p
CY36
FZ0.1u
SURROUND
ICY06
NJM4580E
VSS
VCC
CY39
FZ0.1u
CY35
FL560p
RY42
1.8k
RY39
5.1kD
CY33
100u16V
CY37
FL120p
RY43
10kD
EY37
RY05
5.1kD
CY01
100u16V
RY07
1.8k
RY10
10kD
EY41
CY07
FL120p
CY03
FL560p
CY05
FZ0.1u
EY30
EY31
FGY01
AWG20
FRONT
ICY01
NJM4580E
CY40
FZ0.1u
LY01
NLC322522T-150
CY04
FL560p
RY08
1.8k
RY06
5.1kD
CY02
100u16V
CY06
FL120p
RY09
10kD
EY40
LY02
NLC322522T-150
CY21
BK0.01u
RY21
100k
RY22
22k
CY19
100u16V
CY20
BK0.01u
VCC
GND
ICY02
TC74HCU04AF

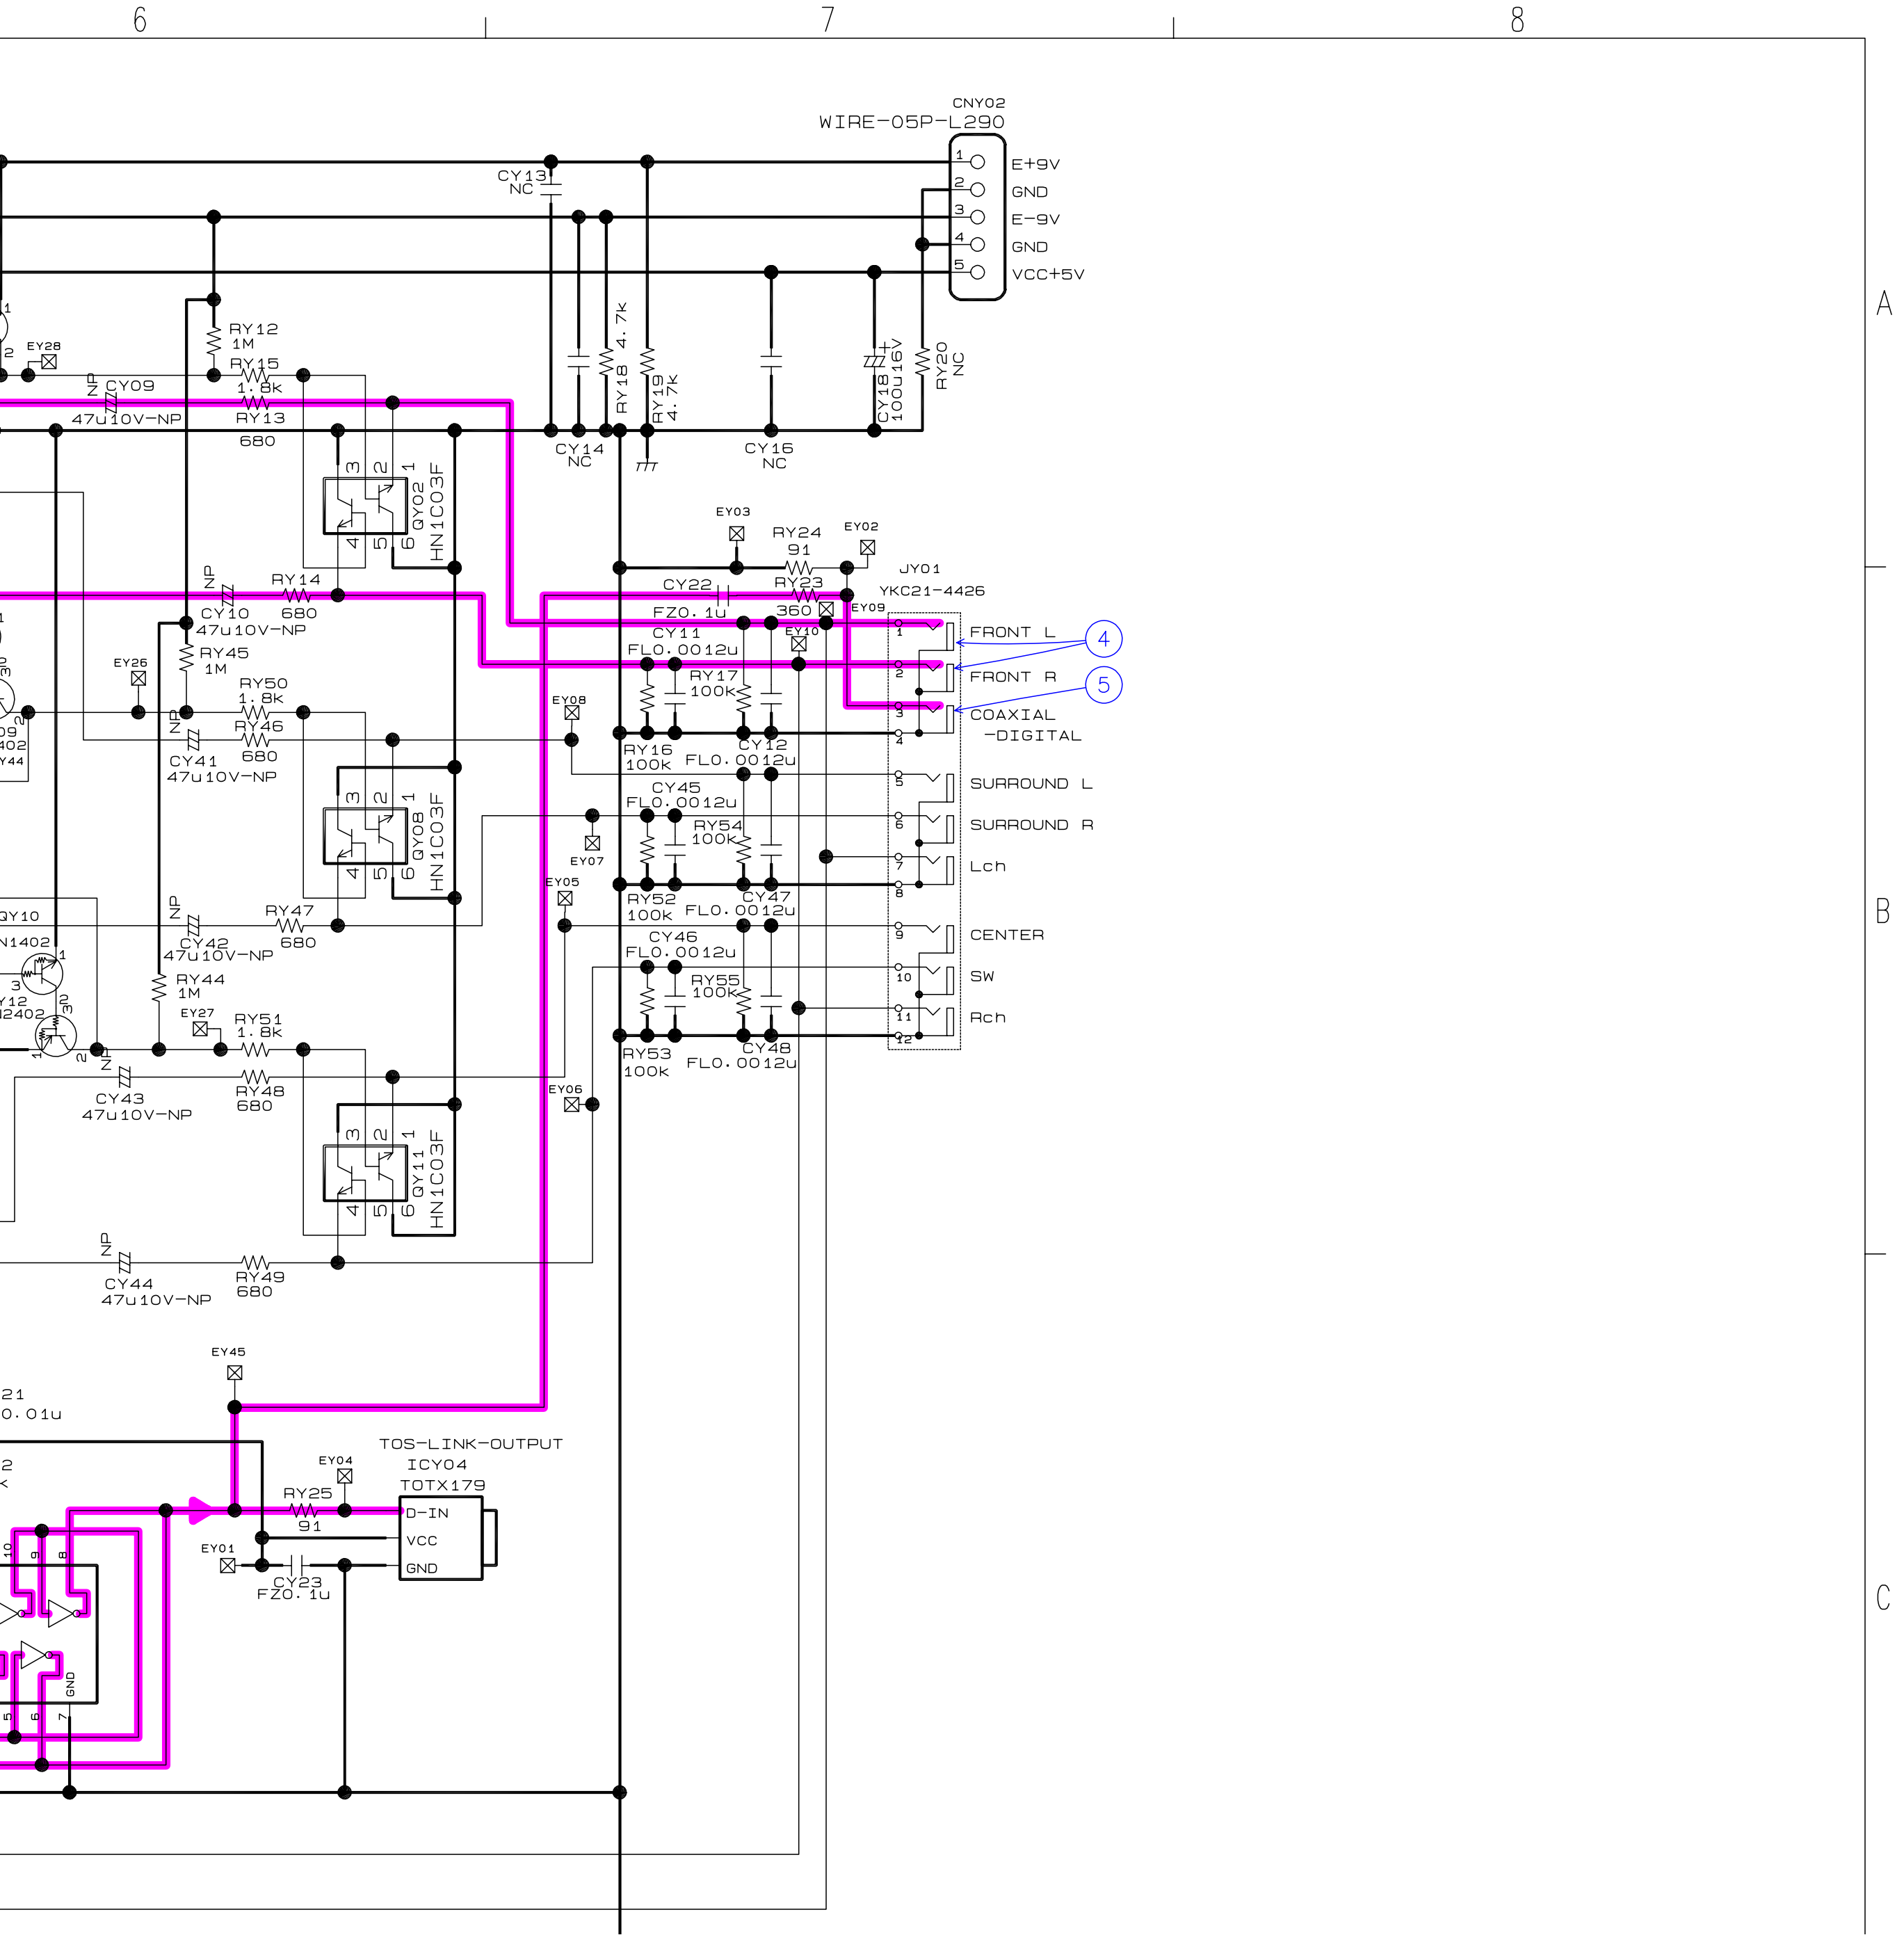
6
7
8
A
B
C
CNY02
WIRE-05P-L290
E+9V
GND
E-9V
GND
VCC+5V
CY13 NC
RY12 1M
RY15 1.8K
RY13 680
CY09 47u10V-NP
EY28
RY18 4.7k
RY19 4.7k
CY14 NC
CY16 NC
CY18 100u16V
RY20 NC
QY02 HN1C03F
EY03
RY24 91
EY02
JY01
YKC21-4426
CY22 FZ0.1u
RY23 360
EY09
EY10
RY14 680
CY10 47u10V-NP
RY45 1M
EY26
RY50 1.8K
RY46 680
CY41 47u10V-NP
CY11 FL0.0012u
RY17 100k
RY16 100k
CY12 FL0.0012u
EY08
FRONT L
FRONT R
COAXIAL -DIGITAL
④
⑤
SURROUND L
SURROUND R
Lch
CENTER
SW
Rch
QY08 HN1C03F
CY45 FL0.0012u
RY54 100k
EY07
EY05
RY52 100k
CY47 FL0.0012u
CY46 FL0.0012u
RY55 100k
RY53 100k
CY48 FL0.0012u
QY10
RY47 680
CY42 47u10V-NP
RY44 1M
EY27
RY51 1.8K
RY48 680
CY43 47u10V-NP
EY06
QY11 HN1C03F
CY44 47u10V-NP
RY49 680
EY45
TOS-LINK-OUTPUT
ICY04
TOTX179
EY04
RY25 91
D-IN
VCC
GND
EY01
CY23 FZ0.1u
21
0.01u
GND

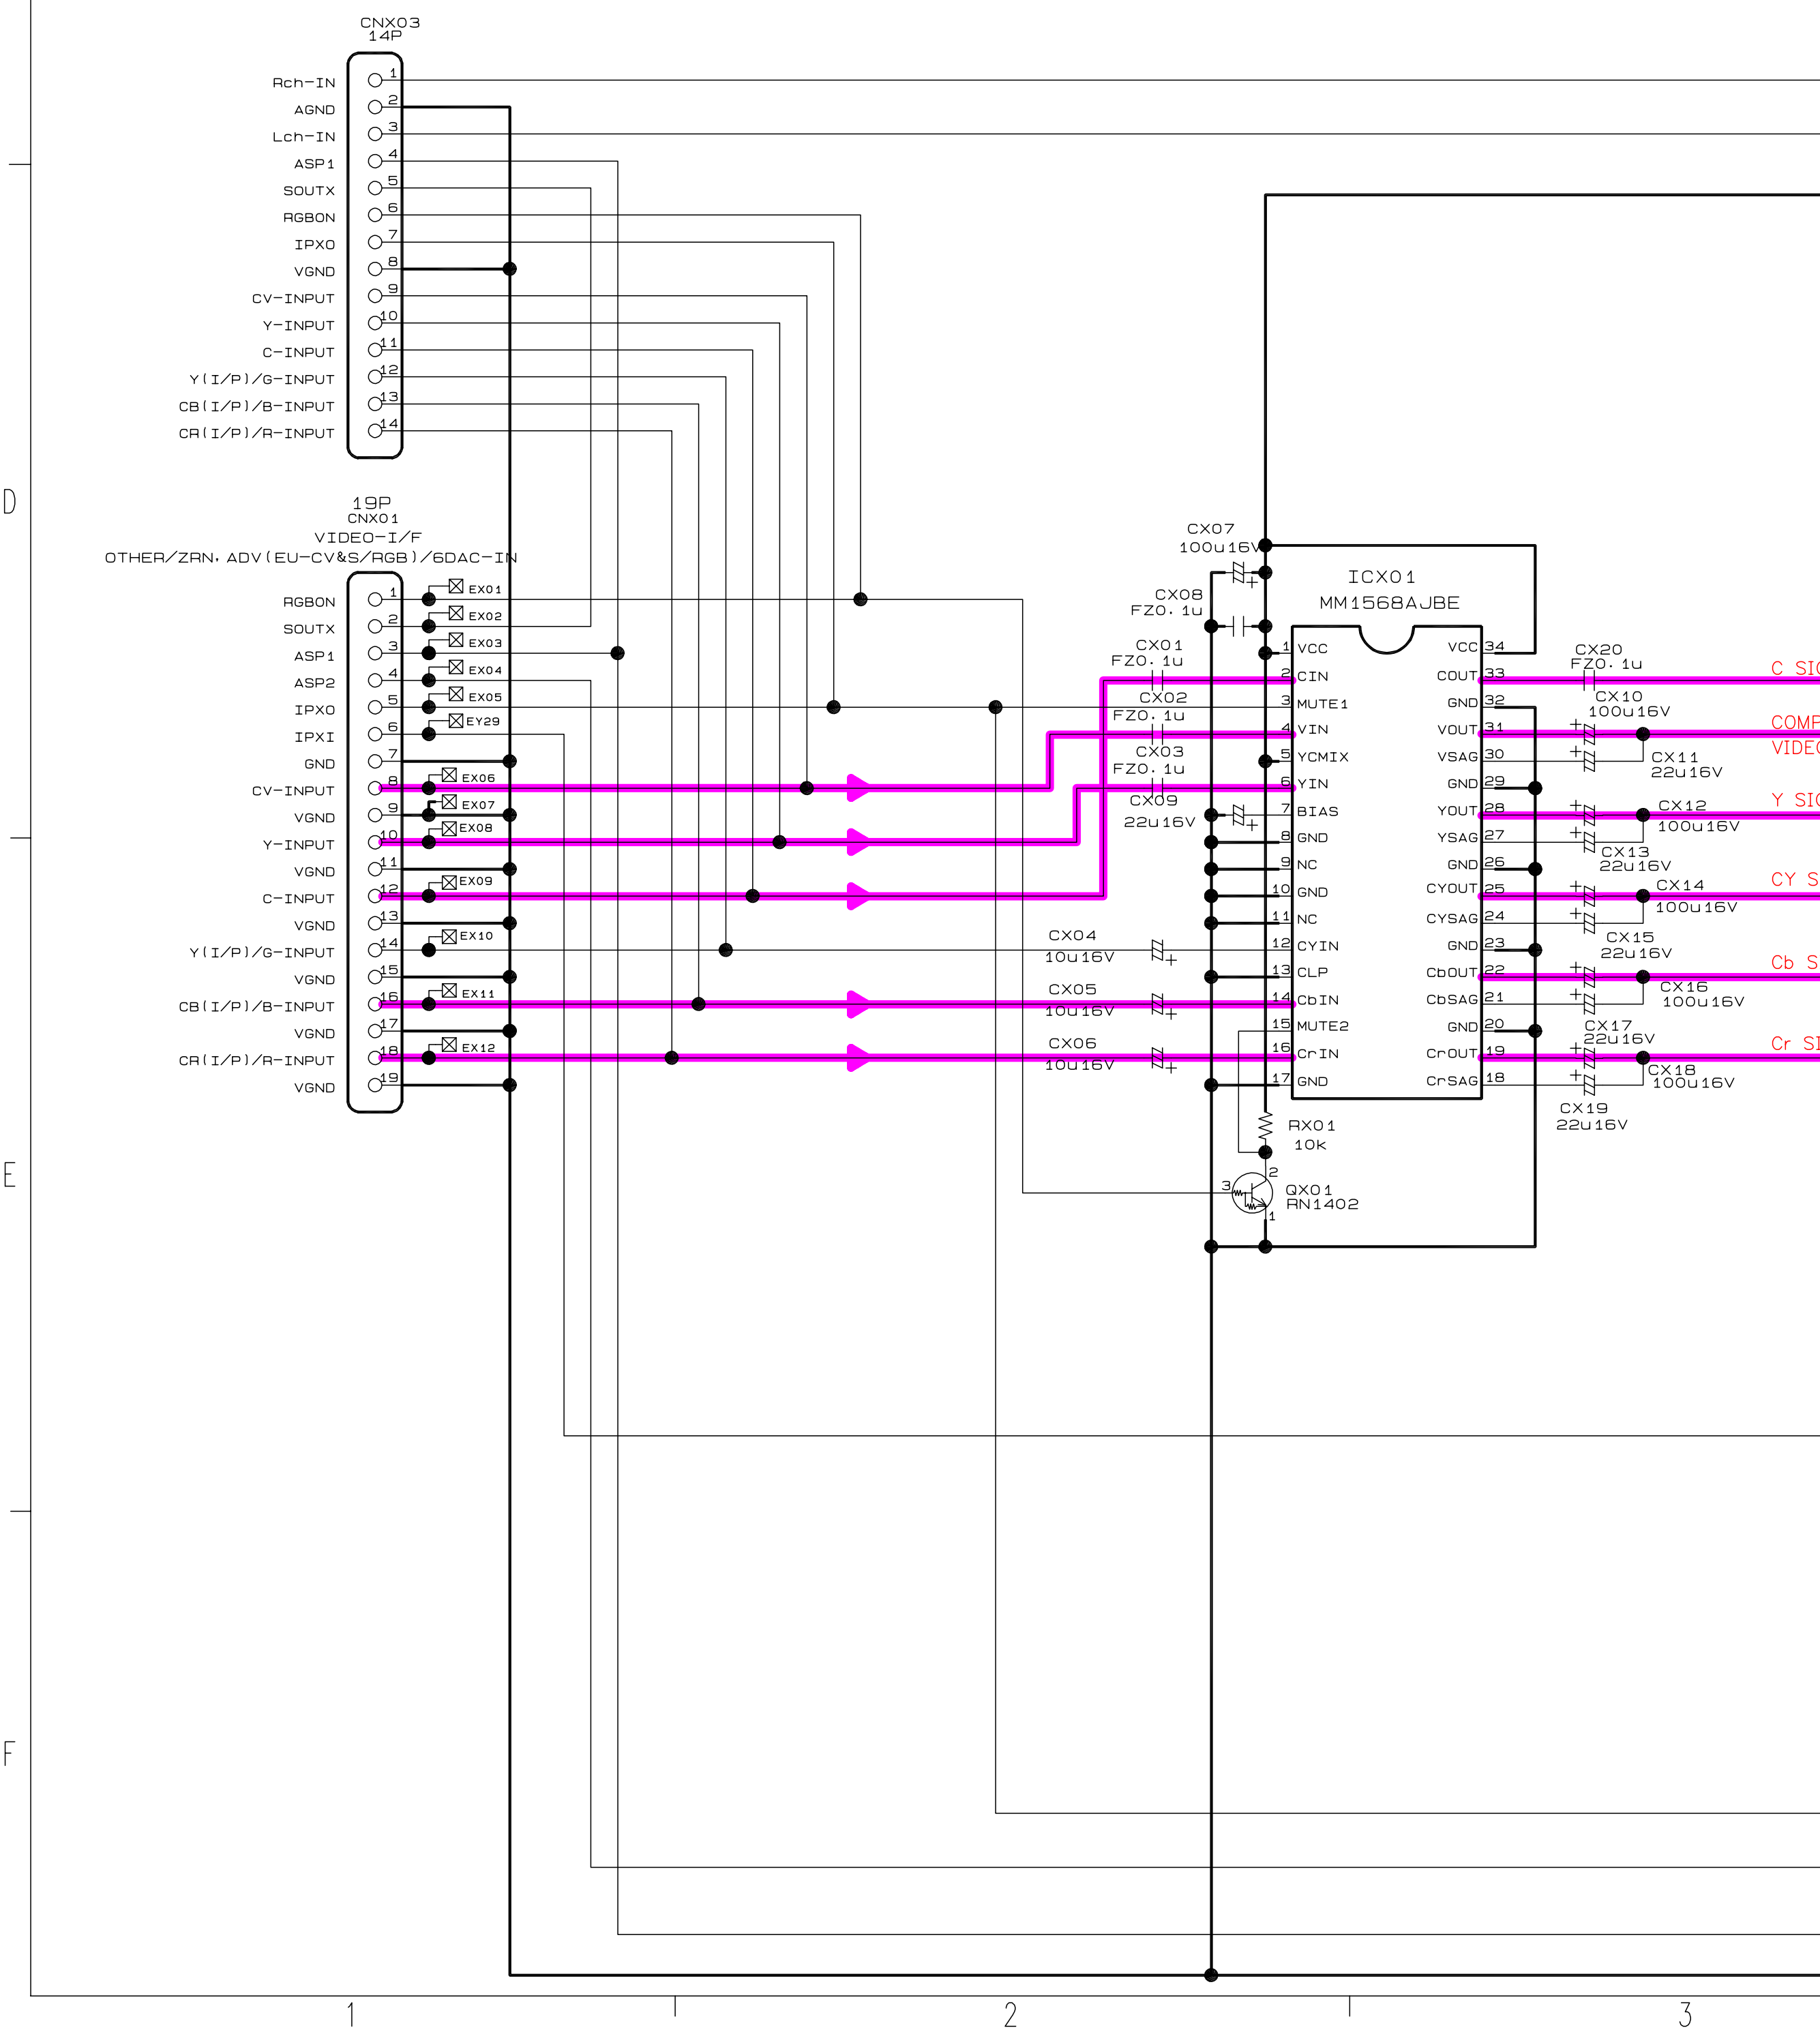CNX03
14P
Rch-IN
AGND
Lch-IN
ASP1
SOUTX
RGBON
IPXO
VGND
CV-INPUT
Y-INPUT
C-INPUT
Y(I/P)/G-INPUT
CB(I/P)/B-INPUT
CR(I/P)/R-INPUT
D
19P
CNX01
VIDEO-I/F
OTHER/ZRN, ADV(EU-CV&S/RGB)/6DAC-IN
RGBON
SOUTX
ASP1
ASP2
IPXO
IPXI
GND
CV-INPUT
VGND
Y-INPUT
VGND
C-INPUT
VGND
Y(I/P)/G-INPUT
VGND
CB(I/P)/B-INPUT
VGND
CR(I/P)/R-INPUT
VGND
EX01
EX02
EX03
EX04
EX05
EY29
EX06
EX07
EX08
EX09
EX10
EX11
EX12
CX07
100u16V
CX08
FZ0.1u
CX01
FZ0.1u
CX02
FZ0.1u
CX03
FZ0.1u
CX09
22u16V
CX04
10u16V
CX05
10u16V
CX06
10u16V
ICX01
MM1568AJBE
1 VCC
2 CIN
3 MUTE1
4 VIN
5 YCMIX
6 YIN
7 BIAS
8 GND
9 NC
10 GND
11 NC
12 CYIN
13 CLP
14 CbIN
15 MUTE2
16 CrIN
17 GND
VCC 34
COUT 33
GND 32
VOUT 31
VSAG 30
GND 29
YOUT 28
YSAG 27
GND 26
CYOUT 25
CYSAG 24
GND 23
CbOUT 22
CbSAG 21
GND 20
CrOUT 19
CrSAG 18
CX20
FZ0.1u
CX10
100u16V
CX11
22u16V
CX12
100u16V
CX13
22u16V
CX14
100u16V
CX15
22u16V
CX16
100u16V
CX17
22u16V
CX18
100u16V
CX19
22u16V
RX01
10k
QX01
RN1402
C SIG
COMP
VIDEO
Y SIG
CY S
Cb S
Cr SI
E
F
1
2
3

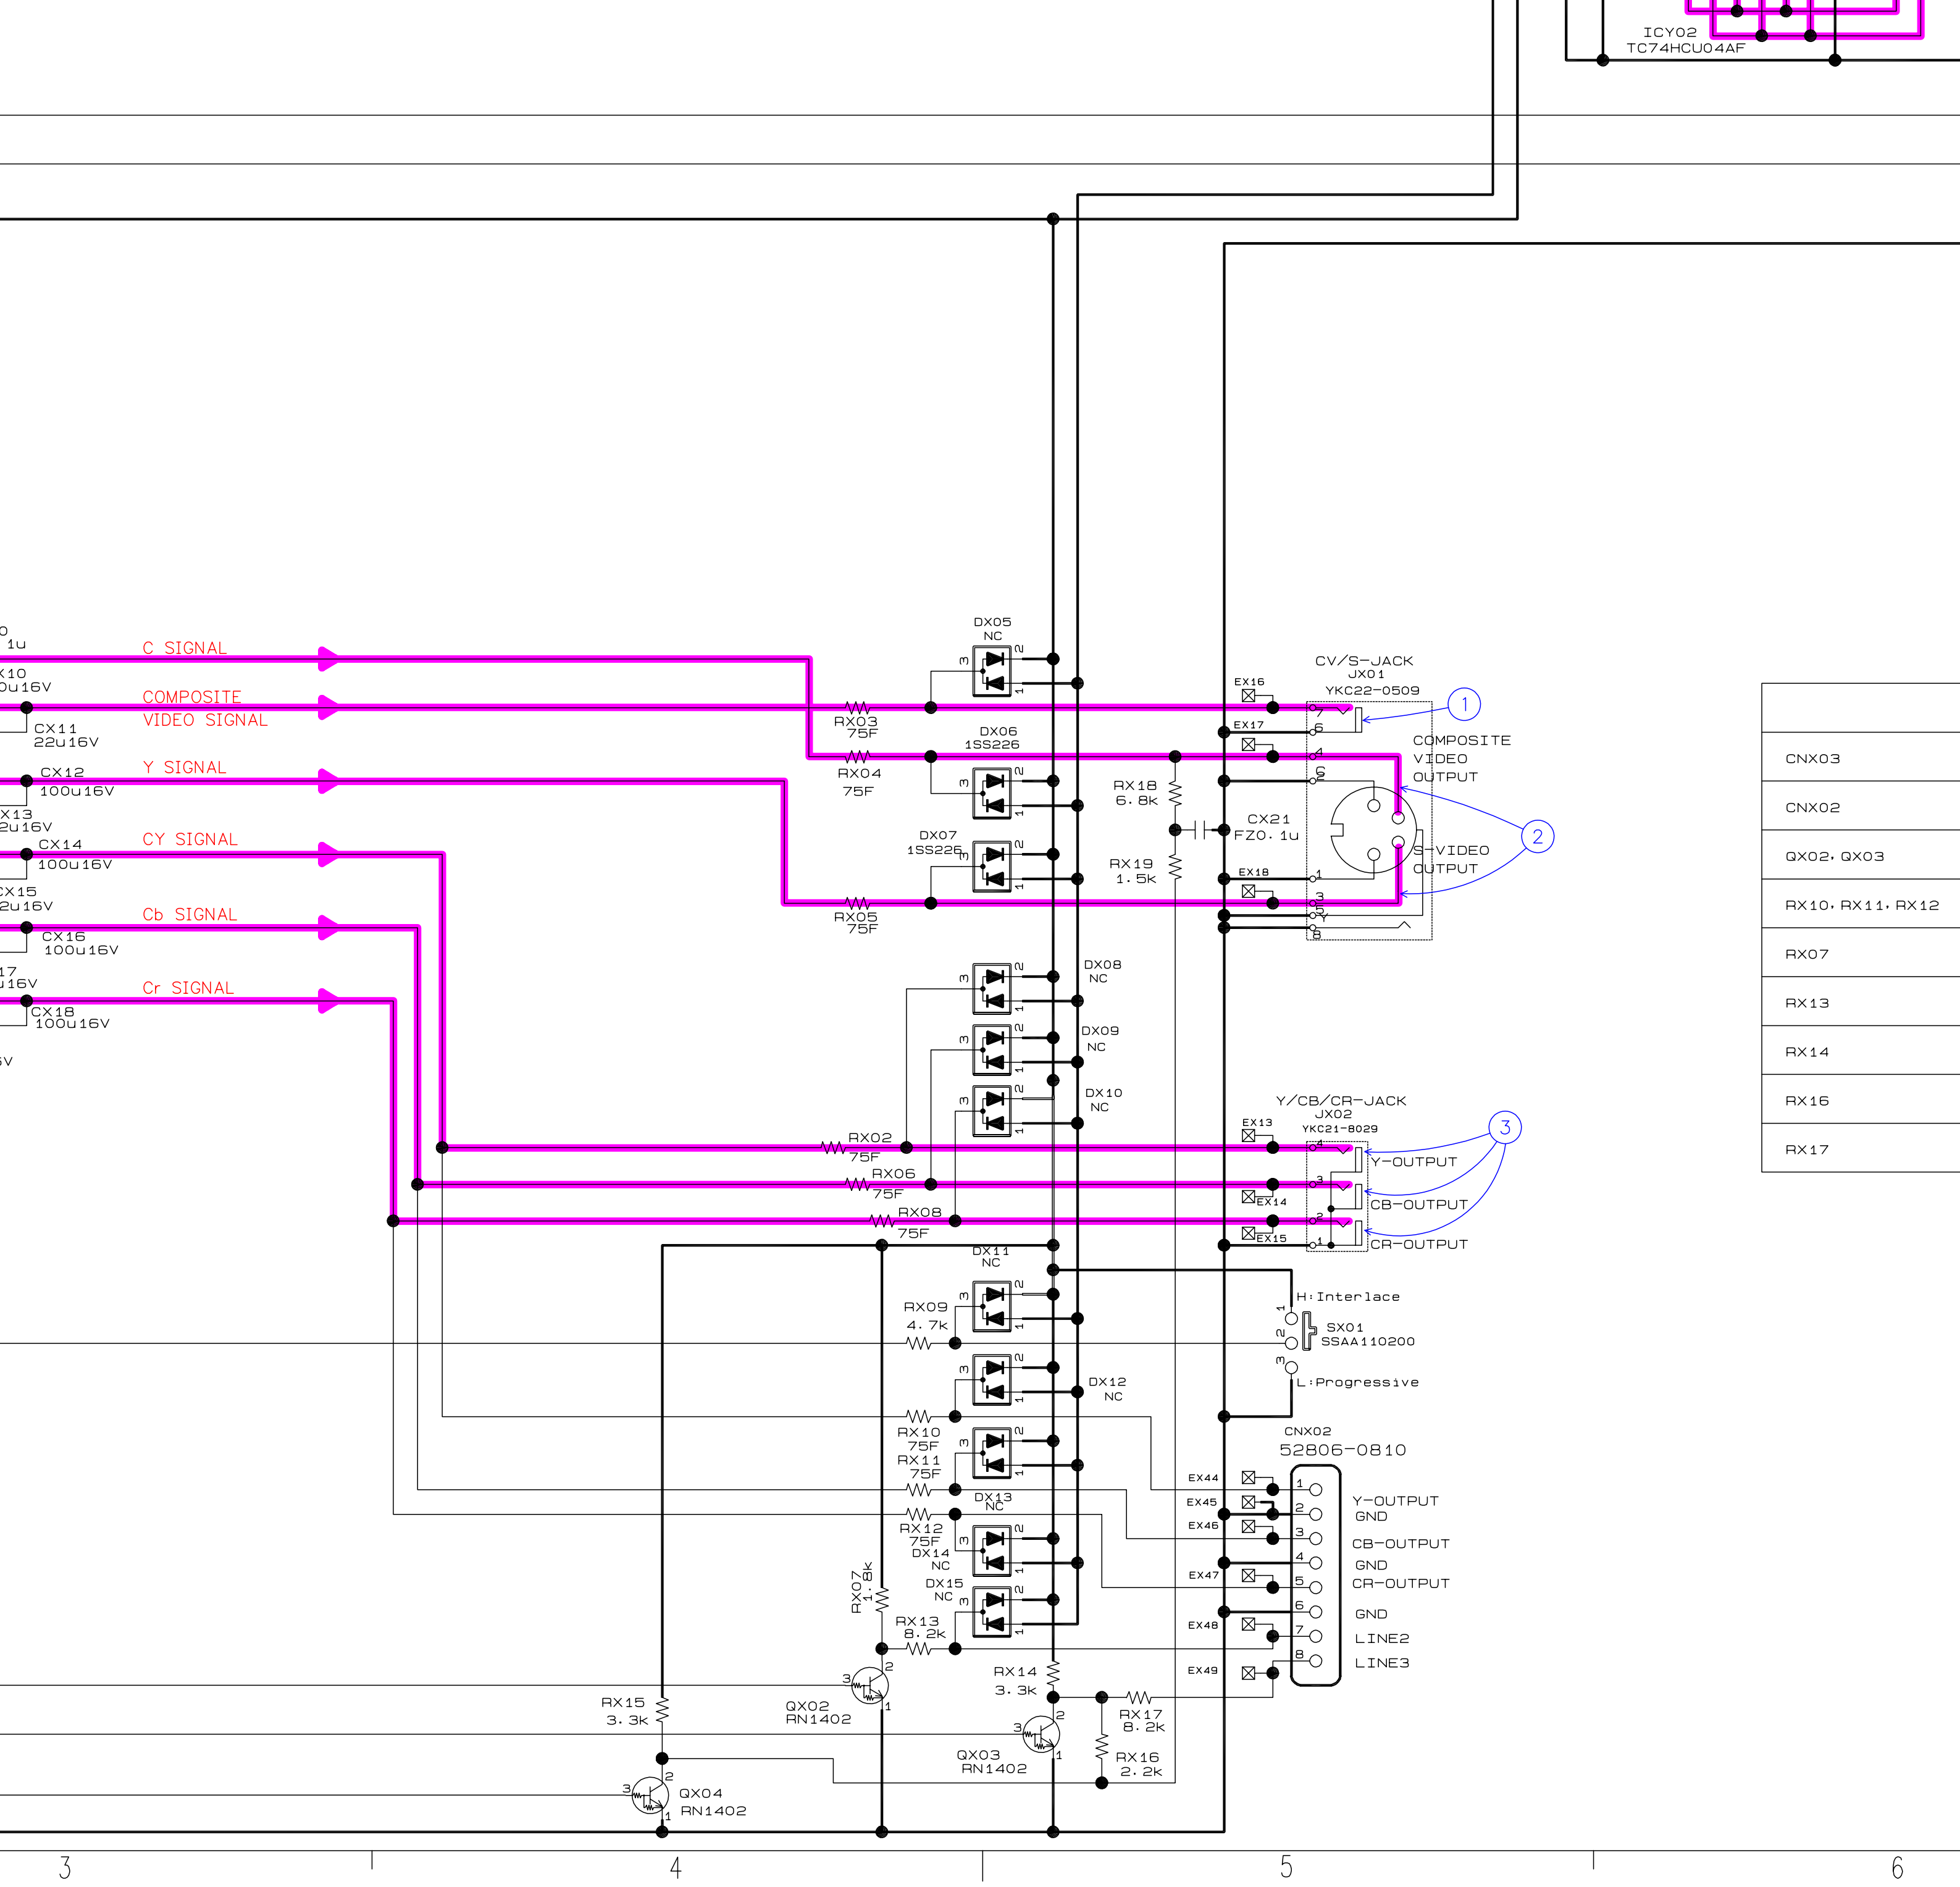
ICY02
TC74HCU04AF
C SIGNAL
COMPOSITE
VIDEO SIGNAL
Y SIGNAL
CY SIGNAL
Cb SIGNAL
Cr SIGNAL
1u
X10
0u16V
CX11
22u16V
CX12
100u16V
X13
2u16V
CX14
100u16V
CX15
2u16V
CX16
100u16V
17
u16V
CX18
100u16V
V
DX05
NC
RX03
75F
DX06
1SS226
RX04
75F
DX07
1SS226
RX05
75F
RX18
6.8k
RX19
1.5k
CX21
FZ0.1u
EX16
EX17
EX18
CV/S-JACK
JX01
YKC22-0509
①
COMPOSITE
VIDEO
OUTPUT
②
S-VIDEO
OUTPUT
DX08
NC
DX09
NC
DX10
NC
RX02
75F
RX06
75F
RX08
75F
Y/CB/CR-JACK
JX02
YKC21-8029
EX13
EX14
EX15
③
Y-OUTPUT
CB-OUTPUT
CR-OUTPUT
DX11
NC
RX09
4.7k
H:Interlace
SX01
SSAA110200
L:Progressive
DX12
NC
RX10
75F
RX11
75F
DX13
NC
RX12
75F
DX14
NC
DX15
NC
RX07
1.8k
RX13
8.2k
CNX02
52806-0810
EX44
EX45
EX46
EX47
EX48
EX49
Y-OUTPUT
GND
CB-OUTPUT
GND
CR-OUTPUT
GND
LINE2
LINE3
RX14
3.3k
RX15
3.3k
QX02
RN1402
QX03
RN1402
RX17
8.2k
RX16
2.2k
QX04
RN1402
3
4
5
6

CNX03
CNX02
QX02, QX03
RX10, RX11, RX12
RX07
RX13
RX14
RX16
RX17

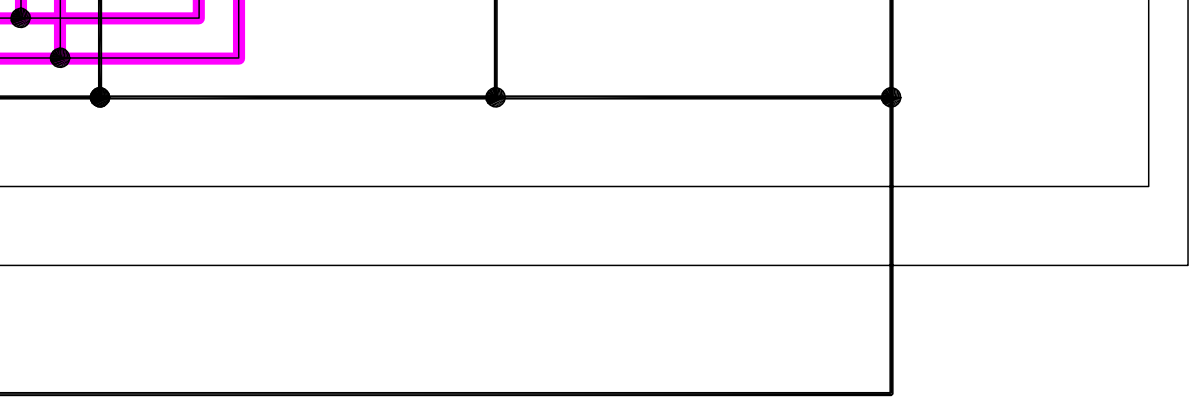

	SD4800	SD4800 JPN	SD4800 EURO
CNX03	NC	NC	52806-1410
CNX02	NC	52806-0810	NC
QX02, QX03	NC	RN1402	NC
RX10, RX11, RX12	NC	75F	NC
RX07	NC	1.8k	NC
RX13	NC	8.2k	NC
RX14	NC	3.3k	NC
RX16	NC	2.2k	NC
RX17	NC	8.2k	NC

D

E

F

Fig. 3-3-1

6 7 8

Output Circuit Diagram

① JX01 Composite video output D-5

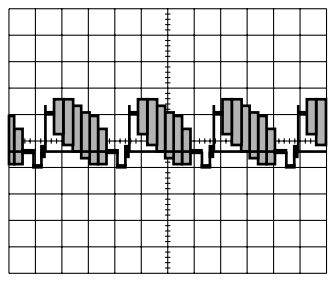

CVBS output
75Ω terminated
100% color bar

V: 500 mV/div
H: 20 µs/div

② JX01
(a) S-video output Y E-5
(b) S-video output C E-5

S-Y/C
75Ω terminated
100% color bar

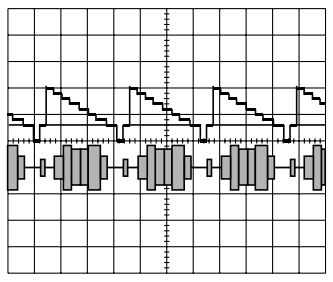

(a) Y
(b) C
V: 500 mV/div
H: 20 µs/div

③ JX02 Y/CB/CR output E-5

Component output
75Ω terminated
100% color bar
(Play)

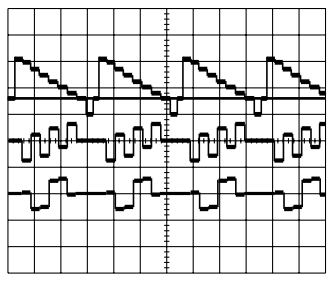

Y
CB
CR
V: 500 mV/div
H: 20 µs/div

④ JY01 L ch output B-7
/ R ch output B-7
(1 kHz, FS)

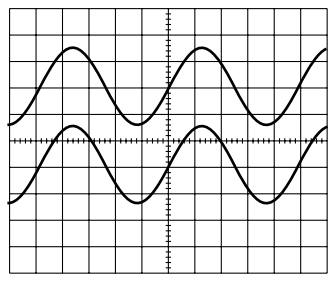

L ch output

R ch output
V: 2 V/div
H: 200 µs/div

⑤ JY01 COAXIAL -DIGITAL OUTPUT B-7

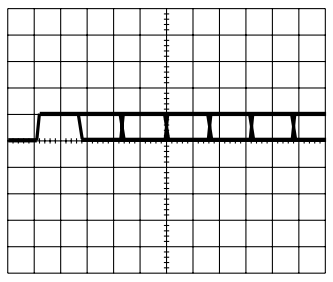

75Ω terminated

V: 500 mV/div
H: 0.1 µs/div

Fig. 3-3-2

4. PC BOARD

4-1. Output PC Board

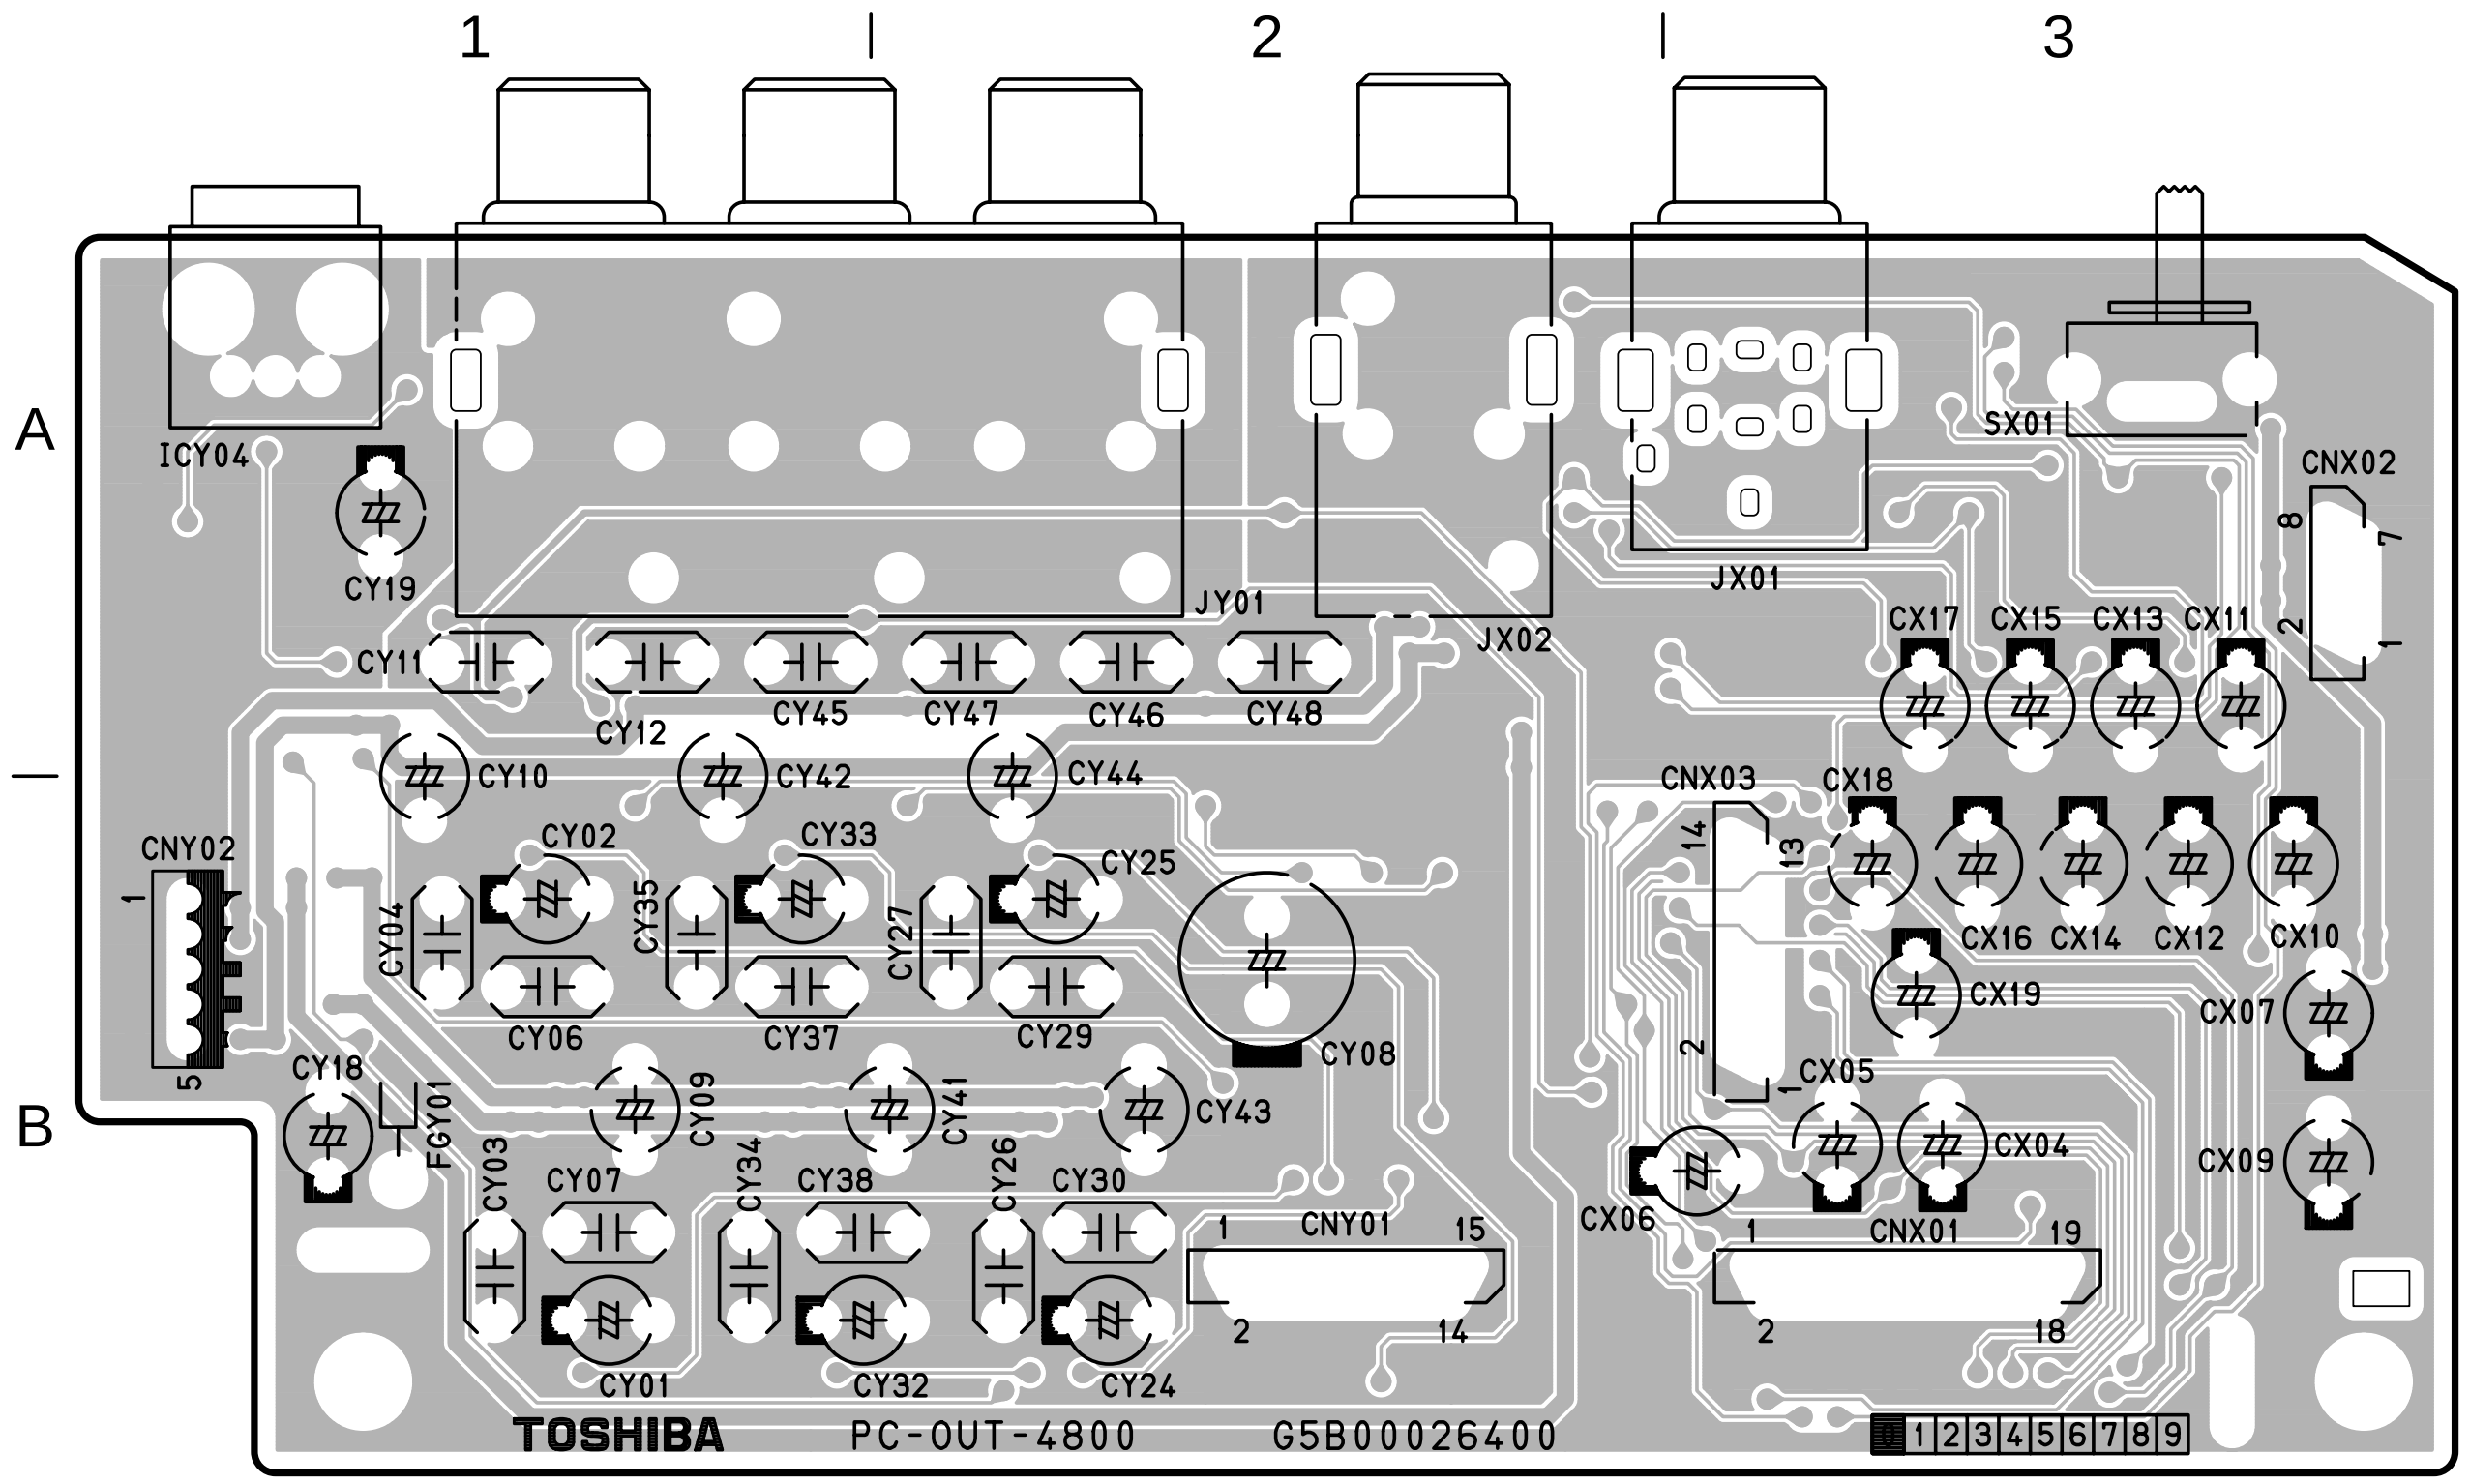

1
2
3
A
B
ICY04
CY19
CY11
CY12
CY45
CY47
CY46
CY48
JY01
JX02
JX01
SX01
CNX02
CX17
CX15
CX13
CX11
CY10
CY42
CY44
CNY02
CY02
CY33
CY25
CY04
CY35
CY27
CY06
CY37
CY29
CY08
CY18
FGY01
CY03
CY09
CY41
CY43
CY07
CY34
CY38
CY26
CY30
CNY01
CY01
CY32
CY24
CNX03
CX18
CX16
CX14
CX12
CX10
CX19
CX07
CX05
CX04
CX06
CX09
CNX01
TOSHIBA
PC-OUT-4800
G5B00026400

Fig. 3-4-1 EU05 Output PC Board (Top side)

Part No.	Location	Part No.	Location
CNX01	B3	CY12	A1
CNX02	A3	CY18	B1
CNX03	B3	CY19	A1
CNY01	B2	CY24	B2
CNY02	B1	CY25	B2
CX04	B3	CY26	B2
CX05	B3	CY27	B2
CX06	B3	CY29	B2
CX07	B3	CY30	B2
CX09	B3	CY32	B1
CX10	B3	CY33	B1
CX11	A3	CY34	B1
CX12	B3	CY35	B1
CX13	A3	CY37	B1
CX14	B3	CY38	B1
CX15	A3	CY41	B2
CX16	B3	CY42	B1
CX17	A3	CY43	B2
CX18	B3	CY44	A2
CX19	B3	CY45	A1
CY01	B1	CY46	A2
CY02	B1	CY47	A2
CY03	B1	CY48	A2
CY04	B1	FGY01	B1
CY06	B1	ICY04	A1
CY07	B1	JX01	A3
CY08	B2	JX02	A2
CY09	B1	JY01	A1
CY10	B1	SX01	A3
CY11	A1		

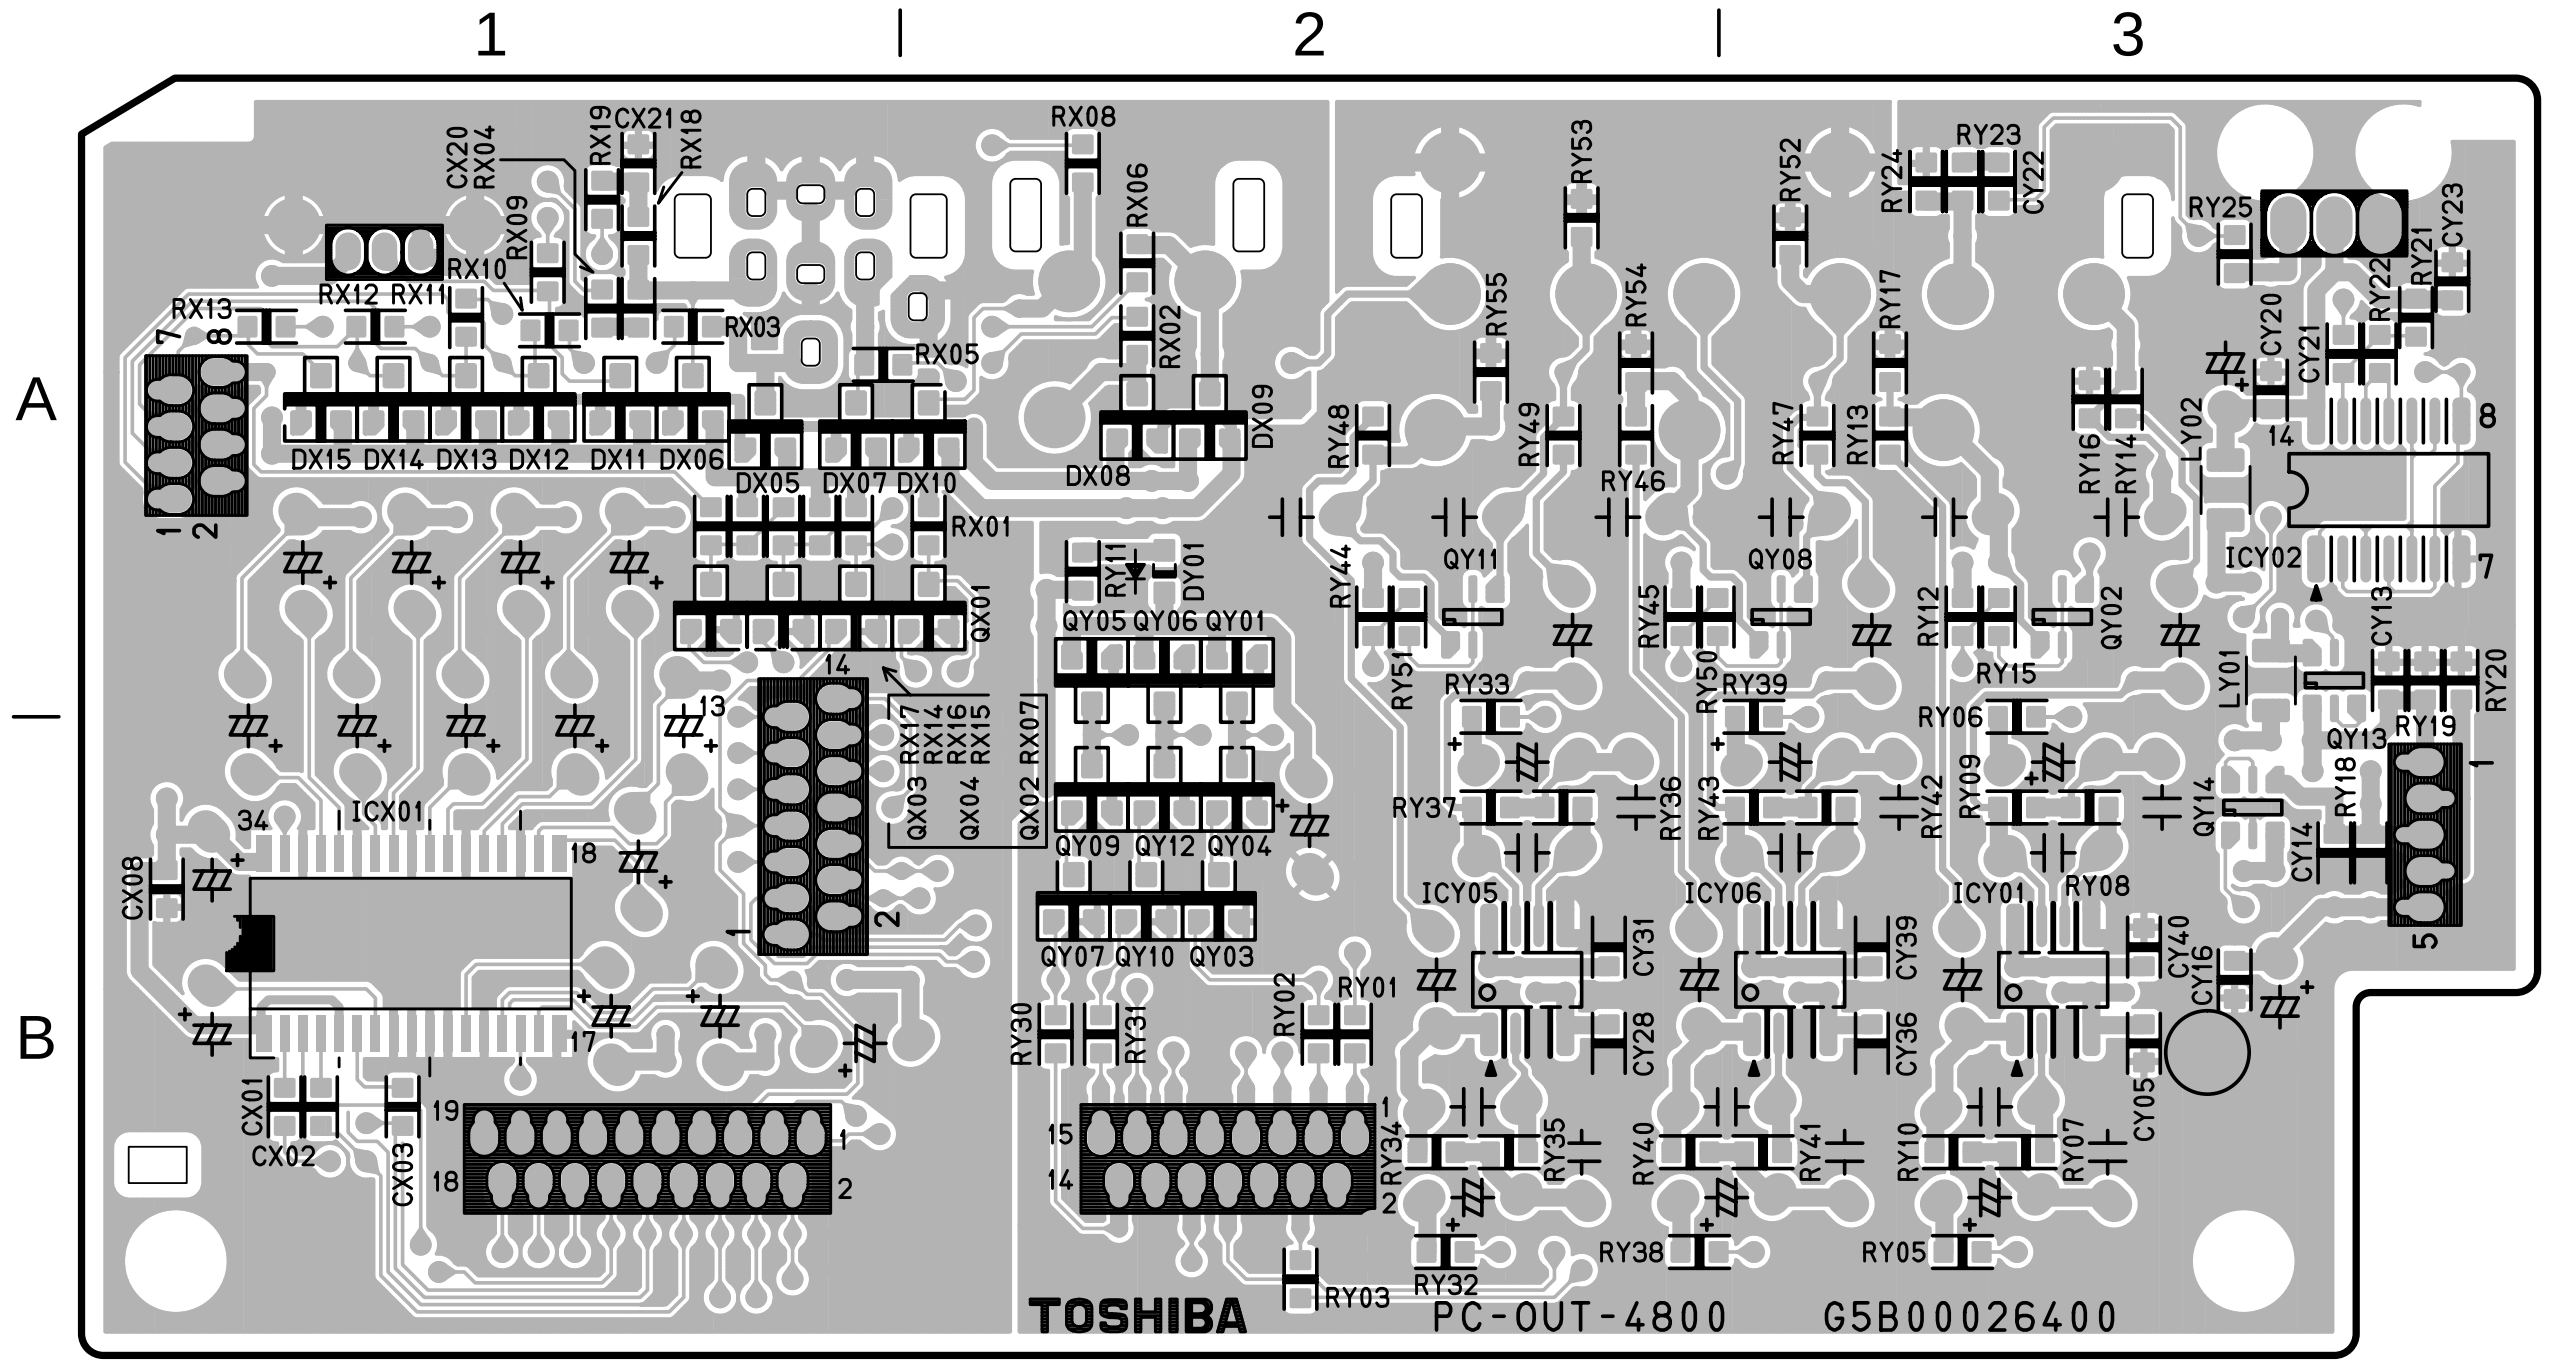

1
2
3
A
B
CX20
RX04
RX19
CX21
RX18
RX09
RX13
RX12
RX11
RX10
RX03
RX05
RX08
RX06
RX02
DX15
DX14
DX13
DX12
DX11
DX06
DX05
DX07
DX10
DX08
DX09
RX01
QX01
RX17
RX16
RX15
RX07
QX02
QX03
QX04
DY01
QY05
QY06
QY01
QY09
QY12
QY04
QY07
QY10
QY03
ICX01
CX08
CX01
CX02
CX03
RY53
RY52
RY23
RY24
CY22
RY25
CY20
CY21
RY22
RY21
CY23
RY55
RY54
RY17
RY48
RY49
RY46
RY47
RY13
RY16
RY14
LY02
ICY02
RY44
QY11
RY45
QY08
RY12
QY02
RY51
RY33
RY50
RY39
RY15
LY01
CY13
RY20
RY06
RY09
QY13
RY18
RY19
RY37
RY36
RY43
RY42
QY14
CY14
ICY05
CY31
ICY06
CY39
ICY01
RY08
CY40
CY16
RY02
RY01
RY30
RY31
CY28
CY36
CY05
RY34
RY35
RY40
RY41
RY10
RY07
RY03
RY32
RY38
RY05
TOSHIBA
PC-OUT-4800
G5B00026400

Fig. 3-4-2 EU05 Output PC Board (Bottom side)

Part No.	Location	Part No.	Location	Part No.	Location
CX01	B1	QY01	A2	RY11	A2
CX02	B1	QY02	A3	RY12	A3
CX03	B1	QY03	B2	RY13	A3
CX08	B1	QY04	B2	RY14	A3
CX20	A1	QY05	A2	RY15	A3
CX21	A1	QY06	A2	RY16	A3
CY05	B3	QY07	B2	RY17	A3
CY13	A3	QY08	A3	RY18	B3
CY14	B3	QY09	B2	RY19	A3
CY16	B3	QY10	B2	RY20	A3
CY20	A3	QY11	A2	RY21	A3
CY21	A3	QY12	B2	RY22	A3
CY22	A3	QY13	A3	RY23	A3
CY23	A3	QY14	B3	RY24	A3
CY28	B2	RX01	A2	RY25	A3
CY31	B2	RX02	A2	RY30	B2
CY36	B3	RX03	A1	RY31	B2
CY39	B3	RX04	A1	RY32	B2
CY40	B3	RX05	A1	RY33	A2
DX05	A1	RX06	A2	RY34	B2
DX06	A1	RX07	A1	RY35	B2
DX07	A1	RX08	A2	RY36	B2
DX08	A2	RX09	A1	RY37	B2
DX09	A2	RX10	A1	RY38	B2
DX10	A2	RX11	A1	RY39	A3
DX11	A1	RX12	A1	RY40	B2
DX12	A1	RX13	A1	RY41	B3
DX13	A1	RX14	A1	RY42	B3
DX14	A1	RX15	A1	RY43	B3
DX15	A1	RX16	A1	RY44	A2
DY01	A2	RX17	A1	RY45	A2
ICX01	B1	RX18	A1	RY46	A2
ICY01	B3	RX19	A1	RY47	A3
ICY02	A3	RY01	B2	RY48	A2
ICY05	B2	RY02	B2	RY49	A2
ICY06	B3	RY03	B2	RY50	A2
LY01	A3	RY05	B3	RY51	A2
LY02	A3	RY06	A3	RY52	A3
QX01	A2	RY07	B3	RY53	A2
QX02	A1	RY08	B3	RY54	A2
QX03	A1	RY09	B3	RY55	A2
QX04	A1	RY10	B3		

SECTION 4
PARTS LIST

SAFETY PRECAUTION

The parts identified by ! (⚠) mark are critical for safety. Replace only with part number specified.

The mounting position of replacement is to be identical with originals.

The substitute replacement parts which do not have the same safety characteristics as specified in the parts list may create shock, fire or other hazards.

NOTICE

The part number must be used when ordering parts in order to assist in processing, be sure to include the model number and description.

ABBREVIATIONS

1. Integrated Circuit (IC)

2. Capacitor (Cap)

- **Capacitance Tolerance (for Nominal Capacitance more than 10pF)**

Table 4-2-1

Symbol	B	C	D	F	G	J	K	M	N
Tolerance %	± 0.1	± 0.25	± 0.5	± 1	± 2	± 5	± 10	± 20	± 30

Symbol	P	Q	T	U	V	W	X	Y	Z
Tolerance %	+ 100 0	+ 30 – 10	+ 50 – 10	+ 75 – 10	+ 20 – 10	+ 100 – 10	+ 40 – 20	+ 150 – 10	+ 80 – 20

Ex. 10MF J = 10μF ± 5%

- **Capacitance Tolerance (for Nominal Capacitance 10pF or less)**

Table 4-2-2

Symbol	B	C	D	F	G
Tolerance pF	± 0.1	± 0.25	± 0.5	± 1	± 2

Ex. 10pF G = 10pF ± 2pF

3. Resistor (Res)

- **Resistance tolerance**

Table 4-3-1

Symbol	B	C	D	F	G	J	K	M
Tolerance %	± 0.1	± 0.25	± 0.5	± 1	± 2	± 5	± 10	± 20

Ex. 470ohmJ = 470ohm± 5%

4. EXPLODED VIEWS

4-1. Chassis Assembly (Type A)

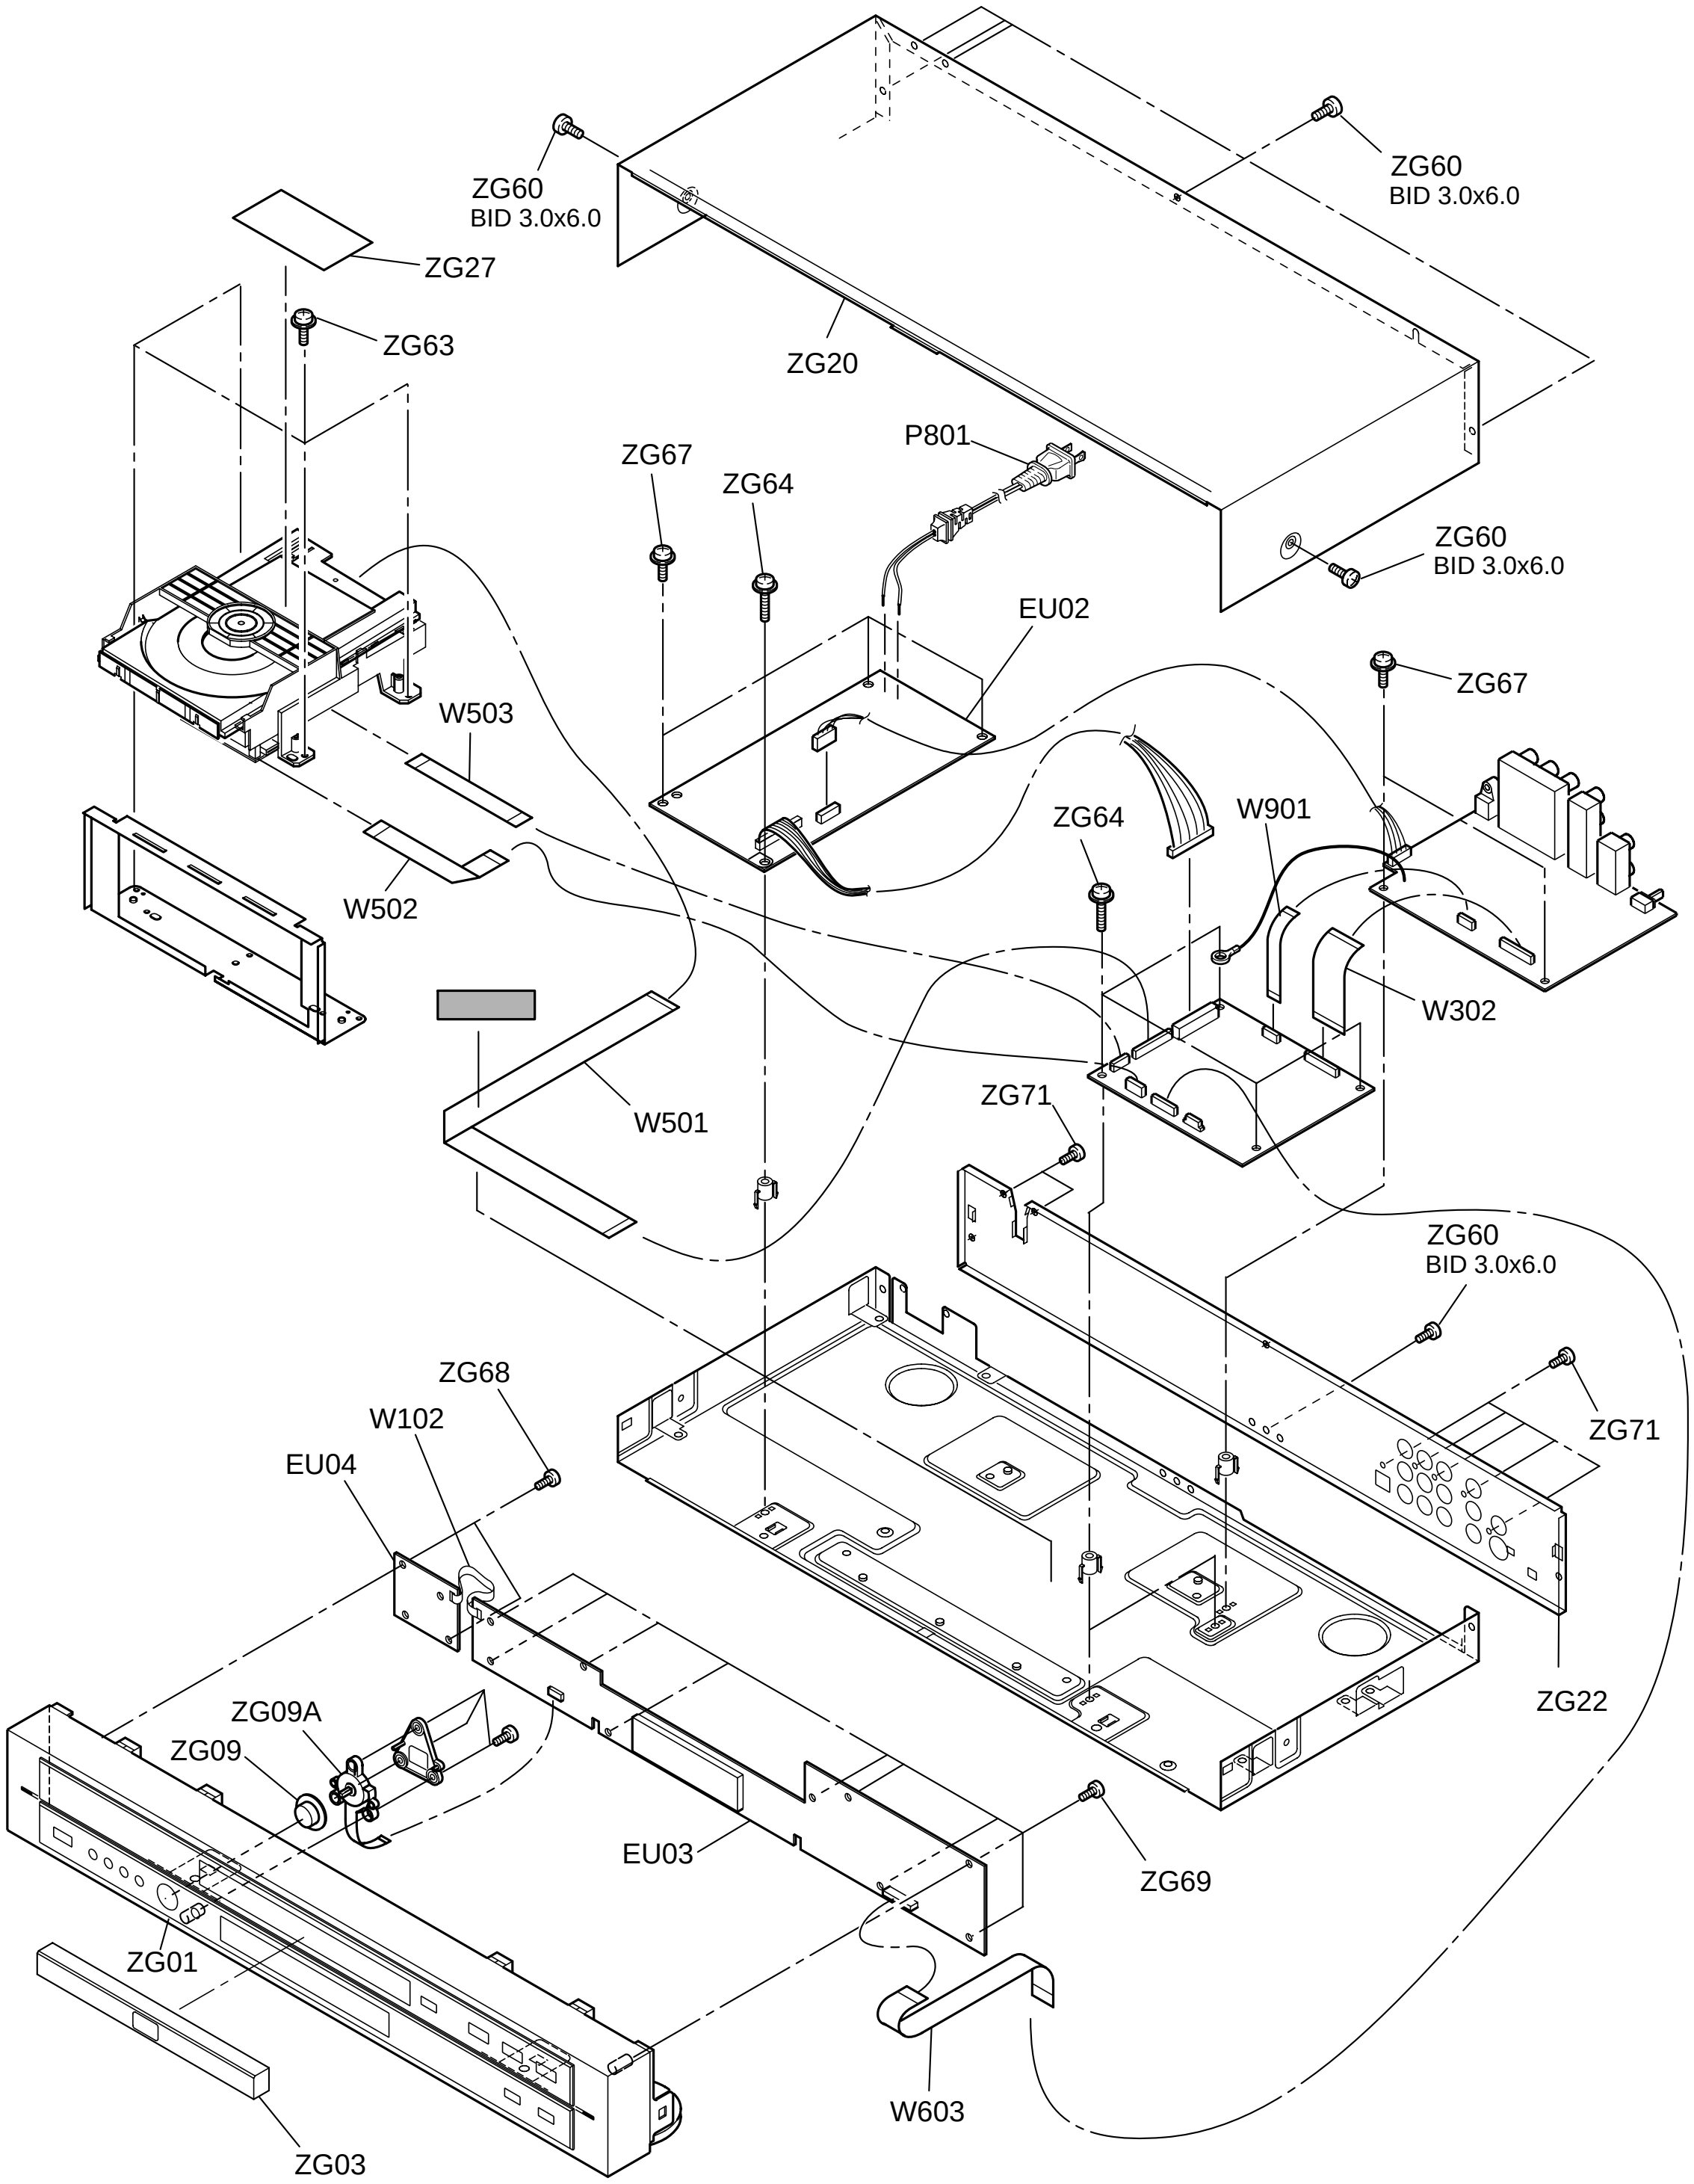
ZG60
BID 3.0x6.0
ZG60
BID 3.0x6.0
ZG27
ZG63
ZG20
P801
ZG67
ZG64
ZG60
BID 3.0x6.0
EU02
ZG67
W503
ZG64
W901
W502
W302
W501
ZG71
ZG60
BID 3.0x6.0
ZG68
W102
ZG71
EU04
ZG22
ZG09A
ZG09
EU03
ZG69
ZG01
W603
ZG03

Fig. 4-4-1

4-2. Chassis Assembly (Type B)

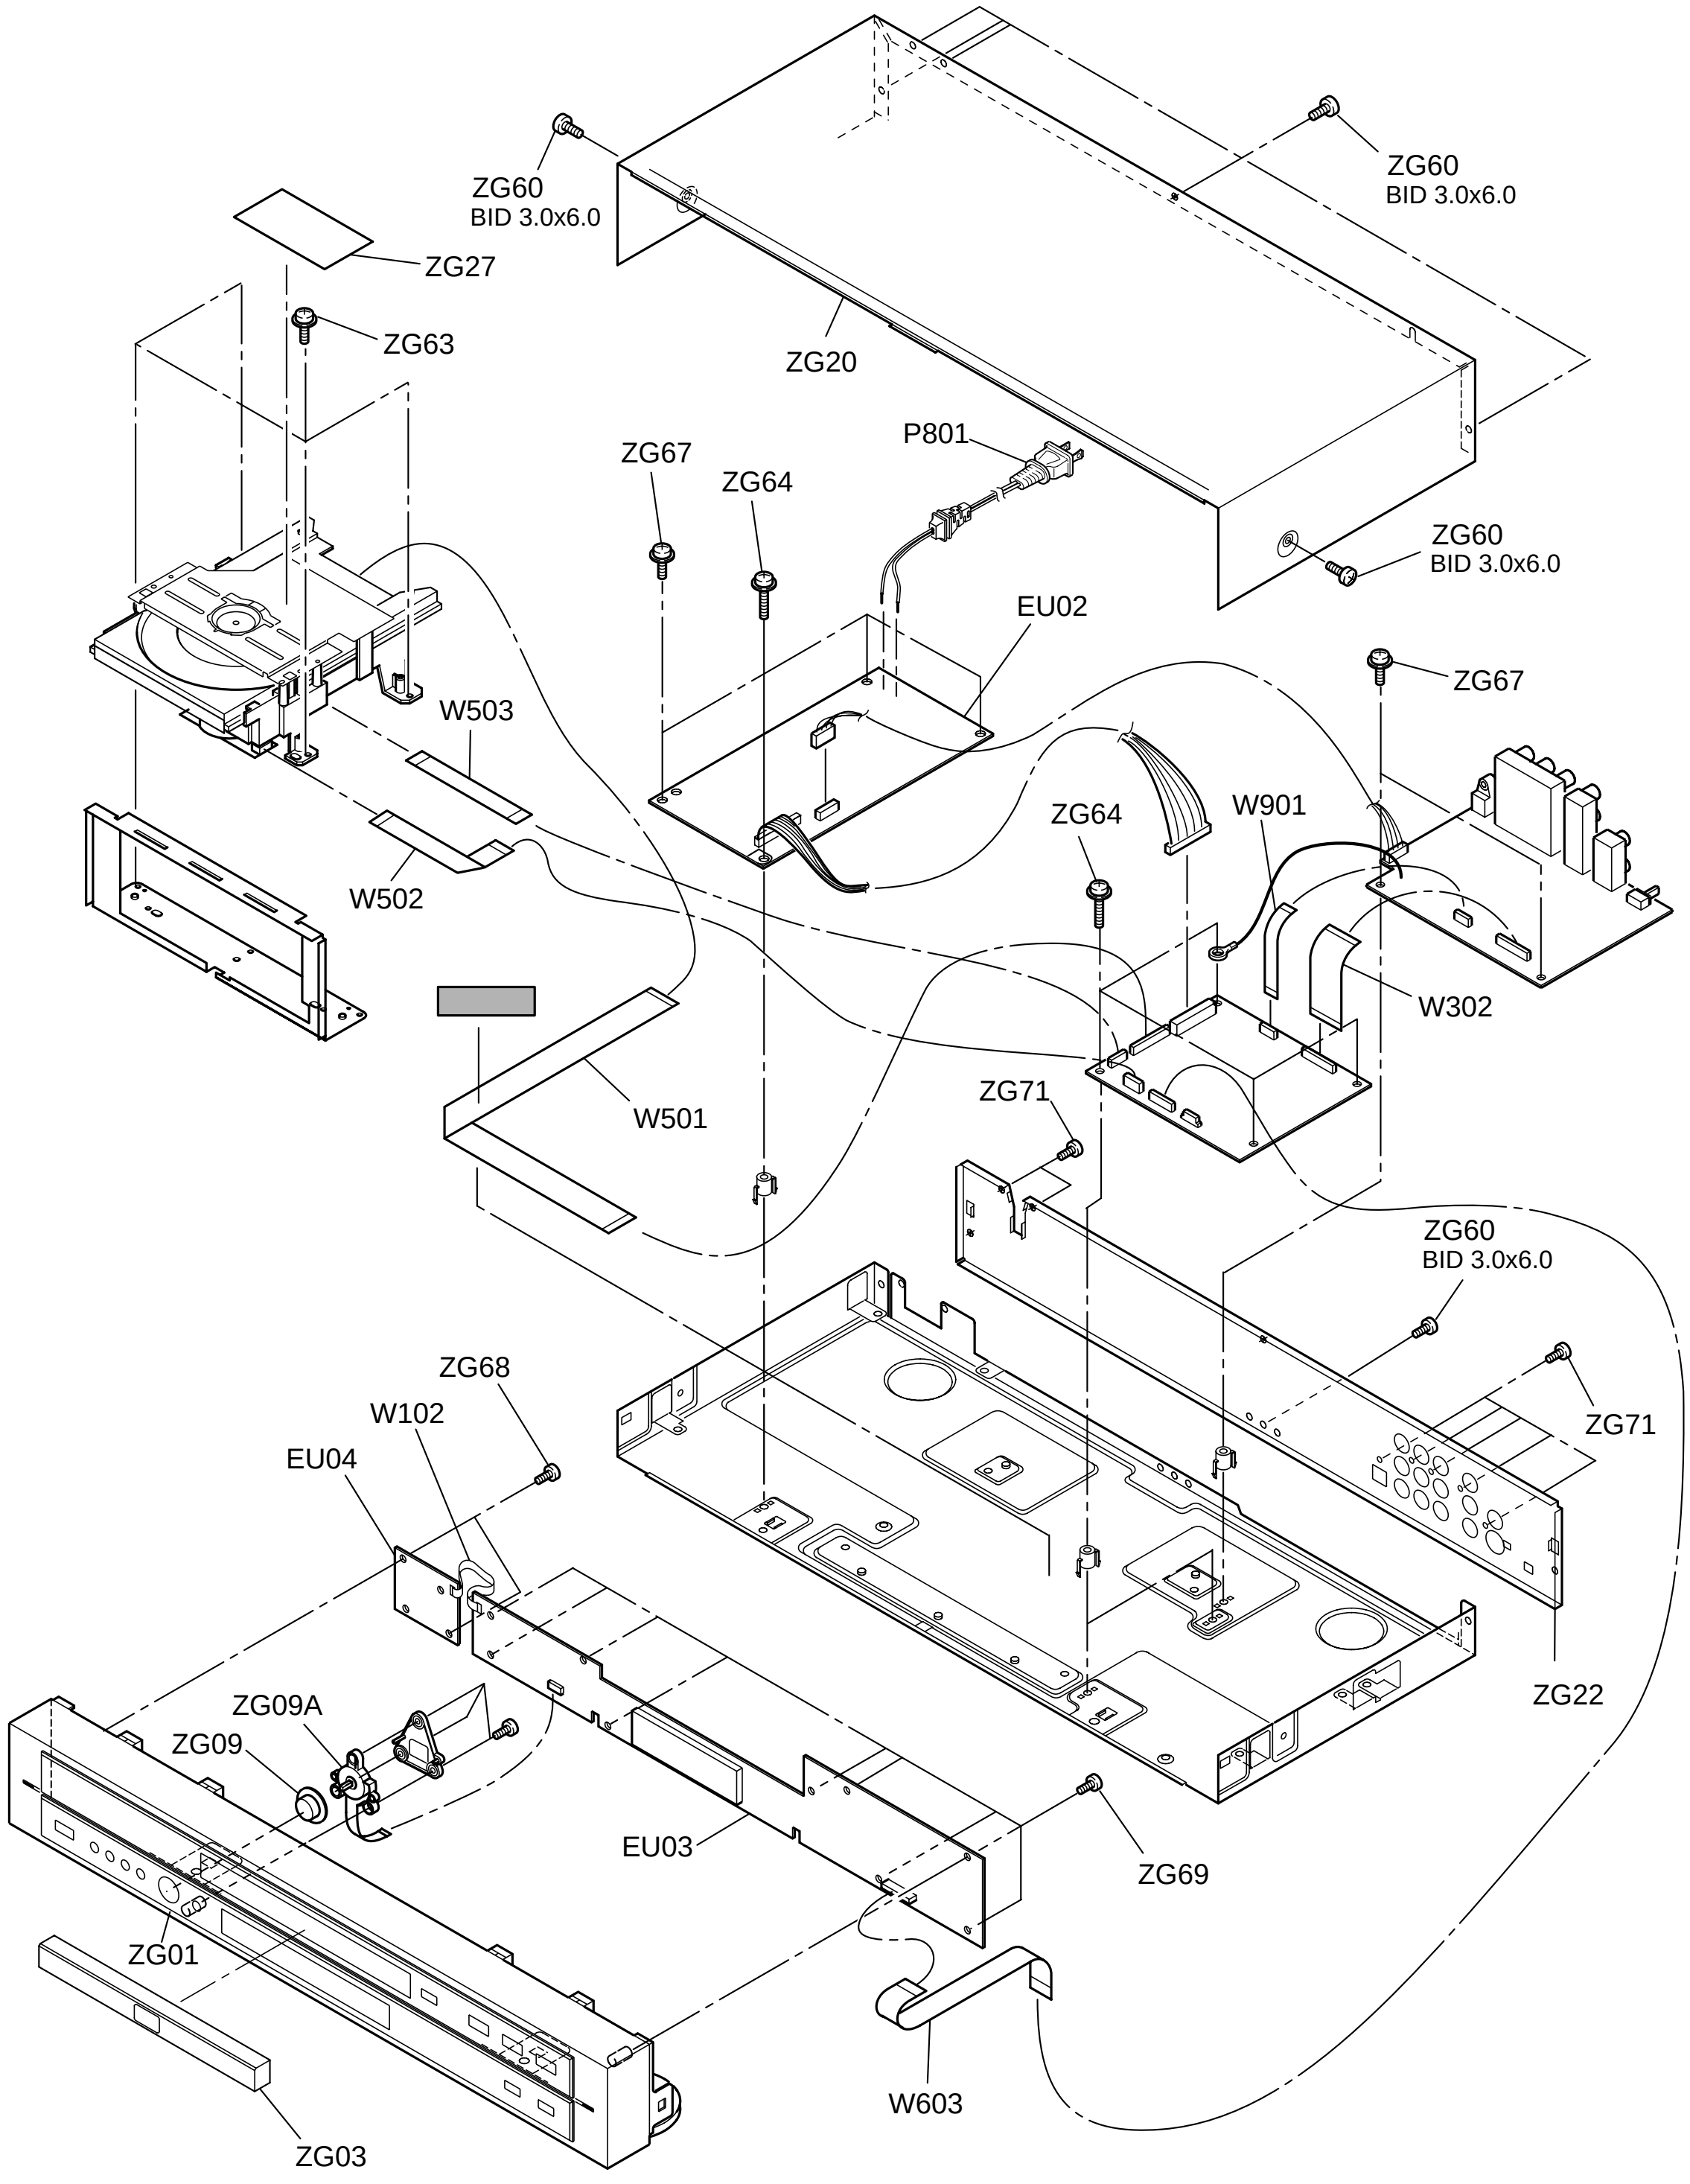

ZG60
BID 3.0x6.0
ZG60
BID 3.0x6.0
ZG27
ZG63
ZG20
P801
ZG67
ZG64
ZG60
BID 3.0x6.0
EU02
ZG67
W503
W502
ZG64
W901
W302
W501
ZG71
ZG60
BID 3.0x6.0
ZG68
W102
EU04
ZG71
ZG22
ZG09A
ZG09
EU03
ZG69
ZG01
W603
ZG03

Fig. 4-4-2

5. PARTS LIST

LOCATION NUMBER	PART NUMBER	DESCRIPTION	
		- MECHANICAL PARTS -	
! MD01	79070499	DVD Mechanism	Single/CD-R
W302	79080184	Cable,Flexible	FFC,19P,L70
W501	79080273	Cable,Flexible	FFC,23P,L297
W502	79080192	Cable,Flexible	FFC,6P,L110
W503	79080299	Cable,Flexible	FFC,8P,L115
W603	79080300	Cable,Flexible	FFC,13P,L115
W901	79080301	Cable,Flexible	FFC,15P,L70
ZF01	79078087	Remote Control Unit,SE-R0071	
! ZF10	79077211	Owners Manual	English/French
! ZF11	79077223	Additional Manual	English/French
! ZF12	79077221	Owners Manual	Spanish
ZG01	79071268	Front Panel(Black)	
ZG03	79071269	Panel,Tray(Black)	
ZG20	79073098	Cover,Top(Black)	
ZG27	79070469	Label,Caution	
ZZ03	79080074	Kit,Data Update	

LOCATION NUMBER	PART NUMBER	DESCRIPTION		
		- ELECTRICAL PARTS -		
EU01	79083127	PC Board Assy	Main	
		- INTEGRATED CIRCUITS -		
IC301	79040007	IC	TC7S08F	
IC302	79040007	IC	TC7S08F	
IC303	79040007	IC	TC7S08F	
IC304	79040248	IC	S-80145CLMC-J16	
IC305	79040356	IC	W986432DH	
IC306	79040398	IC	ZR36750	
IC307	79040357	IC	S-24C02AFJA-TB	
IC308	79040357	IC	S-24C02AFJA-TB	
IC309	79040284	IC	MBM29DL324BD	
IC310	79040399	IC	MM1561JFBE	
IC312	79040354	IC	TC74VHCT244AFTE	
IC313	79040354	IC	TC74VHCT244AFTE	
IC401	79040282	IC	TC94A03F	
IC402	79040323	IC	M11B11664A-30T	
IC502	79040296	IC	TA1323F	
IC503	79040324	IC	BA5813FM-E2	
IC504	79040014	IC	TA75S01F	
IC901	79040249	IC	TC7SH08FU	
IC902	79040365	IC	AD1958YRS	
IC903	79040396	IC	PCM1742KE2K	
IC904	79040396	IC	PCM1742KE2K	
IC905	79040397	IC	MM1575ANRE	
		- TRANSISTORS -		
Q301	79050018	Transistor,Chip	2SA1162	
Q302	79050018	Transistor,Chip	2SA1162	
Q303	79050018	Transistor,Chip	2SA1162	
Q304	79050018	Transistor,Chip	2SA1162	
Q305	79050018	Transistor,Chip	2SA1162	
Q306	79050018	Transistor,Chip	2SA1162	
Q307	79050043	Transistor,Chip	RN1402	
Q308	79050001	Transistor,Chip	RN2402	
Q309	79050043	Transistor,Chip	RN1402	
Q310	79050079	Transistor,Chip	2SA1213-Y	
Q311	79050016	Transistor,Chip	2SC2712	
Q401	79050085	Transistor,Chip	2SC3326-B	
Q501	79050015	Transistor,Chip	HN1B01F	
Q502	79050015	Transistor,Chip	HN1B01F	
Q503	79050079	Transistor,Chip	2SA1213-Y	
Q504	79050043	Transistor,Chip	RN1402	
Q505	79050014	Transistor,Chip	HN1C03F	
Q506	79050085	Transistor,Chip	2SC3326-B	
		- DIODES -		
D501	79060022	Diode,Chip	1SS368	
D502	79060022	Diode,Chip	1SS368	
D901	79060102	Diode	1SS184	
D902	79060102	Diode	1SS184	
D903	79060102	Diode	1SS184	
		- MISCELLANEOUS -		
X901	79089003	Oscillator	SMD49,27MHz	
! EU02	79085104	PC Board Assy	Power	
		- TRANSISTORS -		
Q801	79050095	Transistor	FS5KM-16A	
Q802	79040327	IC	TA1319AP	
! Q803	79050041	Photo Coupler	TLP621(GR)	
! Q804	79050041	Photo Coupler	TLP621(GR)	
Q821	79040146	IC	TA76431S	
Q822	79050076	Transistor	2SA1585STP-Q	
Q823	79050099	Transistor	2SA1020-Y	
Q824	79050077	Transistor	2SC1740STP-Q	
Q825	79050040	Transistor	2SA1048-Y	
Q826	79050077	Transistor	2SC1740STP-Q	
Q827	79040288	IC	PQ05RD11	
Q828	79040289	IC	PQ3RD13	
Q830	79050008	Transistor	RN1201	
		- DIODES -		
D803	79060087	Diode	S1WB(A)60	
D805	79060069	Diode	HER108G	
D806	79060070	Diode	HT15G	
D807	79060080	Diode	AK06	
D808	79060029	Diode,Zener	6.8V	
D821	79060073	Diode	SR306	
D822	79060073	Diode	SR306	
D824	79060070	Diode	HT15G	
D825	79060071	Diode	HER152G	
D826	79060070	Diode	HT15G	
D827	79060070	Diode	HT15G	
D829	79060072	Diode	1N4005S	
D830	79060080	Diode	AK06	
D831	79060080	Diode	AK06	
D832	79060027	Diode,Zener	UZ12BSB	
D833	79060027	Diode,Zener	UZ12BSB	
D834	79060005	Diode,Zener	UZ11BSB	
D835	79060007	Diode,Zener	UZ3.0BSB	
D836	79060072	Diode	1N4005S	
D841	79060072	Diode	1N4005S	
		- CAPACITORS -		
! C801	79020198	Cap,Film	10000pF	M 275V
! C802	79020198	Cap,Film	10000pF	M 275V
! C803	79020193	Cap,Ceramic	220pF	K 250V
! C804	79020193	Cap,Ceramic	220pF	K 250V
! C811	79020193	Cap,Ceramic	220pF	K 250V
		- RESISTORS -		
		- MISCELLANEOUS -		
! F801	79087008	Fuse	1.6A,125V	
! F821	79087013	Fuse	3.00A,125V	
! F822	79087009	Fuse	3.50A,125V	
! F823	79087009	Fuse	3.50A,125V	
! P801	79088028	Power Cord	UL	
! RF821	79030015	Res,Fusible	2.2ohm	J 1/4W
! RF822	79030125	Res,Fusible	3.9ohm	J 1/4W
! RF824	79030015	Res,Fusible	2.2ohm	J 1/4W
! T801	79010025	Line Filter	183Y0R5	
! T802	79010026	Power Transformer	SRW3020ED5-210	
EU03	--------	PC Board Assy	Front	
		- INTEGRATED CIRCUITS -		
IC101	79040400	IC	TMP86CK74AFG	
		- TRANSISTORS -		
Q101	79050086	Transistor,Chip	RN2202	
		- DIODES -		
D101	79060094	Diode,LED	SLR-343MC	
D103	79060015	Diode	1SS133	
		- MISCELLANEOUS -		
A101	79089167	Display,FL	8-BT-230GNK	
BZ101	79089156	Buzzer	PKM13EPY	
MT101	79089146	Module,RMT	GP1U261XK	
S101	79089157	Switch,Tact	RDSY0010	
S103	79089020	Switch	Push	
S104	79089020	Switch	Push	
S105	79089020	Switch	Push	
S106	79089020	Switch	Push	
S107	79089020	Switch	Push	
S108	79089020	Switch	Push	
S110	79089020	Switch	Push	
S111	79089020	Switch	Push	
S112	79089020	Switch	Push	
S117	79089020	Switch	Push	
S120	79089020	Switch	Push	
X101	79089095	Oscillator,Ceramic	8MHz	
ZG09	79071276	Key,Cursor	Black	
EU04	--------	PC Board Assy	Power Switch	
		- TRANSISTORS -		
Q181	79050086	Transistor,Chip	RN2202	
Q182	79050086	Transistor,Chip	RN2202	
		- DIODES -		
D181	79060033	Diode,LED		
		- MISCELLANEOUS -		
S181	79089020	Switch	Push	
EU05	--------	PC Board Assy	Output	
		- INTEGRATED CIRCUITS -		
ICX01	79040401	IC	MM1568AJBE	
ICY01	79040044	IC	NJM4580E	
ICY02	79040074	IC	TC74HCU04AF	
ICY04	79089159	IC	TOTX179	
ICY05	79040044	IC	NJM4580E	
ICY06	79040044	IC	NJM4580E	
		- TRANSISTORS -		
QX01	79050043	Transistor,Chip	RN1402	
QX02	79050043	Transistor,Chip	RN1402	
QX03	79050043	Transistor,Chip	RN1402	
QX04	79050043	Transistor,Chip	RN1402	
QY01	79050001	Transistor,Chip	RN2402	
QY02	79050014	Transistor,Chip	HN1C03F	
QY03	79050043	Transistor,Chip	RN1402	
QY04	79050001	Transistor,Chip	RN2402	

LOCATION NUMBER	PART NUMBER	DESCRIPTION	
QY05	79050001	Transistor,Chip	RN2402
QY06	79050001	Transistor,Chip	RN2402
QY07	79050043	Transistor,Chip	RN1402
QY08	79050014	Transistor,Chip	HN1C03F
QY09	79050001	Transistor,Chip	RN2402
QY10	79050043	Transistor,Chip	RN1402
QY11	79050014	Transistor,Chip	HN1C03F
QY12	79050001	Transistor,Chip	RN2402
QY13	79050012	Transistor,Chip	RN4601
QY14	79050012	Transistor,Chip	RN4601
		- DIODES -	
DX06	79060028	Diode,Chip	1SS226
DX07	79060028	Diode,Chip	1SS226
DY01	79060022	Diode,Chip	1SS368
		- MISCELLANEOUS -	
JX01	79089160	Jack,Video	YKC22-0535
JX02	79089176	Plate,Jack	Video
JY01	79089175	Plate,Jack	Audio
SX01	79089158	Switch,Slide	SSAA110200

LOCATION NUMBER	PART NUMBER	DESCRIPTION

TOSHIBA CORPORATION
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN

TOSHIBA

FILE NO. 810-200210

SERVICE MANUAL

DVD VIDEO PLAYER

SD-3800

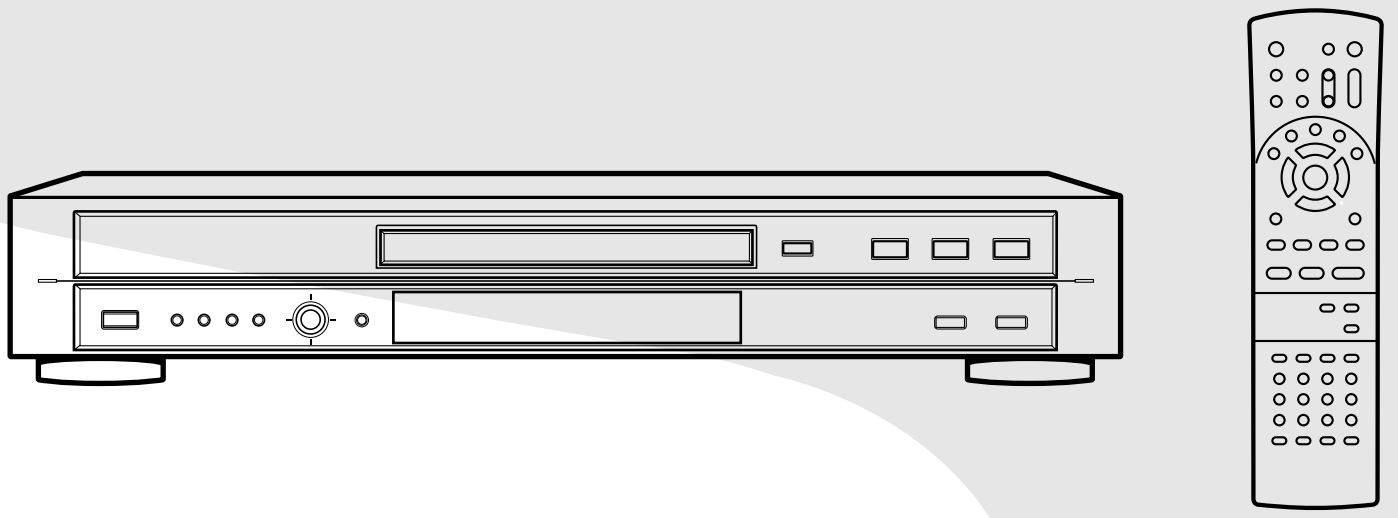

Aug., 2002 Ⓢ

LASER BEAM CAUTION LABEL

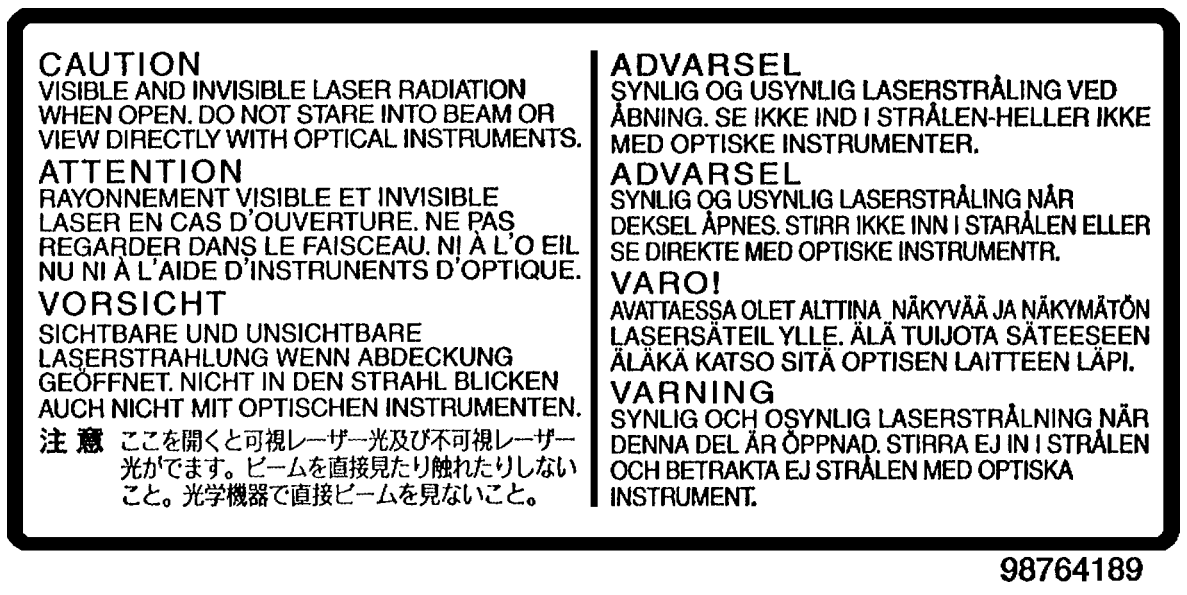

CAUTION
VISIBLE AND INVISIBLE LASER RADIATION
WHEN OPEN. DO NOT STARE INTO BEAM OR
VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

ATTENTION
RAYONNEMENT VISIBLE ET INVISIBLE
LASER EN CAS D'OUVERTURE. NE PAS
REGARDER DANS LE FAISCEAU. NI À L'O EIL
NU NI À L'AIDE D'INSTRUNENTS D'OPTIQUE.

VORSICHT
SICHTBARE UND UNSICHTBARE
LASERSTRAHLUNG WENN ABDECKUNG
GEÖFFNET. NICHT IN DEN STRAHL BLICKEN
AUCH NICHT MIT OPTISCHEN INSTRUMENTEN.

注意 ここを開くと可視レーザー光及び不可視レーザー
光がでます。ビームを直接見たり触れたりしない
こと。光学機器で直接ビームを見ないこと。

ADVARSEL
SYNLIG OG USYNLIG LASERSTRÅLING VED
ÅBNING. SE IKKE IND I STRÅLEN-HELLER IKKE
MED OPTISKE INSTRUMENTER.

ADVARSEL
SYNLIG OG USYNLIG LASERSTRÅLING NÅR
DEKSEL ÅPNES. STIRR IKKE INN I STARÅLEN ELLER
SE DIREKTE MED OPTISKE INSTRUMENTR.

VARO!
AVATTAESSA OLET ALTTINA NÄKYVÄÄ JA NÄKYMÄTÖN
LASERSÄTEIL YLLE. ÄLÄ TUIJOTA SÄTEESEEN
ÄLÄKÄ KATSO SITÄ OPTISEN LAITTEEN LÄPI.

VARNING
SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR
DENNA DEL ÄR ÖPPNAD. STIRRA EJ IN I STRÅLEN
OCH BETRAKTA EJ STRÅLEN MED OPTISKA
INSTRUMENT.

98764189

When the power supply is being turned on, you may not remove this laser cautions label. If it removes, radiation of a laser may be received.

PREPARATION OF SERVICING

Pickup Head consists of a laser diode that is very susceptible to external static electricity.

Although it operates properly after replacement, if it was subject to electrostatic discharge during replacement, its life might be shortened. When replacing, use a conductive mat, soldering iron with ground wire, etc. to protect the laser diode from damage by static electricity.

And also, the LSI and IC are same as above.

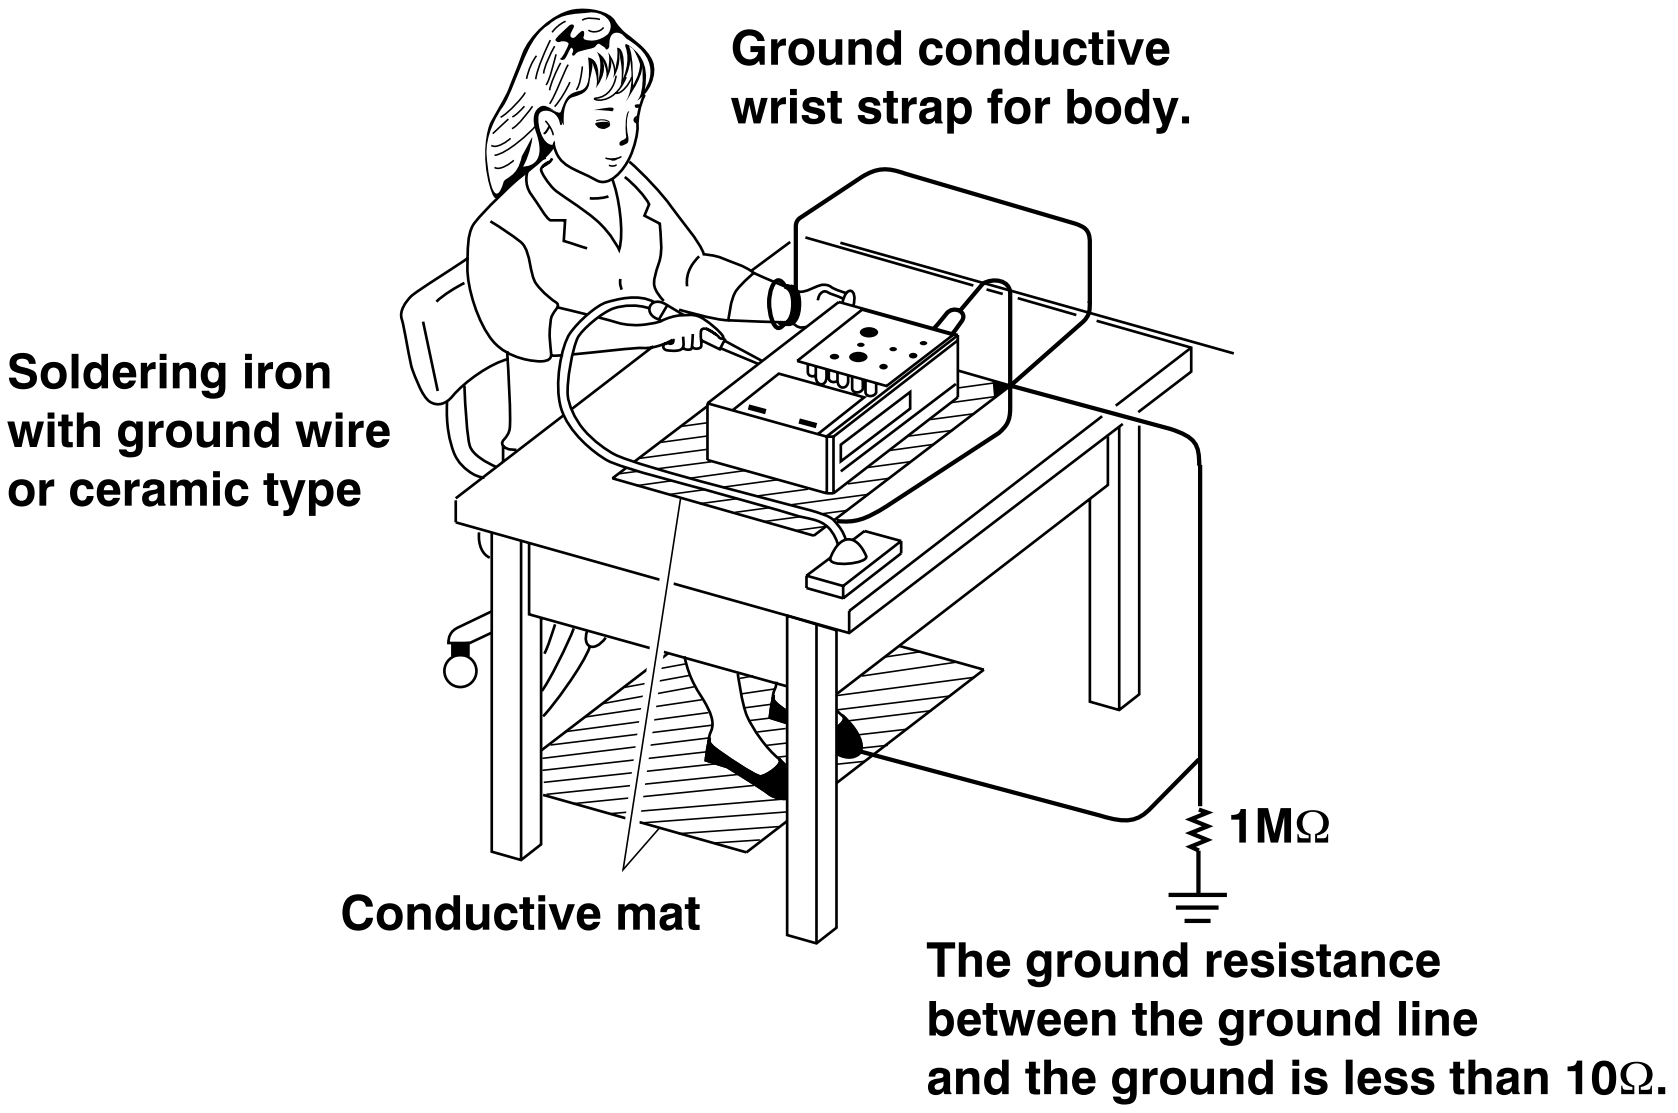
Ground conductive wrist strap for body.
Soldering iron with ground wire or ceramic type
1MΩ
Conductive mat
The ground resistance between the ground line and the ground is less than 10Ω.

SAFETY NOTICE

SAFETY PRECAUTIONS

LEAKAGE CURRENT CHECK

Plug the AC line cord directly into a 120V AC outlet (do not use an isolation transformer for this check). Use an AC voltmeter, having 5000 Ω per volt or more sensitivity.

Connect a 1500 Ω 10 W resistor, paralleled by a 0.15 µF 150V AC capacitor between a known good earth ground (water pipe, conduit, etc.) and all exposed metal parts of cabinet (antennas, handle bracket, metal cabinet screwheads, metal overlays, control shafts, etc.).

Measure the AC voltage across the 1500 Ω resistor.

The test must be conducted with the AC switch on and then repeated with the AC switch off. The AC voltage indicated by the meter may not exceed 0.3 V. A reading exceeding 0.3 V indicates that a dangerous potential exists, the fault must be located and corrected.

Repeat the above test with the DVD VIDEO PLAYER power plug reversed.

NEVER RETURN A DVD VIDEO PLAYER TO THE CUSTOMER WITHOUT TAKING NECESSARY CORRECTIVE ACTION.

READING SHOULD NOT EXCEED 0.3V

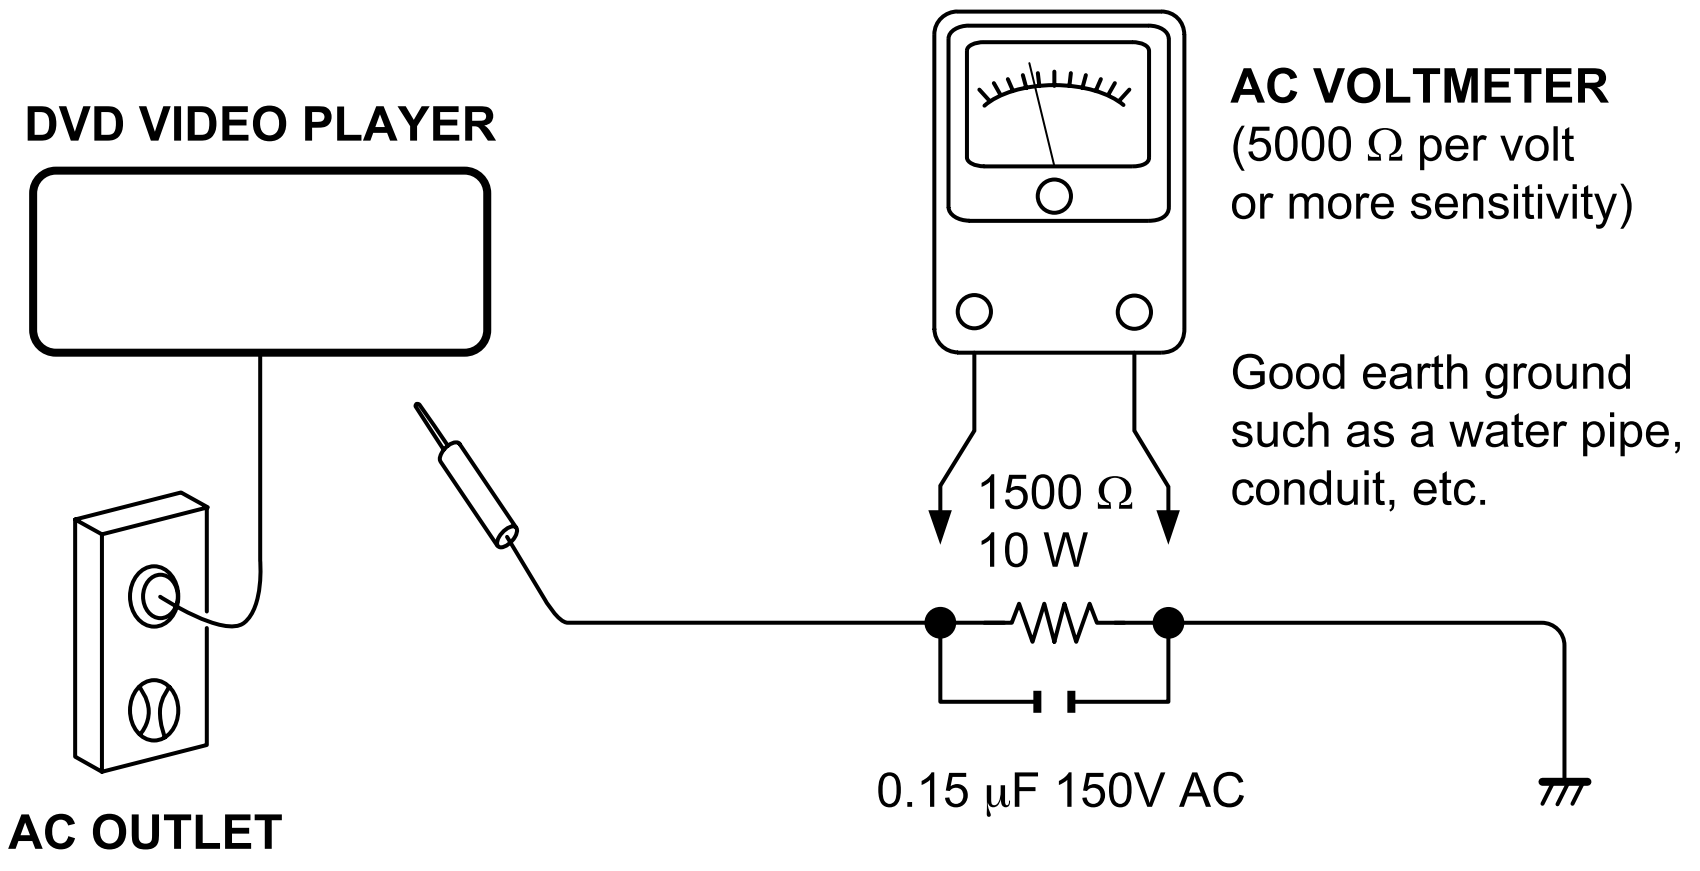

Test all exposed metal.
Voltmeter Hook-up for Leakage Current Check



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CONTENTS

SECTION 1
GENERAL DESCRIPTIONS

1. OPERATING INSTRUCTIONS
   Specifications
2. LOCATION OF MAIN PARTS AND MECHANISM PARTS
   2-1. Location of Main Parts
   2-2. Location of Mechanism Parts
   2-2-1. Type A
   2-2-2. Type B
3. TROUBLESHOOTING
   3-1. Main Circuit
   3-1-1. Servo System
   3-1-2. Location Diagram of Servo Test Point

SECTION 2
PART REPLACEMENT AND ADJUSTMENT PROCEDURES

1. Replacement of Mechanical Parts (Type A)
   1-1. Cabinet Replacement
   1-1-1. Top Cover
   1-1-2. Tray Panel
   1-1-3. Front Panel
   1-1-4. Tray
   1-1-5. Rear Panel
   1-2. PC Board Replacement
   1-2-1. Main PC Board
   1-2-2. Output PC Board
   1-2-3. Power PC board
   1-2-4. Front PC Board
   1-3. Mechanism Parts
   1-3-1. Mechanism Chassis Assembly
2. Replacement of Mechanical Parts (Type B)
   2-1. Cabinet Replacement
   2-1-1. Top Cover
   2-1-2. Clamper Stay
   2-1-3. Tray Panel
   2-1-4. Front Panel and Tray
   2-1-5. Rear Panel
   2-2. PC Board Replacement
   2-2-1. Main PC Board
   2-2-2. Output PC Board
   2-2-3. Power PC board
   2-2-4. Front PC Board
   2-3. Mechanism Parts
   2-3-1. Mechanism Chassis Assembly

SECTION 3
SERVICING DIAGRAMS

1. STANDING PC BOARDS FOR SERVICING
2. CIRCUIT SYMBOLS AND SUPPLEMENTARY EXPLANATION
   2-1. Precautions for Part Replacement
   2-2. Solid Resistor Indication
   2-3. Capacitance Indication
   2-4. Inductor Indication
   2-5. Waveform and Voltage Measurement
   2-6. Others
3. PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM
4. BLOCK DIAGRAMS
   4-1. Overall Block Diagram
   4-2. Power Supply Block Diagram
   4-3. Front Display, Power Switch Block Diagram
   4-4. Main Block Diagrams
   4-5. Output Block Diagrams
5. CIRCUIT DIAGRAMS
   5-1. Power Supply Circuit Diagram
   5-2. Front Display, Power Switch Circuit Diagram
   5-3. Main Circuit Diagram
   5-4. Output Circuit Diagram
   5-5. Motor System Circuit Diagrams
6. PC BOARDS
   6-1. Power Supply PC Board
   6-2. Power Switch PC Board
   6-3. Main PC Board
   6-4. Output PC Board
   6-5. Front Display PC Board

SECTION 4
PARTS LIST

SAFETY PRECAUTION
NOTICE
ABBREVIATIONS
   1. Integrated Circuit (IC)
   2. Capacitor (Cap)
   3. Resistor (Res)
4. EXPLODED VIEWS
   4-1. Packing Assembly
   4-2. Chassis Assembly (Type A)
   4-3. Mechanism Assembly (Type A)
   4-4. Chassis Assembly (Type B)
   4-5. Mechanism Assembly (Type B)
5. PARTS LIST

SECTION 1
GENERAL DESCRIPTIONS

1. OPERATING INSTRUCTIONS

SAFETY PRECAUTIONS

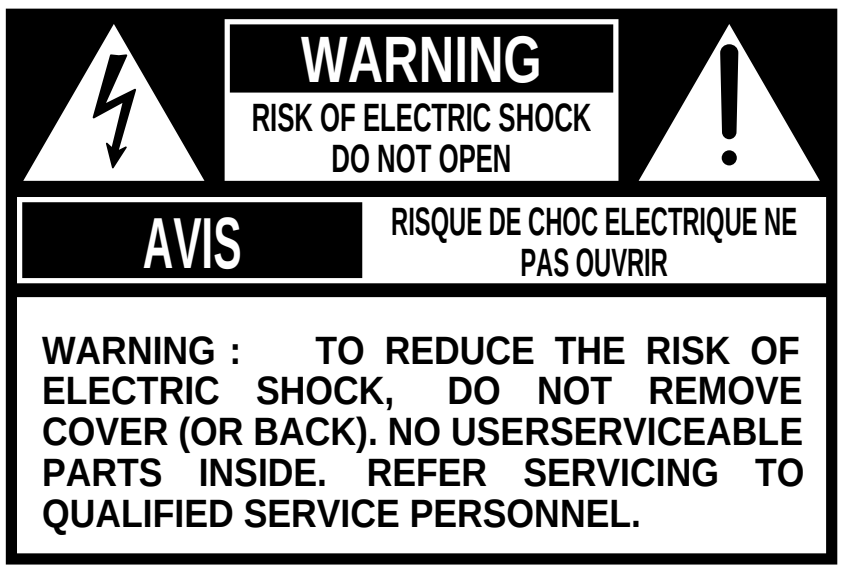

WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN

AVIS

RISQUE DE CHOC ELECTRIQUE NE
PAS OUVRIR

WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USERSERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The symbol for CLASS II (Double Insulation)

WARNING: **TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.**

CAUTION: **TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

ATTENTION: **POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU’AU FOND.**

CAUTION: This Digital Video Disc Player employs a Laser System.
To ensure proper use of this product, please read this owner’s manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure.

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.
Visible and invisible laser radiation when open and interlocks defeated.
DO NOT STARE INTO BEAM.

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rule. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications made to this equipment, not expressly approved by Toshiba, or parties authorized by Toshiba, could void the user’s authority to operate the equipment.

The instructions shall state that an ALL-POLE MAINS SWITCH with a contact separation of at least 3 mm in each pole shall be incorporated in the electrical installation of the building.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

In the spaces provided below, record the Model and Serial No. located on the rear panel of your DVD player.

Model No. ______________________ Serial No. ______________________

Retain this information for future reference.

Location of the required label

PRODUCT IS CERTIFIED BY THE MANUFACTURER TO
COMPLY WITH DHHS RULE 21 CFR SUBCHAPTER J
APPLICABLE AT THE DATE OF MANUFACTURE.

MANUFACTURED

TOSHIBA CORPORATION
1-1,SHIBAURA 1-CHOME,MINATO-KU.
TOKYO 105-8001,JAPAN

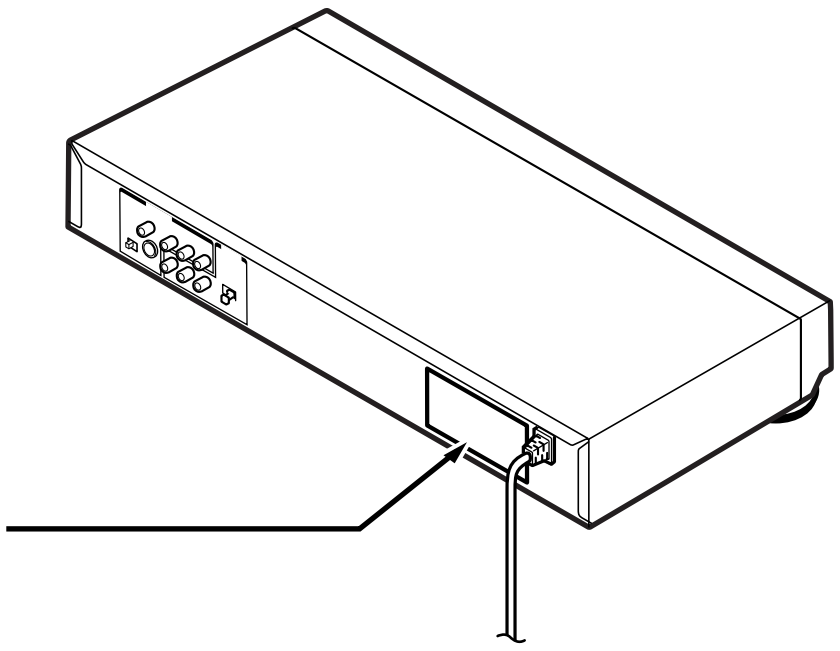

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.
DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

1. Read these instructions.

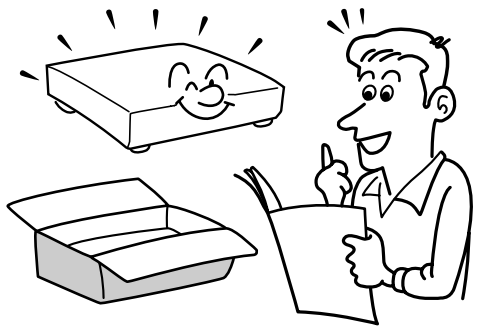

2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.

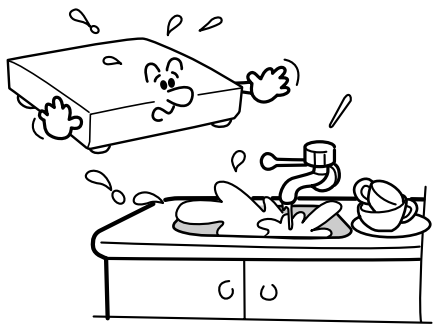

6. Clean only with dry cloth.

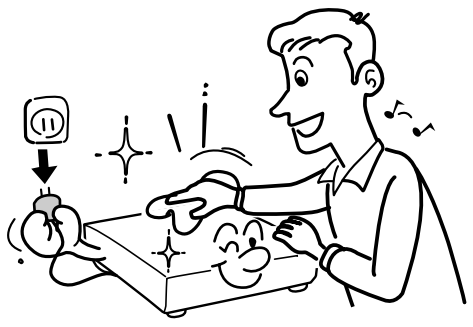

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

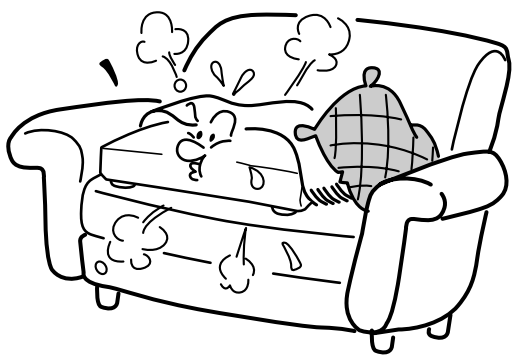

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

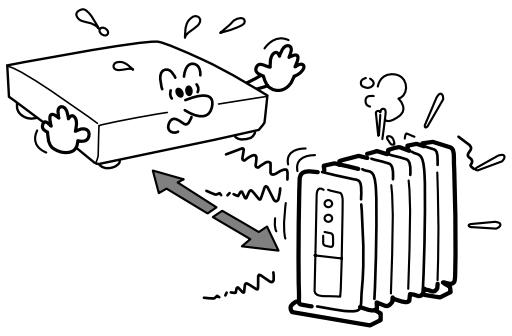

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

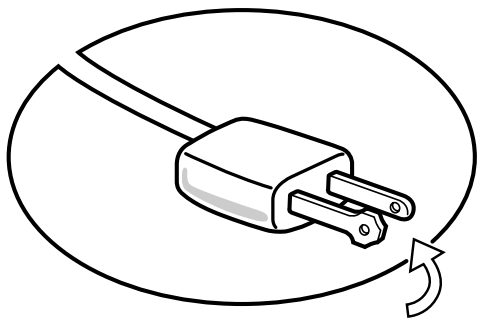

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

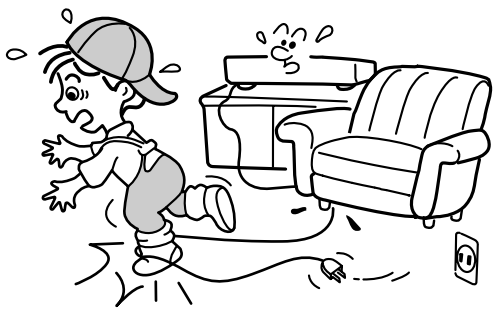

11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

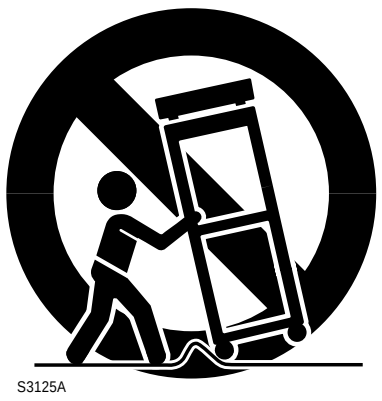

IMPORTANT SAFETY INSTRUCTIONS

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

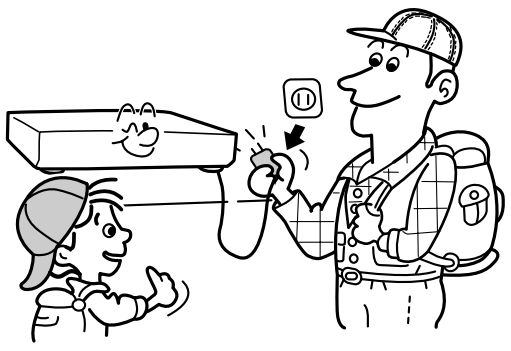

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

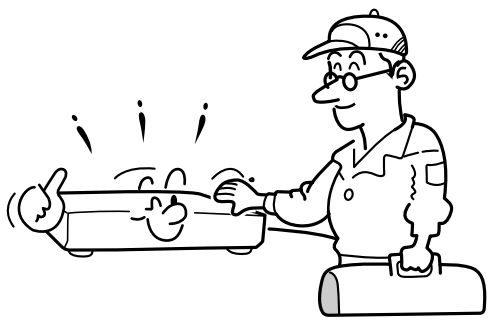

15. When you use headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage.

16. Do not overload wall outlets; extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

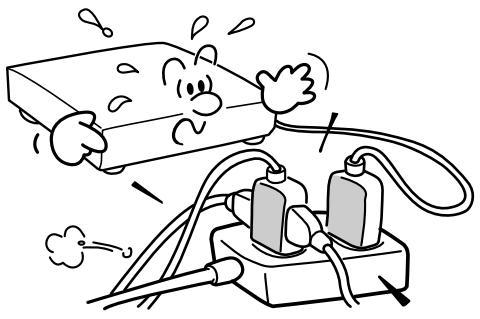

17. Never insert objects of any kind into this apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the apparatus.

18. Keep your fingers well clear of the disc tray as it is closing. Neglecting to do so may cause serious personal injury.

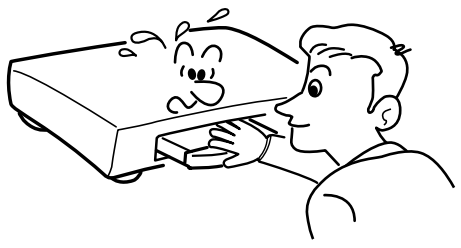

19. Do not place a heavy object on or step on the apparatus. The object may fall, causing serious personal injury and serious damage to the apparatus.

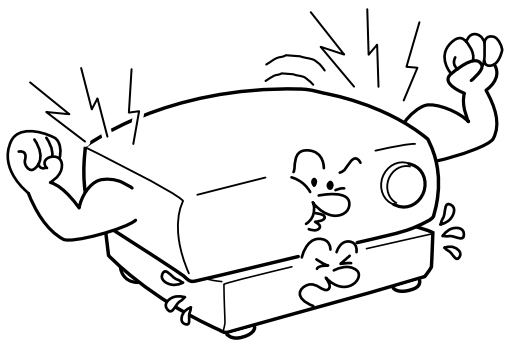

20. Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and apparatus malfunction.

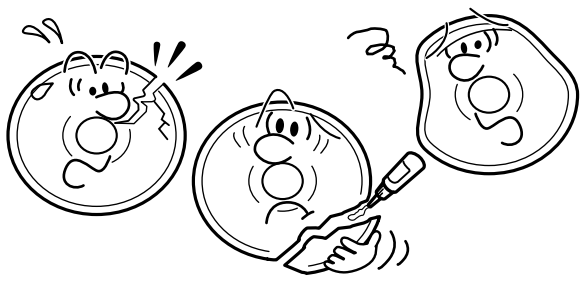

Precautions

Notes on handling

- When shipping the DVD player, the original shipping carton and packing materials come in handy. For maximum protection, repack the unit as it was originally packed at the factory.
- Do not use volatile liquids, such as insect spray, near the DVD player. Do not leave rubber or plastic products in contact with the DVD player for a long time. They will leave marks on the finish.
- The top and rear panels of the DVD player may become warm after a long period of use. This is not a malfunction.
- When the DVD player is not in use, be sure to remove the disc and turn off the power.
- If you do not use the DVD player for a long period, the unit may not function properly in the future. Turn on and use the DVD player occasionally.

Notes on locating

- Place the DVD player on a level surface. Do not use it on a shaky or unstable surface such as a wobbling table or inclined stand. The loaded disc may come off the proper position and cause damage to the DVD player.
- When you place this DVD player near a TV, radio, or VCR, the playback picture may become poor and the sound may be distorted. In this case, place the DVD player away from the TV, radio, or VCR.

Notes on cleaning

Use a soft, dry cloth for cleaning.

- For stubborn dirt, soak the cloth in a weak detergent solution, wring well and wipe. Use a dry cloth to wipe it dry.

  Do not use any type of solvent, such as thinner and benzine, as they may damage the surface of the DVD player.
- If you use a chemical saturated cloth to clean the unit, follow that product’s instructions.

To obtain a clear picture

The DVD player is a high technology, precision device. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality deteriorates. To obtain a clear picture, we recommend regular inspection and maintenance (cleaning or parts replacement) every 1,000 hours of use depending on the operating environment. For details, contact your nearest dealer.

Notes on moisture condensation

Moisture condensation damages the DVD player. Please read the following carefully.

Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the DVD player.

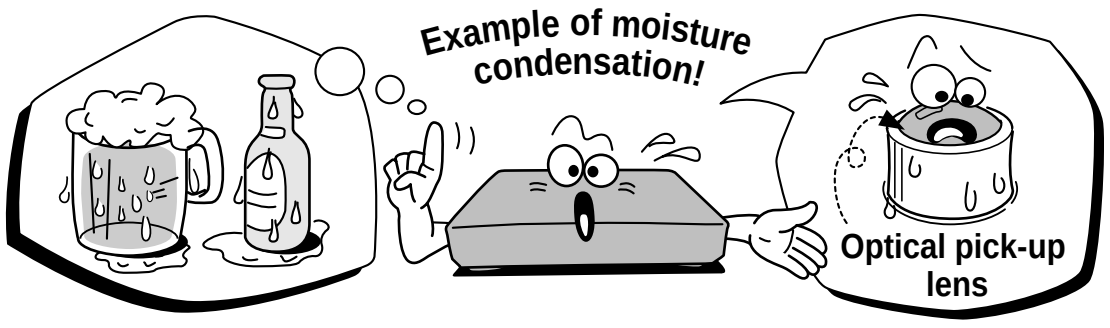

- **Moisture condensation occurs during the following cases.**

- When you bring the DVD player directly from a cold place to a warm place.
- When you use the DVD player in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.
- In summer, when you use the DVD player in a hot and humid place just after you move the unit from an air conditioned room.
- When you use the DVD player in a humid place.

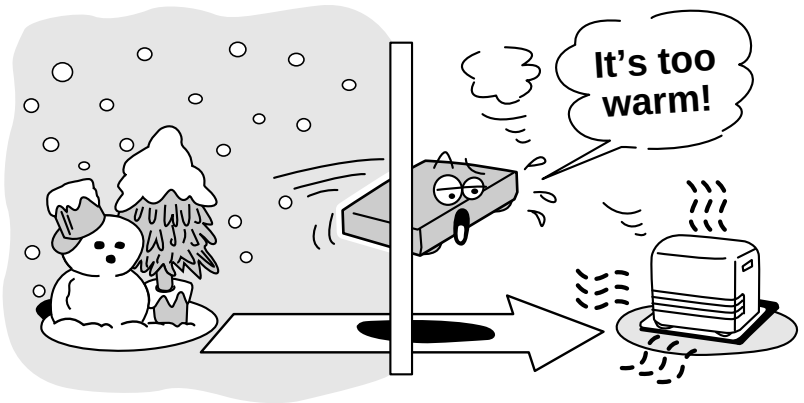
It’s too warm!

- **Do not use the DVD player when moisture condensation may occur.**

  If you use the DVD player in such a situation, it may damage discs and internal parts. Remove the disc, connect the power cord of the DVD player to the wall outlet, turn on the DVD player, and leave it for two or three hours. After two or three hours, the DVD player will have warmed up and evaporated any moisture. Keep the DVD player connected to the wall outlet and moisture condensation will seldom occur.

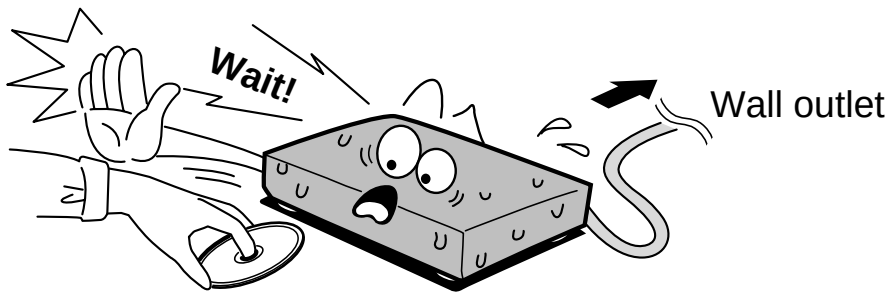

Notes on Discs

On handling discs

- Do not touch the playback side of the disc.

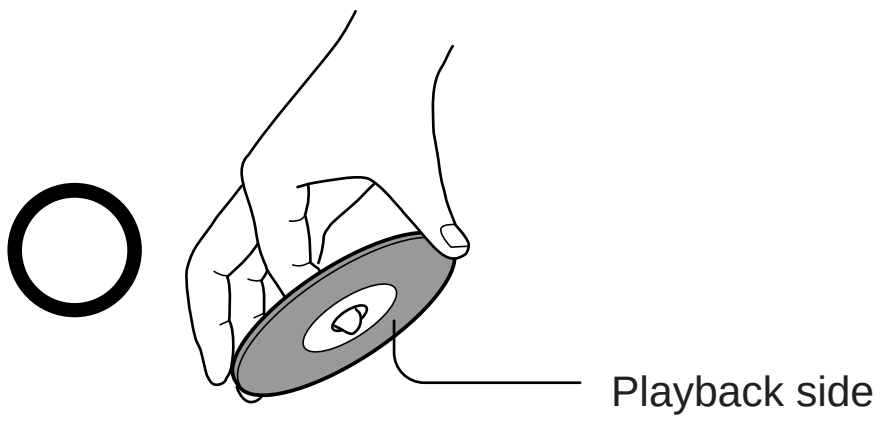

- Do not attach paper or tape to discs.



On cleaning discs

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the center outwards with a soft cloth. Always keep the disc clean.

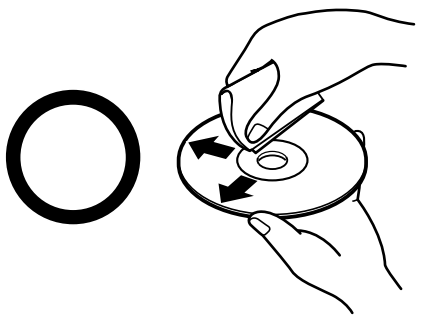

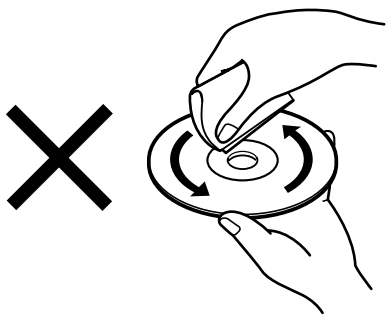

- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzine, commercially available cleaners or antistatic spray for vinyl LPs. It may damage the disc.

On storing discs

- Do not store discs in a place subject to direct sunlight or near heat sources.
- Do not store discs in places subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case. Stacking or placing objects on discs outside of their case may cause warping.

Structure of disc contents

Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. VIDEO CDs/ audio CDs are divided into tracks.

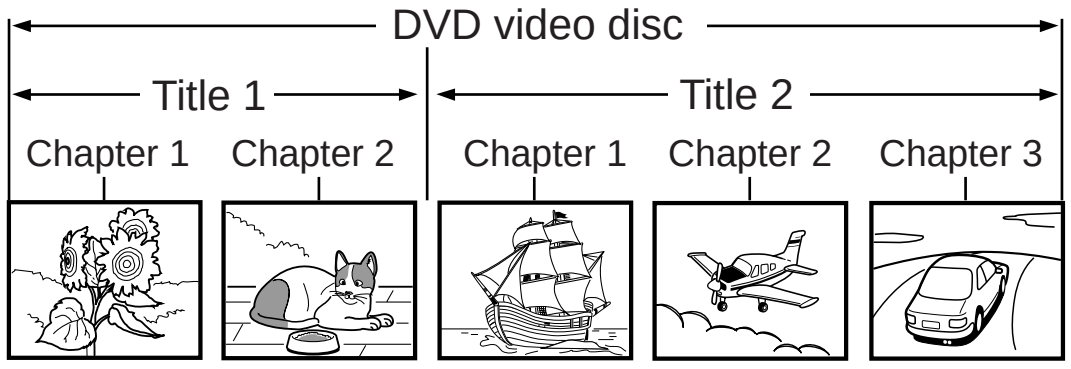

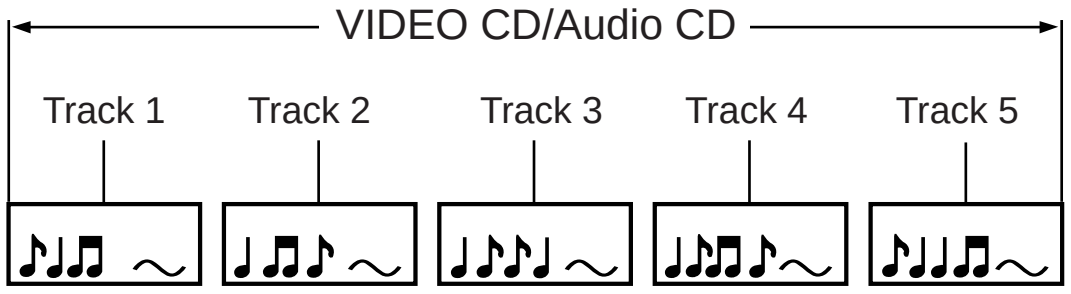

Each title, chapter or track is assigned a number, which is called “title number”, “chapter number” or “track number” respectively.
There may be discs that do not have these numbers.

Notes on copyright

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission.

DVD video discs are copy protected, and any recordings made from these discs will be distorted.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Notes on Discs (continued)

About this owner’s manual

This owner’s manual explains the basic instructions of this DVD player. Some DVD video discs are produced in a manner that allows specific or limited operation during playback. As such, the DVD player may not respond to all operating commands. This is not a defect in the DVD player. Refer to instruction notes of discs.

“⊘” may appear on the TV screen during operation.
A “⊘” means that the operation is not permitted by the DVD player or the disc.

Notes on region numbers

The region number of this DVD player is 1. If region numbers, which stand for their playable area, are printed on your DVD video disc and you do not find 1 or ALL , disc playback will not be allowed by the player. (In this case, the DVD player will display a message on-screen.)

On VIDEO CDs

This DVD player supports VIDEO CDs equipped with the PBC (Version 2.0) function. (PBC is the abbreviation of Playback Control.) You can enjoy two playback variations depending on types of discs.

- **VIDEO CD not equipped with PBC function (Version 1.1)**
  Sound and movie can be played on this DVD player in the same way as an audio CD.
- **VIDEO CD equipped with PBC function (Version 2.0)**
  In addition to operation of a VIDEO CD not equipped with the PBC function, you can enjoy playback of interactive software with search function by using the menu displayed on the TV screen (Menu Playback).
  Some of the functions described in this owner’s manual may not work with some discs.

Playable discs

This DVD player can play the following discs.

	Disc Mark	Contents	Disc Size
DVD video discs	DVD VIDEO DVD VIDEO	video (moving pictures) + Audio	12 cm
			8 cm
VIDEO CDs	COMPACT disc DIGITAL VIDEO	video (moving pictures) + Audio	12 cm
			8 cm
Audio CDs	COMPACT disc DIGITAL AUDIO	Audio	12 cm
			8 cm (CD single)

The following discs are also available.
● DVD-R discs of DVD video format
● CD-R/CD-RW discs of CD-DA format
Some of these discs may be incompatible.

- You cannot play discs other than those listed above.
- You cannot play DVD-RAM discs or non-standardized discs, etc., even if they may be labeled as above.
- This DVD player uses the NTSC color system, and cannot play DVD video discs recorded in any other color system (PAL, SECAM, etc.).

Table of Contents

Introduction

- **SAFETY PRECAUTIONS 2**
- **IMPORTANT SAFETY INSTRUCTIONS ... 4**
- **Precautions 8**
- **Notes on Discs 9**
  - Notes on region numbers 10
- **Table of Contents 11**
- **Identification of Controls 12**
  - Front panel 12
  - Rear panel 12
  - DVD display 13
  - Remote control 14
  - Loading batteries 15
  - Operating with the remote control 15

Connections

- **Connecting to a TV 18**
  - Connecting to a TV 18
  - Connecting to an audio system and TV equipped with component video inputs 19
- **Connecting to Optional Equipment 20**
  - Connecting to an amplifier equipped with a Dolby Digital decoder 21
  - Connecting to an amplifier equipped with Dolby Surround Pro Logic 21
  - Connecting to an amplifier equipped with a DTS decoder 22
  - Connecting to an amplifier equipped with an MPEG2 audio decoder 22
  - Connecting to an amplifier equipped with a digital audio input 23

Basic playback

- **Playing a Disc 26**
  - Basic playback 26
- **Variable Speed Playback 28**
  - Playing in fast reverse or fast forward directions 28
  - Playing frame by frame 28
  - Playing in slow-motion 29
  - Resuming playback from the same location ... 29
- **Locating a Desired Section 30**
  - Locating a title using the top menu 30
  - Locating a desired section by entering its corresponding number 31
  - Locating a specific chapter or track 31
- **Playing an MP3 Encoded CD 32**
  - Playing an MP3 Encoded CD 32

Advanced playback

- **Accessing a Specific Location Directly .. 34**
  - Entering the elapsed time of the desired location 34
- **Playing Repeatedly 35**
  - Repeating a title, chapter, or track 35
  - Repeating a specific segment 35
- **Playing in a Favorite Order 36**
  - Setting titles, chapters, or tracks in a favorite order 36
- **Playing in Random Order 37**
  - Playing titles, chapters, or tracks in random order 37
- **Zooming a Picture 38**
  - Zooming a picture 38
- **Selecting the Sound Enhancement (E.A.M.) 39**
  - Selecting the sound enhancement 39
- **Selecting the Camera Angle 40**
  - Changing the camera angle 40
- **Selecting Subtitles 41**
  - Selecting a subtitle language 41
- **Selecting a Language 42**
  - Selecting a playback audio setting 42

Quick control

- **Using the Virtual Remote Control - V-REMOTE - 46**
- **Selecting the Playback Function - QUICK - 47**
- **Accessing Features - NAVI - 48**

Function setup

- **Customizing the Function Settings 56**
  - Setting procedure 56
  - Setting details 58
- **Table of Languages 65**

Others

- **Before Calling Service Personnel 68**
- **Specifications 69**
- **LIMITED WARRANTY DVD PLAYER 70**

Identification of Controls

See the page in ☐ for details.

Front panel

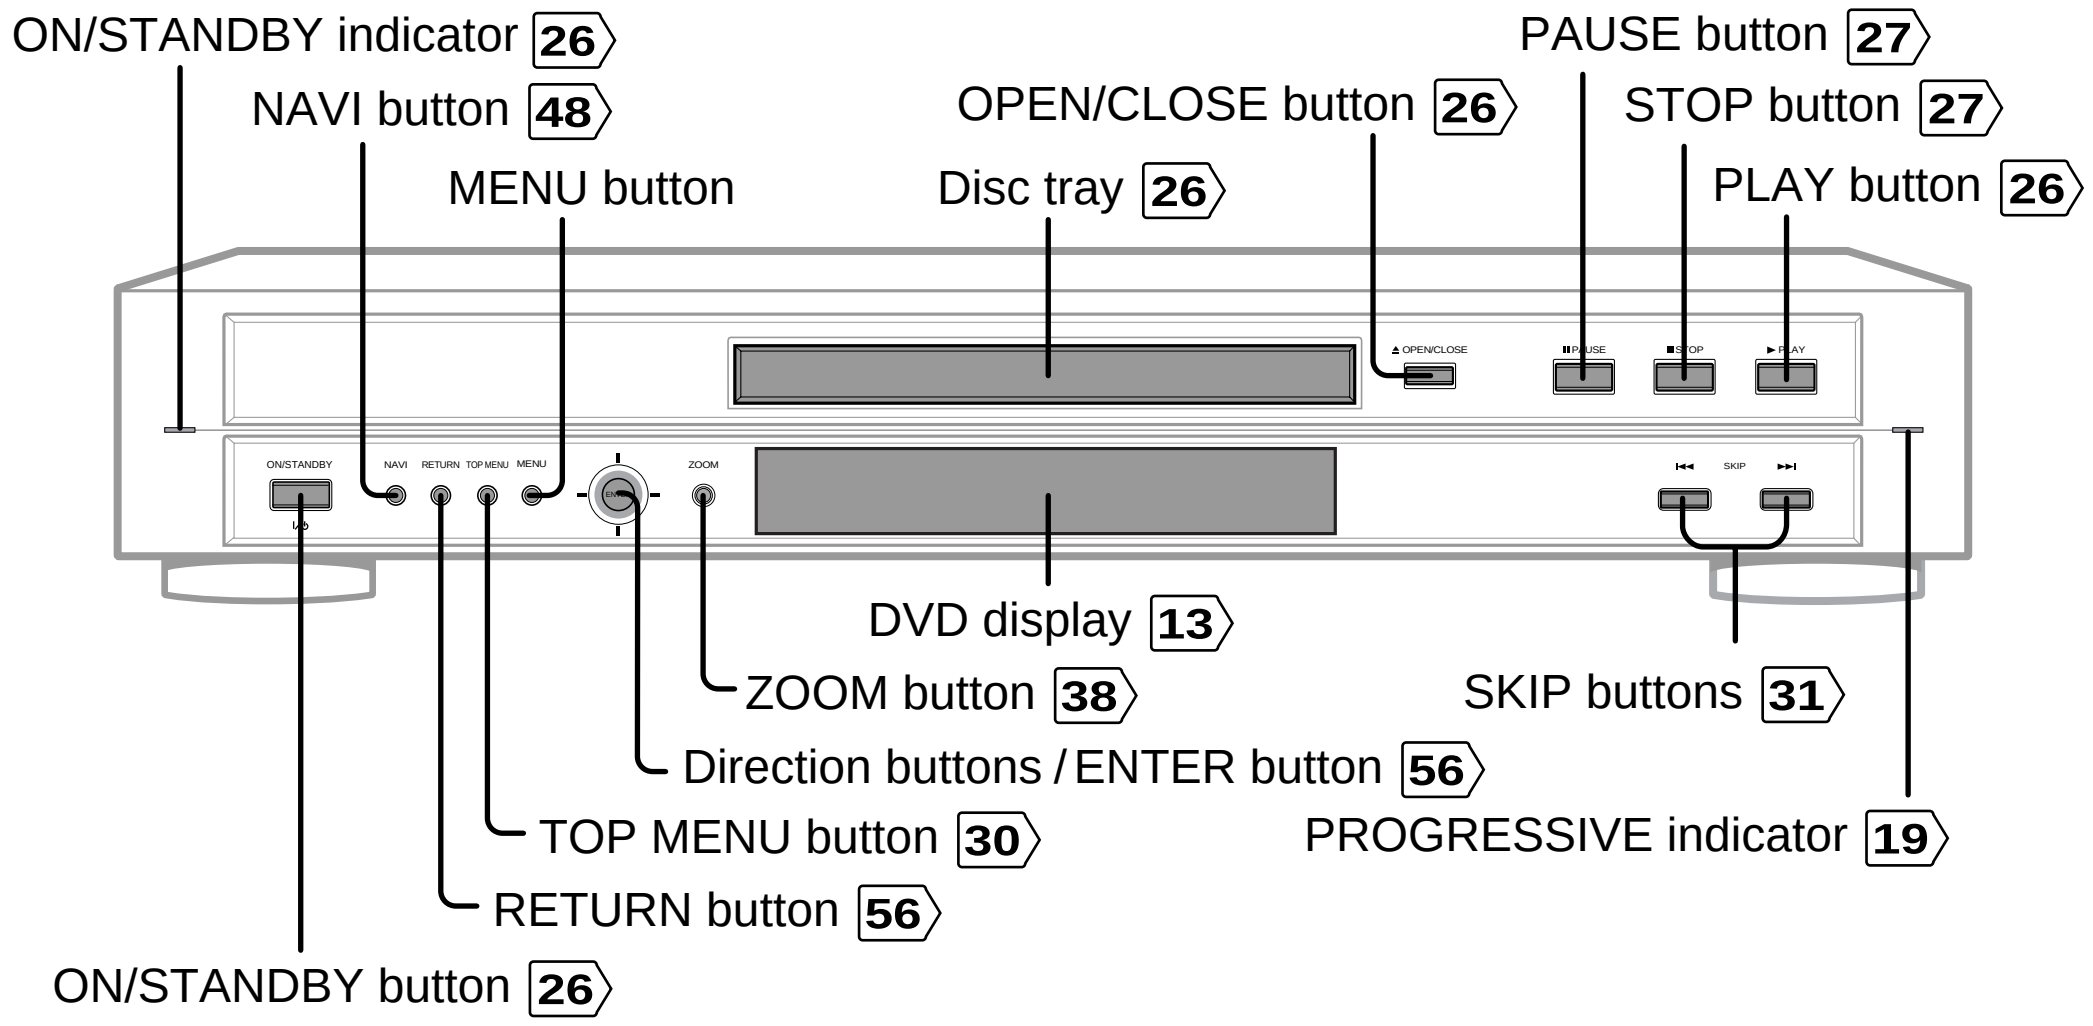
ON/STANDBY indicator 26
NAVI button 48
MENU button
OPEN/CLOSE button 26
Disc tray 26
PAUSE button 27
STOP button 27
PLAY button 26
ON/STANDBY
NAVI
RETURN
TOP MENU
MENU
ZOOM
OPEN/CLOSE
PAUSE
STOP
PLAY
SKIP
DVD display 13
ZOOM button 38
SKIP buttons 31
Direction buttons / ENTER button 56
TOP MENU button 30
PROGRESSIVE indicator 19
RETURN button 56
ON/STANDBY button 26

Rear panel

When connecting the optical digital cable, remove the cap and fit the connector into the jack firmly. When not using the jack, keep the cap inserted to protect it from dust intrusion.

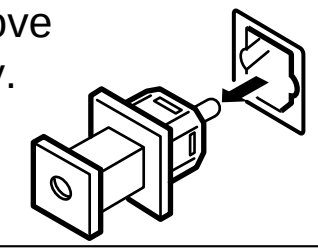

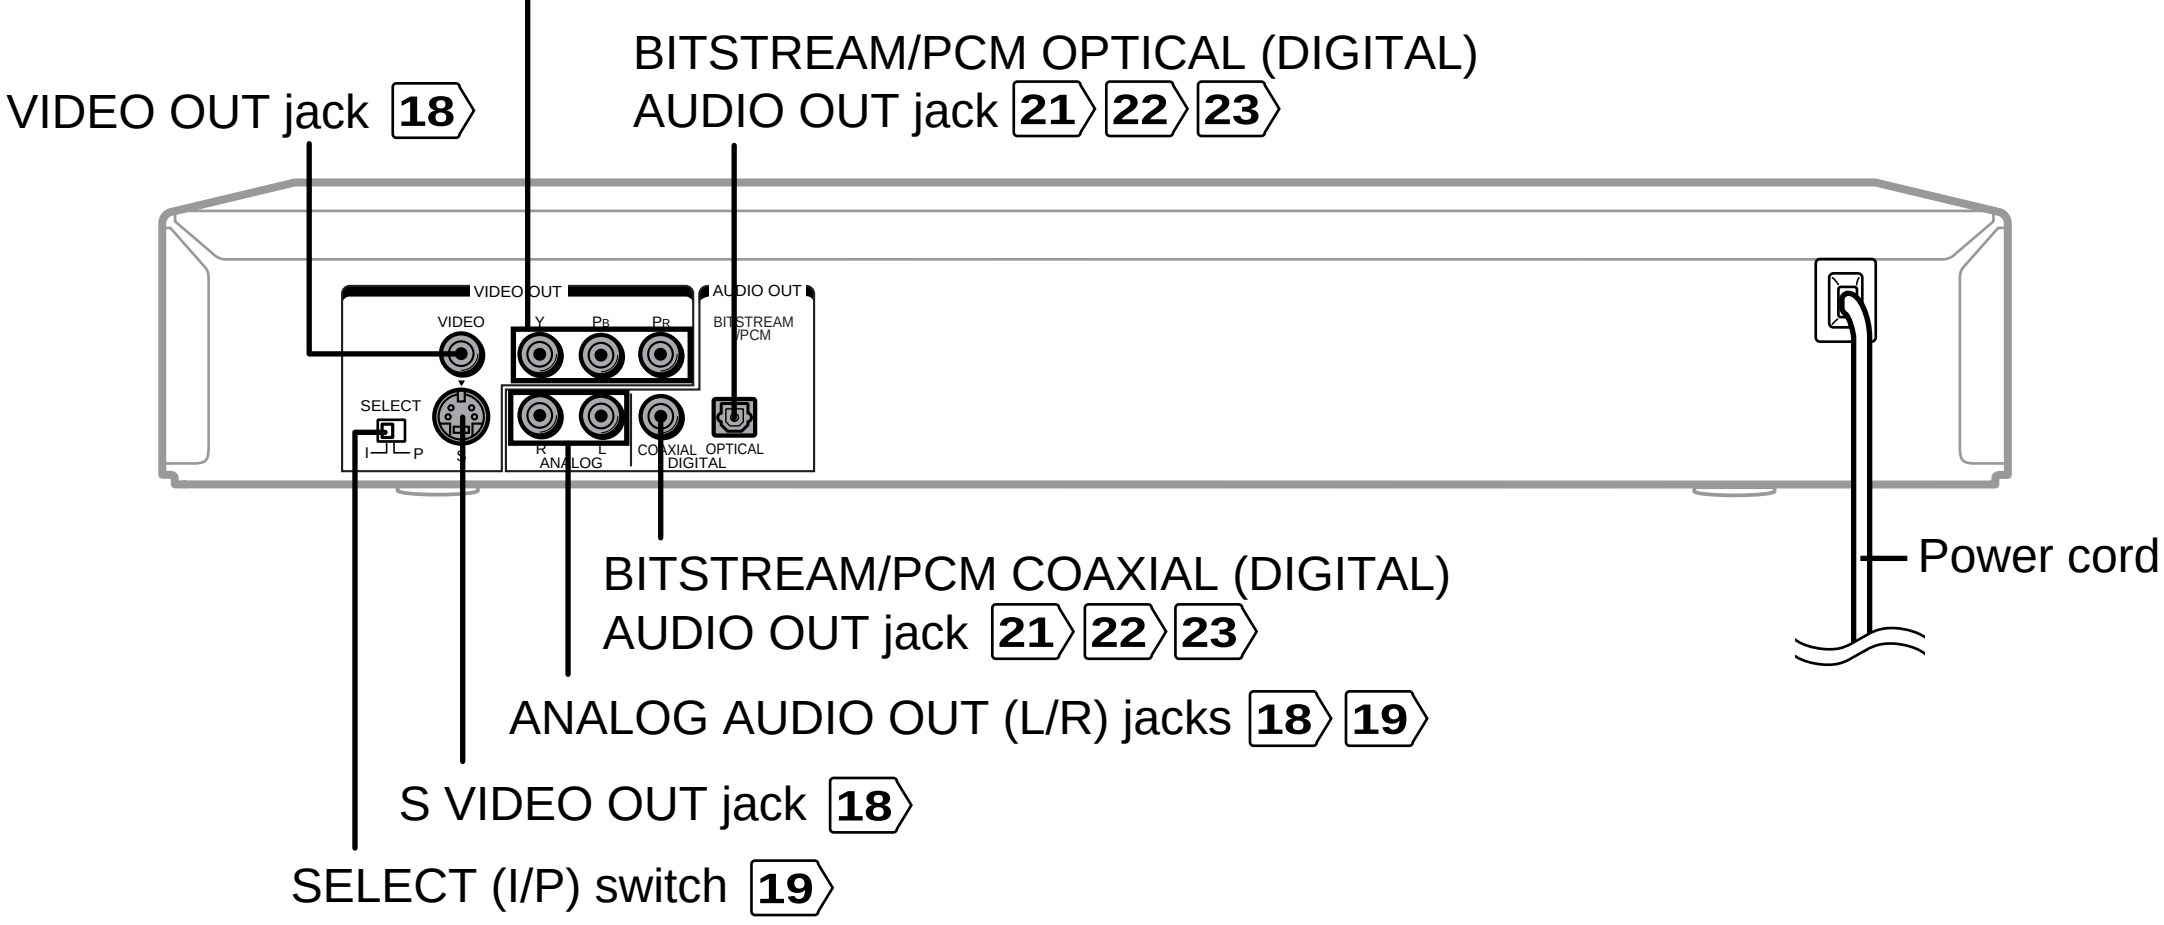
VIDEO OUT (Y/PB/PR)
(Component video) jacks 19
VIDEO OUT jack 18
BITSTREAM/PCM OPTICAL (DIGITAL)
AUDIO OUT jack 21 22 23
VIDEO OUT
VIDEO
Y
PB
PR
AUDIO OUT
BITSTREAM /PCM
SELECT
I P
S
R L
ANALOG
COAXIAL OPTICAL
DIGITAL
BITSTREAM/PCM COAXIAL (DIGITAL)
AUDIO OUT jack 21 22 23
Power cord
ANALOG AUDIO OUT (L/R) jacks 18 19
S VIDEO OUT jack 18
SELECT (I/P) switch 19

DVD display

- **Pressing of the FL DIMMER button on the remote control changes the brightness of the display.**


FL DIMMER
Normal
Dimmed
Off

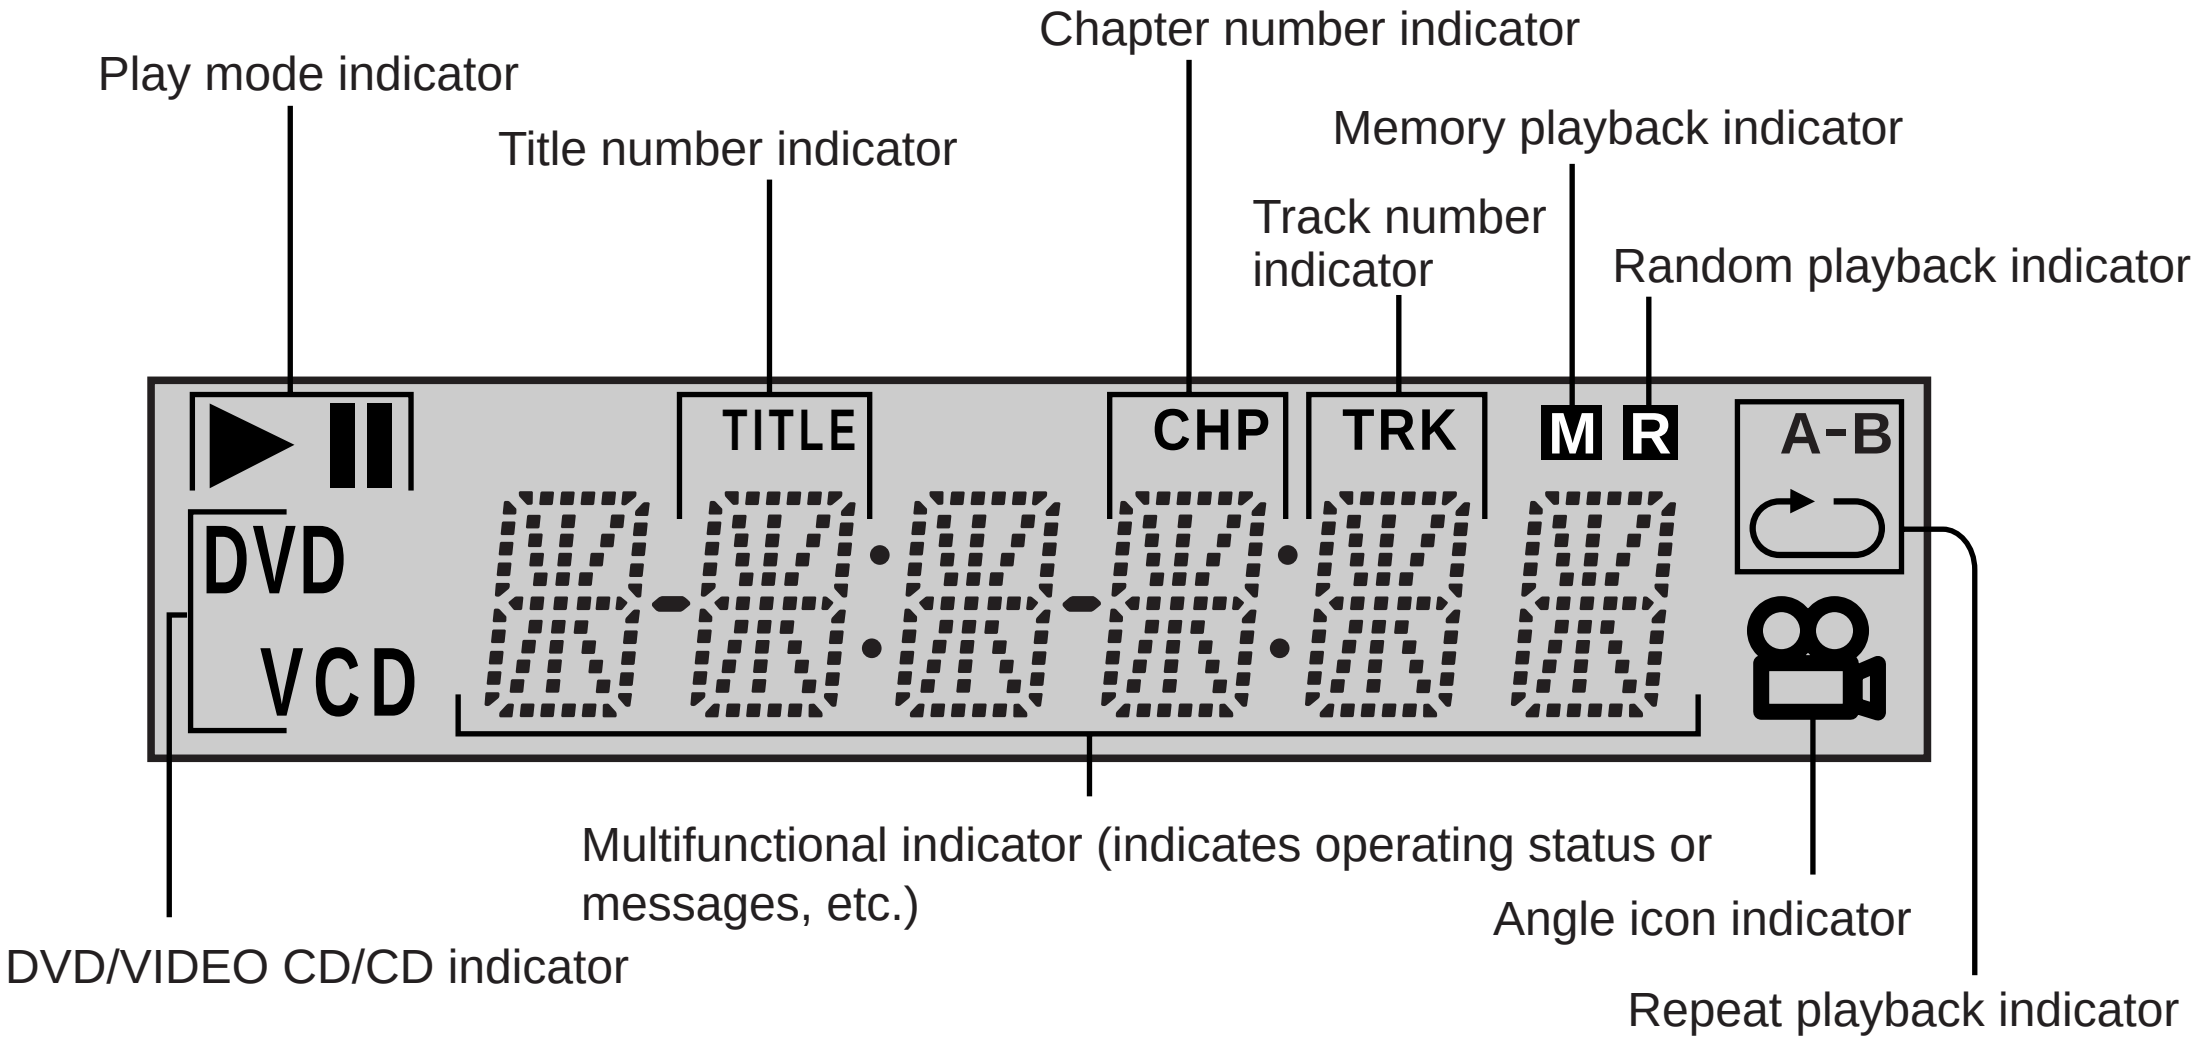
Play mode indicator
Title number indicator
Chapter number indicator
Memory playback indicator
Track number indicator
Random playback indicator
TITLE
CHP
TRK
M
R
A-B
DVD
VCD
Multifunctional indicator (indicates operating status or messages, etc.)
DVD/VIDEO CD/CD indicator
Angle icon indicator
Repeat playback indicator

- **When you start playback, the elapsed time indicators appear. Pressing the FL SELECT button switches them to the title/chapter/track number indicators. Some discs may not permit this operation.**

The indicators vary depending on the kinds of discs you play.

DVD video disc

- During playback:

Example


TITLE
CHP
DVD
2
3

Playing chapter 3 of title 2

Some discs may not display chapter numbers or elapsed time.

VIDEO CD

- During playback:

Example



Playing track 6

Some discs may not display track numbers or elapsed time.

Audio CD

- During playback:

Example



Playing track 6

Identification of Controls (continued)

The instructions in this manual describe the functions on the remote control. See the page in ⟩ for details.

Remote control

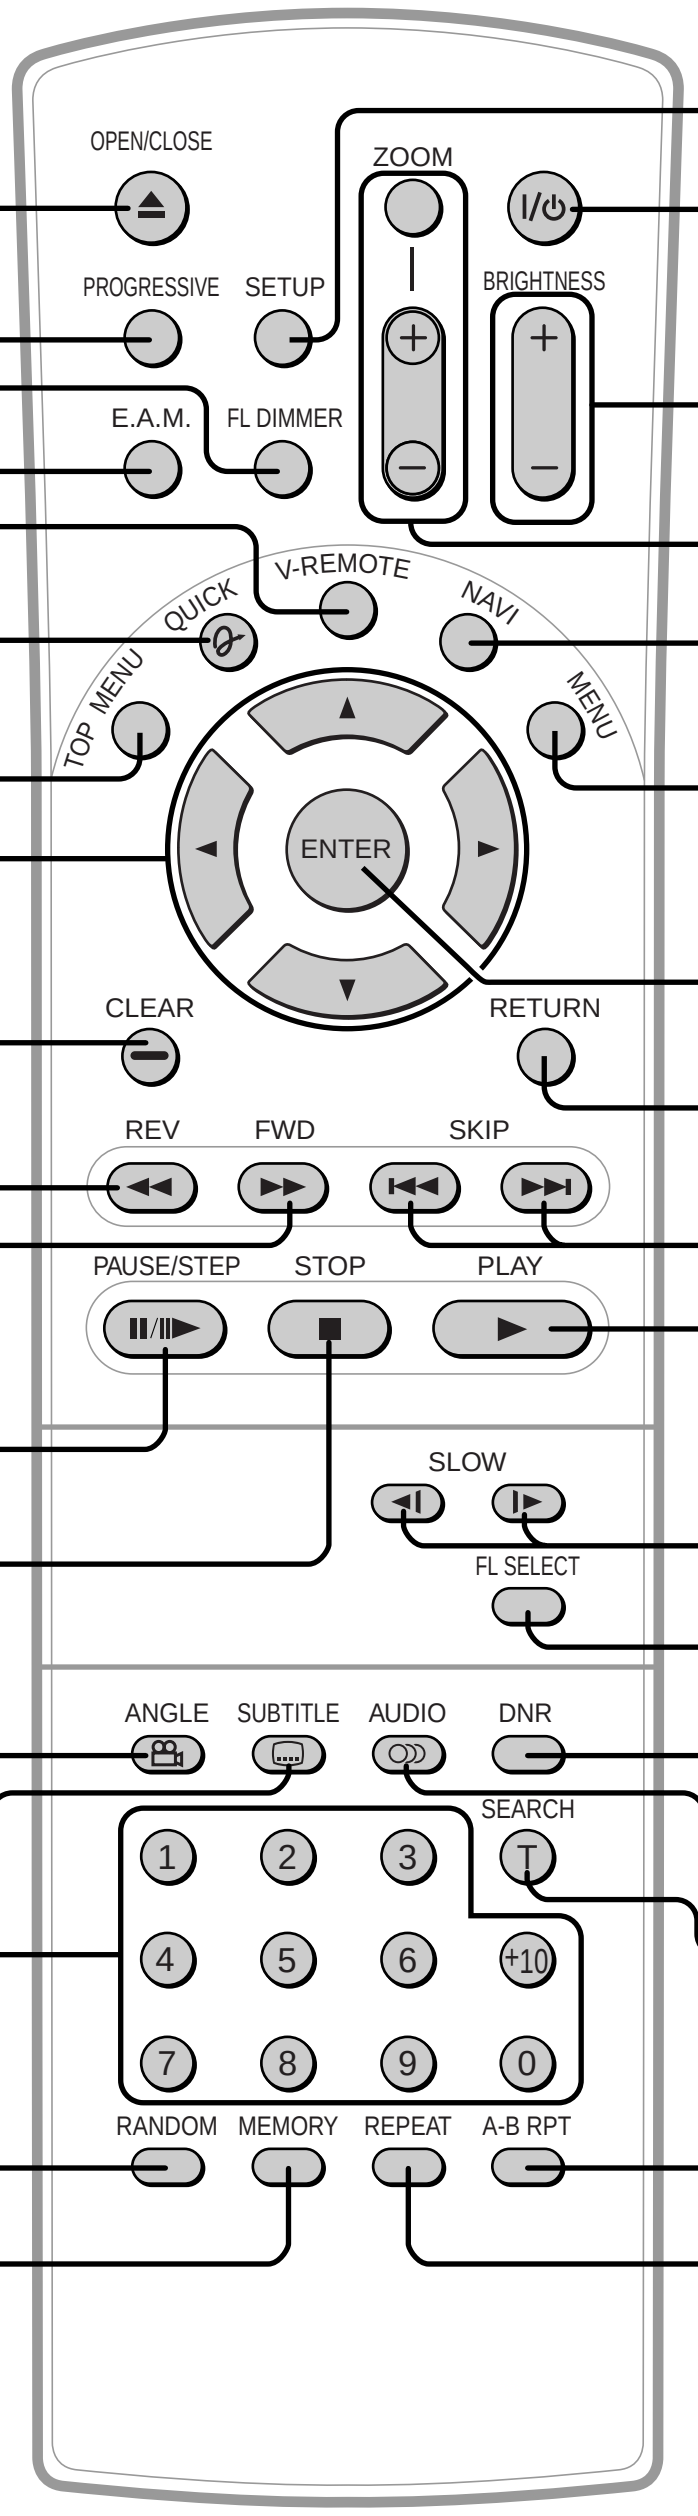
OPEN/CLOSE
ZOOM
PROGRESSIVE
SETUP
BRIGHTNESS
E.A.M.
FL DIMMER
V-REMOTE
QUICK
NAVI
TOP MENU
MENU
ENTER
CLEAR
RETURN
REV
FWD
SKIP
PAUSE/STEP
STOP
PLAY
SLOW
FL SELECT
ANGLE
SUBTITLE
AUDIO
DNR
SEARCH
1
2
3
T
4
5
6
+10
7
8
9
0
RANDOM
MEMORY
REPEAT
A-B RPT

OPEN/CLOSE button 26

PROGRESSIVE button 19

FL DIMMER button 13

E.A.M. button 39

V-REMOTE button 46

QUICK button 47

TOP MENU button 30

Direction buttons 56
(▲/▼/◄/►)

CLEAR button 31

REV button 28

FWD button 28

PAUSE/STEP button 27

STOP button 27

ANGLE button 40

SUBTITLE button 41

Number buttons 31

RANDOM button 37

MEMORY button 36

SETUP button 56

Power button 26

BRIGHTNESS buttons 52

ZOOM buttons 38

NAVI button 48

MENU button*

ENTER button 56

RETURN button 56

SKIP buttons 31

PLAY button 26

SLOW buttons 29

FL SELECT button 13

DNR button 52

AUDIO button 42

T button 31

A-B RPT button 35

REPEAT button 35

* **MENU button**
Use the MENU button to display the menu included on many DVD video discs. To operate a menu, follow the instructions in “Locating a title using the top menu.” 30

Loading batteries

1 **Open the cover.**

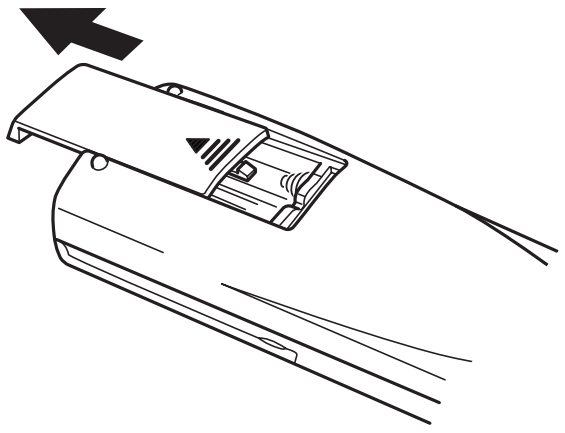

2 **Insert batteries (AAA size).**

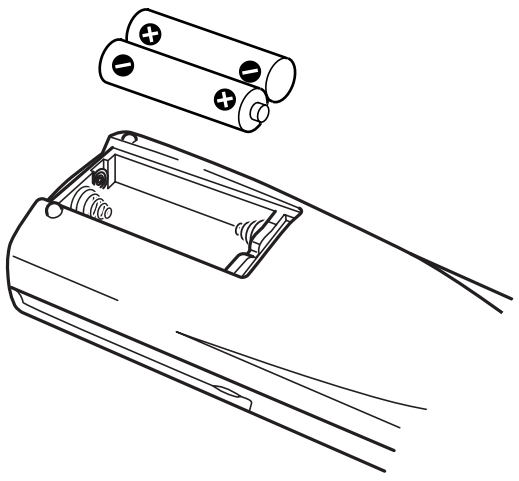

Make sure to match the + and – on the batteries to the marks inside the battery compartment.

3 **Close the cover.**

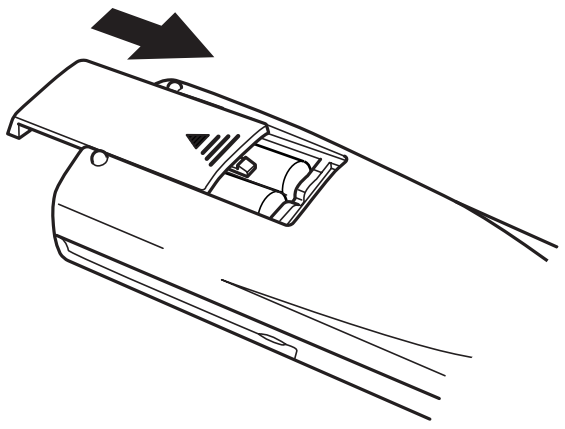

Notes on batteries

Improper use of batteries may cause battery leakage and corrosion. To operate the remote control correctly, follow the instructions below.

- Do not insert batteries into the remote control in the wrong direction.
- Do not charge, heat, open, or short-circuit the batteries. Do not throw batteries into a fire.
- Do not leave dead or exhausted batteries in the remote control.
- Do not use different types of batteries together, or mix old and new batteries.
- If you do not use the remote control for a long period of time, remove the batteries to avoid possible damage from battery corrosion.
- If the remote control does not function correctly or if the operating range becomes reduced, replace all batteries with new ones.
- If battery leakage occurs, wipe the battery liquid from the battery compartment, then insert new batteries.

Operating with the remote control

Point the remote control at the remote sensor and press the buttons.

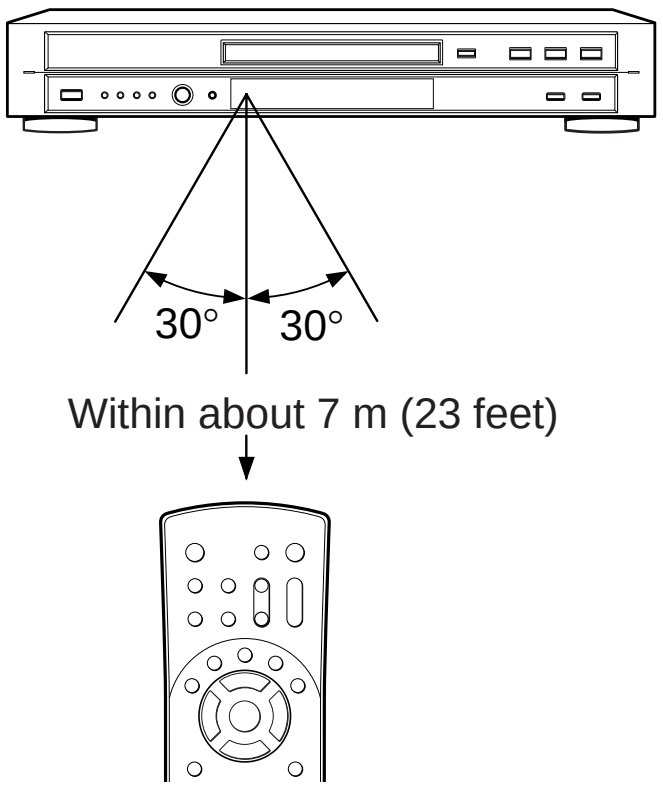

Distance: About 7 m (23 feet) from the front of the remote sensor
Angle: About 30° in each direction of the front of the remote sensor

* Do not expose the remote sensor of the DVD player to a strong light source such as direct sunlight or other illumination. If you do so, you may not be able to operate the DVD player via the remote control.

Notes on the remote control

- Direct the remote control at the remote sensor of the DVD player.
- Do not drop or give the remote control a shock.
- Do not leave the remote control near an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- Do not open the remote control.

Connections

Read this chapter first to make all necessary preparations.

- **Connecting to a TV**
- **Connecting to an audio system and TV equipped with component video inputs**
- **Connecting to an amplifier equipped with a Dolby Digital decoder**
- **Connecting to an amplifier equipped with Dolby Surround Pro Logic**
- **Connecting to an amplifier equipped with a DTS decoder**
- **Connecting to an amplifier equipped with an MPEG2 audio decoder**
- **Connecting to an amplifier equipped with a digital audio input**

Connecting to a TV

Connect the DVD player to your TV.

For details of output sound, see 43.

Connecting to a TV

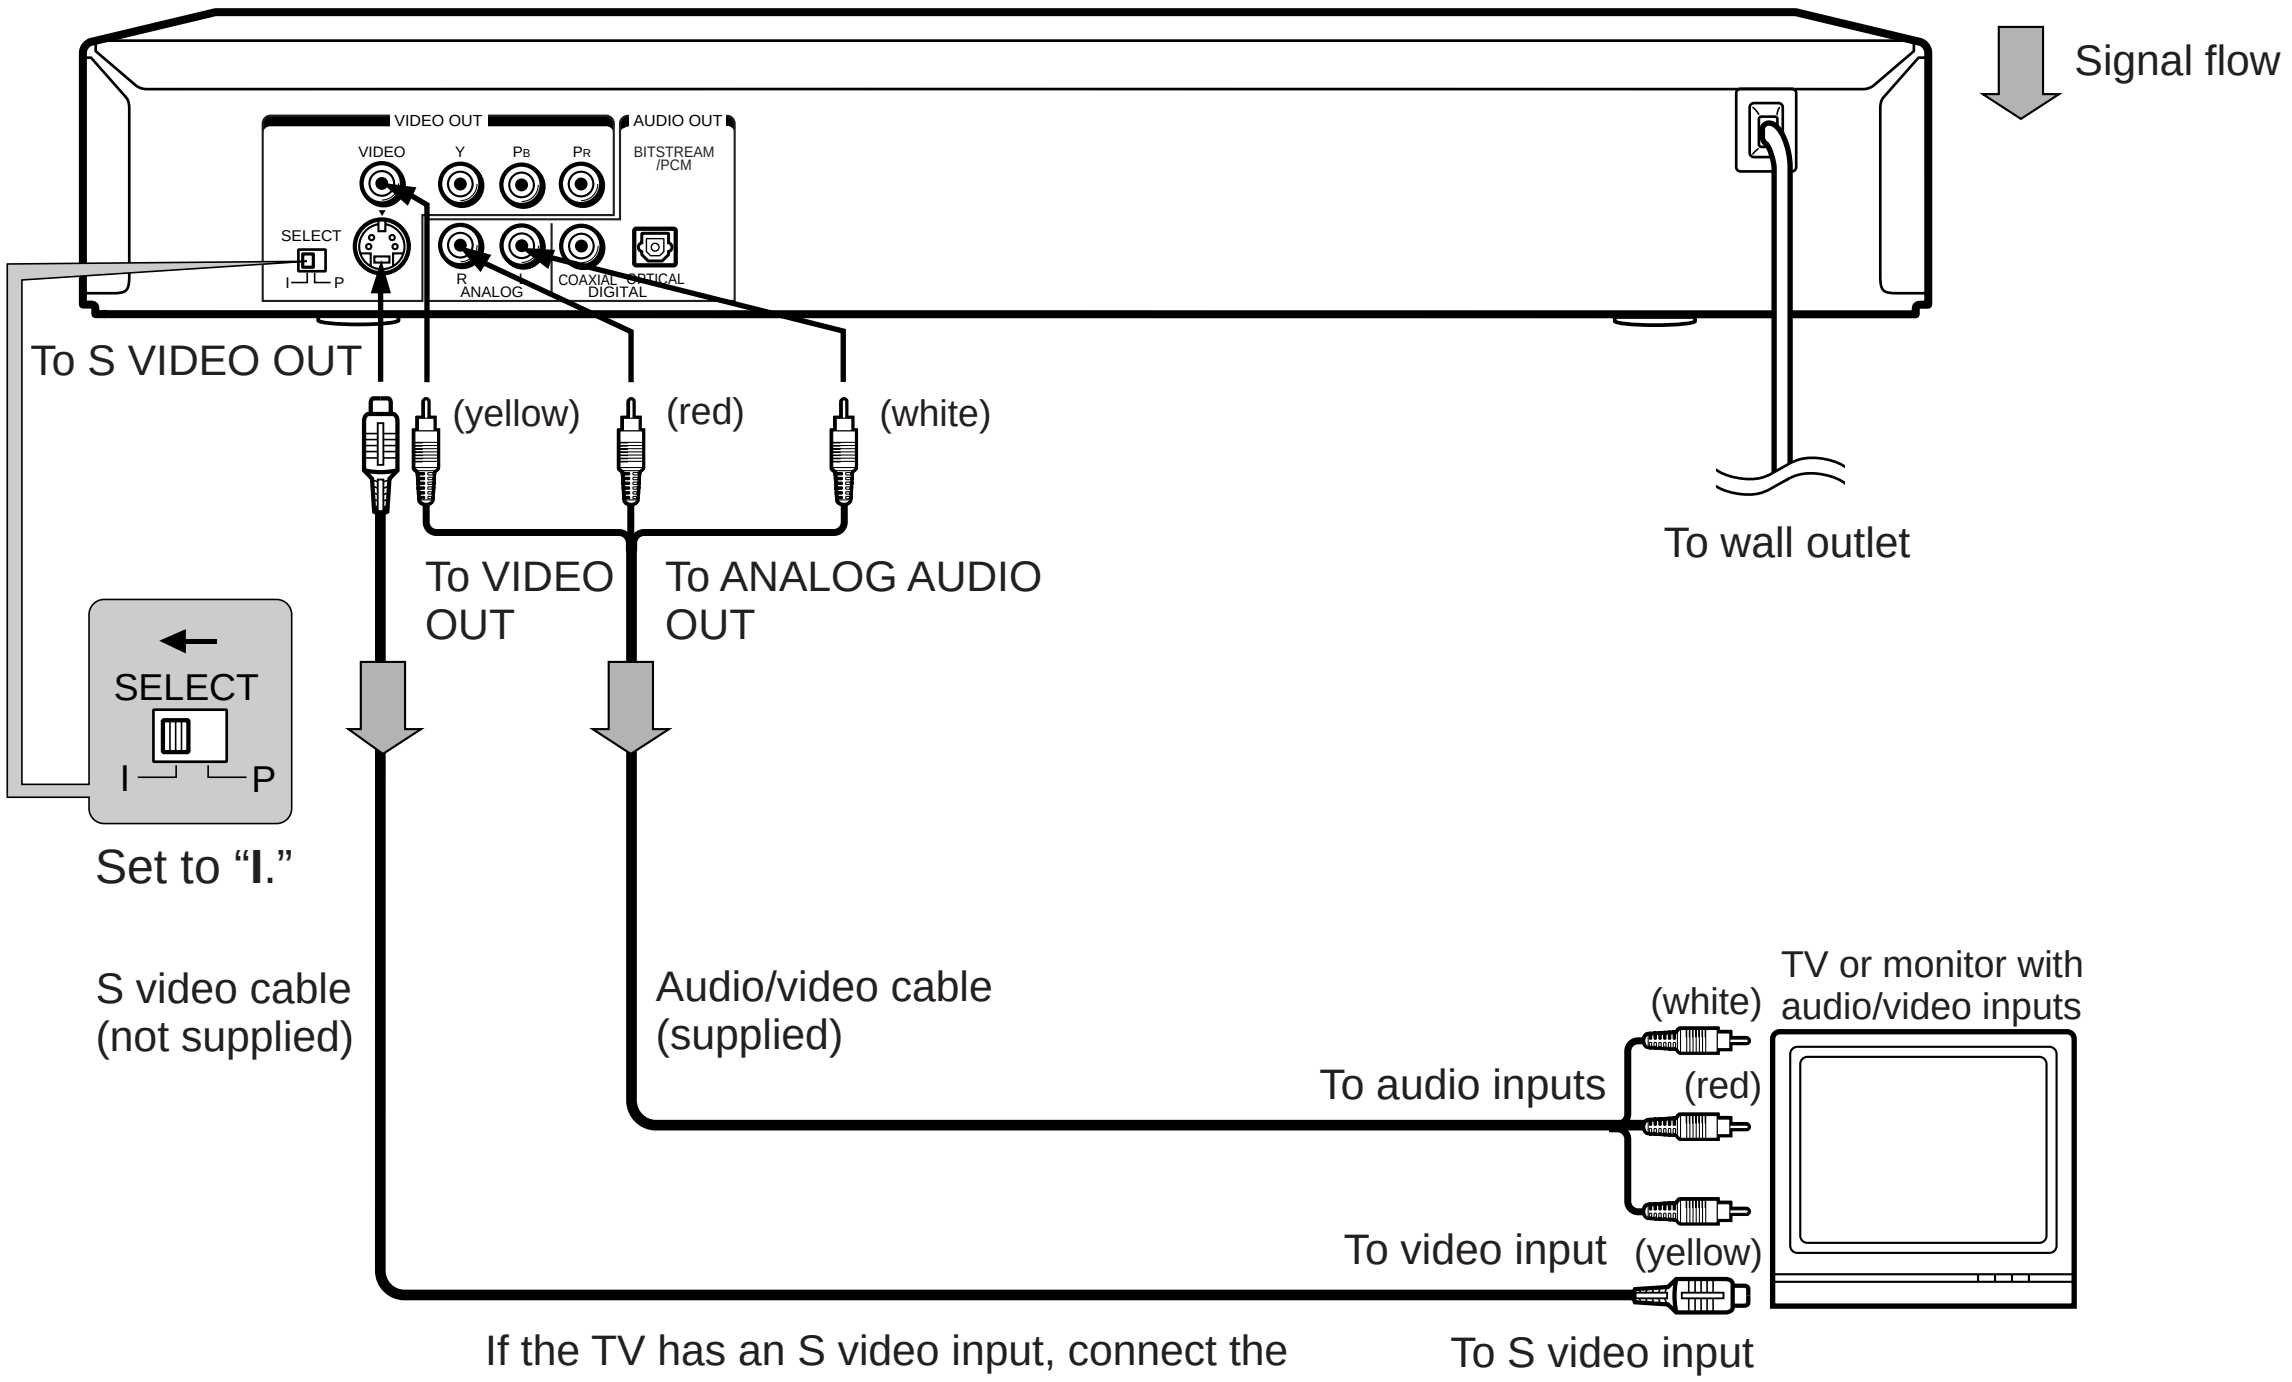
VIDEO OUT
AUDIO OUT
VIDEO
Y
PB
PR
BITSTREAM /PCM
SELECT
I P
R
ANALOG
COAXIAL
OPTICAL
DIGITAL
Signal flow
To S VIDEO OUT
(yellow)
(red)
(white)
To VIDEO OUT
To ANALOG AUDIO OUT
To wall outlet
SELECT
I
P
Set to “I.”
S video cable (not supplied)
Audio/video cable (supplied)
TV or monitor with audio/video inputs
(white)
(red)
To audio inputs
To video input
(yellow)
To S video input

If the TV has an S video input, connect the DVD player with an S video cable. When using an S video cable, do not connect the yellow video cable.

- Make the following setting.

On-screen display	Select:	Page
“Digital Output”	“Bitstream” or “PCM”	56 59

Notes

- Refer to the owner’s manual of the connected TV as well.
- When you connect the DVD player to your TV, be sure to turn off the power and unplug both units from the wall outlet before making any connections.
- If your television set has one audio input, connect the left and right audio outputs of the DVD player to a Y cable adapter (not supplied) and then connect to your TV.
- Connect the DVD player directly to your TV. If you connect the DVD player to a VCR, TV/VCR combination or video selector, the playback picture may be distorted as DVD video discs are copy protected.

INTERLACED outputs/inputs (ColorStream®)

Some TVs or monitors are equipped with component video inputs. Connecting to these inputs allows you to enjoy higher quality picture playback.

Actual labels for component video inputs may vary depending on the TV manufacturer. (ex. Y, R-Y, B-Y or Y, CB, CR)

In some TVs or monitors, the color levels of the playback picture may be reduced slightly or the tint may change. In such a case, adjust the TV or monitor for optimum performance.

PROGRESSIVE outputs/inputs (ColorStream®Pro)

Some TVs or monitors are equipped with component video inputs that are capable of reproducing a progressively scanned video signal. Connecting to these inputs allows you to view the highest quality pictures with less flicker.

Connecting to an audio system and TV equipped with component video inputs

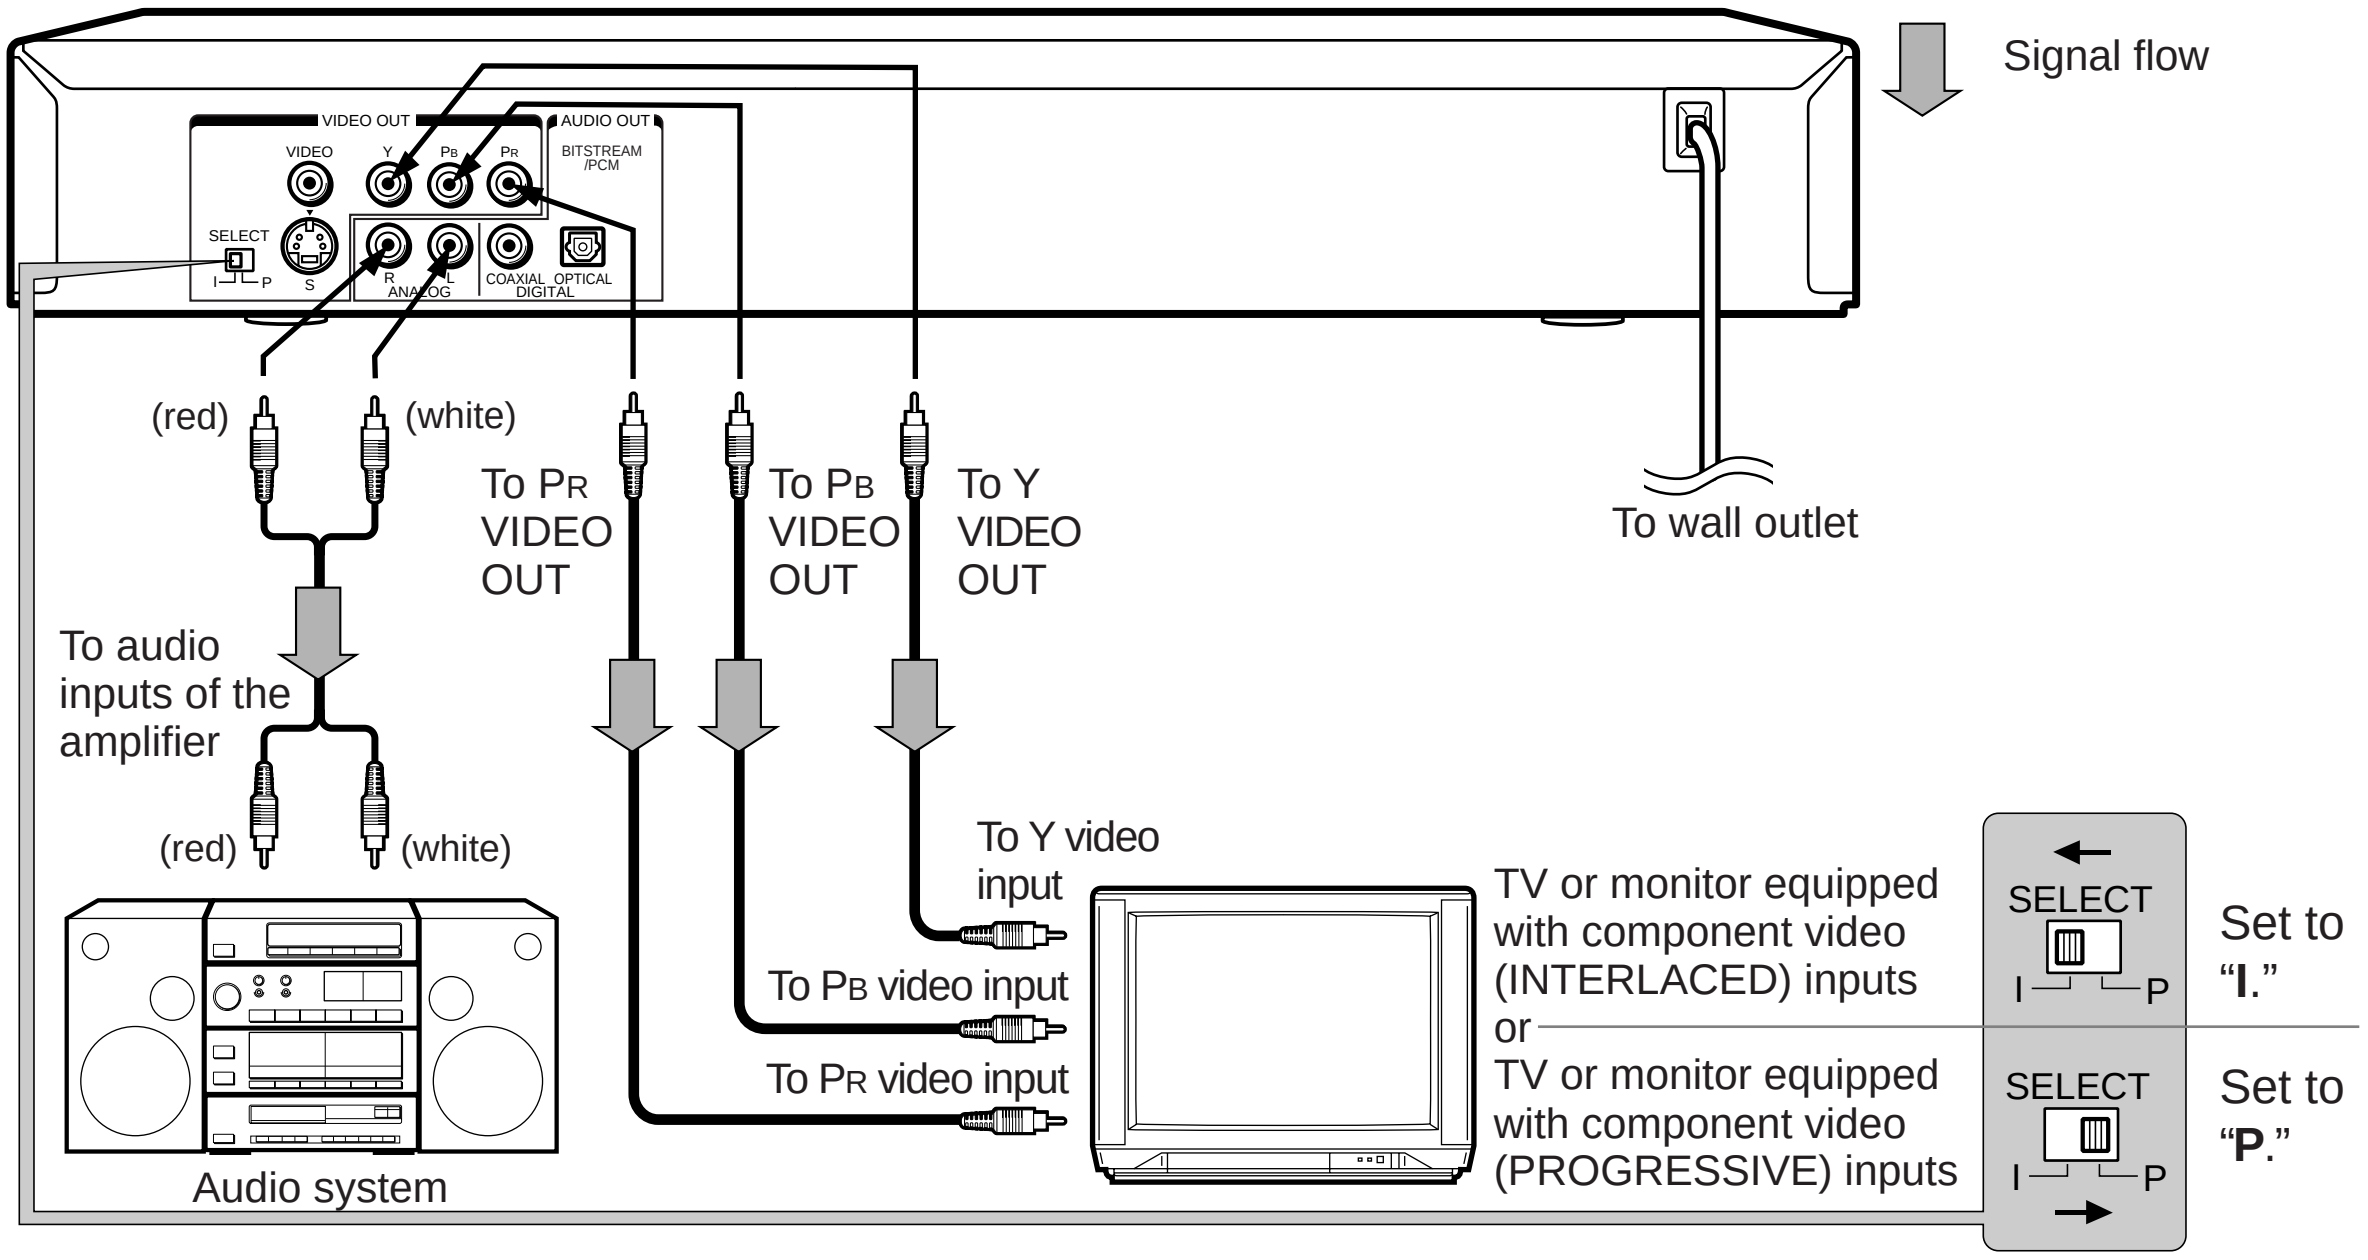
VIDEO OUT
AUDIO OUT
VIDEO
Y
PB
PR
BITSTREAM/PCM
SELECT
I P
S
R L
ANALOG
COAXIAL OPTICAL
DIGITAL
Signal flow
(red)
(white)
To PR VIDEO OUT
To PB VIDEO OUT
To Y VIDEO OUT
To wall outlet
To audio inputs of the amplifier
(red)
(white)
Audio system
To Y video input
To PB video input
To PR video input
TV or monitor equipped with component video (INTERLACED) inputs
or
TV or monitor equipped with component video (PROGRESSIVE) inputs
SELECT
I P
Set to "I."
SELECT
I P
Set to "P."

■ Switching the output signal (interlaced/ progressive) using the remote control (only when the SELECT (I/P) switch is set to "P")

You can temporarily switch the output signal for better picture quality.

Press **PROGRESSIVE** on the remote control.

While the DVD player is outputting progressive signals, the indicator on the right side on the front panel illuminates.

* After setting this switch (I/P), be sure to power off the DVD player then turn it on to activate the setting.

- Make the following setting.

On-screen display	Select:	Page
"Digital Output"	"Bitstream" or "PCM"	56 59

Notes

- Refer to the owner's manual of the connected equipment as well.
- When you connect the DVD player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.
- If you place the DVD player near a tuner or radio, the radio broadcast sound might be distorted. In this case, place the DVD player away from the tuner and radio.
- The output sound of the DVD player has a wide dynamic range. Be sure to adjust the receiver's volume to a moderate listening level. Otherwise, the speakers may be damaged by a sudden high volume sound.
- Turn off the amplifier before you connect or disconnect the DVD player's power cord. If you leave the amplifier power on, the speakers may be damaged.
- The S VIDEO OUT jack and the VIDEO OUT jack cannot output video signals simultaneously, if you select progressive signal when the SELECT (I/P) switch is set to "P."

Connecting to Optional Equipment

You can enjoy high quality dynamic sounds by connecting the DVD player to optional audio equipment.

- For connection to your TV, see “Connecting to a TV” 18 19.
- For details of output sound, see 43.
- This section uses the following reference marks.

■ : Front speaker
▒ : Rear speaker
▯ : Sub woofer
◫ : Center speaker
⇨ : Signal flow

Notes

- DO NOT connect the BITSTREAM/PCM (DIGITAL) AUDIO OUT jack of the DVD player to the AC-3 RF input of a Dolby Digital Receiver. This input on your A/V Receiver is reserved for Laserdisc use only and is incompatible with the BITSTREAM/PCM (DIGITAL) AUDIO OUT jack of the DVD player.
- Connect the BITSTREAM/PCM (DIGITAL) AUDIO OUT jack of the DVD player to the “DIGITAL (OPTICAL)” or “DIGITAL (COAXIAL)” input of a Receiver or Processor.
- Refer to the owner’s manual of the connected equipment as well.
- When you connect the DVD player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.
- The output sound of the DVD player has a wide dynamic range. Be sure to adjust the receiver’s volume to a moderate listening level. Otherwise, the speakers may be damaged by a sudden high volume sound.
- Turn off the amplifier before you connect or disconnect the DVD player’s power cord. If you leave the amplifier power on, the speakers may be damaged.

Warning

- When you are connecting (via the BITSTREAM/PCM (DIGITAL) AUDIO OUT jack) an AV decoder that does not have Dolby Digital or MPEG2 decoding function, be sure to set “Digital Output” to “PCM” from the on-screen displays 56 59. Otherwise, high volume sound may damage your hearing as well as the speakers.
- DO NOT play DTS-encoded discs when you are connecting an AV decoder that does not have DTS decoding function.
- When playing DTS-encoded discs (audio CDs), excessive noise may be output from the analog audio output jacks. To avoid possible damage to the audio system, you should take proper precautions when the analog audio output jacks of the DVD player are connected to an amplification system. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the BITSTREAM/PCM (DIGITAL) AUDIO OUT jack of the DVD player.

Connecting to an amplifier equipped with a Dolby Digital decoder

Dolby Digital
Dolby Digital is the surround sound technology used in theaters showing the latest movies, and is now available to reproduce this realistic effect in the home. You can enjoy motion picture and live concert DVD video discs with this dynamic realistic sound by connecting the DVD player to a 6 channel amplifier equipped with a Dolby Digital decoder or Dolby Digital processor. If you have a Dolby Surround Pro Logic decoder, you will obtain the full benefit of Pro Logic from the same DVD movies that provide full 5.1-channel Dolby Digital soundtracks, as well as from titles with the Dolby Surround mark.

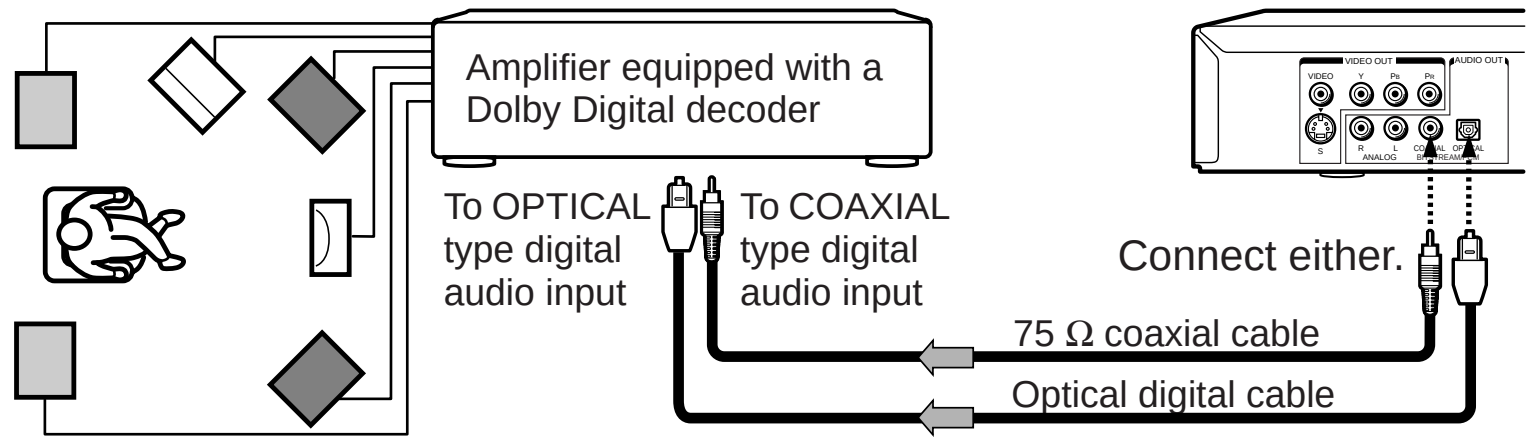
Amplifier equipped with a Dolby Digital decoder
To OPTICAL type digital audio input
To COAXIAL type digital audio input
Connect either.
75 Ω coaxial cable
Optical digital cable
VIDEO OUT
AUDIO OUT
ANALOG

Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic” and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-1997 Dolby Laboratories. All rights reserved.

- Use DVD video discs encoded via the Dolby Digital recording system.
- Make the following setting.

On-screen display	Select:	Page
“Digital Output”	“Bitstream”	56 59
Recording system	DD D	42

Connecting to an amplifier equipped with Dolby Surround Pro Logic

Dolby Surround Pro Logic
You can enjoy the dynamic realistic sound of Dolby Surround Pro Logic by connecting an amplifier and speaker system (right and left front speakers, a center speaker, and one or two rear speakers).

■ **With an amplifier equipped with Dolby Digital**
Connect the equipment the same way as described in “Connecting to an amplifier equipped with a Dolby Digital decoder.” Refer to that amplifier’s owner’s manual and set the amplifier so you can enjoy Dolby Surround Pro Logic sound.

■ **With an amplifier not equipped with Dolby Digital**
Connect the equipment as follows.

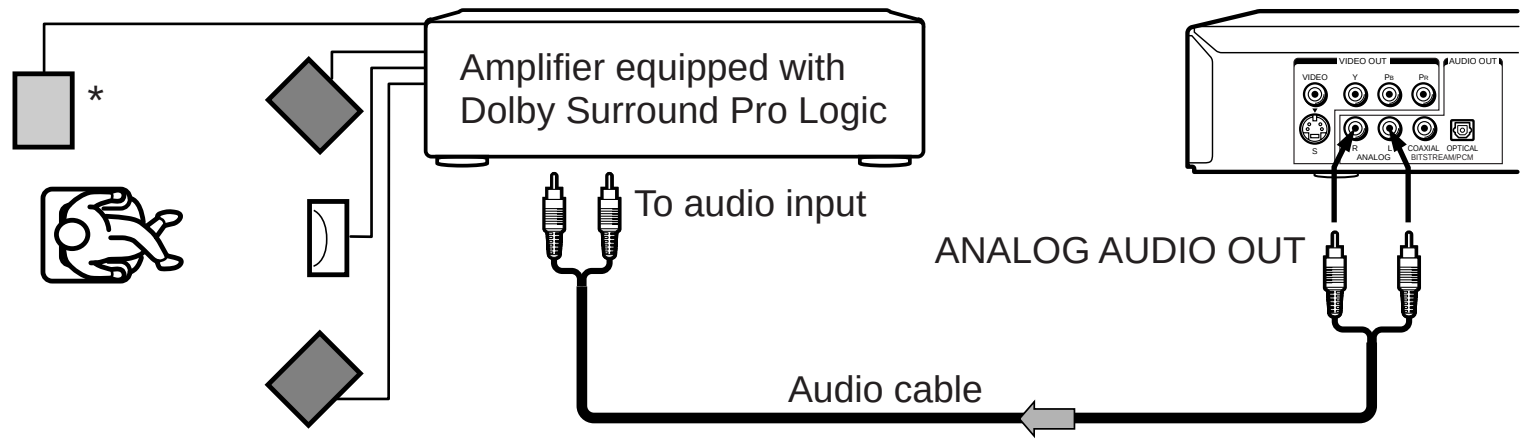
*
Amplifier equipped with Dolby Surround Pro Logic
To audio input
ANALOG AUDIO OUT
Audio cable
VIDEO OUT
AUDIO OUT
ANALOG

- Make the following setting.

On-screen display	Select:	Page
“Digital Output”	“Bitstream” or “PCM”	56 59

Be sure to set “Digital Output” to “Bitstream” or “PCM” when you enjoy sounds of Dolby Surround Pro Logic using this connection.

* Connect one or two rear speakers. The output sound from the rear speakers will be monaural even if you connect two rear speakers.

Connecting to Optional Equipment (Continued)

Connecting to an amplifier equipped with a DTS decoder

Digital Theater Systems (DTS)
DTS is a high quality surround technology used in theaters and now available for home use, on DVD video discs or audio CDs.
If you have a DTS decoder or processor, you can obtain the full benefit of 5.1 channel DTS encoded sound tracks on DVD video discs or audio CDs.

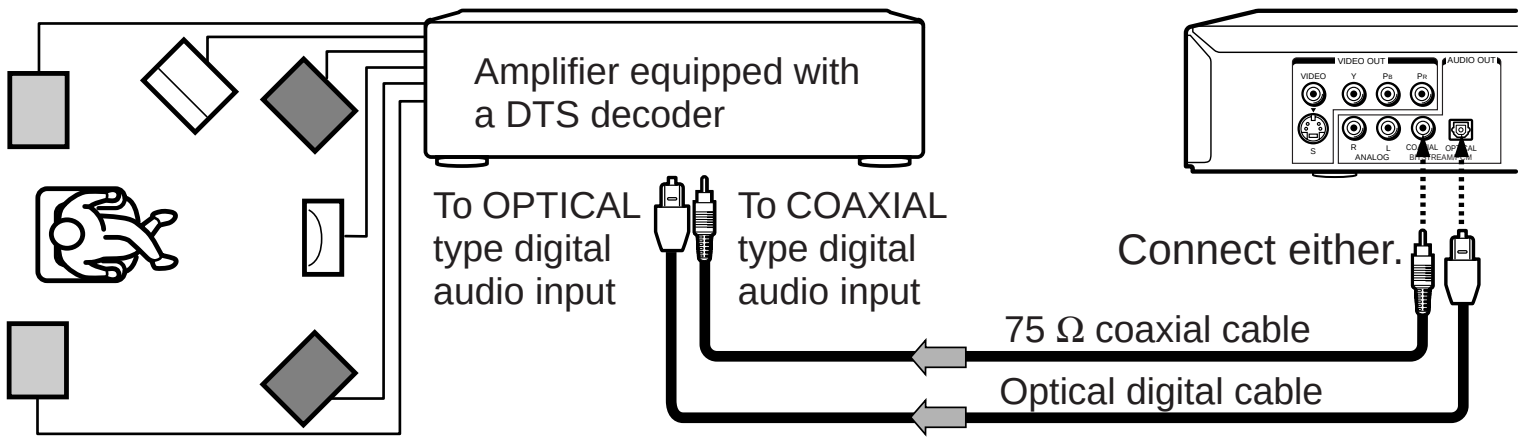
Amplifier equipped with a DTS decoder
To OPTICAL type digital audio input
To COAXIAL type digital audio input
Connect either.
75 Ω coaxial cable
Optical digital cable

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

- Use DVD video discs or audio CDs encoded via the DTS recording system.
- Make the following setting.

On-screen display	Select:	Page
"Digital Output"	"Bitstream" or "PCM"	56 59
Recording system	DTS	42

Connecting to an amplifier equipped with an MPEG2 audio decoder

MPEG2 sound
You can enjoy motion picture and live concert DVD video discs with dynamic realistic sound by connecting an amplifier equipped with an MPEG2 audio decoder or MPEG2 audio processor.

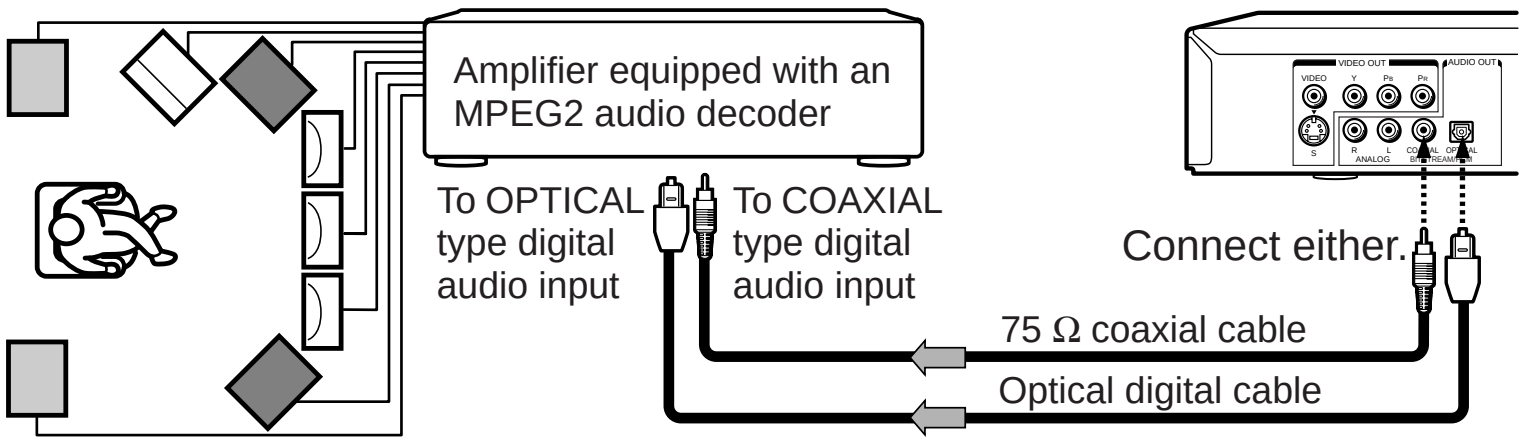
Amplifier equipped with an MPEG2 audio decoder
To OPTICAL type digital audio input
To COAXIAL type digital audio input
Connect either.
75 Ω coaxial cable
Optical digital cable

- Use DVD video discs encoded via the MPEG2 recording system.
- Make the following setting.

On-screen display	Select:	Page
"Digital Output"	"Bitstream"	56 59
Recording system	MPEG2	42

Connecting to an amplifier equipped with a digital audio input

2 channel digital stereo
You can enjoy the dynamic sound of 2 channel digital stereo by connecting an amplifier equipped with a digital audio input and speaker system (right and left front speakers).

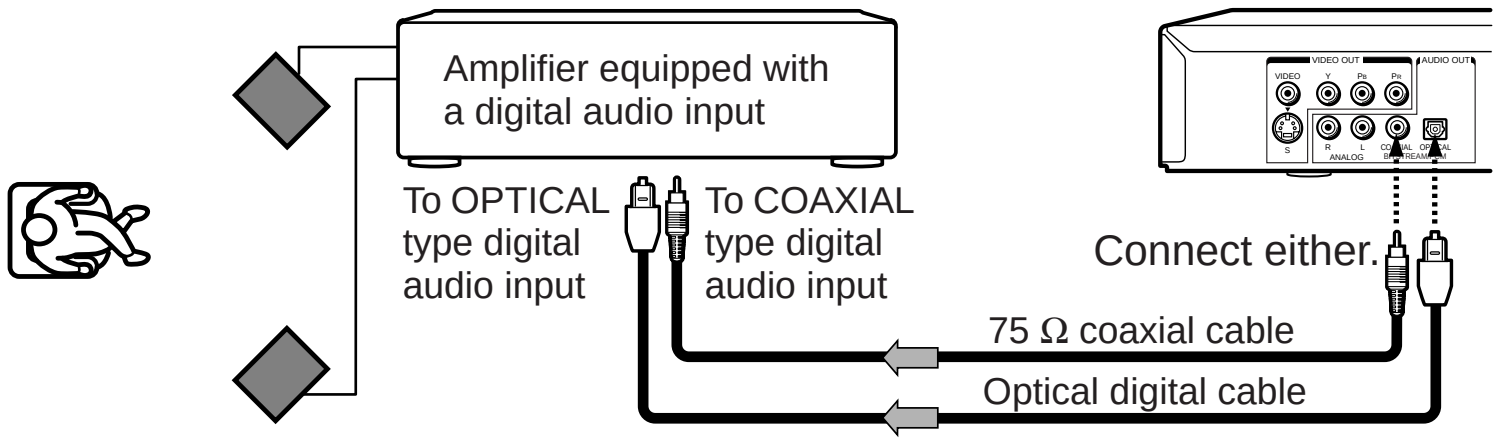
Amplifier equipped with a digital audio input
To OPTICAL type digital audio input
To COAXIAL type digital audio input
Connect either.
75 Ω coaxial cable
Optical digital cable

- Make the following setting.

On-screen display	Select:	Page
"Digital Output"	"PCM"	56 59

Basic playback

Begin your operation.

- Playing a Disc
- Variable Speed Playback
- Locating a Desired Section
- Playing an MP3 Encoded CD

Playing a Disc

This section shows you the basics on how to play a disc.

CAUTION
Keep your fingers well clear of the disc tray as it is closing. Neglecting to do so may cause serious personal injury.

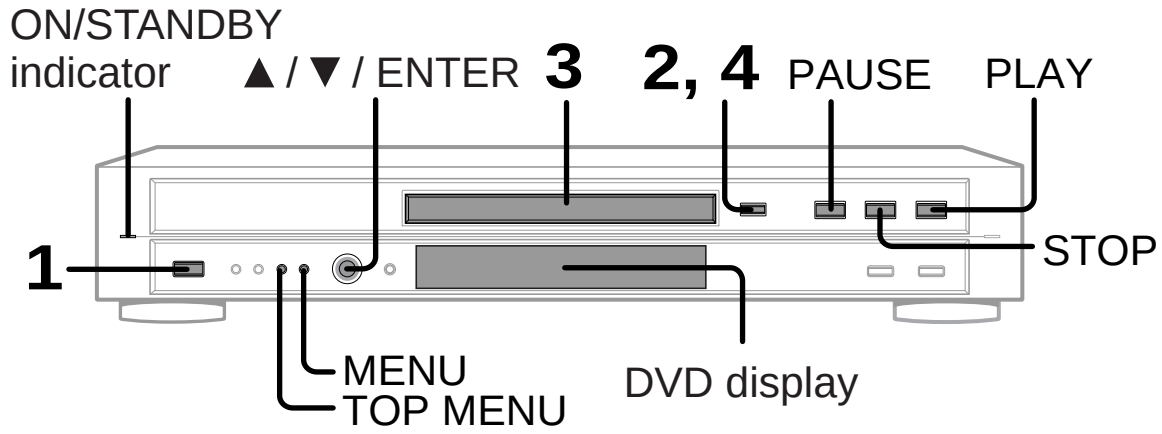

DVD-V VCD CD Basic playback

Preparations

- When you want to view a disc, turn on the TV and select the video input connected to the DVD player.
- When you want to enjoy the sound of discs from the audio system, turn on the audio system and select the input connected to the DVD player.

1 Press the power button (ON/STANDBY).



The DVD player turns on and the ON/STANDBY indicator on the player illuminates.

When the DVD player is turned on for the first time, an on-screen display will appear to provide initial settings. Press the ▲ / ▼ buttons to select an item, and press the ENTER button. See the pages in , and make a selection using the ▲ / ▼ buttons, then press the ENTER button.

On-Screen Language 60
TV Shape 58

After making all the settings, select “ ” and press the ENTER button.

2 Press OPEN/CLOSE.



The disc tray opens.

3 Place a disc on the disc tray.

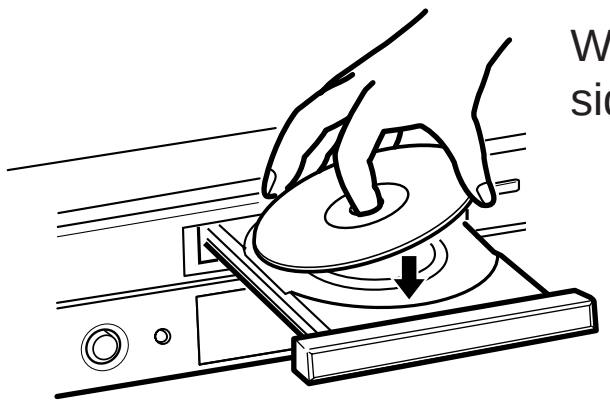

With the playback side down.

- There are two different disc sizes. Place the disc in the correct guide on the disc tray. If the disc is out of the guide, it may damage the disc and cause the DVD player to malfunction.
- Do not place a disc which is unplayable in this DVD player.

4 Press OPEN/CLOSE to close the disc tray.



Playback starts.

If you insert a DVD video disc that contains a top menu, a menu may appear. See “Locating a title using the top menu.” 30
You may need to press the TOP MENU or MENU button to display disc menu (depending on the actual DVD video disc.)

Note
If the disc tray contains a disc you have already played, playback will begin from the location where you last stopped playback. 29

■ To start playback in the stop mode

Press **PLAY**.



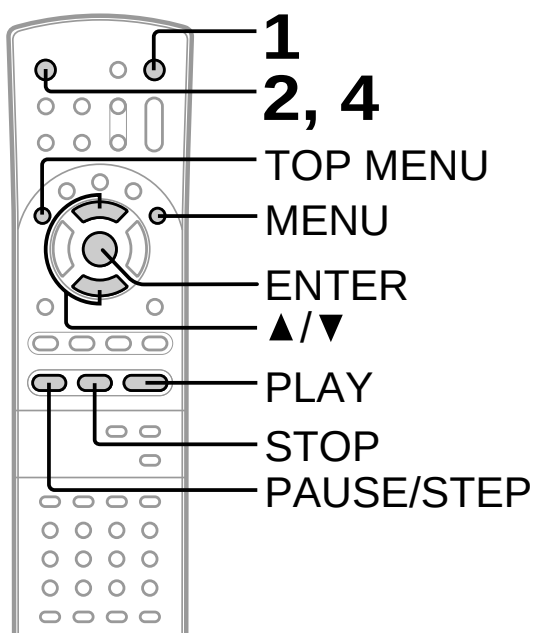

To obtain a higher quality picture

Occasionally, some picture noise not usually visible during a normal broadcast may appear on the TV screen while playing a DVD video disc because the high resolution pictures on these discs include a lot of information. While the amount of noise depends on the TV you use with this DVD player, you should generally reduce the sharpness adjustment on your TV when viewing DVD video discs.

About DVD-V VCD CD

The DVD-V VCD CD icons on the heading bar show the playable discs for the function described under that heading.

DVD-V : DVD video discs.
VCD : VIDEO CDs.
CD : Audio CDs.

To pause playback (still mode)

Press **PAUSE/STEP** during playback.

To resume normal playback, press the PLAY button.

- Sound is muted during still mode.

To stop playback

Press **STOP**.



To remove the disc

Press **OPEN/CLOSE**.

Remove the disc after the disc tray opens completely.

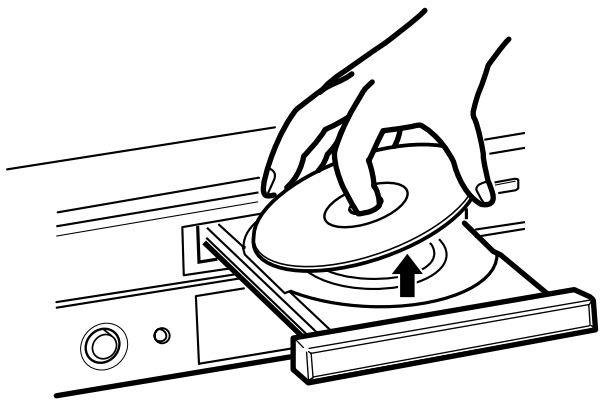

Be sure to press the OPEN/CLOSE button to close the disc tray after you remove the disc.

About the screen saver

If you pause a picture of a DVD video disc and leave it still for a long while, the screen saver of the DVD player automatically appears (when “Screen Saver” is set to “On” 62). To turn off the screen saver, press the PLAY button.

Automatic Power Off function

If the DVD player is stopped, or the screen saver is engaged for approximately 20 minutes, the DVD player will automatically turn itself off.

Notes

- Do not move the DVD player during playback. Doing so may damage the disc.
- Use the OPEN/CLOSE button to open and close the disc tray. Do not push the disc tray while it is moving. Doing so may cause the DVD player to malfunction.
- Do not push up on the disc tray or put any objects other than discs on the disc tray. Doing so may cause the DVD player to malfunction.
- In many instances, a menu screen will appear after playback of a movie is completed. Prolonged display of an on-screen menu may damage your television set, permanently etching that image onto its screen. To avoid this, be sure to press the STOP button twice on your remote control once the movie is completed.

Variable Speed Playback

You can play discs at various speeds, and resume playback from the location where you stopped playback.

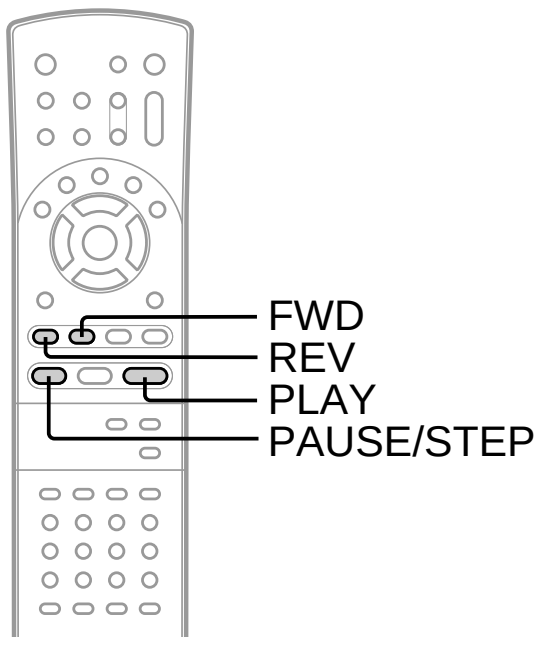

DVD-V VCD CD Playing in fast reverse or fast forward directions

Press REV or FWD during playback.



REV : Fast reverse playback
FWD: Fast forward playback

Each time you press the REV or FWD button, the playback speed changes.

■ To resume normal playback

Press **PLAY**.

Notes

- The DVD player mutes sound and omits subtitles during reverse and forward scan of DVD video discs.
- The playback speed may differ depending on the disc.

DVD-V VCD CD Playing frame by frame

Press PAUSE/STEP during still playback.

Each time you press the PAUSE/STEP button, the picture advances one frame.

■ To resume normal playback

Press **PLAY**.

Note

The sound is muted during frame by frame playback.

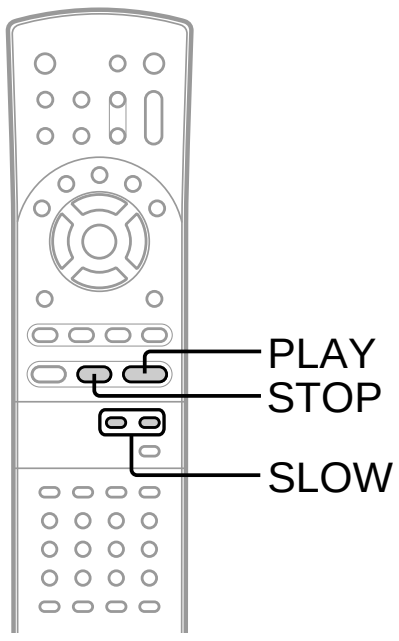

DVD-V VCD CD Playing in slow-motion

Press SLOW during playback.

SLOW

Each time you press the SLOW I▶ button, the slow-motion speed changes.

SLOW

If you press the SLOW ◀I button during playback, you can view the picture in reverse slow-motion. (Only when using a DVD video disc.)

Each time you press the SLOW ◀I button, the slow-motion speed changes.

■ To resume normal playback

Press **PLAY**.

PLAY

Notes

- The sound is muted during slow-motion playback.
- The playback speed may differ depending on the disc.

DVD-V VCD CD Resuming playback from the same location

1 **Press STOP at the location where you want to interrupt playback.**

STOP

The DVD player memorizes the location where playback is stopped.

2 **Press PLAY.**

PLAY

The DVD player resumes playback from the location where you stopped playback.

■ To start playback from the beginning regardless of the location where you stopped playback

1 Press **STOP** twice.

STOP

The DVD player erases the previous location from its memory.

2 Press **PLAY**.

PLAY

DVD-V	Playback starts from the beginning of the current title.
VCD CD	Playback starts from the beginning of the disc.

- If you want to return to the beginning of a DVD video disc, open and close the disc tray once with the OPEN/CLOSE button before pressing the PLAY button.

Notes

- Resuming cannot function when:
  - –you change the parental lock setting 62 or select a disc menu language 60.
  - –you play a PBC-featured VIDEO CD while “PBC” 64 is set to “On.”
  - –you open the disc tray.
- There may be a difference in the location where playback resumes depending on the disc.
- Settings you changed using the on-screen displays while the DVD player keeps a location in the memory may function only after the memory is cleared.

Locating a Desired Section

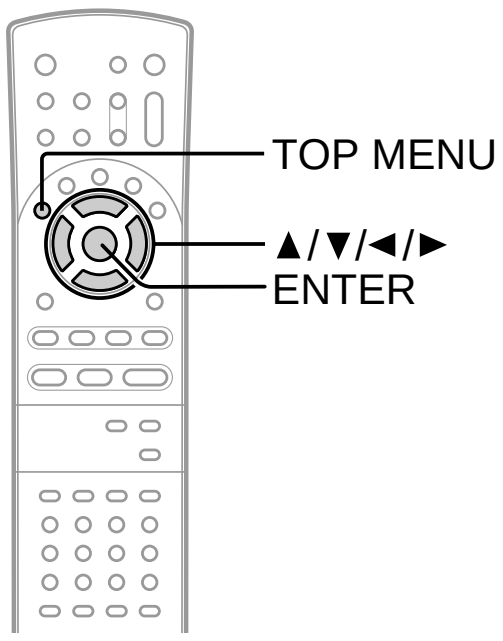
TOP MENU
▲/▼/◄/►
ENTER

Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. VIDEO CDs and audio CDs are divided into tracks. You can quickly locate any specific title, chapter, or track.

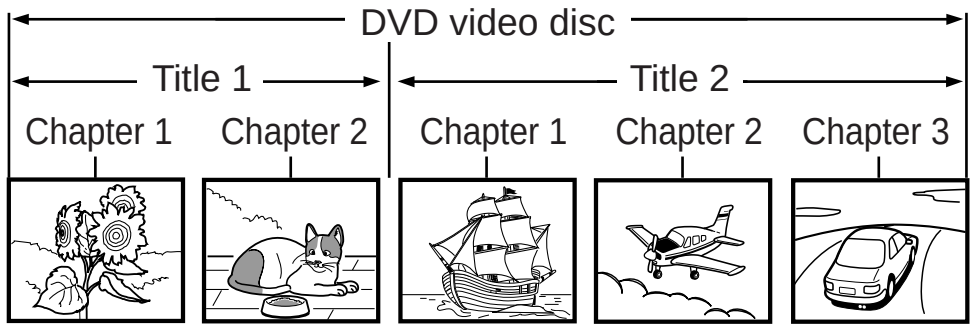
DVD video disc
Title 1
Title 2
Chapter 1
Chapter 2
Chapter 1
Chapter 2
Chapter 3

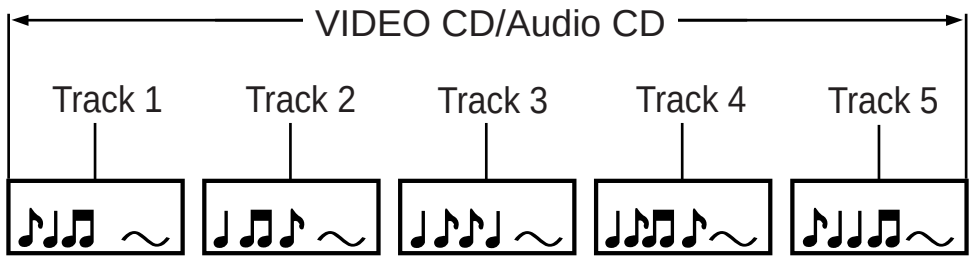
VIDEO CD/Audio CD
Track 1
Track 2
Track 3
Track 4
Track 5

DVD-V VCD CD Locating a title using the top menu

1 **Press TOP MENU.**

The top menu appears on the TV screen.

e.g.

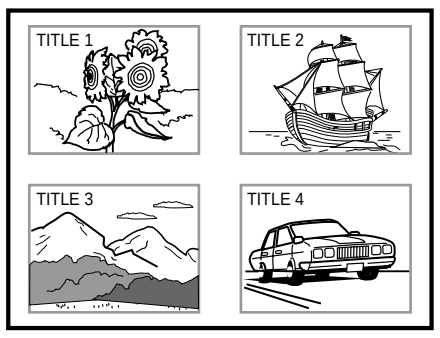
TITLE 1
TITLE 2
TITLE 3
TITLE 4

2 **Press ▲ / ▼ / ◄ / ► to select the title you want.**

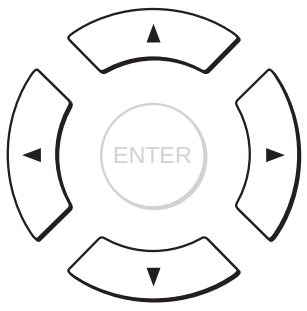

If the titles in the top menu are assigned a number, you can directly locate a specific title by pressing its designated number with the number buttons.

3 **Press ENTER.**

Playback starts from chapter 1 of the selected title.

Notes

- The instructions above describe basic procedures which may vary depending on the contents of the DVD video disc. If different instructions appear on the TV screen, follow those instructions.
- If you display the top menu during playback and press the TOP MENU button again without selecting any title, the DVD player may resume playback from the point where you first pressed the TOP MENU button (depending on the actual DVD video disc.)
- This method of locating a title is available only on a disc that contains a top menu.
- Instruction notes of discs may refer to the button that displays the top menu as TITLE button.

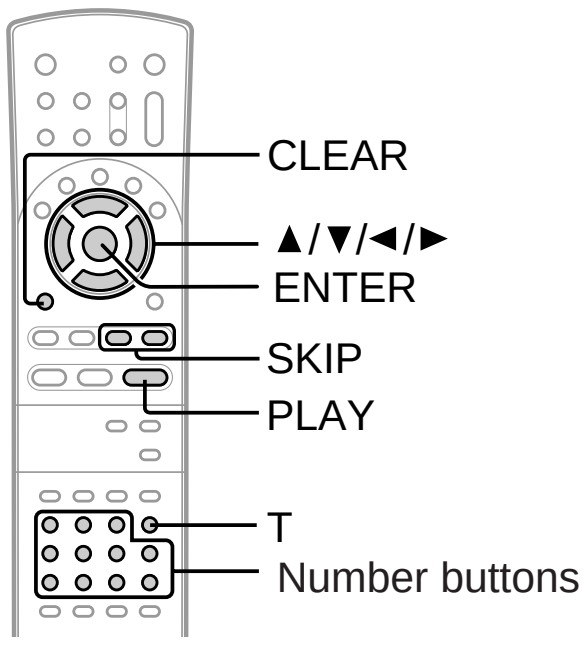

DVD-V VCD CD Locating a desired section by entering its corresponding number

1 **Press T.**

If you are using a VIDEO CD/audio CD, skip steps 1 and 2. Then at step 3, enter the number for the track you want using the number buttons.

e.g.



2 **Press ◀ / ▶ to select a section you want to locate.**

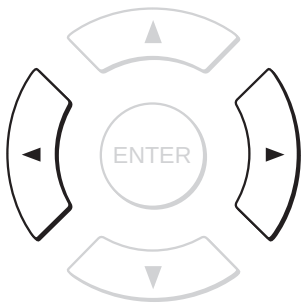

e.g. When you want to locate a chapter.



3 **Press ▲ / ▼ to enter a number of the section.**

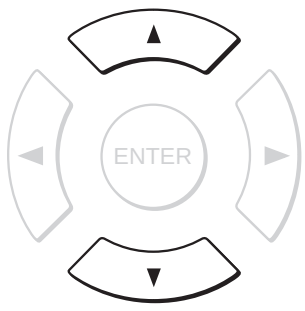

Also the number buttons are available.

e.g. To enter 25

② → ⑤ or (+10) → (+10) → ⑤

4 **Repeat steps 2 and 3 if necessary.**

5 **Press PLAY or ENTER.**



Playback starts from the selected location.

Notes

- Pressing the CLEAR button resets the numbers. To clear the display, press the T button several times.
- This method of locating a title is available only on a disc that contains title numbers.

DVD-V VCD CD Locating a specific chapter or track

Press SKIP ⏮ or ⏭ repeatedly to display the chapter or track number you want.

Playback starts from the selected chapter or track.



To locate succeeding chapters or tracks.



Playback starts from the beginning of the current chapter or track. When you press twice, playback starts from the beginning of the preceding chapter or track.

Notes

- Some titles may not display chapter numbers.
- When you set “Title Stop” to “Off” 64, you can access chapters in another title. If you go back to the preceding title by pressing the SKIP ⏮ button, the DVD player locates the first chapter of the title. When “Title Stop” is set to “On,” you can access chapters only within the current title.
- If you press and hold the SKIP ⏮ or ⏭ button on the front panel during playback, the DVD player performs fast reverse or fast forward playback. You can vary the speed by pressing the button further.
  To locate chapters or tracks during fast reverse or fast forward playback, first press the PLAY button to resume normal playback, then use the SKIP ⏮ or ⏭ button.

Playing an MP3 Encoded CD

You can play MP3 files on this DVD player.

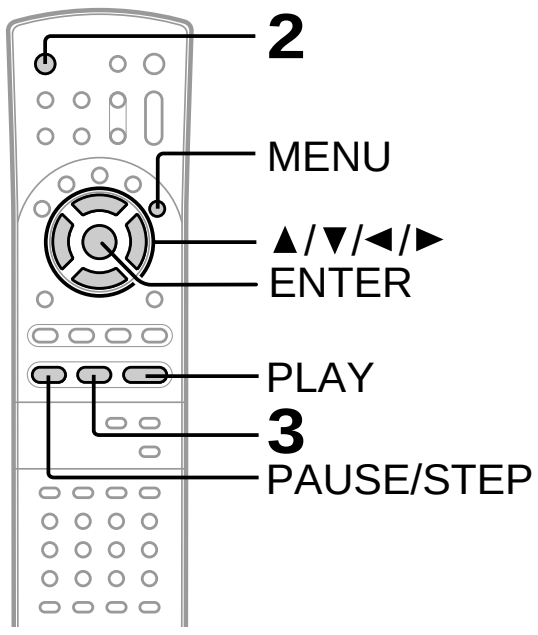

Playing an MP3 encoded CD

MP3 disc compatibility with this player is limited as follows:

- Playable discs: CD-ROM, CD-R (650MB / 74 min. only) CD-RW is not recommendable.
- Sampling Frequency: 44.1 kHz only
- Bit rate 32 kbps-320 kbps
- CD physical format: Mode 1, Mode 2 XA Form 1
- File system: ISO9660 Level 1
- File names are limited to eight characters or less and must incorporate “MP3” extension.
  e.g.“********.MP3”
- File names cannot contain special characters such as “?!><+*}{`[@]:;\ /.,” etc.
- Total number of files on the disc should not exceed 254.

Preparations

- When you playback an MP3 encoded CD, set “Priority Contents” to “ MP3 > JPG ”. 64

1 Place a CD that contains MP3 files on the disc tray.

2 Press OPEN/CLOSE to load the disc.

Playback starts.

To start playback from stop mode, press the PLAY button.

3 To stop playback, press STOP.



■ To pause playback

Press **PAUSE/STEP** during playback.

To resume normal playback, press the PLAY button.

■ Selecting a track (file) in the disc

1. If a track list is not displayed, press the MENU button to show it.
   The current track being played is highlighted in red.
2. Press the ▲ / ▼ / ◄ / ► buttons to select a track you want to play.
   The selected track is highlighted in green.
3. Press the ENTER button to begin playback of the selected track.

Notes

- Some discs may not permit this operation.
- If you stop playback by pressing the STOP button, and then press the PLAY button, playback will start from the beginning of the track.
- The SKIP 31, REPEAT 35 and RANDOM 37 functions are also available.

This DVD player requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 files). Given the fact that technology in this area is still maturing, Toshiba cannot guarantee that all genre of recordable discs will produce optimal playback quality. The technical criteria set out in this owner’s manual are meant as a guide only.

Customers should also note that permission is required in order to download MP3 files and music from the internet. Toshiba has no right to grant such permission. Permission should always be sought from the copyright owner.

Advanced playback

Customizing the performance of your DVD player.

- Accessing a Specific Location Directly
- Playing Repeatedly
- Playing in a Favorite Order
- Playing in Random Order
- Zooming a Picture
- Selecting the Sound Enhancement (E.A.M.)
- Selecting the Camera Angle
- Selecting Subtitles
- Selecting a Language

Accessing a Specific Location Directly

You can access a specific location by entering its corresponding elapsed time (hours, minutes, seconds).

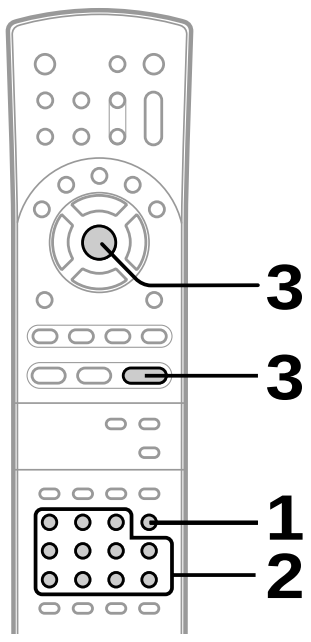

DVD-V VCD CD Entering the elapsed time of the desired location

1 Press T several times.

SEARCH
Ⓣ

You may have to press further depending on the disc. Press the button repeatedly until the clock icon is highlighted.

e.g.



T 1 C 1 -:--:--

2 Press the number buttons to enter the elapsed time.

e.g.

① → ② → ⑤ → ③ → ⓪



T 1 C 1 1:25:30

3 Press PLAY or ENTER.

PLAY ▶

ENTER

Playback starts from the desired location.

Notes

- Some discs may not respond to this process.
- Some scenes may not be located precisely as you specified.
- This method for accessing specific locations is available only within the current title of the DVD video disc or within the current track of the VIDEO CD/audio CD.

Playing Repeatedly

You can play a specific title, chapter, track, or segment repeatedly.

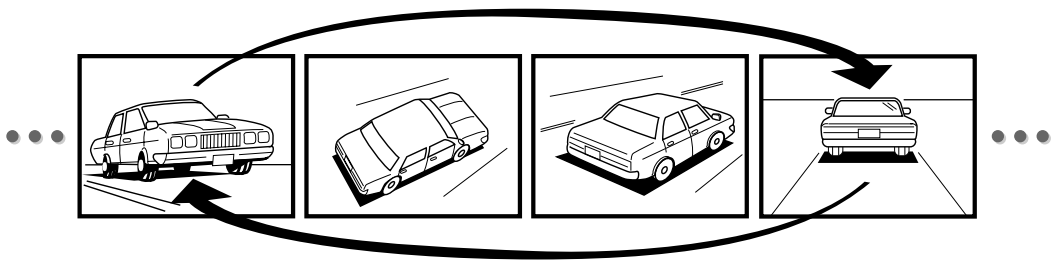

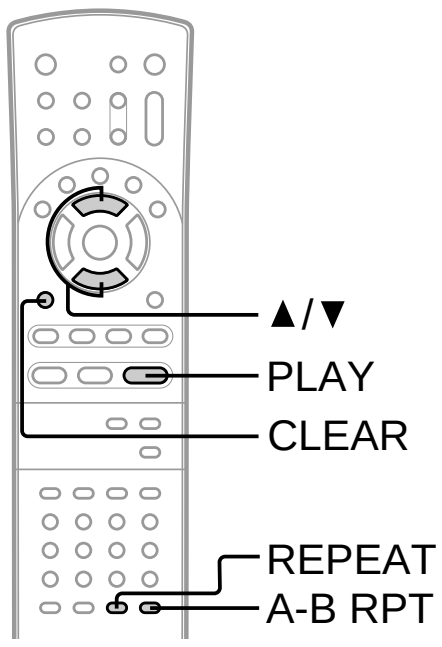

DVD-V VCD CD

Repeating a title, chapter, or track

1 **Press REPEAT.**

REPEAT

The repeat mode menu appears.

2 **Press REPEAT or ▲ / ▼ repeatedly to select the repeat playback mode.**

REPEAT

The mode changes as follows (when using the REPEAT button):

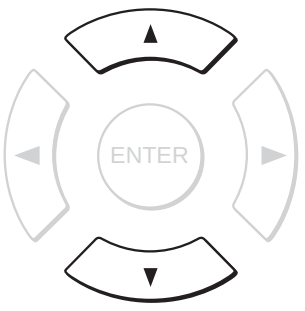

DVD-V Chapter Repeat
↓
DVD-V Title Repeat
VCD CD Track Repeat
↓
DVD-V VCD CD All Repeat
↓
Repeat off

Chapter Repeat:	Repeats the current chapter.
Track Repeat:	Repeats the current track.
Title Repeat	Repeats the current title.
All Repeat:	Repeats the entire disc.
Repeat Off:	Resumes normal playback.

If you select the repeat mode during playback, the DVD player automatically starts repeat playback after finishing the current title, chapter, or track.

3 **Press PLAY.**

PLAY

The DVD player starts repeat playback.
Press the PLAY button within about 5 seconds after you press the REPEAT button.

■ To resume normal playback

Press **CLEAR**.

CLEAR

Note

Some discs may not permit repeat operation.

DVD-V VCD CD

Repeating a specific segment

1 **Press A-B RPT at the beginning of the segment (point A) you want to play repeatedly.**

A-B RPT

A–

2 **Press A-B RPT again at the end of the segment (point B).**

A-B RPT

The DVD player automatically returns to point A and starts repeat playback of the selected segment (A-B).

A–B Repeat

■ To resume normal playback

Press **CLEAR**.

CLEAR

Notes

- Some discs may not permit A-B repeat operation.
- You cannot set the A-B repeat function for a segment that includes multiple camera angles 40.
- You can specify a segment only within the current title.
- There may be a slight difference between point A and the location where playback actually resumes depending on the disc.

Playing in a Favorite Order

You can combine your favorite titles, chapters, or tracks and play them in the order you determine. You can program up to 30 selections into the memory. (Memory playback)

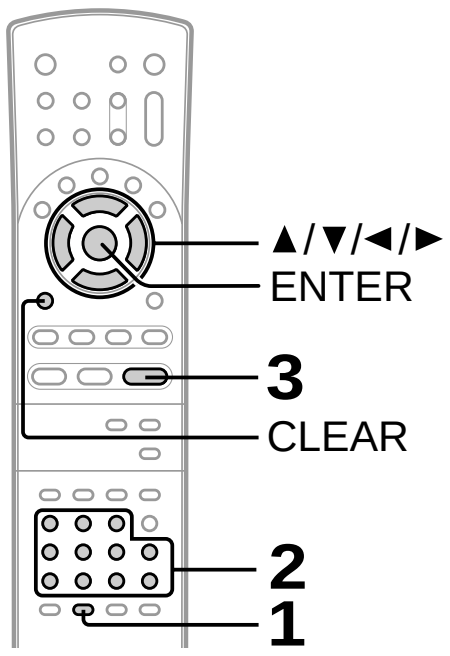

DVD-V VCD CD Setting titles, chapters, or tracks in a favorite order

1 Insert a disc and press MEMORY during stop.

MEMORY

The following display appears.

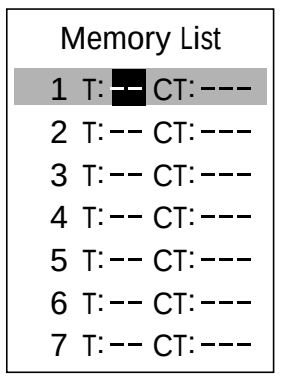

Memory List
1 T: -- CT: ---
2 T: -- CT: ---
3 T: -- CT: ---
4 T: -- CT: ---
5 T: -- CT: ---
6 T: -- CT: ---
7 T: -- CT: ---

T: Title number
CT: Chapter number or track number

2 Select the items in the order you want by pressing the number buttons, then ENTER for each item.

Each time you press the ◄ / ► buttons, the spaces of “T” and “CT” are highlighted in turn. Highlight where you want to enter, then press the corresponding number buttons.

To select another chapter in the same title, you do not need to select the title number.

To select tracks from a VIDEO CD/audio CD in order, press the **number buttons** for the track, then press the **ENTER** button for each selection you want.

3 Press PLAY while the display appears on the TV screen.

PLAY

The DVD player starts memory playback.

■ To change the programmed selections

1. While the display appears on the TV screen, press the ▲ / ▼ / ◄ / ► buttons to highlight the item you want to change.
2. Change the selection following the instructions in step **2**.

■ To cancel the programmed selections

1. While the display appears on the TV screen, press the ▲ / ▼ buttons to highlight the item you want to cancel.
2. Press **CLEAR**.

■ To resume normal playback from memory playback

Press **CLEAR**.

CLEAR

The memory playback indicator disappears.

Notes

- Some discs may not permit memory playback operation.
- If you press the REPEAT button during memory playback, the DVD player repeats the current memory playback.
- If you press the MEMORY or RETURN button while the display appears on the TV screen, the display disappears.
- The programmed selections will be cleared when:
  – you turn off the DVD player.
  – you open the disc tray.

Playing in Random Order

You can play titles, chapters, or tracks in random order.
(Random playback)

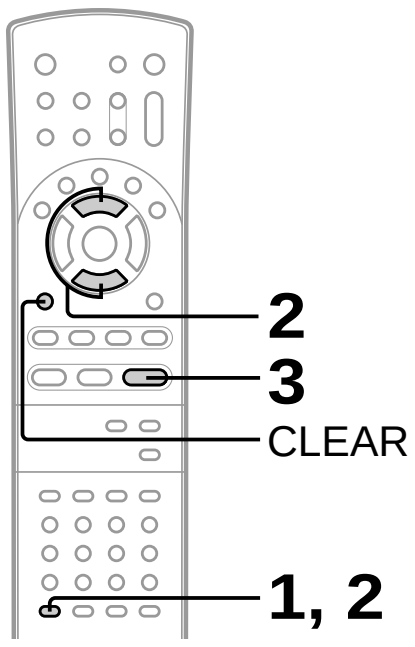

DVD-V VCD CD Playing titles, chapters, or tracks in random order

1 Press RANDOM.

The random mode menu appears.

2 Press RANDOM or ▲ / ▼ repeatedly to select the random playback mode.

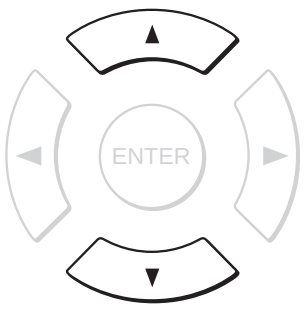

The mode changes as follows (when using the RANDOM button):

DVD-V	Chapter Random	Plays the chapters within the current title in random order.
DVD-V	Title Random	Plays titles in random order.
VCD	Track Random	Plays tracks in random order.
CD	Track Random	Plays tracks in random order.
	Random Off	Resumes normal playback.

If you select the random mode during playback, the DVD player automatically starts random playback after finishing the current title, chapter, or track.

3 Press PLAY.

The DVD player starts random playback.
Press the PLAY button within about 5 seconds after you press the RANDOM button.

■ To resume normal playback

Press **CLEAR**.

Notes

- Some discs may not permit random playback operation.
- You cannot use the random playback function in conjunction with the memory playback function.

Zooming a Picture

You can magnify areas within a picture.



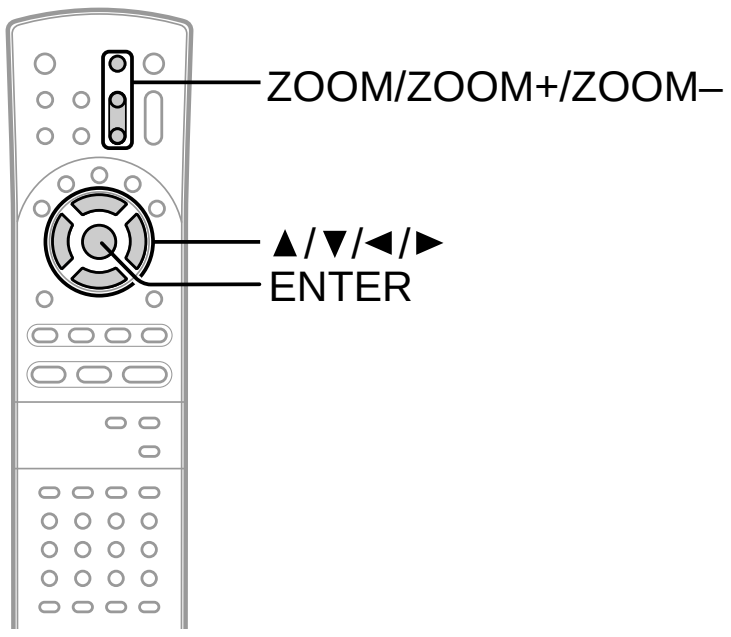

DVD-V VCD CD

Zooming a picture

1 During normal, slow or still playback, press ZOOM, ZOOM+ or ZOOM–.



The DVD player enters the zoom playback mode, and a monitor scope and an icon appear.

e.g.

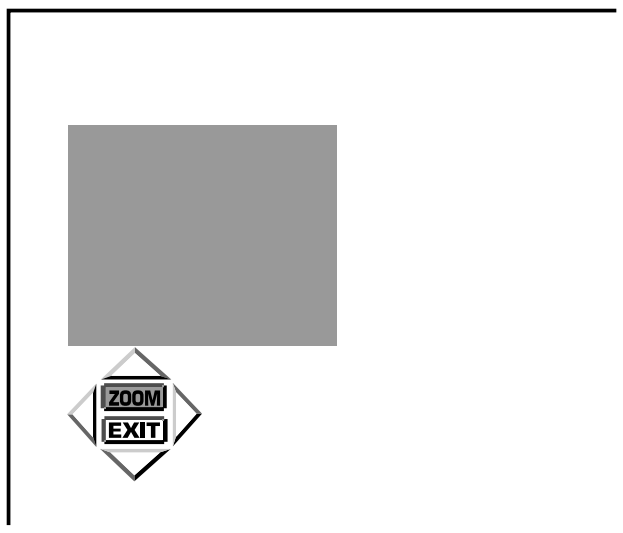

2 Select the zoom point and magnification level.

Magnification level

- To use the fixed levels:
  You can select from the following.
  – Magnification
  – Image reduction
  – Normal playback

Press the **ZOOM** button repeatedly.

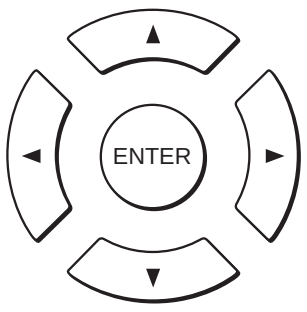

Alternatively press the ▲ / ▼ / ◄ / ► buttons to select “ZOOM” on the icon, and press the **ENTER** button repeatedly.

- To zoom in (or to zoom out):



Press repeatedly or press and hold the **ZOOM+** (or **ZOOM–**) button.

Zoom point

To shift:

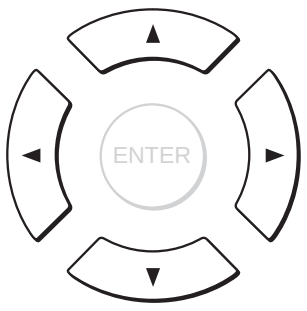

Press the ▲ / ▼ / ◄ / ► buttons.

■ To hide the monitor scope and the icon during zoom playback

Press ▲ / ▼ / ◄ / ► to select “EXIT,” and press **ENTER**.

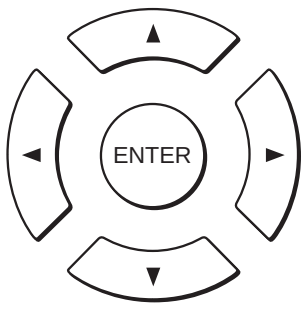

■ To resume normal playback

Press **ZOOM** repeatedly until the monitor scope and the icon disappear.

Alternatively press ▲ / ▼ / ◄ / ► to select “ZOOM” on the icon, and press **ENTER** repeatedly until the monitor scope and the icon disappear.

Notes

- Some discs may not respond to zoom feature.
- During some scenes, the buttons may not work as described.
- Zooming does not work on subtitles or menus included on DVD video discs.
- While the icon is displayed, the ▲ / ▼ / ◄ / ►/ENTER buttons cannot work on menus included on DVD video discs. If you want to view the menus, cancel the zoom playback.
- The magnification level varies depending on the picture size you select. 58

Selecting the Sound Enhancement (E.A.M.*)

You can easily switch a preferred audio enhancement.

*E.A.M.: Enhanced Audio Mode

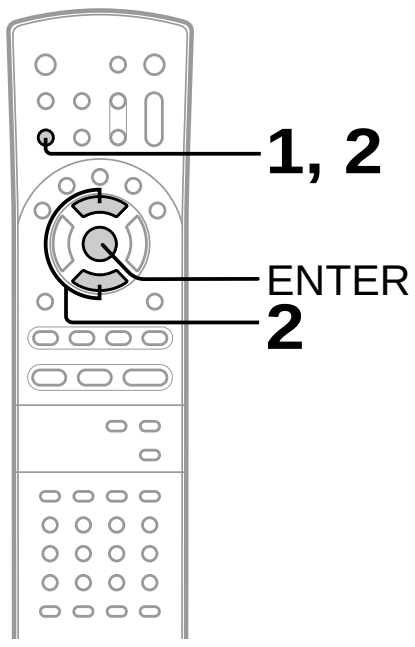

DVD-V VCD CD Selecting the sound enhancement

1 **Press E.A.M.**

E.A.M.

The sound enhancement menu appears.

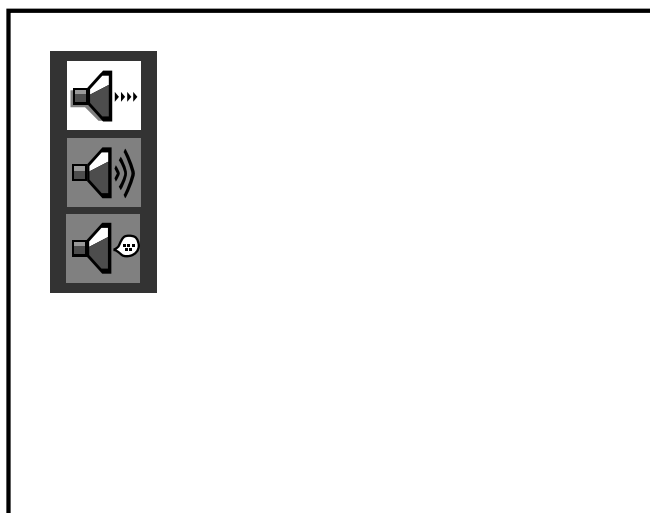

2 **Press E.A.M or ▲ / ▼ repeatedly to select the sound enhancement.**

E.A.M.

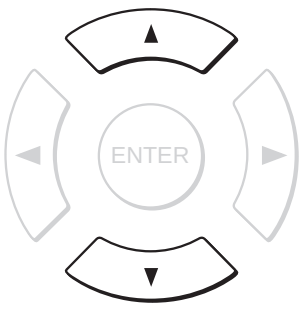

Normal:

Normal sound.

3D:

To obtain expansive virtual surround sound effects from just two speakers.

Dialogue:

To control critical center channel information to make dialogue more intelligible (only when playing a DVD video disc recorded on the Dolby Digital recording system).

- To use this enhancement on sounds output from the BITSTREAM/PCM (DIGITAL) AUDIO OUT jack, be sure to set “Digital Output” to “PCM”. 59

■ To exit the audio enhancement selection

Press **ENTER**.

ENTER

Alternatively leave the DVD player unattended for about 5 seconds after having made a selection.

Notes

- Actual effects to sounds may vary depending on the speaker systems. Make selection according to your preference.
- Actual effects to sounds may vary depending on the disc.
- When the DVD player is connected to an amplifier equipped with Dolby Surround Pro Logic, select “Normal”. Otherwise, Dolby Surround Pro Logic may function differently than usual.
- Selecting “Dialogue” disables “Dynamic Range Control” function 59.

Spatializer® 3-Dimensional Sound Processing provided by Desper Products. Inc.
Certain audio features of this product manufactured under a license from Desper Products, Inc., Spatializer® and the circle-in-square device are trademarks owned by Desper Products, Inc.

Selecting the Camera Angle

If the scene was recorded from multiple angles, you can easily change the camera angle of the scene you are watching.



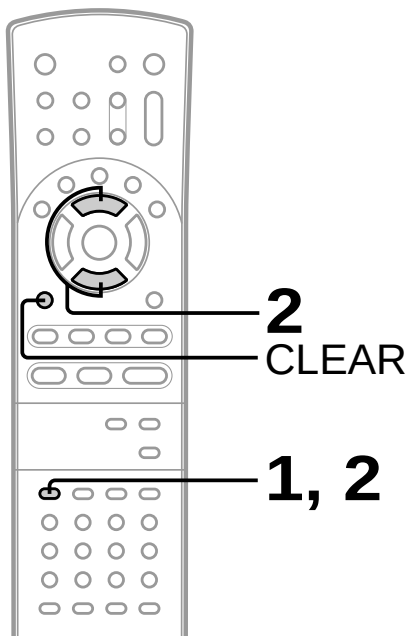

DVD-V VCD CD

Changing the camera angle

1 Press ANGLE while playing a scene recorded with multiple angles.

ANGLE

While playing a scene recorded with multiple angles, the angle icon (🎥) flashes in the DVD display.
Press the ANGLE button while the angle icon is flashing.

e.g.

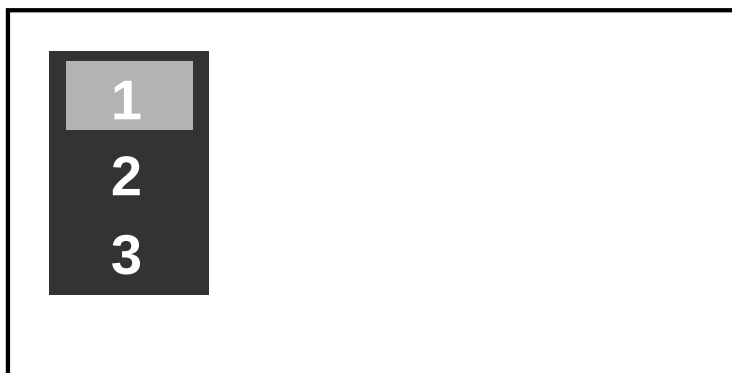

2 Press ANGLE or ▲ / ▼ while the angle number is displayed on the TV screen.

ANGLE

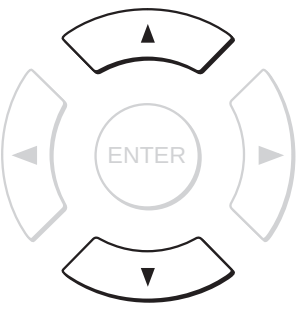

Each time you press the ANGLE button or the ▲ / ▼ buttons, the camera angle changes.

You can change the camera angle directly by pressing the number buttons corresponding to its angle number instead of using the ▲ / ▼ buttons.

■ **To turn off the angle number display**

Press **CLEAR**.

CLEAR

⊖

Notes

- You can change the camera angle during still playback. The camera angle changes to the new setting when you resume normal playback.
- If you pause a picture immediately after changing a camera angle, the resumed playback picture may not display the new camera angle.

Selecting Subtitles

You can display subtitles on the TV screen and select a subtitle language from those included on the DVD video disc.


Good evening!
Bonsoir!
¡Buenas tardes!
• • •

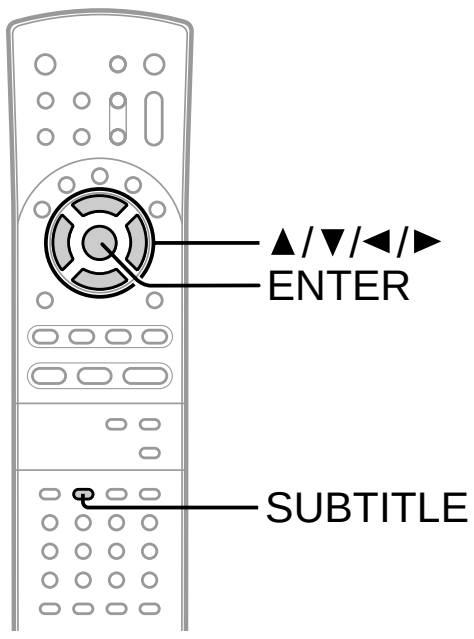

DVD-V VCD CD Selecting a subtitle language

1 **Press SUBTITLE during playback.**

SUBTITLE

The current subtitle setting is displayed.

e.g.



Off
ENG1
FRE1
SPA1

The abbreviation of the language appears instead of the language name. Refer to the list of languages and their abbreviations. 65

2 **Press SUBTITLE or ▲ / ▼ while the subtitle setting is displayed on the TV screen.**

SUBTITLE

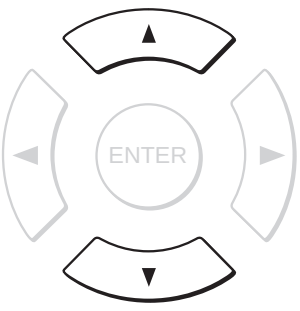

Each time you press the SUBTITLE button or the ▲ / ▼ buttons, the subtitle languages included on the DVD video disc change.

To turn off the subtitle setting display, press the ENTER button.

■ To turn subtitles on or off

1 Press **SUBTITLE** during playback.

SUBTITLE

2 Press ◄ / ► while the subtitle setting is displayed on the TV screen, to select “On” or “Off.”

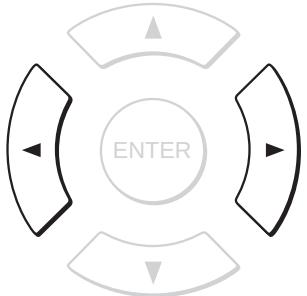

Notes

- Some DVD video discs are set to display subtitles automatically, and you cannot turn them off even if you set the subtitle function to off.
- During some scenes, the subtitles may not appear immediately after you select “On.”
- Some DVD video discs will allow you to make subtitle selections and turn subtitles on or off only via the disc menu.

Notes

- When you turn on the DVD player or replace a disc, the player returns to the initial default setting 61.
  When you select a subtitle language which is not included on the disc, the DVD player plays a prior language programmed on the disc.
- During some scenes, the subtitles may not appear immediately after you change the subtitle language.

Selecting a Language

You can select a preferred language and sound recording system from those included on the disc.


Good morning!
Bonjour!
¡Buenos días!

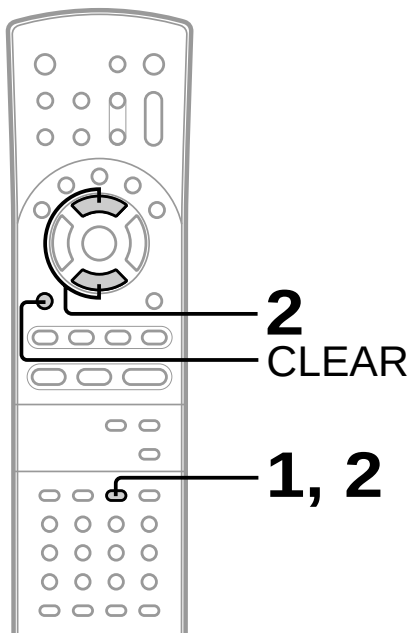

DVD-V VCD CD Selecting a playback audio setting

1 **Press AUDIO during playback.**

AUDIO

The current audio setting is displayed.

e.g.

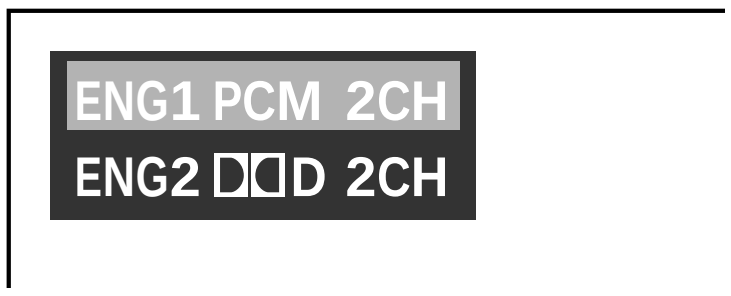

ENG1 PCM 2CH
ENG2 DDD 2CH

The abbreviation of the language appears instead of the language name. Refer to the list of languages and their abbreviations. 65

2 **Press AUDIO or ▲ / ▼ while the audio setting is displayed on the TV screen.**

AUDIO

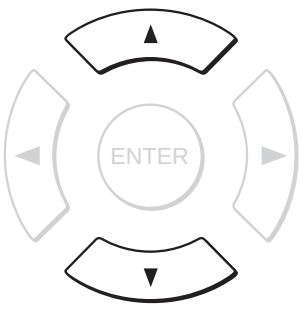

Each time you press the AUDIO button or the ▲ / ▼ buttons, the audio settings included on the disc change.

To turn off the audio setting display, press the CLEAR button.

■ Selecting sound channels of VIDEO CDs

You can switch left and right channels by pressing the **AUDIO** button repeatedly during playback.

AUDIO

Notes

- When you turn on the DVD player or replace a disc, player returns to the initial default setting 61.
  If you select a sound track which is not included on the disc, the DVD player plays a prior sound track programmed on the disc.
- Some discs allow you to change audio selections only via the disc menu. If this is the case, press the MENU button and choose the appropriate language from the selections on the disc menu.

■ Output sound conversion table

Input	Output	BITSTREAM/PCM jack		ANALOG AUDIO OUT Jacks
		“Digital Output” 56 59		
		“Bitstream”	“PCM”	
DVD video disc	Dolby Digital	Bitstream	PCM ▨	○ ▨
	Linear PCM	PCM ▨	PCM ▨	○ ▨
	DTS	Bitstream	Bitstream	—
	MPEG1, MPEG2	Bitstream	PCM ▨	○ ▨
VIDEO CD	MPEG1	PCM ▨	PCM ▨	○ ▨
Audio CD	Linear PCM 44.1 kHz/16 bit	PCM	PCM	○ ▨
	DTS	Bitstream	Bitstream	Noise
	MP3	PCM	PCM	○

▨ : 3D sound enhancement can function.

- Signals of 96kHz from the BITSTREAM/PCM jack are depressed to 48 kHz by down sampling process when:
  – “3D” is selected. 39
  – “PCM Down Sampling” is set to “On.” 59
  – a copyright protected disc is played.
- Quantization bit of signals of 20 bit or higher which is output from the BITSTREAM/PCM jack is 16 bit if they are in a copyright protected disc.

Quick control

Simple use of a single button and the cursor control enables you to direct your playback, without manipulating many actual buttons.

- **Using the Virtual Remote Control - V-REMOTE -**
- **Selecting the Playback Function - QUICK -**
- **Accessing Features - NAVI -**

Using the Virtual Remote Control
- V-REMOTE -

Pressing one button can display a graphics based on-screen remote control that allows you to control playback as if you were doing it from the actual remote control.

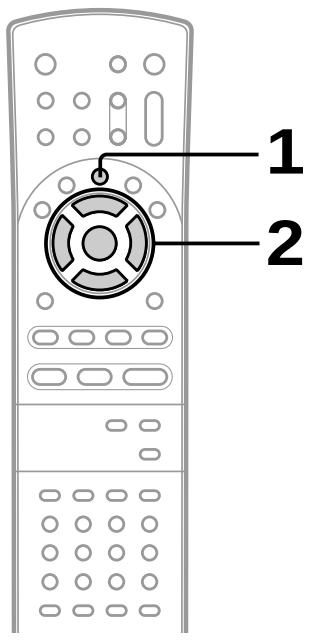

DVD-V VCD CD Using the virtual remote control

1 **During playback, press V-REMOTE.**



The graphic remote control (Virtual Remote) appears.
For the meaning of each icon, see right.

e.g. DVD-V

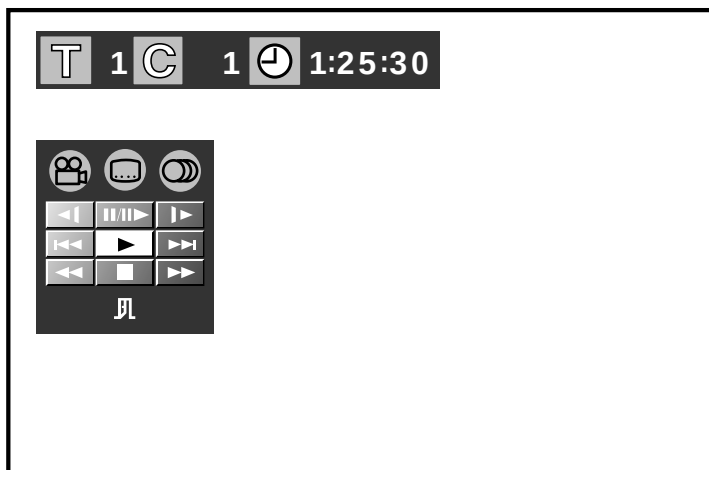

2 **Press ▲ / ▼ / ◄ / ► to select the icon, and press ENTER.**

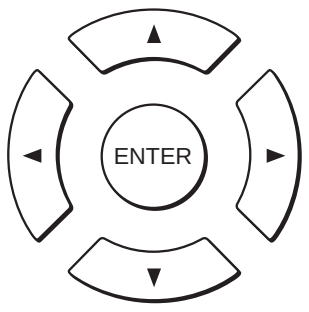

■ To turn off the Virtual Remote

Press **V-REMOTE**.



Note
Some discs may not permit this operation.

■ Icons and features

See the pages in ▭ for details on the features.

Icon	Function	Page
T*	Current title/track number	–
C*	Current chapter number	–
🕘*	Elapsed time of the current title/track	–
◎**	Audio setting	42
▭**	Subtitle setting	41
🎥**	Angle setting	40
◄❙	Reverse slow motion playback	29
❙❙/❙❙►	Pause / Frame by frame playback	28
❙►	To begin slow motion playback	29
❙◄◄	Playback starts from the beginning of the current chapter or track.	31
►	Normal playback	26
►►❙	To locate succeeding chapters or tracks.	31
◄◄	Fast reverse playback	28
■	To stop playback.	27
►►	Fast forward playback	28
⏎	To turn off the Virtual Remote.	

* You can access a desired location. After step 2, perform the steps below:

T / C : steps 3 to 5 on 31
🕘 : steps 2 and 3 on 34

** After step 2, a sub menu will appear. Perform step 2 on the page in ▭.

Selecting the Playback Function - QUICK -

Pressing one button can display a list of playback functions which are relevant to your current playback mode. You can check and modify them from the list.

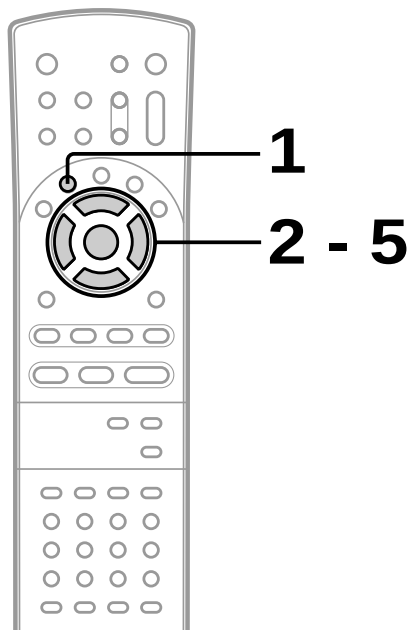

DVD-V VCD CD Selecting the playback function

1 During playback, press QUICK.

The following on-screen display appears.
(The actual display will vary depending on the playback status.)

e.g. DVD-V

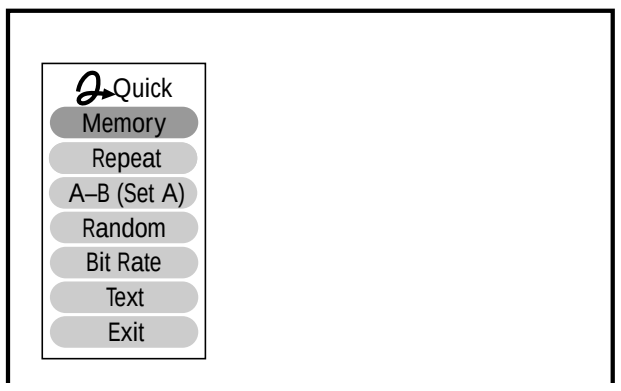
Quick
Memory
Repeat
A–B (Set A)
Random
Bit Rate
Text
Exit

2 Press ▲ / ▼ to select a desired item.

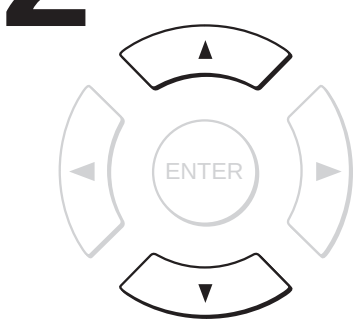

e.g. To change the repeat mode:

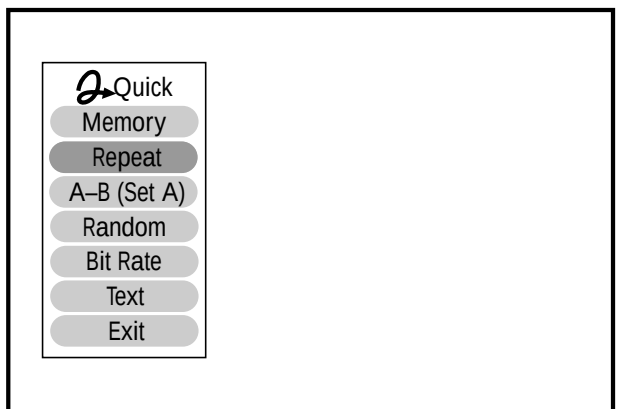
Quick
Memory
Repeat
A–B (Set A)
Random
Bit Rate
Text
Exit

3 Press ENTER.

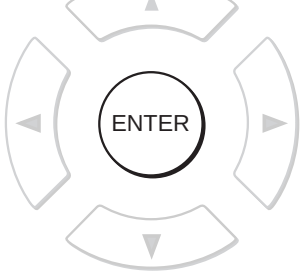

e.g. The mode menu appears.

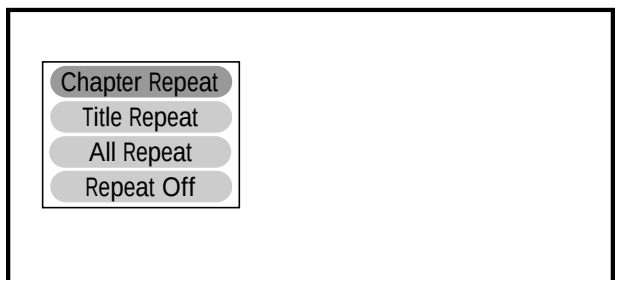
Chapter Repeat
Title Repeat
All Repeat
Repeat Off

4 Press ▲ / ▼ to change the setting.

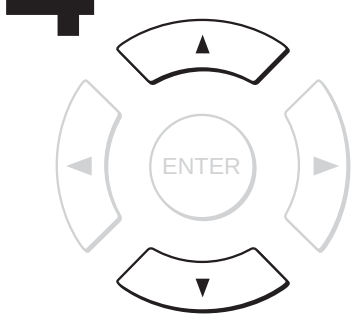

e.g. To select the title repeat mode:

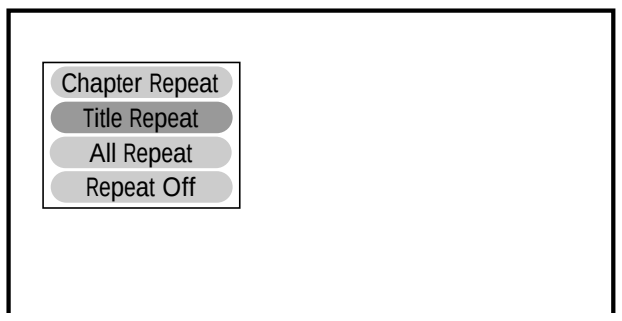
Chapter Repeat
Title Repeat
All Repeat
Repeat Off

5 Press ENTER.

The on-screen display disappears and playback will resume according to your selection.

■ Quick menu

Memory : To program memory playback. 36

Repeat : To select the repeat playback mode. For the mode selections, see page 35.

A-B (Set A) : At the beginning of a segment you want to repeat, press the ENTER button. Then at the end of the segment, press the ENTER button again. The segment is played repeatedly. 35

Random : To select the random playback mode. For the mode selections, see page 37.

Bit Rate : To activate the bitrate display. (Bit rate: data transfer rate (Mbit/s) Refers to the amount of picture, sound and subtitle data in the DVD video disc transferred per second. The larger the value, the more data processed, but this does not necessarily insure better picture quality.)

Text : To activate the Text display. Text display: Displays DVD-Text data or CD-Text data if included on the disc. (Some content on the disc may not be displayed properly depending on the disc.)

Exit : To quit the on-screen display.

Note
Pressing the QUICK button again also exits the on-screen display.

Accessing Features - NAVI -

The NAVI menu provides an icon based display from which you can easily access key playback function or setting.

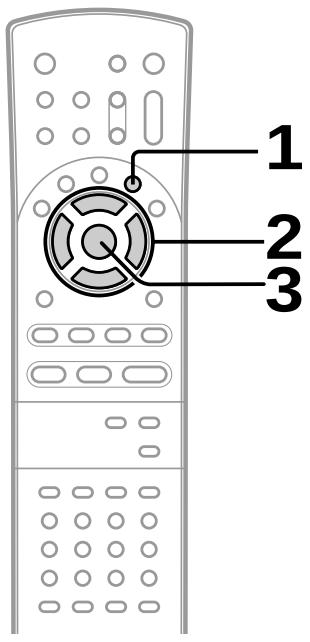

DVD-V VCD CD NAVI menu items

1 **Press NAVI.**

The NAVI menu appears.

e.g. DVD-V

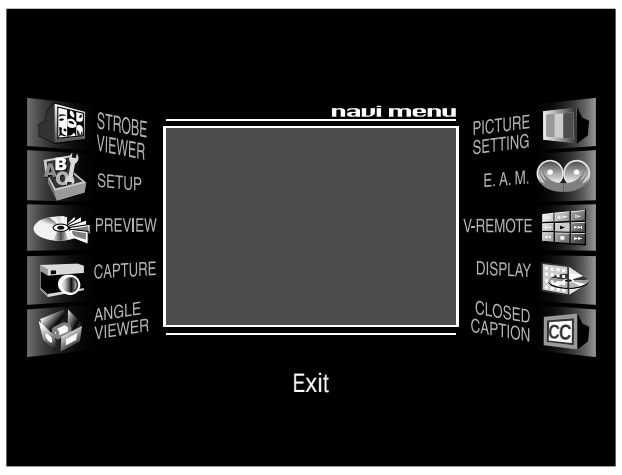
navi menu
STROBE VIEWER
SETUP
PREVIEW
CAPTURE
ANGLE VIEWER
PICTURE SETTING
E. A. M.
V-REMOTE
DISPLAY
CLOSED CAPTION
Exit

2 **Press ▲ / ▼ / ◄ / ► to select a desired feature icon.**

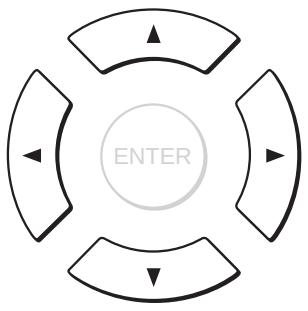

For details on each feature, refer to the list on the next page.

3 **Press ENTER.**

Selection details appears.

4 **Refer to the list on the next page and follow the instructions detailed on subsequent pages.**

■ To exit the NAVI menu

Press **NAVI**.

Alternatively press ◄ / ► to remove the highlight from an icon to the center position, and press **ENTER**.

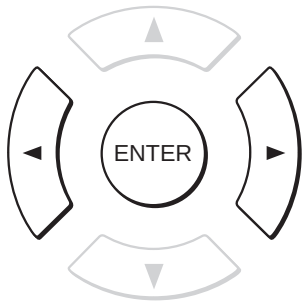

Note

Depending on the disc, some features cannot be accessed.

Navi menu selections

STROBE VIEWER	You can divide a desired scene into stop action frames for careful analysis.	50
SETUP	You can change the default settings to customize performance to your preference.	56
PREVIEW	You can display thumbnail views of the first scenes of titles or chapters and select a preferred one.	50
CAPTURE	You can sample a scene from a playback picture and transform it into a background picture.	51
ANGLE VIEWER	You can display all camera angles simultaneously and select a preferred one from them.	51
PICTURE SETTING	You can fine tune picture quality and store up to 3 custom picture settings in the memory of the DVD player.	52
E.A.M.	You can easily switch a preferred audio enhancement.	39
V-REMOTE	You can control key playback functions using the graphics based on-screen remote control.	46
DISPLAY	You can view information about a disc and its operational status on the TV screen.	53
CLOSED CAPTION	You can display closed captions included on a DVD disc without connecting a closed caption decoder to your TV.	53

Accessing Features - NAVI - (continued)

NAVI menu items

STROBE VIEWER

You can divide a desired scene into stop action frames for careful analysis.

After selecting this icon and pressing ENTER, the following on-screen display appears:

e.g.

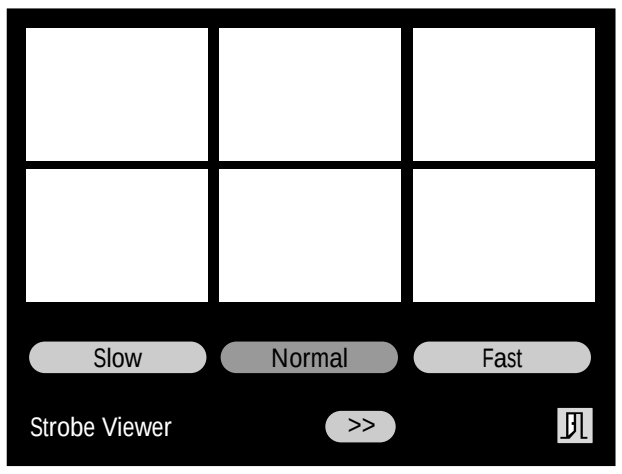

1 Press ▲ / ▼ / ◄ / ► to select.

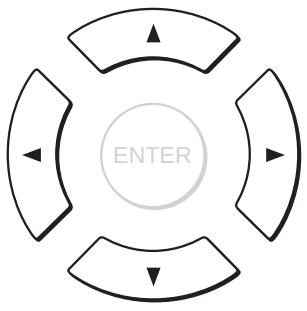

Slow:	Still pictures at shorter intervals.
Normal:	Still pictures at normal intervals.
Fast:	Still pictures at longer intervals.
>>:	To view the next series of 6 pictures.
↩ :	To quit the on-screen display.

2 Press **ENTER**.

Note
Some discs or scenes may not permit this operation.

PREVIEW

You can display thumbnail views of the first scenes of titles or chapters and select a preferred one.

After selecting this icon and pressing ENTER, the following on-screen display appears:

e.g.

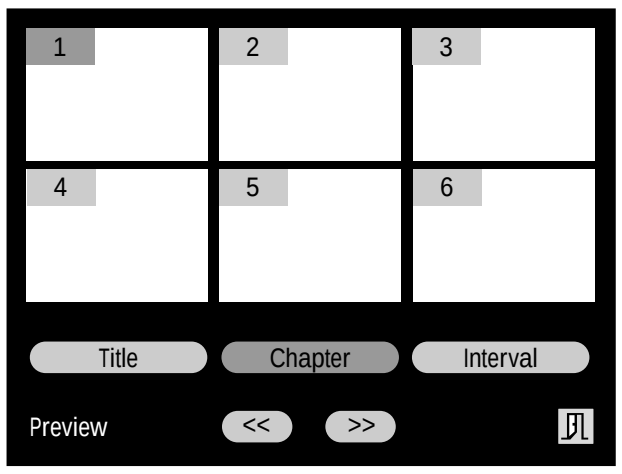

1 Press ▲ / ▼ / ◄ / ► to select.

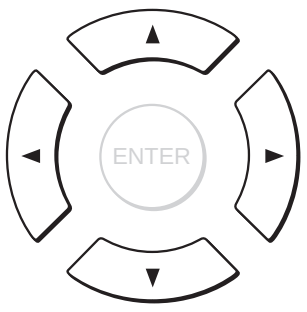

1 - 6:	To locate the scene.
Title:	To display the first scenes of titles (1 to 6).
Chapter:	To display the first scenes of chapters (1 to 6).
Interval:	To display scenes at intervals of about 10 minutes apart.
<< :	To go to the previous page.
>> :	To go to the next page.
↩ :	To quit the on-screen display.

2 Press **ENTER**.

Notes
- Some discs or scenes may not permit this operation.
- Some items may not be selected depending on the disc or scene.
- Some of the first scenes may not picked up depending on the disc.

CAPTURE

You can sample a scene from a playback picture and transform it into a background picture.

After selecting this icon and pressing ENTER, the following on-screen display appears:

e.g.

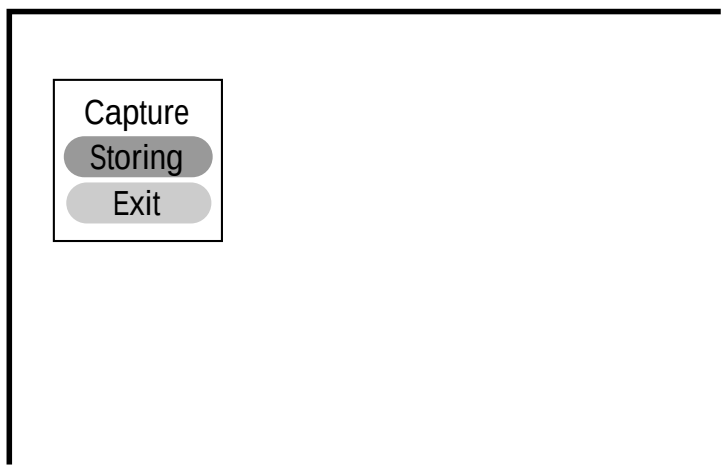

1 Pause playback at a scene you want to capture.

2 Press ▲ / ▼ to select.

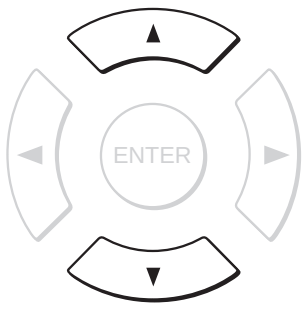

Storing: To sample and store the current picture in the player memory.
Exit: To quit the on-screen display.

3 Press **ENTER**.

The stored picture will be displayed as a background picture when the player is in the stop mode. It is necessary to confirm this process via the setup menu 62.

Notes

- You can store only one picture. Storing a new picture will erase the old one.
- No other operations are permitted while in the process of sampling and storage of background picture.
- Some discs or scenes may not permit this operation.

ANGLE VIEWER

You can display all camera angles simultaneously and select a preferred one from them.

After selecting this icon and pressing ENTER, the following on-screen display appears:

e.g.

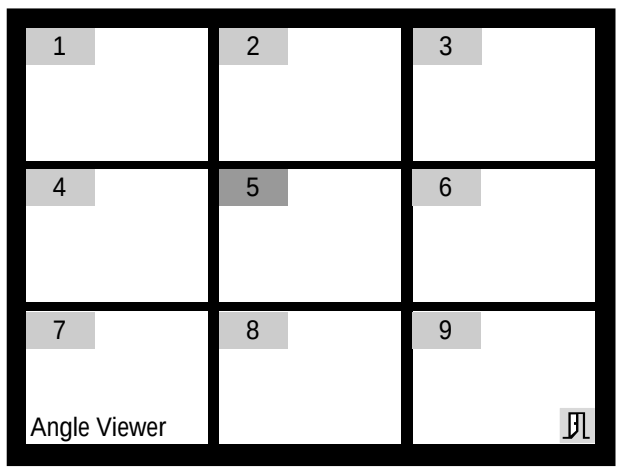

When the scene contains 9 camera angles:

1 Press ▲ / ▼ / ◄ / ► to select.

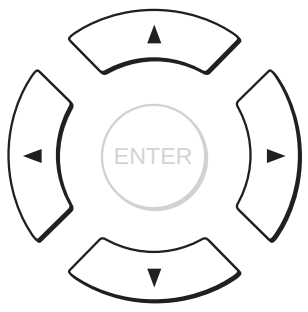

1-9 : To select the camera angle.
⎆ : To quit the on-screen display.

2 Press **ENTER**.

Note

Some discs or scenes may not permit this operation.

Accessing Features - NAVI - (continued)

NAVI menu items

PICTURE SETTING

You can fine tune picture quality and store up to 3 custom picture settings in the memory of the DVD player.

After selecting this icon and pressing ENTER, the following on-screen display appears:

e.g.

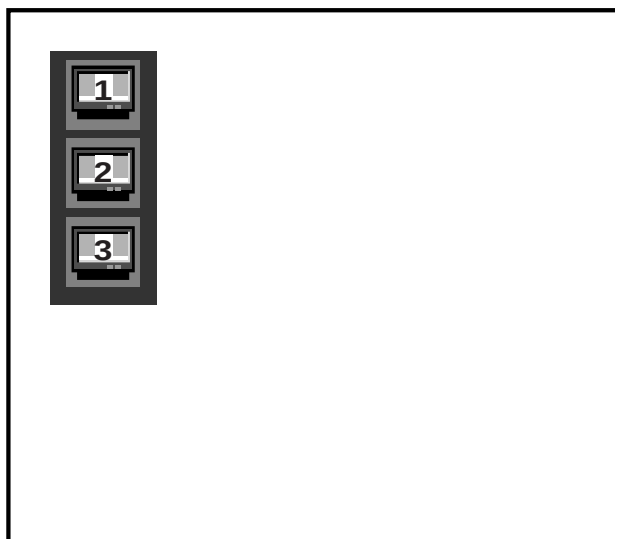

1 Press ▲ / ▼ to select, and press **ENTER**.

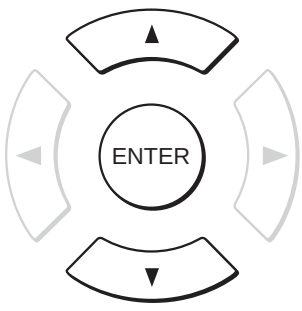

1, 2, 3: Select the desired custom memory number. (Follow steps 2 to 4 below.)

2 Press ▲ / ▼ to select the element.

e.g. When you select “Color”:

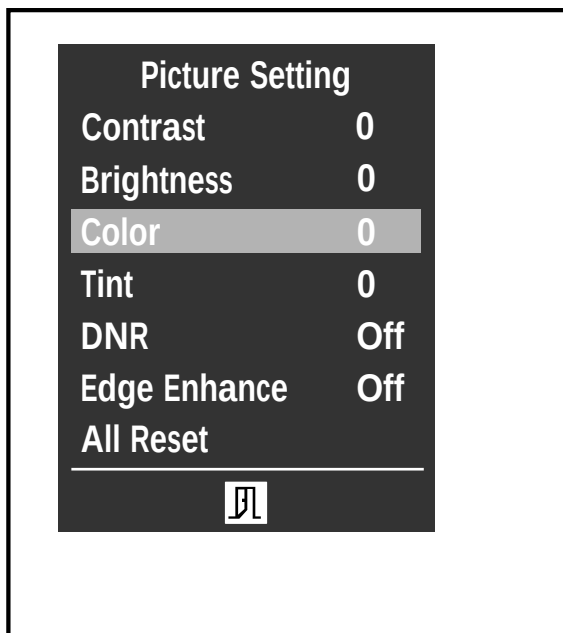

Picture Setting	
Contrast	0
Brightness	0
Color	0
Tint	0
DNR	Off
Edge Enhance	Off
All Reset	

3 Press **ENTER**.
The sub menu appears.

4 Press ◄ / ► to adjust the value, and press **ENTER**.

e.g.



Color ◄ +2 ►

Contrast :	-7 (Lower)	to	+7 (Higher)
Brightness :	-7 (Darker)	to	+7 (Brighter)
Color:	-7 (Duller)	to	+7 (Brighter)
Tint :	-7 (Redder)	to	+7 (Greener)
DNR*1 :	On / Off		
Edge Enhance*2 :	On / Off		
All Reset :	To restore all the elements to the normal setting. A message will appear. Follow the procedure displayed on-screen.		

*1: DNR: Digital Noise Reduction.
To view a picture with less video noise.

Notes

- Actual picture enhancement may vary depending on the quality of the disc.
- While the DNR feature can provide additional improvement in the reduction of noise in the video signal, it may produce undesirable picture artifacts on some discs.
- Depending on the disc, some kinds of picture details may be lost by the picture enhancement.

*2: To enhance picture edges.

Note

The Tint adjustment is not available when connecting to a TV via the component video jacks (Y, P_B, P_R).

■ Using the remote control to adjust the brightness

Press BRIGHTNESS (+/–).
Each time you press the button, the brightness changes.

■ Using the remote control to select the DNR feature

Press DNR.
Each time you press the button, the feature turns on or off.

DISPLAY

You can view information about a disc and its operational status on the TV screen.

After selecting this icon and pressing ENTER, the following on-screen display appears:

e.g.

Title : 1
Chapter : 23
Time : 1:23:45
Audio : ENG 1 DD D 2CH
Subtitle : ENG 1 On
Angle : 1 / 3
E.A.M. : Normal
Zoom : Off
Chapter repeat

To quit the on-screen display, press **ENTER**.

Note
Some discs or scenes may not permit this operation.

CLOSED CAPTION

You can display closed captions included on a DVD disc without connecting a closed caption decoder to your TV.

After selecting this icon and pressing ENTER, the following on-screen display appears:

e.g.

On
Off

1 Press ▲ / ▼ to select.

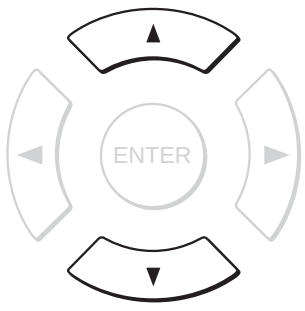

On : To display closed captions.
Off: To disable closed captions.

2 Press **ENTER**.

Notes
- While you are using on-screen displays (including the above one), you cannot view closed captions.
- When “On” is selected, some displays such as “▷” may be disabled.

Function Setup

You can change the default settings to customize performance to your preference.

- **Customizing the Function Settings**
- **Table of Languages**

Customizing the Function Settings

You can change the default settings to customize performance to your preference.

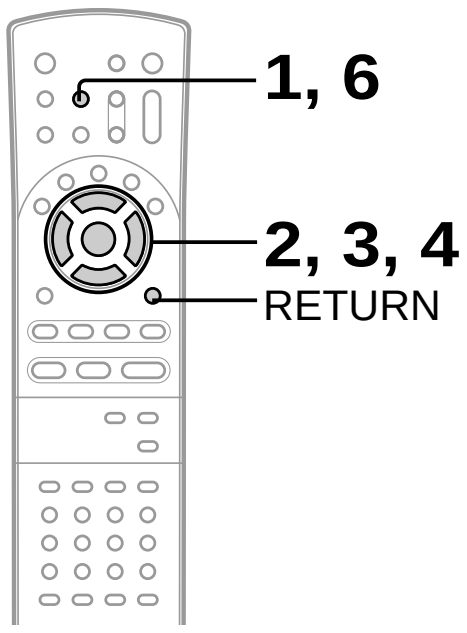

DVD-V VCD CD Setting procedure

1 **Press SETUP during stop.**

SETUP

The following on-screen display appears.

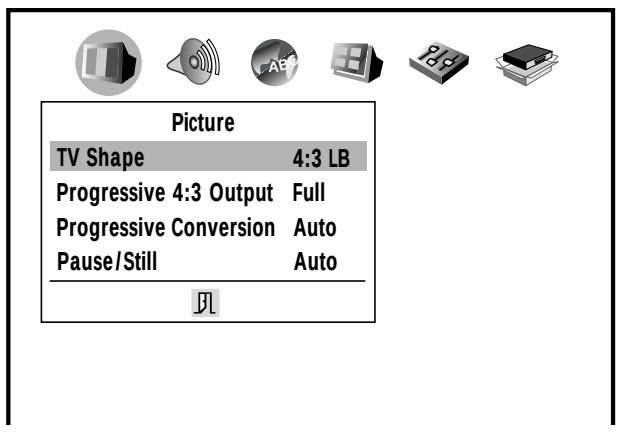

Picture

TV Shape	4:3 LB
Progressive 4:3 Output	Full
Progressive Conversion	Auto
Pause/Still	Auto

2 **Press ◄ / ► to select a symbol for the setting you want to change.**

(See the next page.)

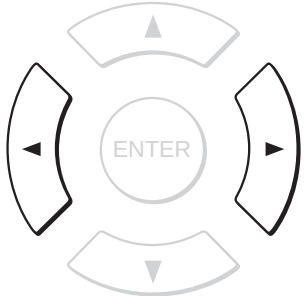

Picture performance settings

Output sound settings

Language settings

Display settings

Operational settings

Initializing

3 **Press ▲ / ▼ to select the setting you want to change, then press ENTER.**

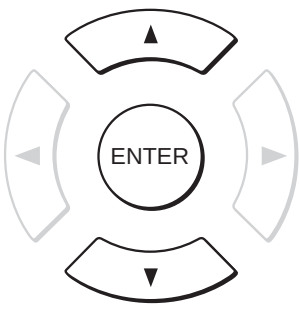

4 **Change the selection by ▲ / ▼ or other buttons, by referring to the corresponding pages 58, then press ENTER.**

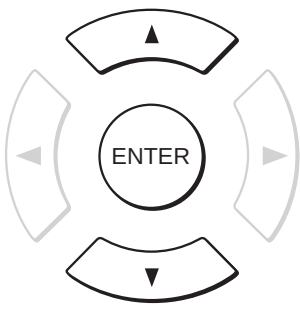

5 **Repeat steps 3 and 4 to change other settings.**

To select another operation, go back to step 2.

6 **Press SETUP.**

SETUP

The on-screen display disappears.

■ To return to the previous display

Press **RETURN**.

RETURN

Notes

- The on-screen display disappears also when you select “⎍” and press the ENTER button.
- The SETUP button can function even during normal playback, however some operations may be inaccessible, and a message will appear. In this case, try again after playback is stopped.

Setting		Details	Page
TV Shape	DVD-V	**To select a picture size according to the aspect ratio of your TV.**	**58**
Progressive 4:3 Output	DVD-V VCD	**To select the video output of pictures recorded in 4:3 format. (Only when connected to a PROGRESSIVE TV.)**	**58**
Progressive Conversion	DVD-V	**To select the system of output signal. (Only when connected to a PROGRESSIVE TV.)**	**58**
Pause/Still	DVD-V	**To select the resolution of still pictures. (Field/Frame)**	**58**
PCM Down Sampling	DVD-V	**To select a sound processing option according to performance of the connected equipment. (Only when the BITSTREAM/PCM (DIGITAL) AUDIO OUT jack is connected.)**	**59**
Digital Output	DVD-V VCD CD	**To select an output sound format corresponding to your system connection.**	**59**
Dynamic Range Control	DVD-V	**To turn on or off a function that makes faint sounds easier to hear even if you lower the volume during late hours playback.**	**59**
Karaoke Vocal	DVD-V	**To turn on or off the vocal output during DVD KARAOKE disc playback.**	**60**
On-Screen Language	DVD-V VCD CD	**To select a preferred language for on-screen displays.**	**60**
Disc Menu Language	DVD-V	**To select a preferred language for disc menus.**	**60**
Audio Language	DVD-V	**To select a preferred language for the sound track.**	**61**
Subtitle Language	DVD-V	**To select a preferred language for subtitles.**	**61**
On-Screen Displays	DVD-V VCD CD	**To turn on or de-activate the operational status display on the TV screen.**	**62**
Background	DVD-V VCD CD	**To select the background color or background picture.**	**62**
Screen Saver	DVD-V	**To turn the screen saver on or off.**	**62**
Parental Lock	DVD-V	**To turn the parental lock function on or off.**	**62**
Remote Confirmation	DVD-V VCD CD	**To turn on or off the confirmation beeper announcing when each remote command received.**	**64**
Title Stop	DVD-V	**To turn on or off a feature that automatically stops playback after a title has been viewed.**	**64**
PBC	VCD	**To use the menu screen when playing a PBC-controllable VIDEO CD.**	**64**
Priority Contents		**To select the playback priority between JPEG (picture) files and MP3 (audio) files.**	**64**
Initialize	DVD-V VCD CD	**To restore all settings to the factory set.**	**64**

Customizing the Function Settings (continued)

Setting details

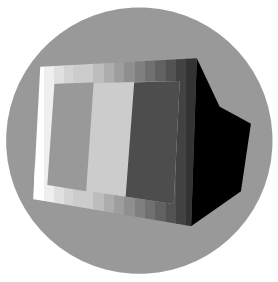

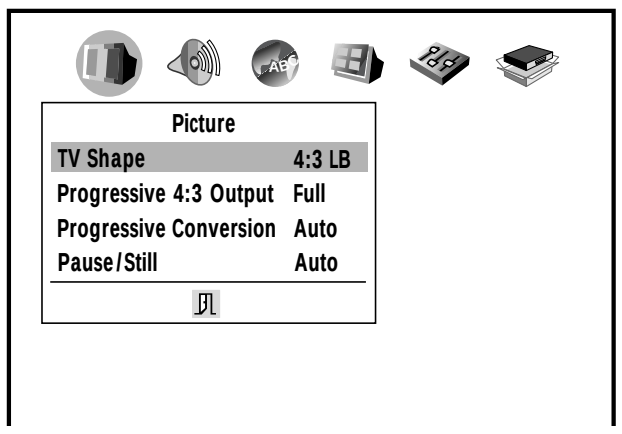

Picture

TV Shape 4:3 LB

Progressive 4:3 Output Full

Progressive Conversion Auto

Pause/Still Auto

TV Shape DVD-V

4:3 Letterbox:

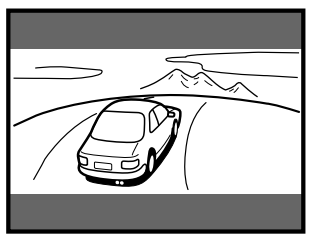

Select when a standard 4:3 TV is connected.
Displays theatrical images with masking bars above and below the picture.

4:3 Normal:

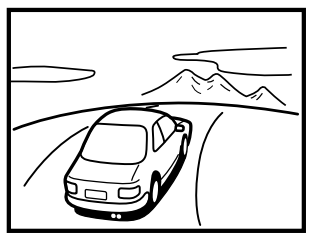

Select when a standard 4:3 TV is connected.
Displays pictures cropped to fill your TV screen. Either or both sides of the picture are cut off.

16:9 Widescreen: Select when a 16:9 wide TV is connected.

Notes

- The displayable picture size is preset on the DVD video disc. Therefore, the playback picture of some DVD video discs may not conform to the picture size you select.
- When you play DVD video discs recorded in the 4:3 picture size only, the playback picture always appears in the 4:3 picture size regardless of the TV shape setting.
- If you select “16:9 Widescreen” and you own a 4:3 TV set, the DVD playback picture will be horizontally distorted during playback. Images will appear to be horizontally compressed. Always be sure that your TV shape conforms to the actual TV in use.

Progressive 4:3 Output DVD-V VCD

Select the video output of pictures recorded in 4:3 format. (Only when connected to a PROGRESSIVE TV.)

Full: Displays pictures expanded horizontally to fill the 16:9 screen.

4:3: Displays images in 4:3 aspect ratio with masking bars to the left and right of the picture. (Select this option when a connected TV cannot select 4:3 picture size. However, subtitles or menus may not work properly.)

Progressive Conversion DVD-V

There are two types of source content in pictures recorded in DVD video discs: film content (pictures recorded from films at 24 frames per second) and video content (video signals recorded at 30 frames per second). Make this selection according to the type of content being viewed.

Auto: Select this position normally.
The DVD player automatically detects source content, film or video, of playback source, and converts that signal to the progressive output format in an appropriate method.

Video: The DVD player filters video signal, and converts it to the progressive output format appropriately.
Suitable for playback of video content pictures.

Film: The DVD player converts film content pictures to the progressive output format appropriately.
Suitable for playback of film content pictures.
The progressive output feature will be most effective under this selection.

Note

Depending on the disc, pictures may be cut off or doubled. In this case, select “Video.”

Pause/Still DVD-V

Auto: For normal use. Still and fast motion images can be paused.

Frame: The resolution of still pictures is improved, so that you can make a motionless picture more clearer when you pause it.

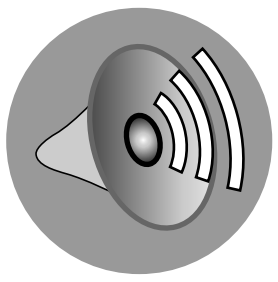

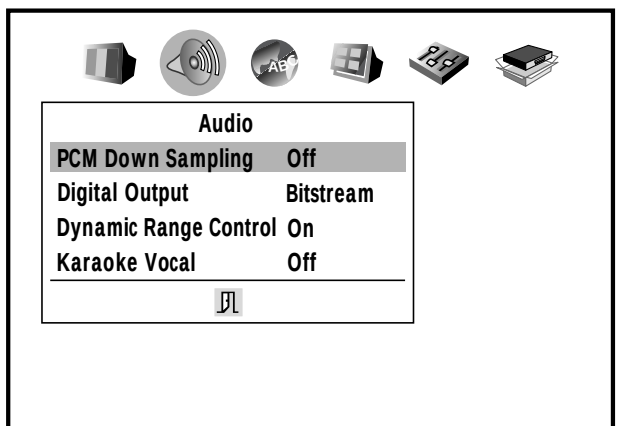

Audio

PCM Down Sampling Off

Digital Output Bitstream

Dynamic Range Control On

Karaoke Vocal Off

PCM Down Sampling DVD-V

Make this selection only when you use your audio equipment (e.g. receiver) connecting to the DVD player via the BITSTREAM/PCM (DIGITAL) AUDIO OUT jack.

According to performance of your connected receiver, select a sound processing option for playback of a disc that contains high frequency signals (sampling frequency 96 kHz).

Off: Select when your connected receiver processes high frequency signals of 96 kHz.
The DVD player outputs these signals as they are on the disc.

On: Select when your connected receiver does not process high frequency signals of 96 kHz.
The DVD player outputs these signals in a disc depressing the frequencies to 48 kHz.

Notes

- Regardless of this setting, high frequency signals on a DVD disc are down-converted to 48 kHz if that disc is copy protected.
- If you select “Off” because your connected receiver does not process high frequency signals of 96 kHz, you will not hear output sound from those signals.

Digital Output DVD-V VCD CD

Select the output sound format corresponding to your system connection.
For details of sound recording systems, see 43.

Bitstream: Select when connected to an amplifier equipped with a Dolby Digital, DTS, MPEG1 or MPEG2 decoder. 21 22
The DVD player outputs digital audio information in the bitstream format when you play a DVD video disc recorded on the Dolby Digital, DTS, MPEG1 or MPEG2 recording system.

PCM: Select when connected to a 2 channel digital stereo amplifier. 23
The DVD player outputs sounds in the PCM 2ch format when you play a DVD video disc recorded on the Dolby Digital, MPEG1 or MPEG2 recording system.

Note

When you make a connection to a TV, or Dolby Surround Pro Logic or stereo system via the analog audio jacks, select “Bitstream” or “PCM.”

Dynamic Range Control DVD-V

Off: Full dynamic range is maintained.

On: Dynamic range is reduced.

Notes

- This function works only during playback of Dolby Digital recorded discs.
- The level of Dynamic Range Reduction may differ depending on the DVD disc.

Setting details

Karaoke Vocal DVD-V

Off: The primary vocal is not output.
On: The primary vocal is output when it is recorded on the disc.

Notes

- The vocal output feature is used during playback of Dolby Digital (multi-channel) recorded DVD KARAOKE discs. This feature allows you to turn off vocal audio tracks, or restore them for background accompaniment.
- When playing KARAOKE, connect appropriate audio equipment such as an amplifier to the DVD player.

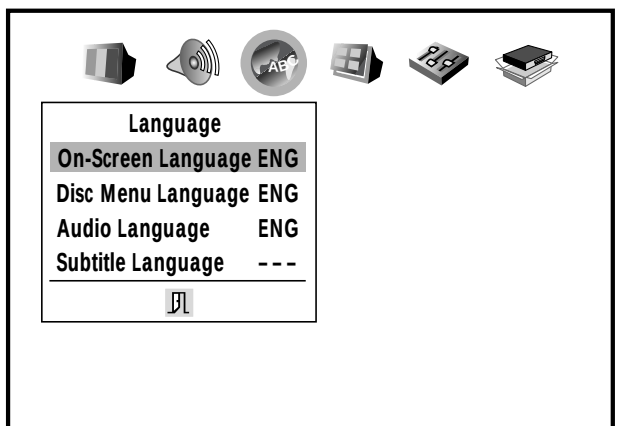

Language
On-Screen Language ENG
Disc Menu Language ENG
Audio Language ENG
Subtitle Language ---

On-Screen Language DVD-V VCD CD

English: To view on-screen displays in English.
Français: To view on-screen displays in French.
Español: To view on-screen displays in Spanish.

Disc Menu Language DVD-V

English: To display disc menus in English.
French: To display disc menus in French.
Spanish: To display disc menus in Spanish.
Others: To make a further choice.
After pressing the ENTER button, follow steps 1) - 4) below.

1) Obtain the abbreviation of the preferred language from the list 65.
2) Select the first character by pressing the ▲ / ▼ buttons.
3) Press the ◄ / ► buttons to shift and select the second character by pressing the ▲ / ▼ buttons.

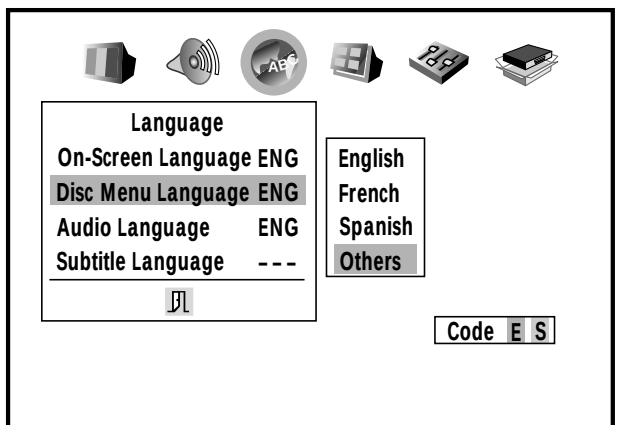

Language
On-Screen Language ENG
Disc Menu Language ENG
Audio Language ENG
Subtitle Language ---

English
French
Spanish
Others

Code E S

4) Press the ENTER button.

Note

Some DVD video discs may not include your pre-selected language. In this case, the DVD player automatically displays disc menus consistent with the disc's initial language setting.

Audio Language DVD-V

English: To play sound tracks in English.
French: To play sound tracks in French.
Spanish: To play sound tracks in Spanish.
Others: To make a further choice.
After pressing the ENTER button, follow steps 1) - 4) below.

1) Obtain the abbreviation of the preferred language from the list 65.
2) Select the first character by pressing the ▲ / ▼ buttons.
3) Press the ◄ / ► buttons to shift and select the second character by pressing the ▲ / ▼ buttons.

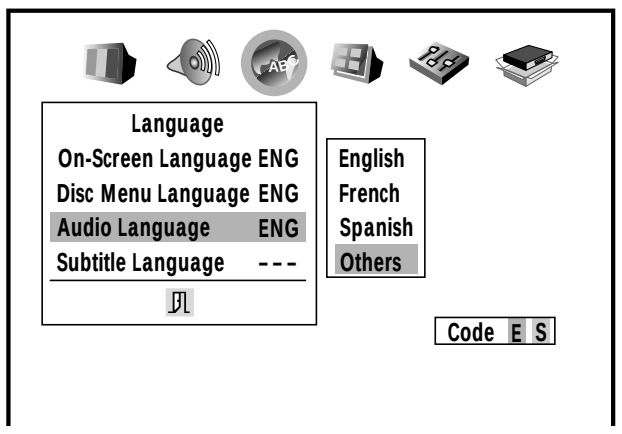

Language
On-Screen Language ENG
Disc Menu Language ENG
Audio Language ENG
Subtitle Language - - -

English
French
Spanish
Others

Code E S

4) Press the ENTER button.

Note
Some DVD video discs may be played in a different language than you selected. A prior language may be programmed on the disc.

Subtitle Language DVD-V

English: To display subtitles in English.
French: To display subtitles in French.
Spanish: To display subtitles in Spanish.
No Subtitle: To disable subtitles.
Others: To make a further choice.
After pressing the ENTER button, follow steps 1) - 4) below.

1) Obtain the abbreviation of the preferred language from the list 65.
2) Select the first character by pressing the ▲ / ▼ buttons.
3) Press the ◄ / ► buttons to shift and select the second character by pressing the ▲ / ▼ buttons.

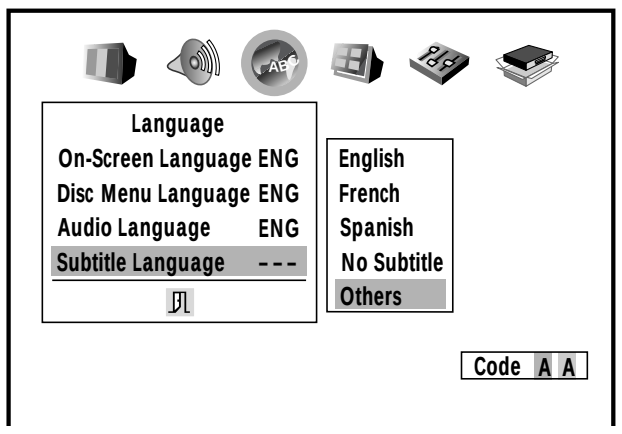

Language
On-Screen Language ENG
Disc Menu Language ENG
Audio Language ENG
Subtitle Language - - -

English
French
Spanish
No Subtitle
Others

Code A A

4) Press the ENTER button.

Notes
- Some DVD video discs may be set to display subtitles in a different language than you selected. A prior subtitle language may be programmed on the disc.
- Some DVD video discs allow you to change subtitle selections only via the disc menu. If this is the case, press the MENU button and choose the appropriate subtitle language from the selection on the disc menu.

Customizing the Function Settings (continued)

Setting details

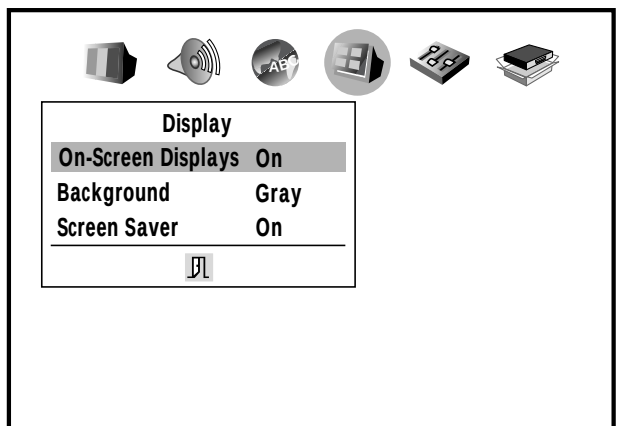

On-Screen Displays	On
Background	Gray
Screen Saver	On

On-Screen Displays DVD-V VCD CD

Off: Operational modes (e.g. "❚❚", " ▷▷ ") are not displayed.
On: Operational modes (e.g. "❚❚", " ▷▷ ") are displayed on-screen.

Background DVD-V VCD CD

Blue:	Blue background.
Gray:	Gray background.
Capture:	To use a picture you sampled and stored in the memory using the Capture feature 51 as a background.
Jacket:	To use the jacket picture included on some discs as a background. If it is not included, a gray background will be substituted.

Screen Saver DVD-V

Off: The screen saver is disengaged.
On: The screen saver operates.

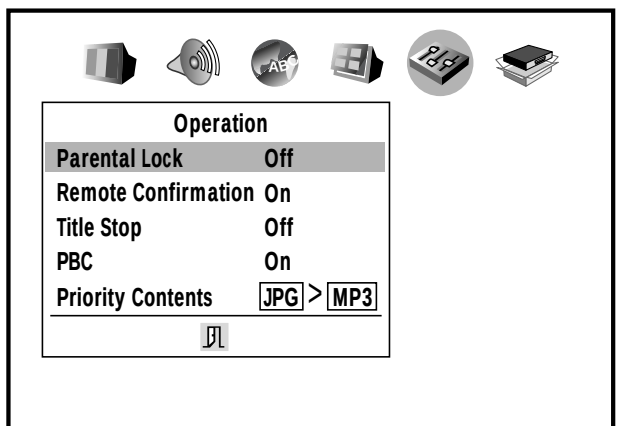

Parental Lock	Off
Remote Confirmation	On
Title Stop	Off
PBC	On
Priority Contents	JPG > MP3

Parental Lock DVD-V

DVD video discs equipped with the parental lock function are rated according to their content. The contents allowed by a parental lock level and the way a DVD video disc can be controlled may vary from disc to disc. For example, if the disc allowed you could edit out violent scenes unsuitable for children and replace them with more suitable scenes, or lock out playback of the disc altogether.

- DVD video discs may or may not respond to the parental lock settings. This is not a defect in the DVD player. Make sure this function works with your DVD video discs.

Off: The parental lock feature does not function.
After pressing the ENTER button, follow step 1) below.
On: To activate the parental lock feature or change the settings.
After pressing the ENTER button, follow steps 1) - 3) below.

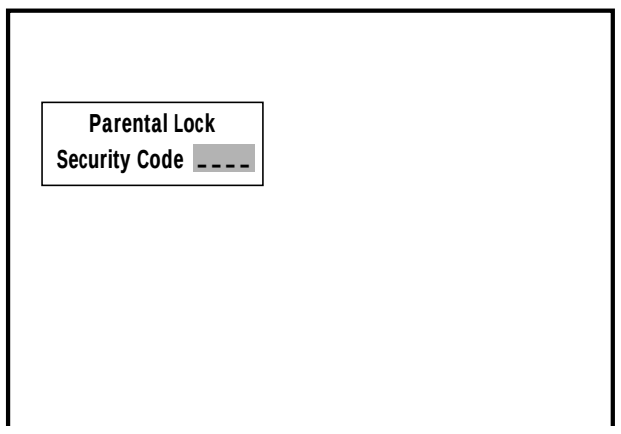
Parental Lock
Security Code ----

1) Press the number buttons to create a personal 4-digit security code, then press the ENTER button.
If you make a mistake before pressing the ENTER button, press the CLEAR button and enter your 4-digit security code again.

2) Enter the code of a country/area whose standards were used to rate the DVD video disc, referring to the list below.

Country/Area	Code
AUSTRALIA	AU
BELGIUM	BE
CANADA	CA
CHINA	CN
CHINA HONG KONG	HK
DENMARK	DK
FINLAND	FI
FRANCE	FR
GERMANY	DE
INDONESIA	ID
ITALY	IT
JAPAN	JP
MALAYSIA	MY
NETHERLANDS	NL
NORWAY	NO
PHILIPPINES	PH
RUSSIAN FEDERATION	RU
SINGAPORE	SG
SPAIN	ES
SWEDEN	SE
SWITZERLAND	CH
TAIWAN	TW
THAILAND	TH
UNITED KINGDOM	GB
UNITED STATES	US

a) Select the first character by pressing the ▲ / ▼ buttons.
b) Press the ◄ / ► buttons to shift and select the second character by pressing the ▲ / ▼ buttons.
c) Press the ENTER button.

3) Press the ▲ / ▼ buttons to select the parental lock level, then press the ENTER button.

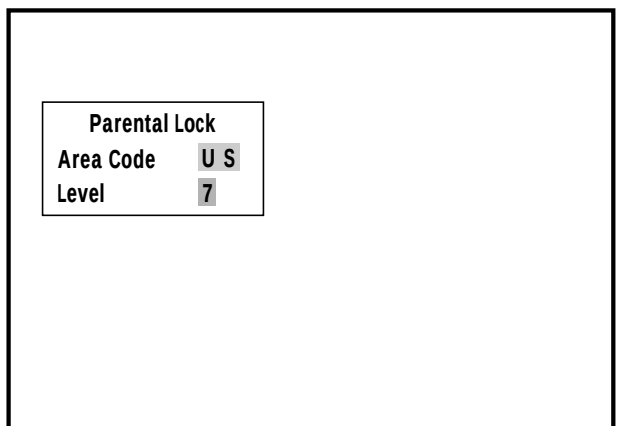

Parental Lock
Area Code U S
Level 7

You cannot play DVD video discs rated higher than the level you selected unless you cancel the parental lock function.
For example, when you select level 7, discs rated higher than level 7 are locked out and cannot be played.

The parental lock level is equivalent to the following USA movie ratings.
Level 7: NC-17
Level 6: R
Level 4: PG 13
Level 3: PG
Level 1: G

The parental lock levels for other countries/areas than U.S. are included for future use. Check the appropriate parental lock level when you buy a DVD video disc equipped with the parental lock feature in the future.

■ **To change the parental lock level**
Follow steps 1) - 3).

■ **To change your 4-digit security code**
1) After selecting “On” or “Off,” press the STOP button four times, then press the ENTER button.



The 4-digit security code is cleared.
2) Press the number buttons to create a new 4-digit security code.
3) Press the ENTER button.

Note
After making the “Parental Lock” setting, the on-screen display will disappear. To make other settings, press the SETUP button again to display them.

Setting details

Remote Confirmation DVD-V VCD CD

Off: The beeper does not sound.
On: The beeper sounds with each remote operation.

Title Stop DVD-V

Off: The DVD player continues after playback of a title is completed.
On: The DVD player stops after playback of a title is completed.

PBC VCD

Off: When playing a VIDEO CD without using the menu.
On: To use the menu when playing a PBC-featured VIDEO CD.

Priority Contents

To select the playback priority between JPEG (picture) files and MP3 (audio) files.

JPG > MP3: JPEG files take priority over MP3 files.
MP3 > JPG: MP3 files take priority over JPEG files.

Refer to the separate booklet “Digital Photo Viewer” on how to play a disc containing JPEG format files.

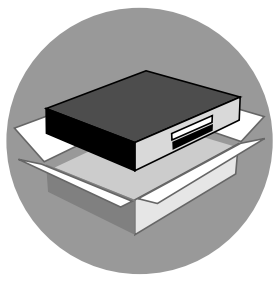

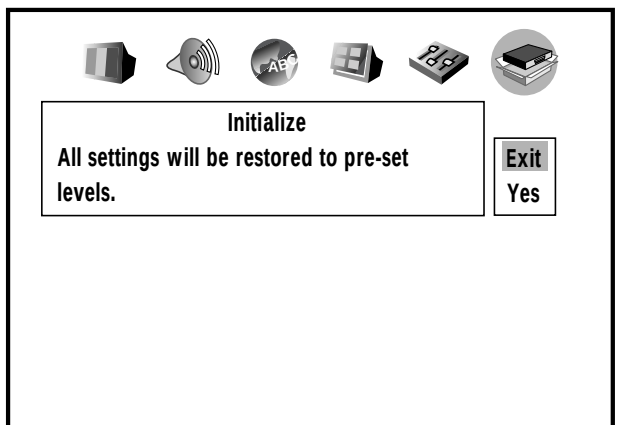

Initialize
All settings will be restored to pre-set levels.

Initialize DVD-V VCD CD

To restore all settings to the factory set.

1) Press the ▲ / ▼ buttons to select “Yes,” and press the **ENTER** button.

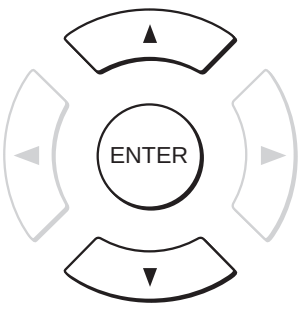

2) Read the message, and if you really want to restore all settings, press the ▲ / ▼ buttons to select “Yes,” and press the **ENTER** button.

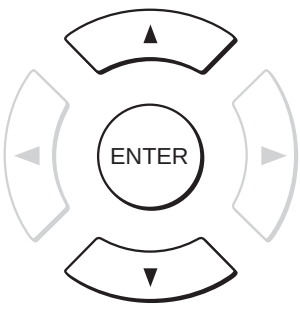

The message of completion appears.

Note
The “Parental Lock” setting is not restored to the factory set.

Table of Languages

Table of languages and their abbreviations

Abbreviation	Language
– – –	No alternate language
CHI (ZH)	Chinese
DUT (NL)	Dutch
ENG (EN)	English
FRE (FR)	French
GER (DE)	German
ITA (IT)	Italian
JPN (JA)	Japanese
KOR (KO)	Korean
MAY (MS)	Malay
SPA (ES)	Spanish
AA	Afar
AB	Abkhazian
AF	Afrikaans
AM	Amharic
AR	Arabic
AS	Assamese
AY	Aymara
AZ	Azerbaijani
BA	Bashkir
BE	Belorussian
BG	Bulgarian
BH	Bihari
BI	Bislama
BN	Bengali, Bangla
BO	Tibetan
BR	Breton
CA	Catalan
CO	Corsican
CS	Czech
CY	Welsh
DA	Danish
DZ	Bhutani
EL	Greek
EO	Esperanto
ET	Estonian
EU	Basque
FA	Persian
FI	Finnish
FJ	Fiji
FO	Faroese
FY	Frisian
GA	Irish
GD	Scottish Gaelic
GL	Galician
GN	Guarani
GU	Gujarati
HA	Hausa
HI	Hindi
HR	Croatian
HU	Hungarian
HY	Armenian
IA	Interlingua
IE	Interlingue
IK	Inupiak
IN	Indonesian
IS	Icelandic
IW	Hebrew
JI	Yiddish
JW	Javanese
KA	Georgian
KK	Kazakh
KL	Greenlandic
KM	Cambodian
KN	Kannada
KS	Kashmiri
KU	Kurdish
KY	Kirghiz
LA	Latin
LN	Lingala
LO	Laotian
LT	Lithuanian
LV	Latvian, Lettish
MG	Malagasy
MI	Maori
MK	Macedonian
ML	Malayalam
MN	Mongolian
MO	Moldavian
MR	Marathi
MT	Maltese
MY	Burmese
NA	Nauru
NE	Nepali
NO	Norwegian
OC	Occitan
OM	(Afan) Oromo
OR	Oriya
PA	Panjabi
PL	Polish
PS	Pashto, Pushto
PT	Portuguese
QU	Quechua
RM	Rhaeto-Romance
RN	Kirundi
RO	Rumanian
RU	Russian
RW	Kinyarwanda
SA	Sanskrit
SD	Sindhi
SG	Sango
SH	Serbo-Croatian
SI	Singhalese
SK	Slovak
SL	Slovenian
SM	Samoan
SN	Shona
SO	Somali
SQ	Albanian
SR	Serbian
SS	Siswati
ST	Sesotho
SU	Sundanese
SV	Swedish
SW	Swahili
TA	Tamil
TE	Telugu
TG	Tajik
TH	Thai
TI	Tigrinya
TK	Turkmen
TL	Tagalog
TN	Setswana
TO	Tongan
TR	Turkish
TS	Tsonga
TT	Tatar
TW	Twi
UK	Ukrainian
UR	Urdu
UZ	Uzbek
VI	Vietnamese
VO	Volapük
WO	Wolof
XH	Xhosa
YO	Yoruba
ZU	Zulu

Others

- Before Calling Service Personnel
- Specifications
- LIMITED WARRANTY DVD PLAYER

Before Calling Service Personnel

Check the following guide for the possible cause of a problem before contacting service.

Symptoms and correction

Symptom	Cause	Correction	Page
No power.	• The power plug is disconnected.	• Connect the power plug securely into the wall outlet.	**18**
The DVD player turned off by itself.	• The automatic power off function turned the unit off.	• Press the PLAY button.	**27**
No picture.	• The TV is not set to receive DVD signal output.	• Select the appropriate video input mode on the TV so the picture from the DVD player appears on the TV screen.	**26**
	• The video cable is not connected securely.	• Connect the video cable securely into the appropriate jacks.	**18, 19**
No sound.	• The equipment connected with the audio cable is not set to receive DVD signal output.	• Select the correct input mode of the audio receiver so you can listen to the sound from the DVD player.	**26**
	• The audio cable is not connected securely.	• Connect the audio cable securely into the appropriate jacks.	**18-23**
	• The audio receiver or TV is turned off.	• Turn on the equipment connected with the audio cable.	**26**
	• The setting of output sound format is incorrect.	• Select the proper audio setting.	**42, 56 59**
The playback picture has occasional distortion.	• The disc is dirty.	• Eject the disc and clean it.	**9**
	• It is in fast forward or fast reverse playback.	• Sometimes a small amount of picture distortion may appear. This is not a malfunction.	**–**
Brightness is unstable or noises are present in the playback pictures.	• The effect of copy protection.	• Connect the DVD player directly to the TV. Avoid connecting the DVD player to a VCR or TV/VCR combination.	**18**
The DVD player does not start playback.	• No disc is inserted.	• Insert a disc.	**26**
	• An unplayable disc is inserted.	• Insert a playable disc. (Check the disc type.)	**10**
	• The disc is placed upside down.	• Place the disc with the playback side down.	**26**
	• The disc is not placed within the guide.	• Place the disc correctly inside the guide on the disc tray.	**26**
	• The disc is dirty.	• Clean the disc.	**9**
	• The parental lock function is set.	• Cancel the parental lock function or change the parental lock level.	**56, 62**
Playback does not follow the course of the disc's program.	• It is in the mode of repeat playback, memory playback, etc.	• These operations may prevent a proper progress of the contents.	**–**
Buttons do not work.	• Power supply fluctuations or other abnormalities such as static electricity may interrupt correct operations.	• Press and hold the ON/STANDBY button on the front panel for more than about 3 seconds. The DVD player turns off. Press the button again to turn it on. If the buttons still do not work, disconnect the power plug and insert it into the wall outlet again.	**–**
The remote control does not work properly.	• The remote control is not pointed at the remote sensor of the DVD player.	• Point the remote control at the remote sensor of the DVD player.	**15**
	• The remote control is too far from the DVD player.	• Operate the remote control within about 7 m.	**15**
	• The batteries in the remote control are exhausted.	• Replace the batteries with new ones.	**15**

Specifications

DVD player / outputs / supplied accessories

DVD player

Power supply	120 V AC, 60 Hz
Power consumption	16 W
Mass	2.5 kg
External dimensions	430 × 69 × 219 mm (W/H/D)
Signal system	Standard NTSC
Laser	Semiconductor laser, wavelength 650 nm / 780 nm
Frequency range	DVD linear sound : 48 kHz sampling 4 Hz to 22 kHz 96 kHz sampling 4 Hz to 44 kHz
Signal-to-noise ratio	More than 112 dB
Audio dynamic range	More than 108 dB
Harmonic distortion	Less than 0.002 %
Wow and flutter	Below measurable level (less than ±0.001 % (W.PEAK))
Operating conditions	Temperature: 5 °C to 35 °C, Operation status: Horizontal

Outputs

Video output	1.0 V (p-p), 75 Ω, negative sync., pin jack × 1
S video output	(Y) 1.0 V (p-p), 75 Ω, negative sync., Mini DIN 4-pin × 1 (C) 0.286 V (p-p), 75 Ω
Component video output	(Y) 1.0 V (p-p), 75 Ω, negative sync., pin jack × 1 (P_B)/(P_R) 0.7 V (p-p), 75 Ω, pin jack × 2
Audio output (BITSTREAM/PCM OPTICAL)	Optical connector × 1
Audio output (BITSTREAM/PCM COAXIAL)	0.5 V (p-p), 75 Ω, pin jack × 1
Audio output (ANALOG AUDIO)	2.0 V (rms), 680 Ω, pin jacks (L, R) × 1

Supplied Accessories

Audio/video cable	1
Remote control (SE-R0070 or SE-R0073)	1
Batteries (AAA)	2

- Designs and specifications are subject to change without notice.

LIMITED WARRANTY DVD PLAYER

Toshiba America Consumer Products, Inc. (“TACP”), Toshiba Hawaii (“THI”) and Toshiba Canada Limited (“TCL”) make the following limited warranties. These limited warranties extend to original purchaser or any person receiving this set as a gift from the original purchaser and to no other purchaser or transferee.

Limited Ninety (90) Day Warranty
TACP/THI warrant this product against defects in materials or workmanship for a period of ninety (90) days after the date of original retail purchase. During this period, TACP/THI will repair or replace a defective product or part, at their option, with a new or refurbished product or part without charge to you. You must deliver the entire product to a TACP/THI Authorized Service Station. You are responsible for all transportation and insurance charges for the unit to and from the Authorized Service Station. If you live in the U.S.A. you may, at your option, return your DVD Unit to:

Toshiba America Consumer Products Inc.
Returns Center
1420C Toshiba Dr.
Lebanon, TN 37087

Upon receipt we will, at our option, exchange the DVD Unit with a new or refurbished unit. **Canadian consumers are requested to contact TCL. In Hawaii consumers are requested to contact THI.**

Limited One (1) Year Warranty
TACP/THI further warrant the parts in this product against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. During this period, TACP/THI will repair or replace a defective product or part, at their option, with a new or refurbished product or part without charge to you, except that if a defective part is replaced after ninety (90) days from the date of the original retail purchase you pay labor charges involved in the replacement. You must also deliver the entire product to a TACP/THI Authorized Service Station. You are responsible for all transportation and insurance charges for the unit to and from the Authorized Service Station. If you live in the U.S.A. you may, at your option, return your DVD Unit to:

Toshiba America Consumer Products Inc.
Returns Center
1420C Toshiba Dr.
Lebanon, TN 37087

Upon receipt we will, at our option, exchange the DVD Unit with a new or refurbished unit. **Canadian Consumers are requested to contact TCL. In Hawaii consumers are requested to contact THI.**

Rental Units
The warranty for rental units begin with the first rental or thirty (30) days from the date of shipment to the rental firm, whichever comes first.

Commercial Units
Products sold and used for commercial use have a limited ninety (90) day warranty for all parts and labor.

Owner’s Manual
You should read the owner’s manual thoroughly before operating this product. You should complete and mail the enclosed Demographic card within ten (10) days after you, or the person who has given you this product as a gift, purchased this product. This is one way to enable TACP to provide you with better customer service and improved products. Failure to return the card will not affect your rights under this warranty.

Your Responsibility
The above warranties are subject to the following conditions:

(1) You must retain your bill of sale or provide other proof of purchase.
(2) You must notify a TACP/THI/TCL /Authorized Service Station within thirty (30) days after you discover a defective product or part.
(3) All warranty servicing of this product must be made by a TACP/THI/TCL Authorized Service Station.
(4) U.S.A. warranties are effective only if the product is purchased and operated in the Continental U.S.A. or Puerto Rico.
(5) Labor service charges for set installation. Set up, adjustment of customer controls and installation or repair of antenna systems are not covered by this warranty. Reception problems caused by inadequate antenna systems are your responsibility.
(6) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lighting or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI/TCL or to damage to products or part thereof which have had the serial number removed, altered, defaced or rendered illegible.
(7) Should you elect to return your DVD Unit to TACP after the ninety (90) days and within one (1) year, or after the warranty period has expired: Call (800)-631-3811 to receive information concerning an exchange price. Payment must be enclosed with product in the form of a certified check or money order including reason for return.
(8) Physically damaged DVD Units are not acceptable for repair or exchange whether in or out of warranty and will be returned as received.

How to Obtain Warranty Service

(1) Refer to the troubleshooting guide in your owner's manual. This check list may solve your problem.
(2) In the U.S.A., only call the TACP toll free number 800-631-3811, or if in Hawaii or Canada see listing below within (30) days after you find a defective product or part.
(3) Arrange for the delivery of the product to the TACP/THI/TCL Authorized Service Station or TACP Return Center. Products shipped to the Service Station must be insured and safely and securely packed, preferably in the original shipping carton, and a letter explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed.

In the Continental United States contact:

Toll Free
800-631-3811

In Hawaii contact:
Toshiba Hawaii Inc.
327 Kamakee Street
Honolulu, HA 96814
(808)-521-5377

In Canada contact:
Consumer Electronics Group
191 McNabb Street
Markham, Ontario L3R 8H2
(905)-470-5400

Consumer Electronics Group
22171 Fraserwood Way
Richmond, B.C. V6W 1J5
(604)-303-2500

Consumer Electronics Group
1643 North Service Road
Droval, QC H9P 1J1
(514)-856-4100

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall TACP/THI be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP/THI arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to ninety (90) days from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

ATTENTION CANADIAN CONSUMERS:
Canadian consumers are requested to complete the special Canadian “Warranty Registration Form” enclosed, and forward this completed form with a copy of bill of sale to TOSHIBA OF CANADA to “Register and Validate” their warranty. Product must be purchased from an Authorized Canadian Dealer. Products purchased in the U.S.A. and used in Canada are not covered by these warranties.

IMPORTANT: PACKING AND SHIPPING INSTRUCTION
When you send the product to a Service Station, you must use the original carton box and packing material, then insert the original carton box containing the unit into another carton using more packing material.

2. LOCATION OF MAIN PARTS AND MECHANISM PARTS

2-1. Location of Main Parts

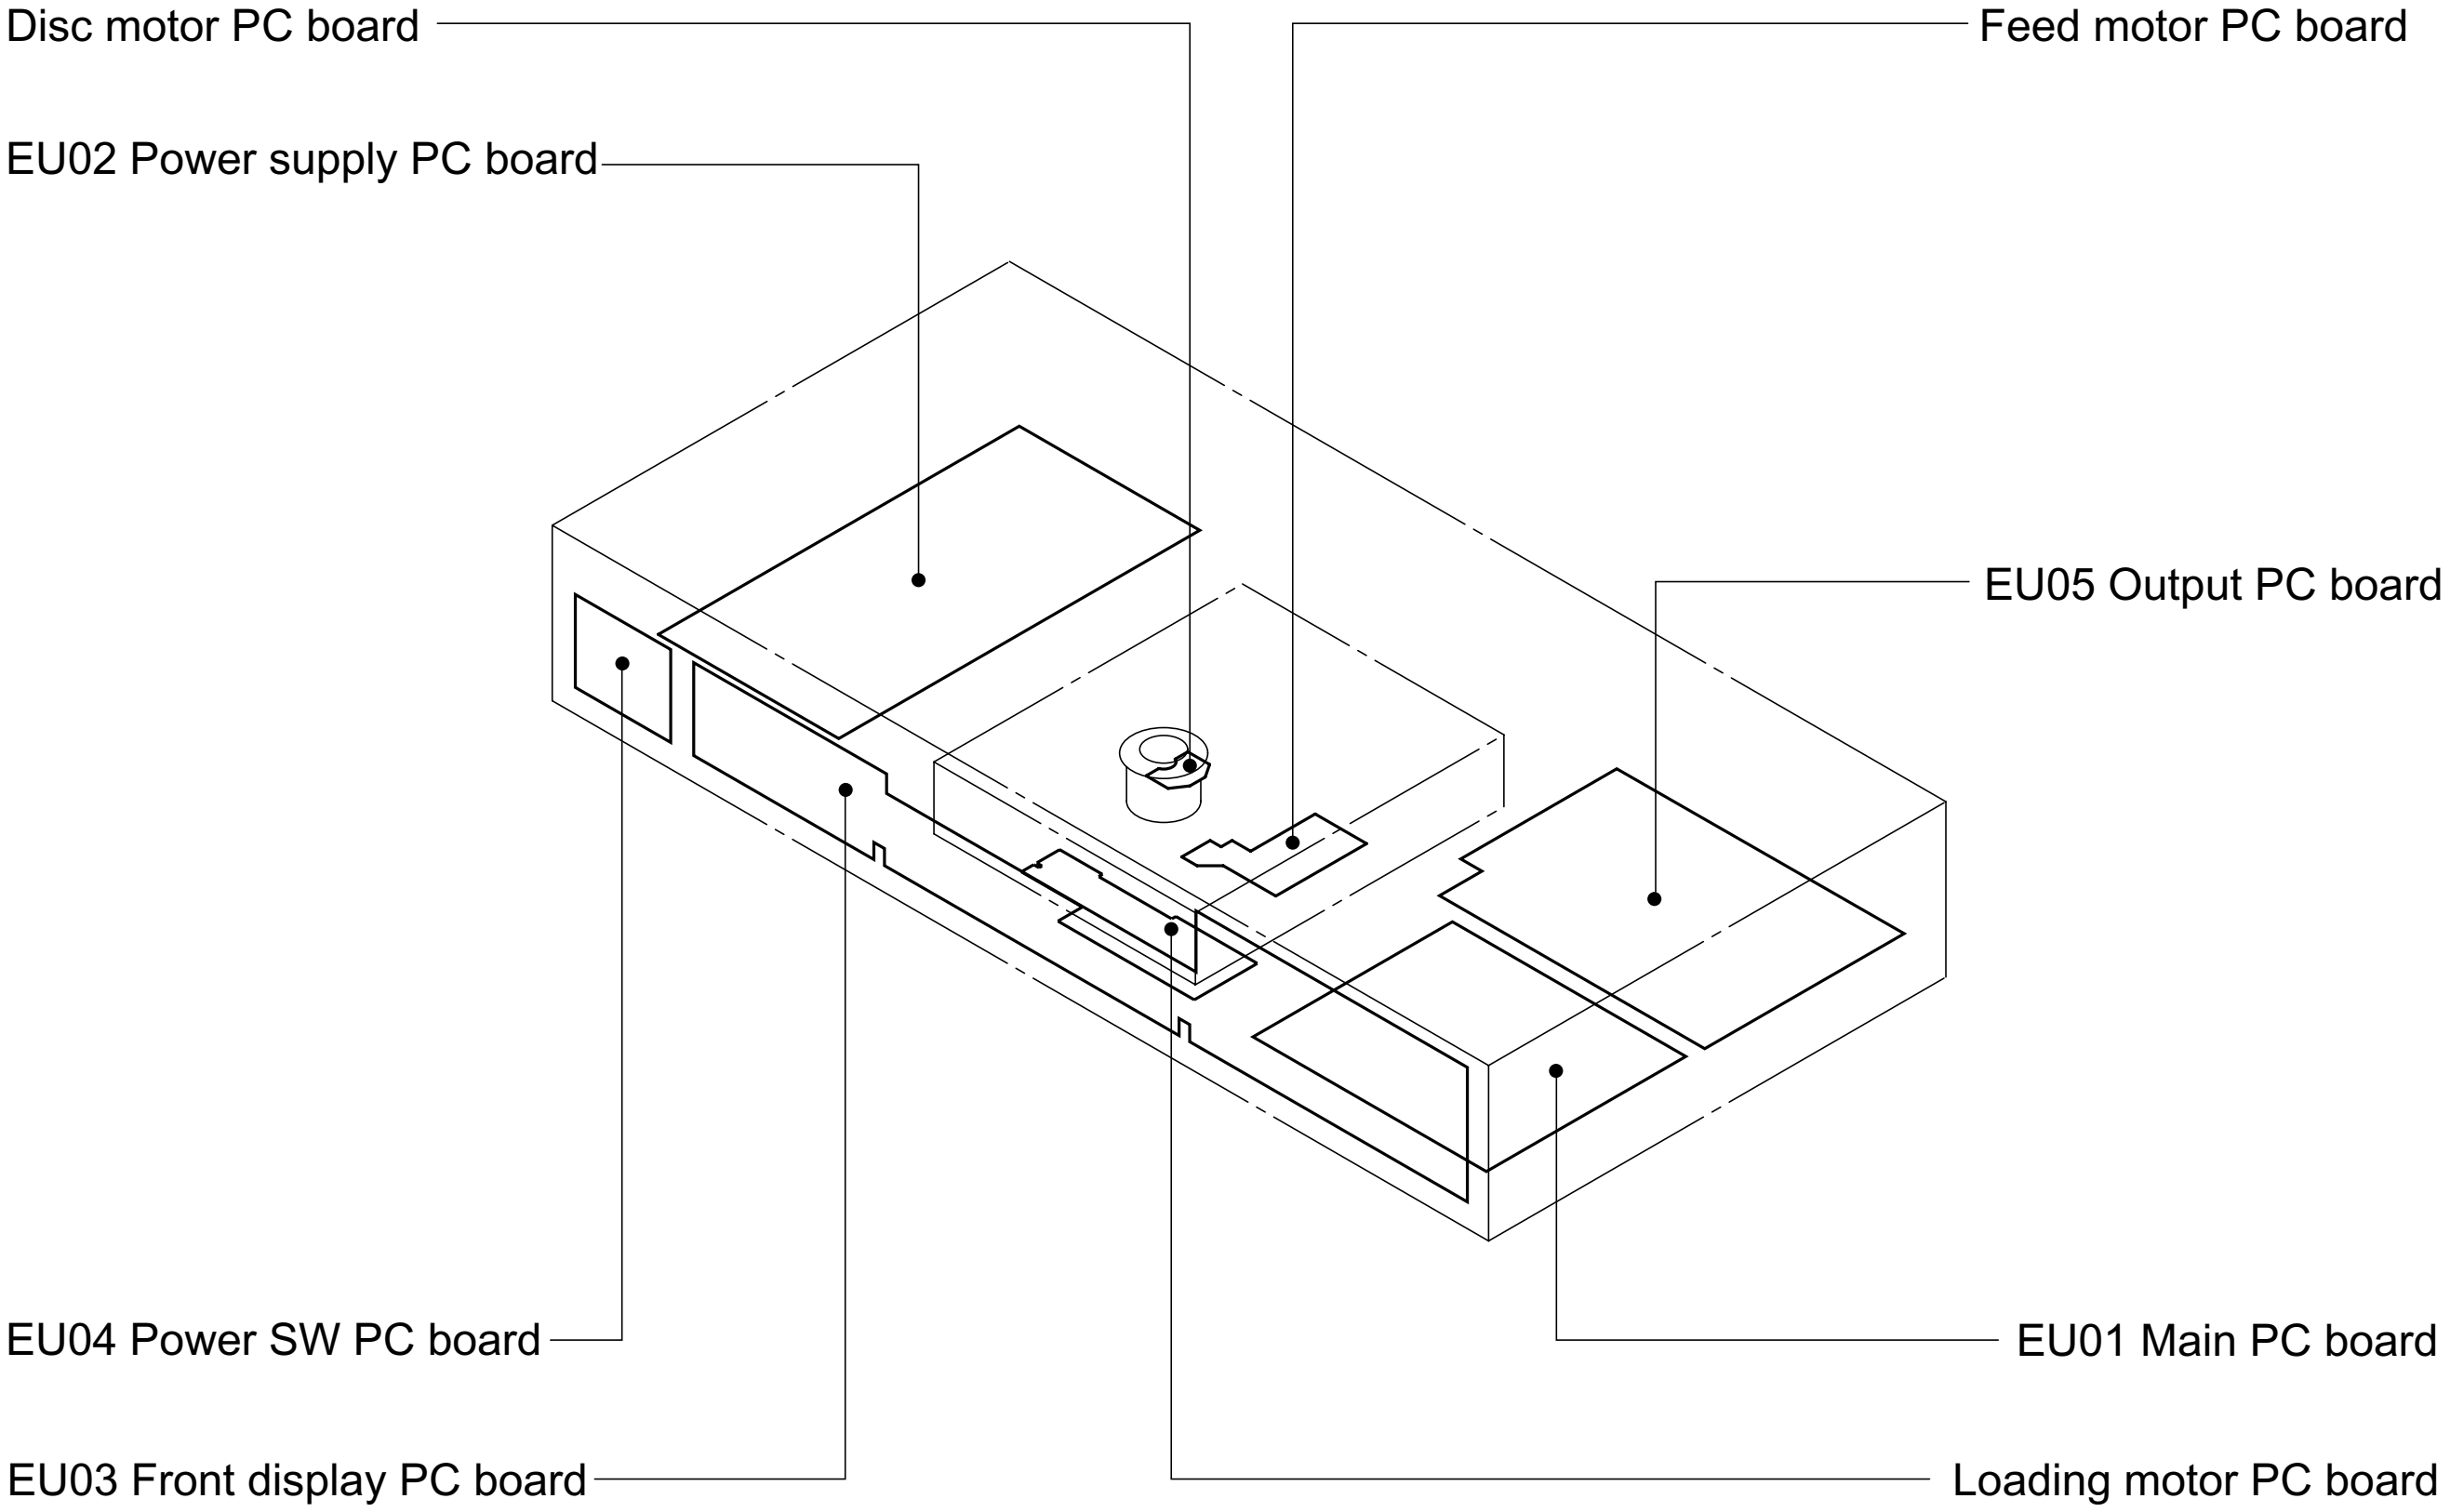
Disc motor PC board
EU02 Power supply PC board
Feed motor PC board
EU05 Output PC board
EU04 Power SW PC board
EU03 Front display PC board
EU01 Main PC board
Loading motor PC board

Fig. 1-2-1

2-2. Location of Mechanism Parts

2-2-1. Type A

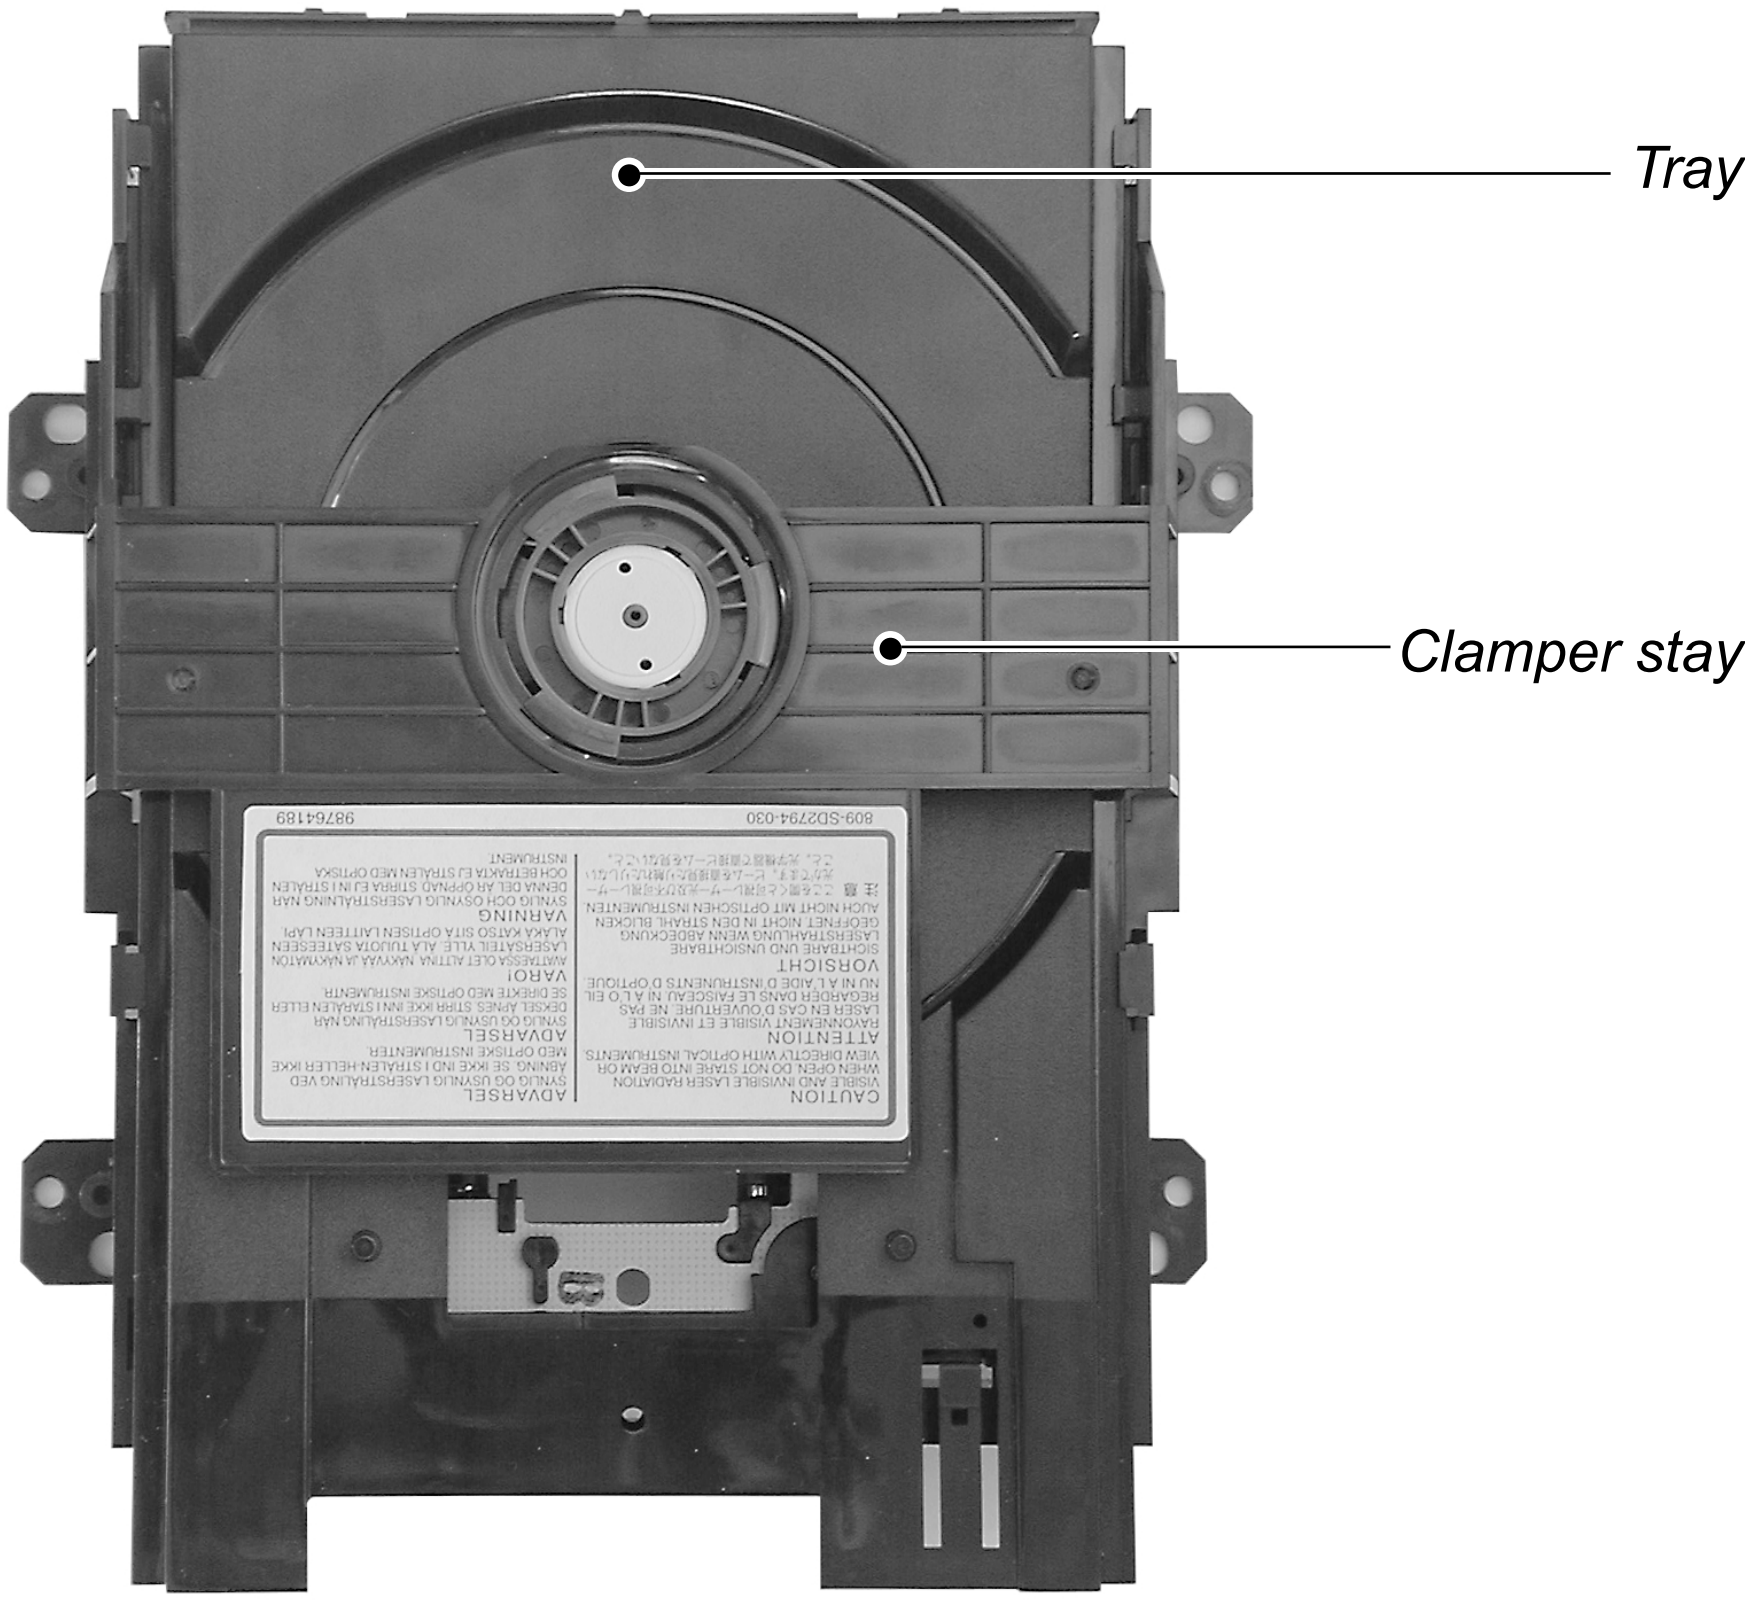
Tray
Clamper stay

Fig. 1-2-2 Mechanism chassis assembly (Top side)

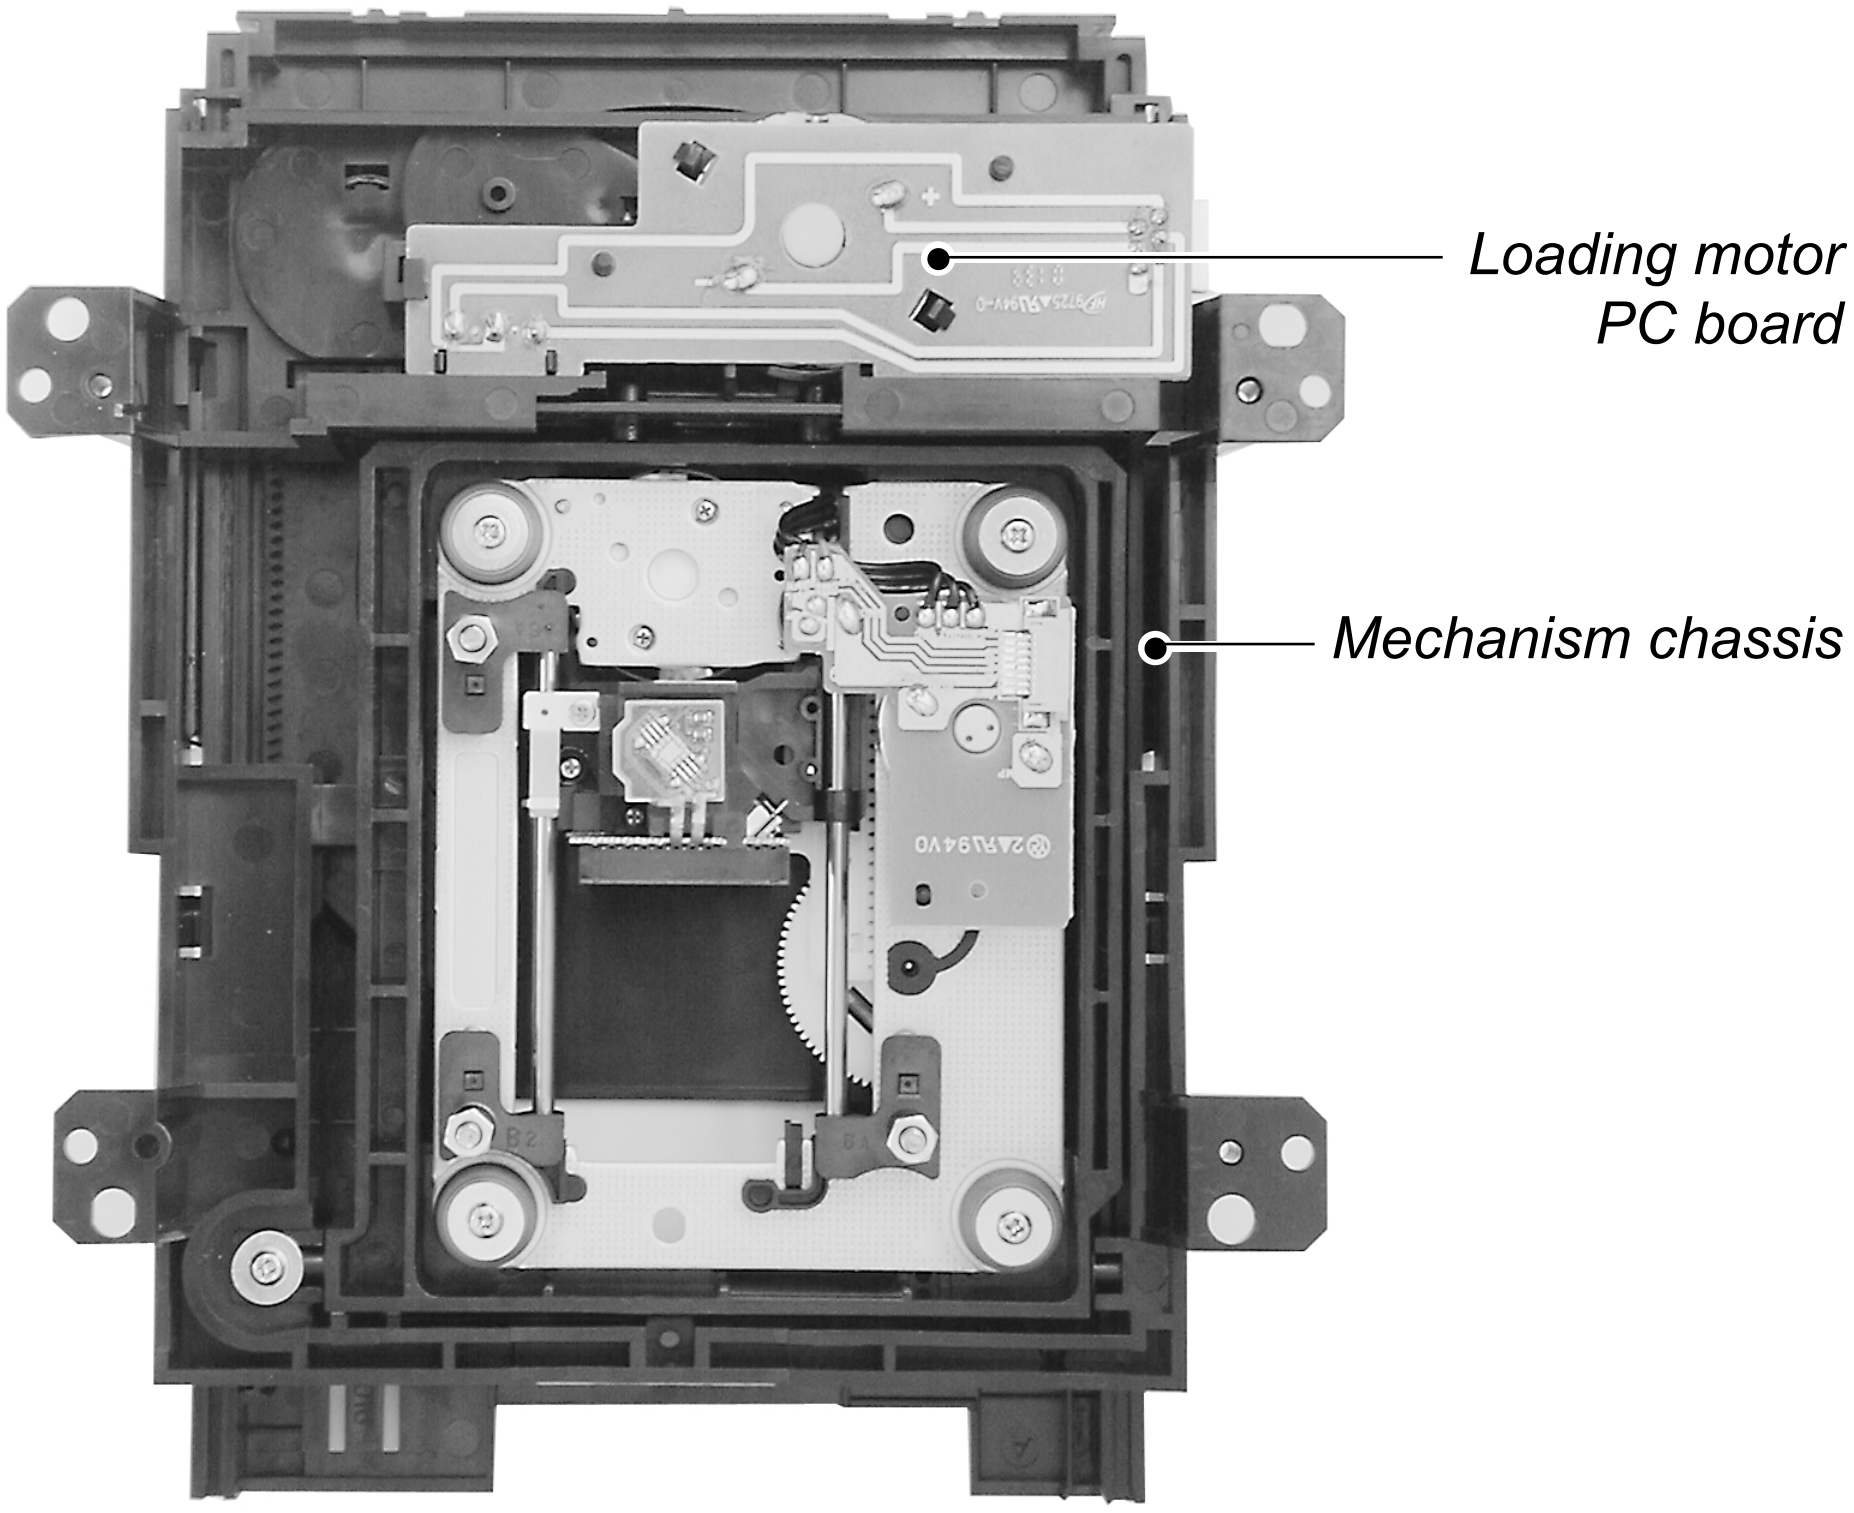
Loading motor PC board
Mechanism chassis

Fig. 1-2-3 Mechanism chassis assembly (Bottom side)

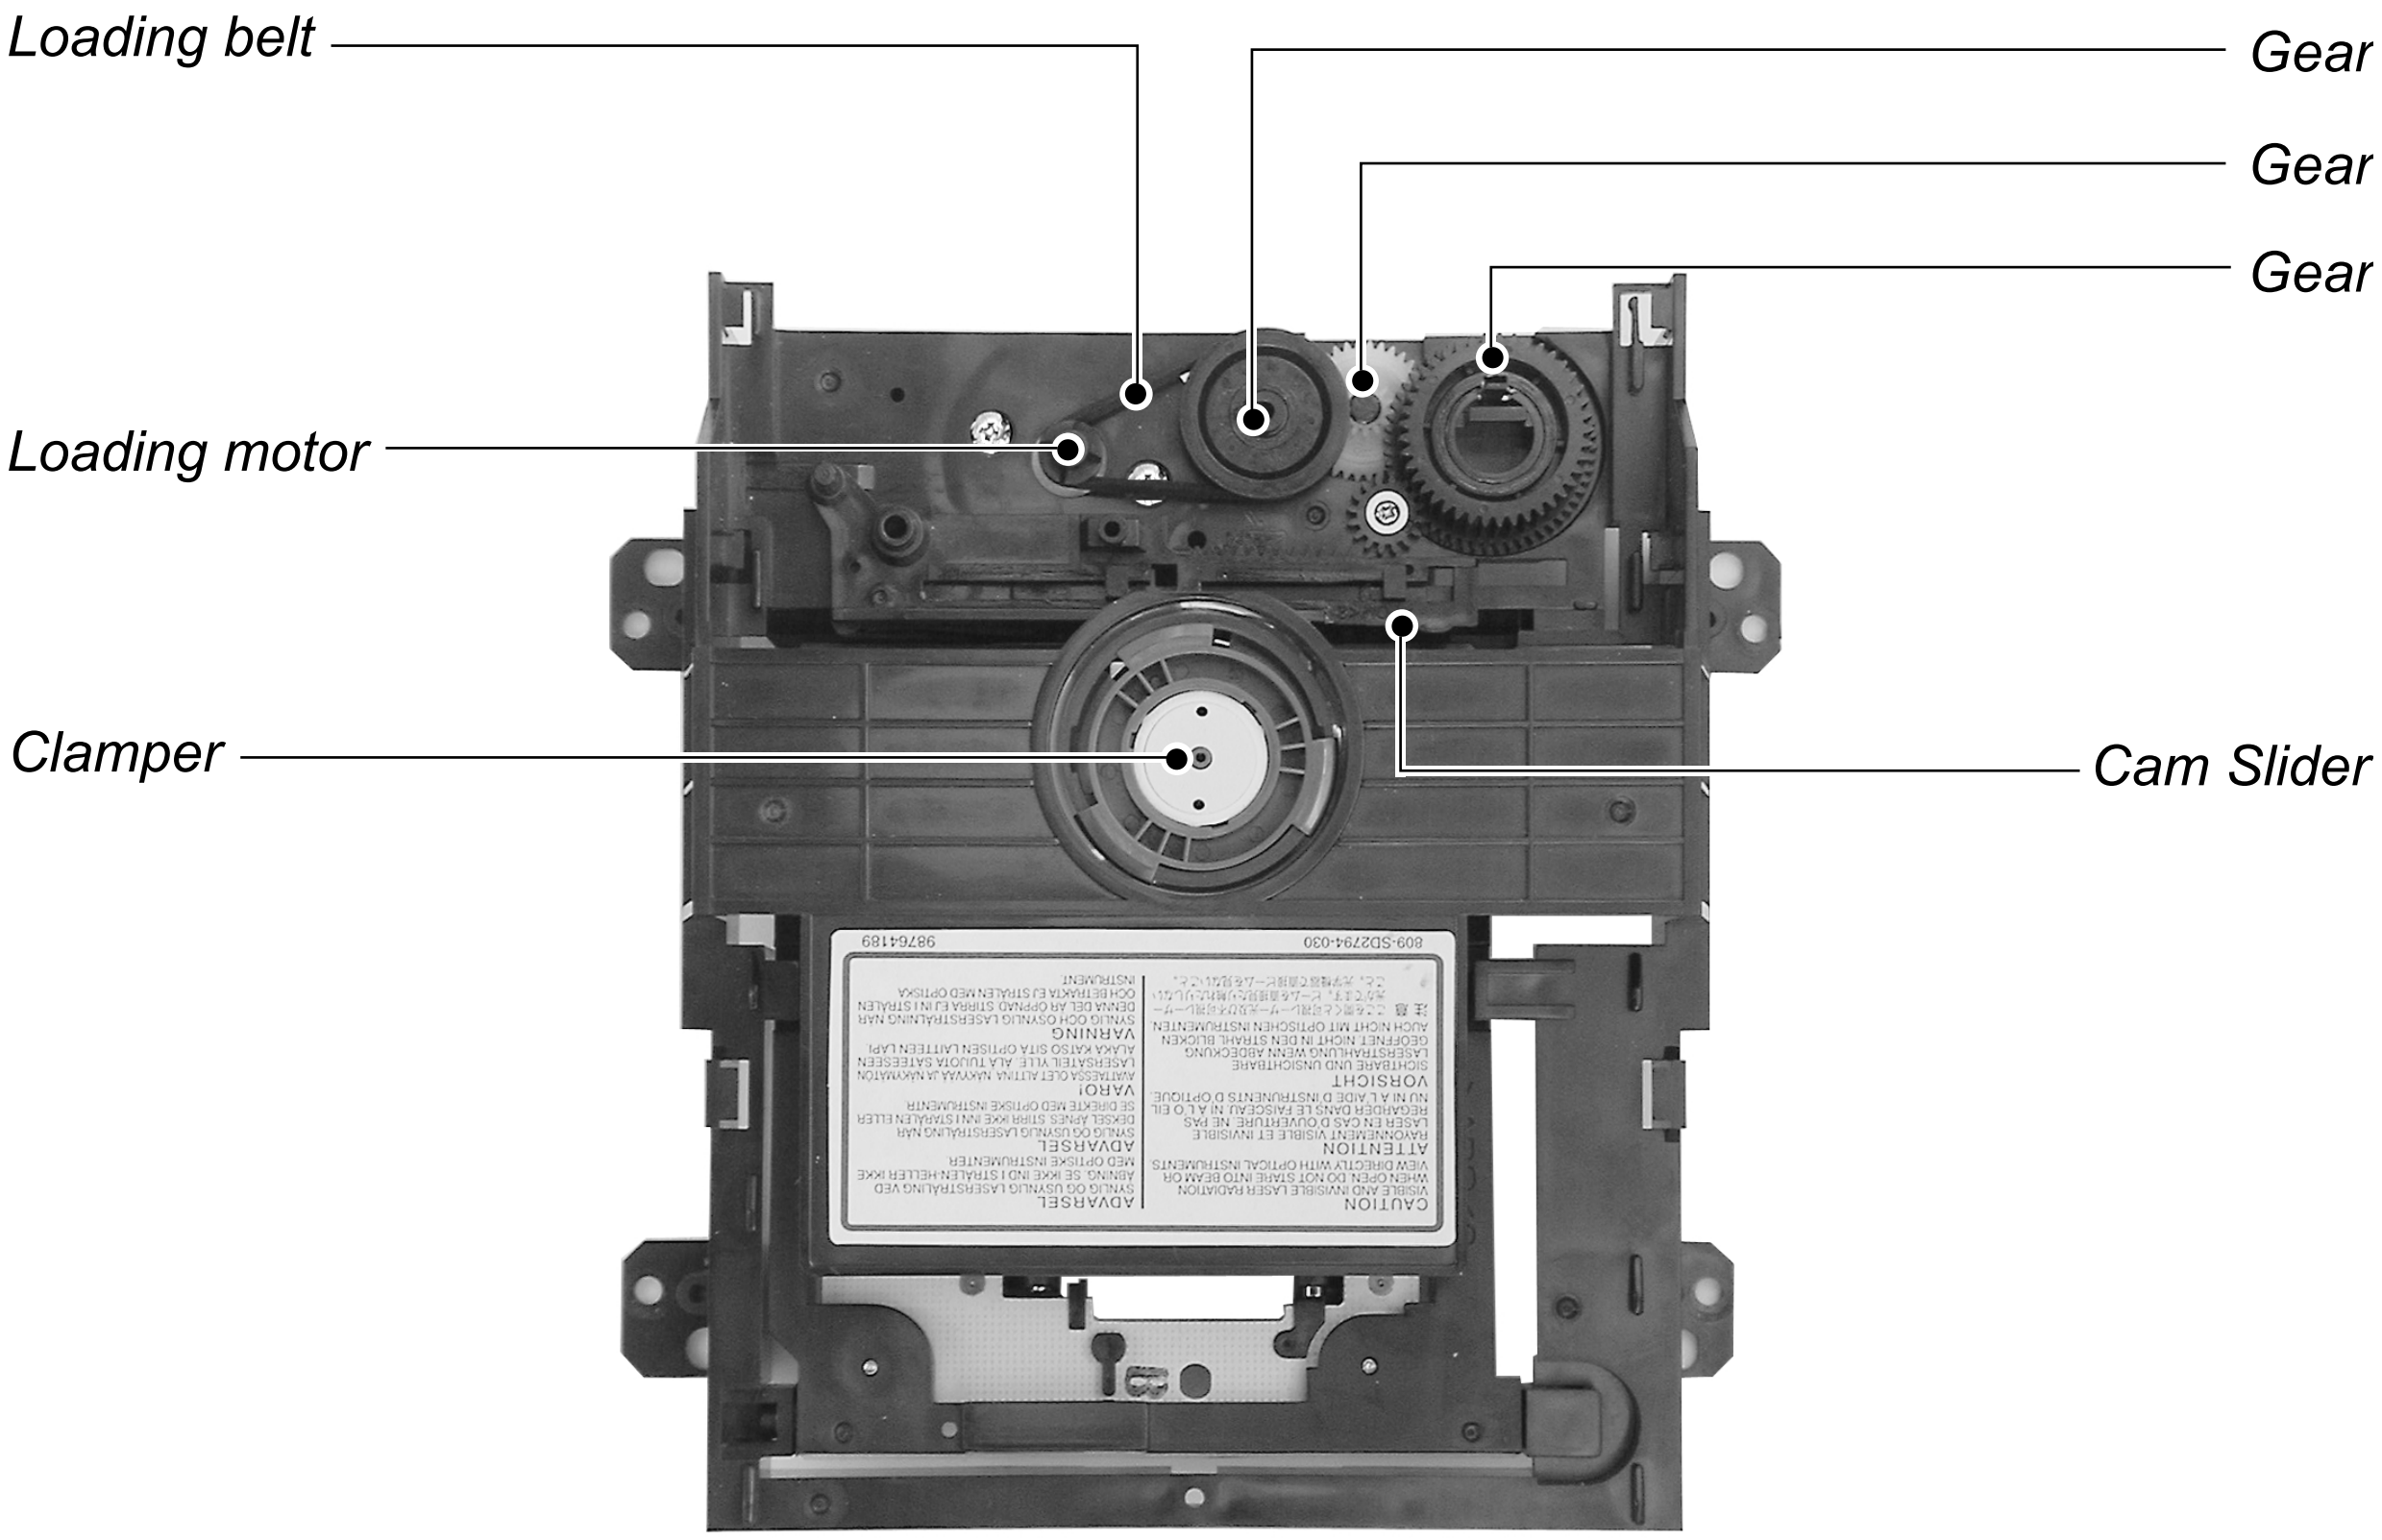
Loading belt
Gear
Gear
Gear
Loading motor
Clamper
Cam Slider

Fig. 1-2-4 Mechanism chassis assembly (Internal side)

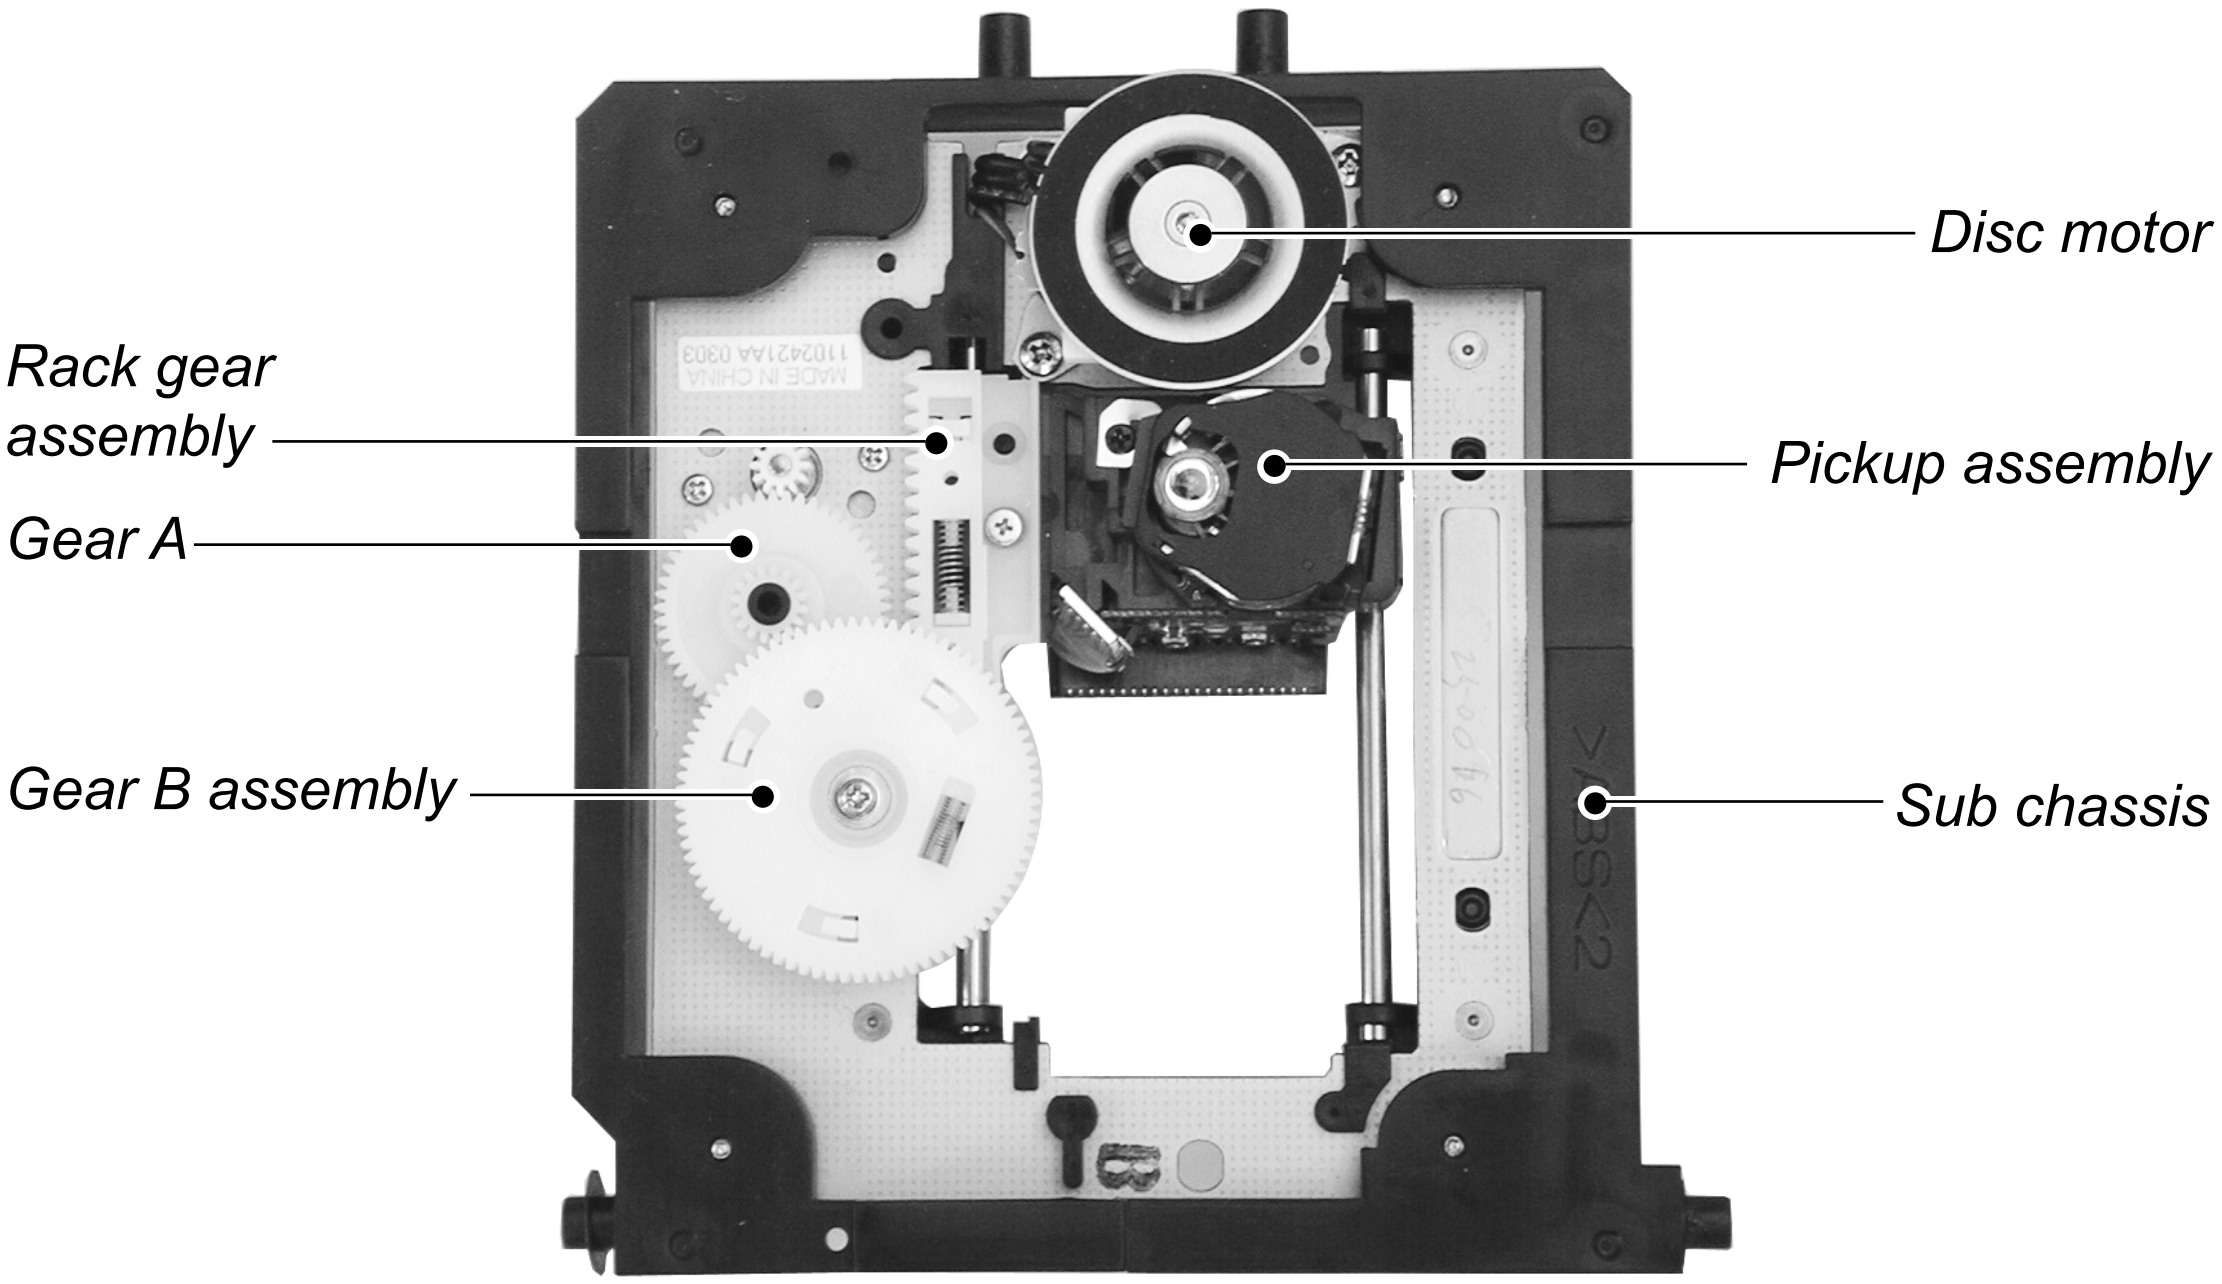
Disc motor
Rack gear assembly
Pickup assembly
Gear A
Gear B assembly
Sub chassis

Fig. 1-2-5 Pickup mechanism chassis assembly (Top side)

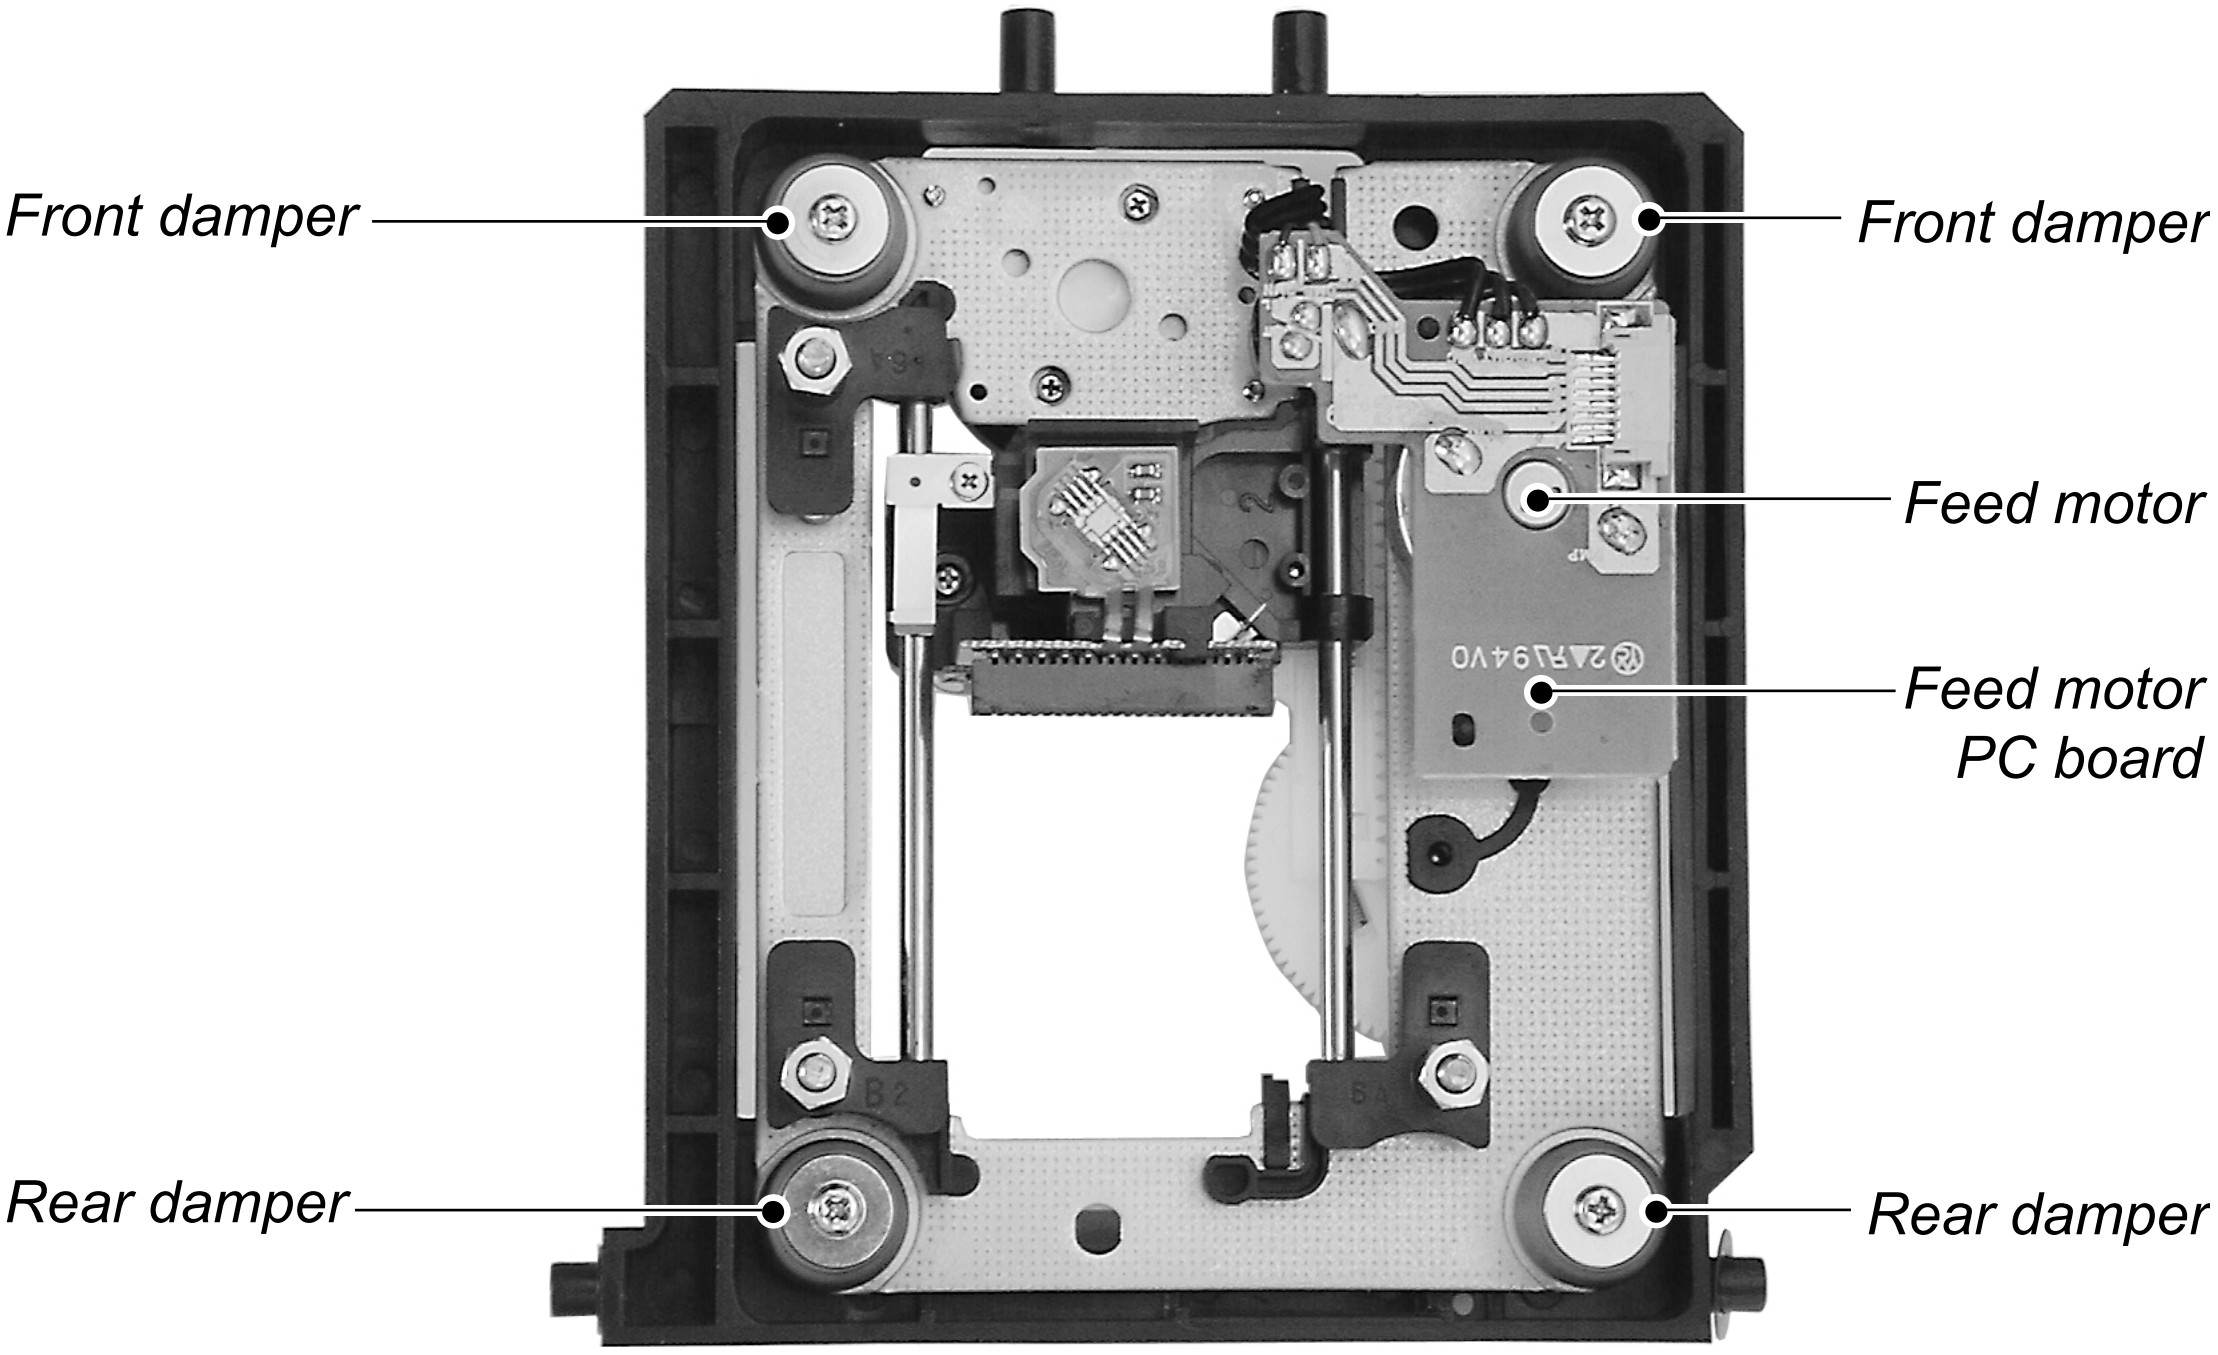
Front damper
Front damper
Feed motor
Feed motor PC board
Rear damper
Rear damper

Fig. 1-2-6 Pickup mechanism chassis assembly (Bottom side)

2-2-2. Type B

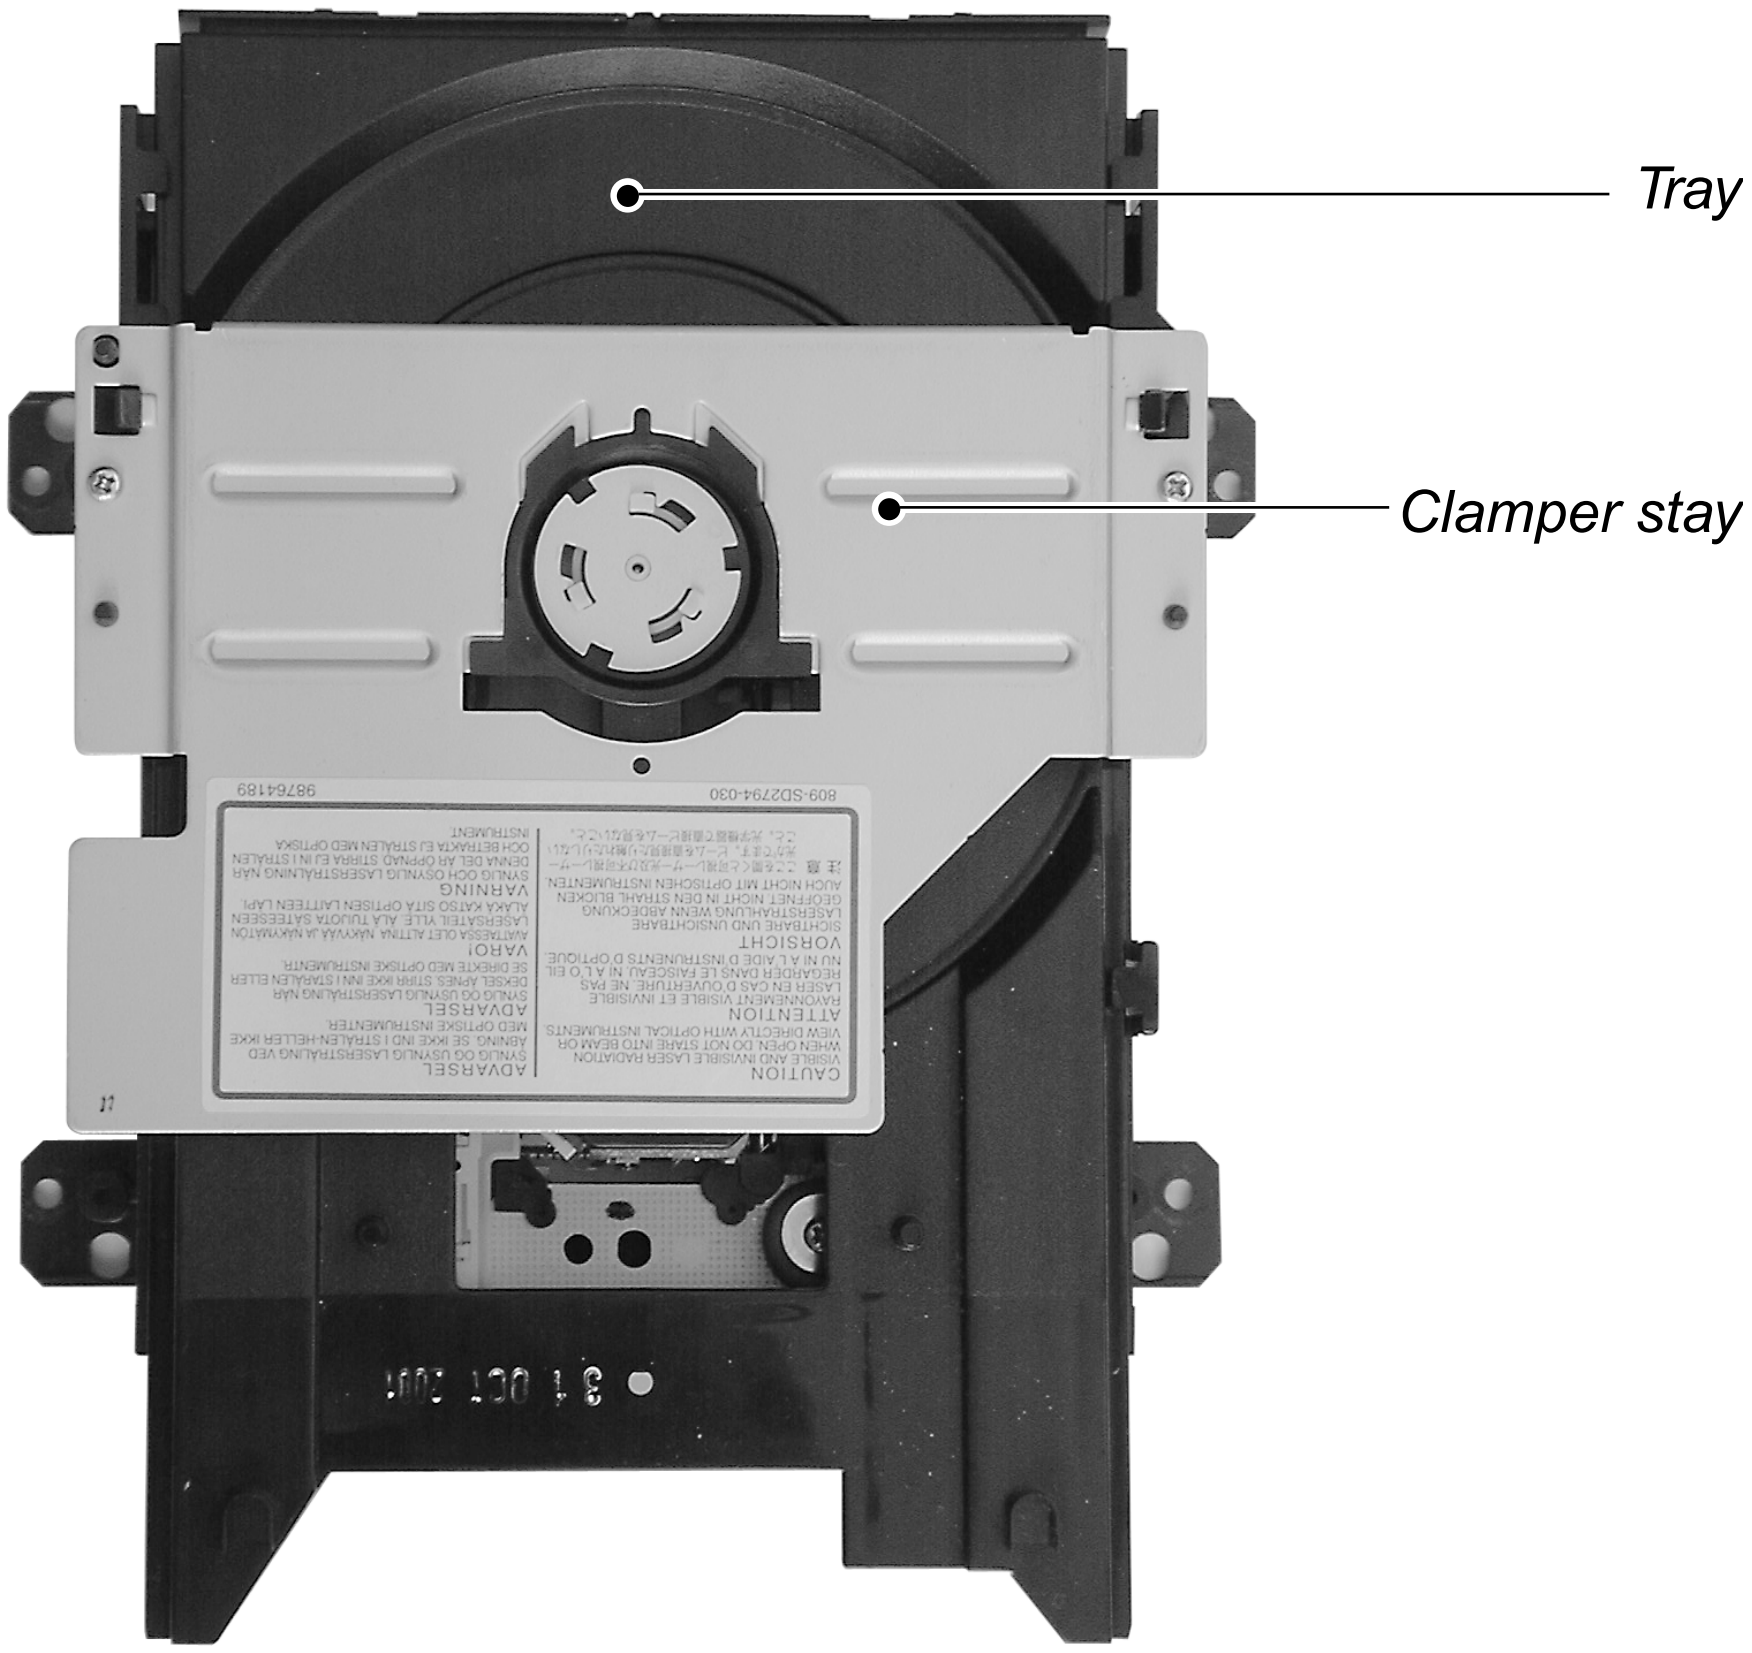
Tray
Clamper stay

Fig. 1-2-7 Mechanism chassis assembly (Top side)

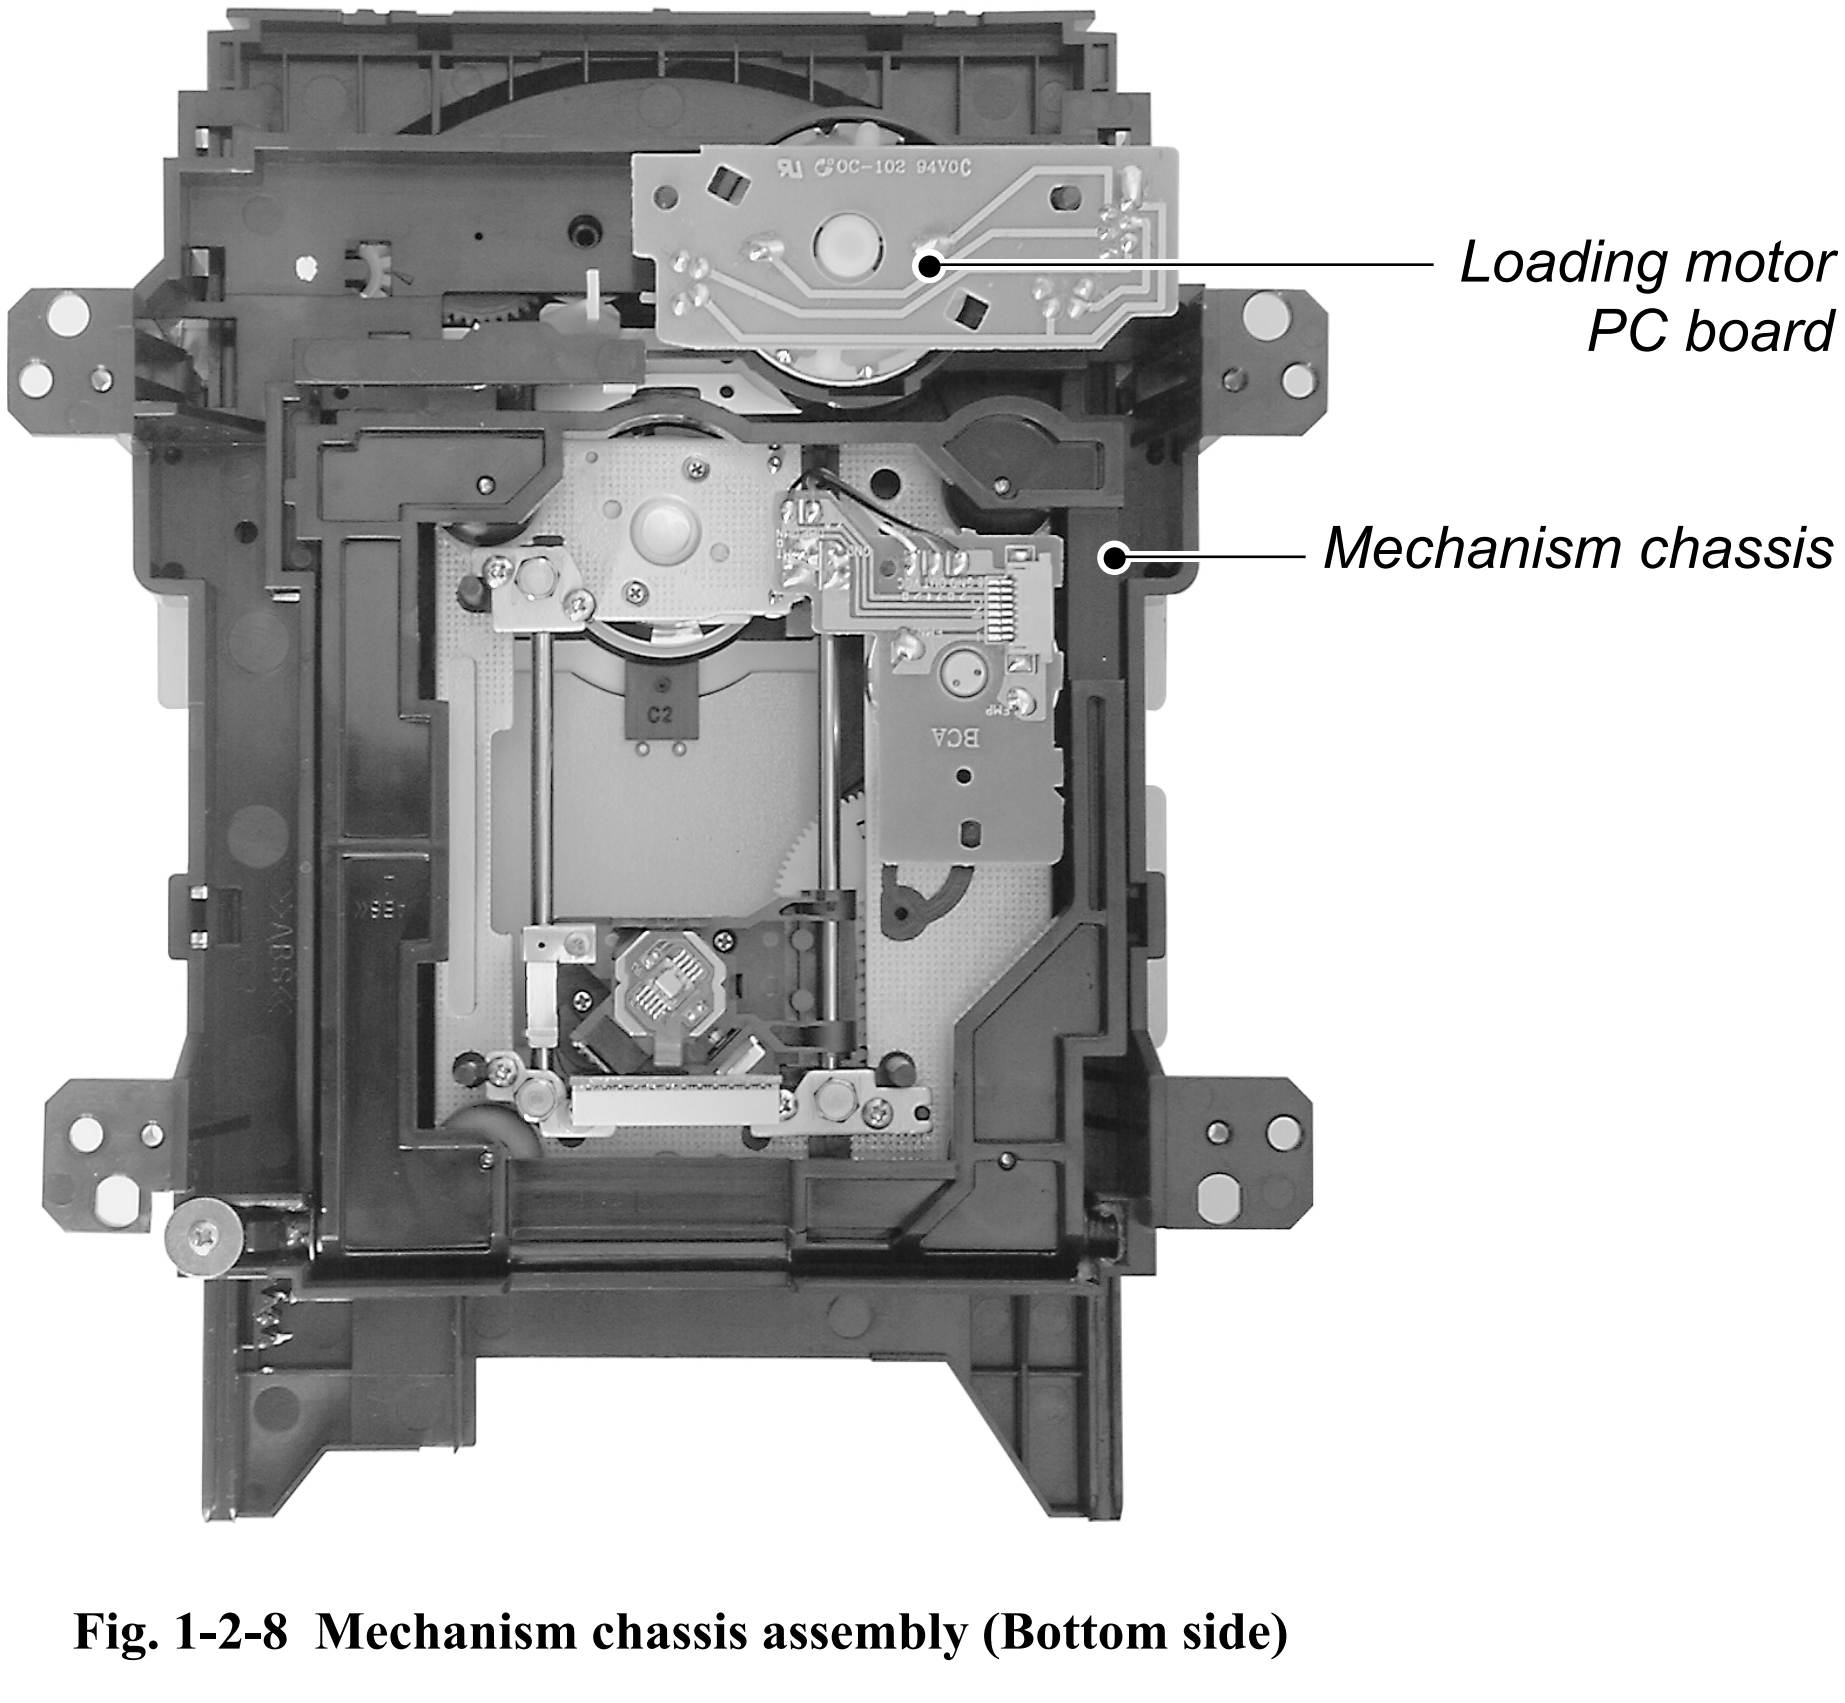
Loading motor
PC board
Mechanism chassis

Fig. 1-2-8 Mechanism chassis assembly (Bottom side)

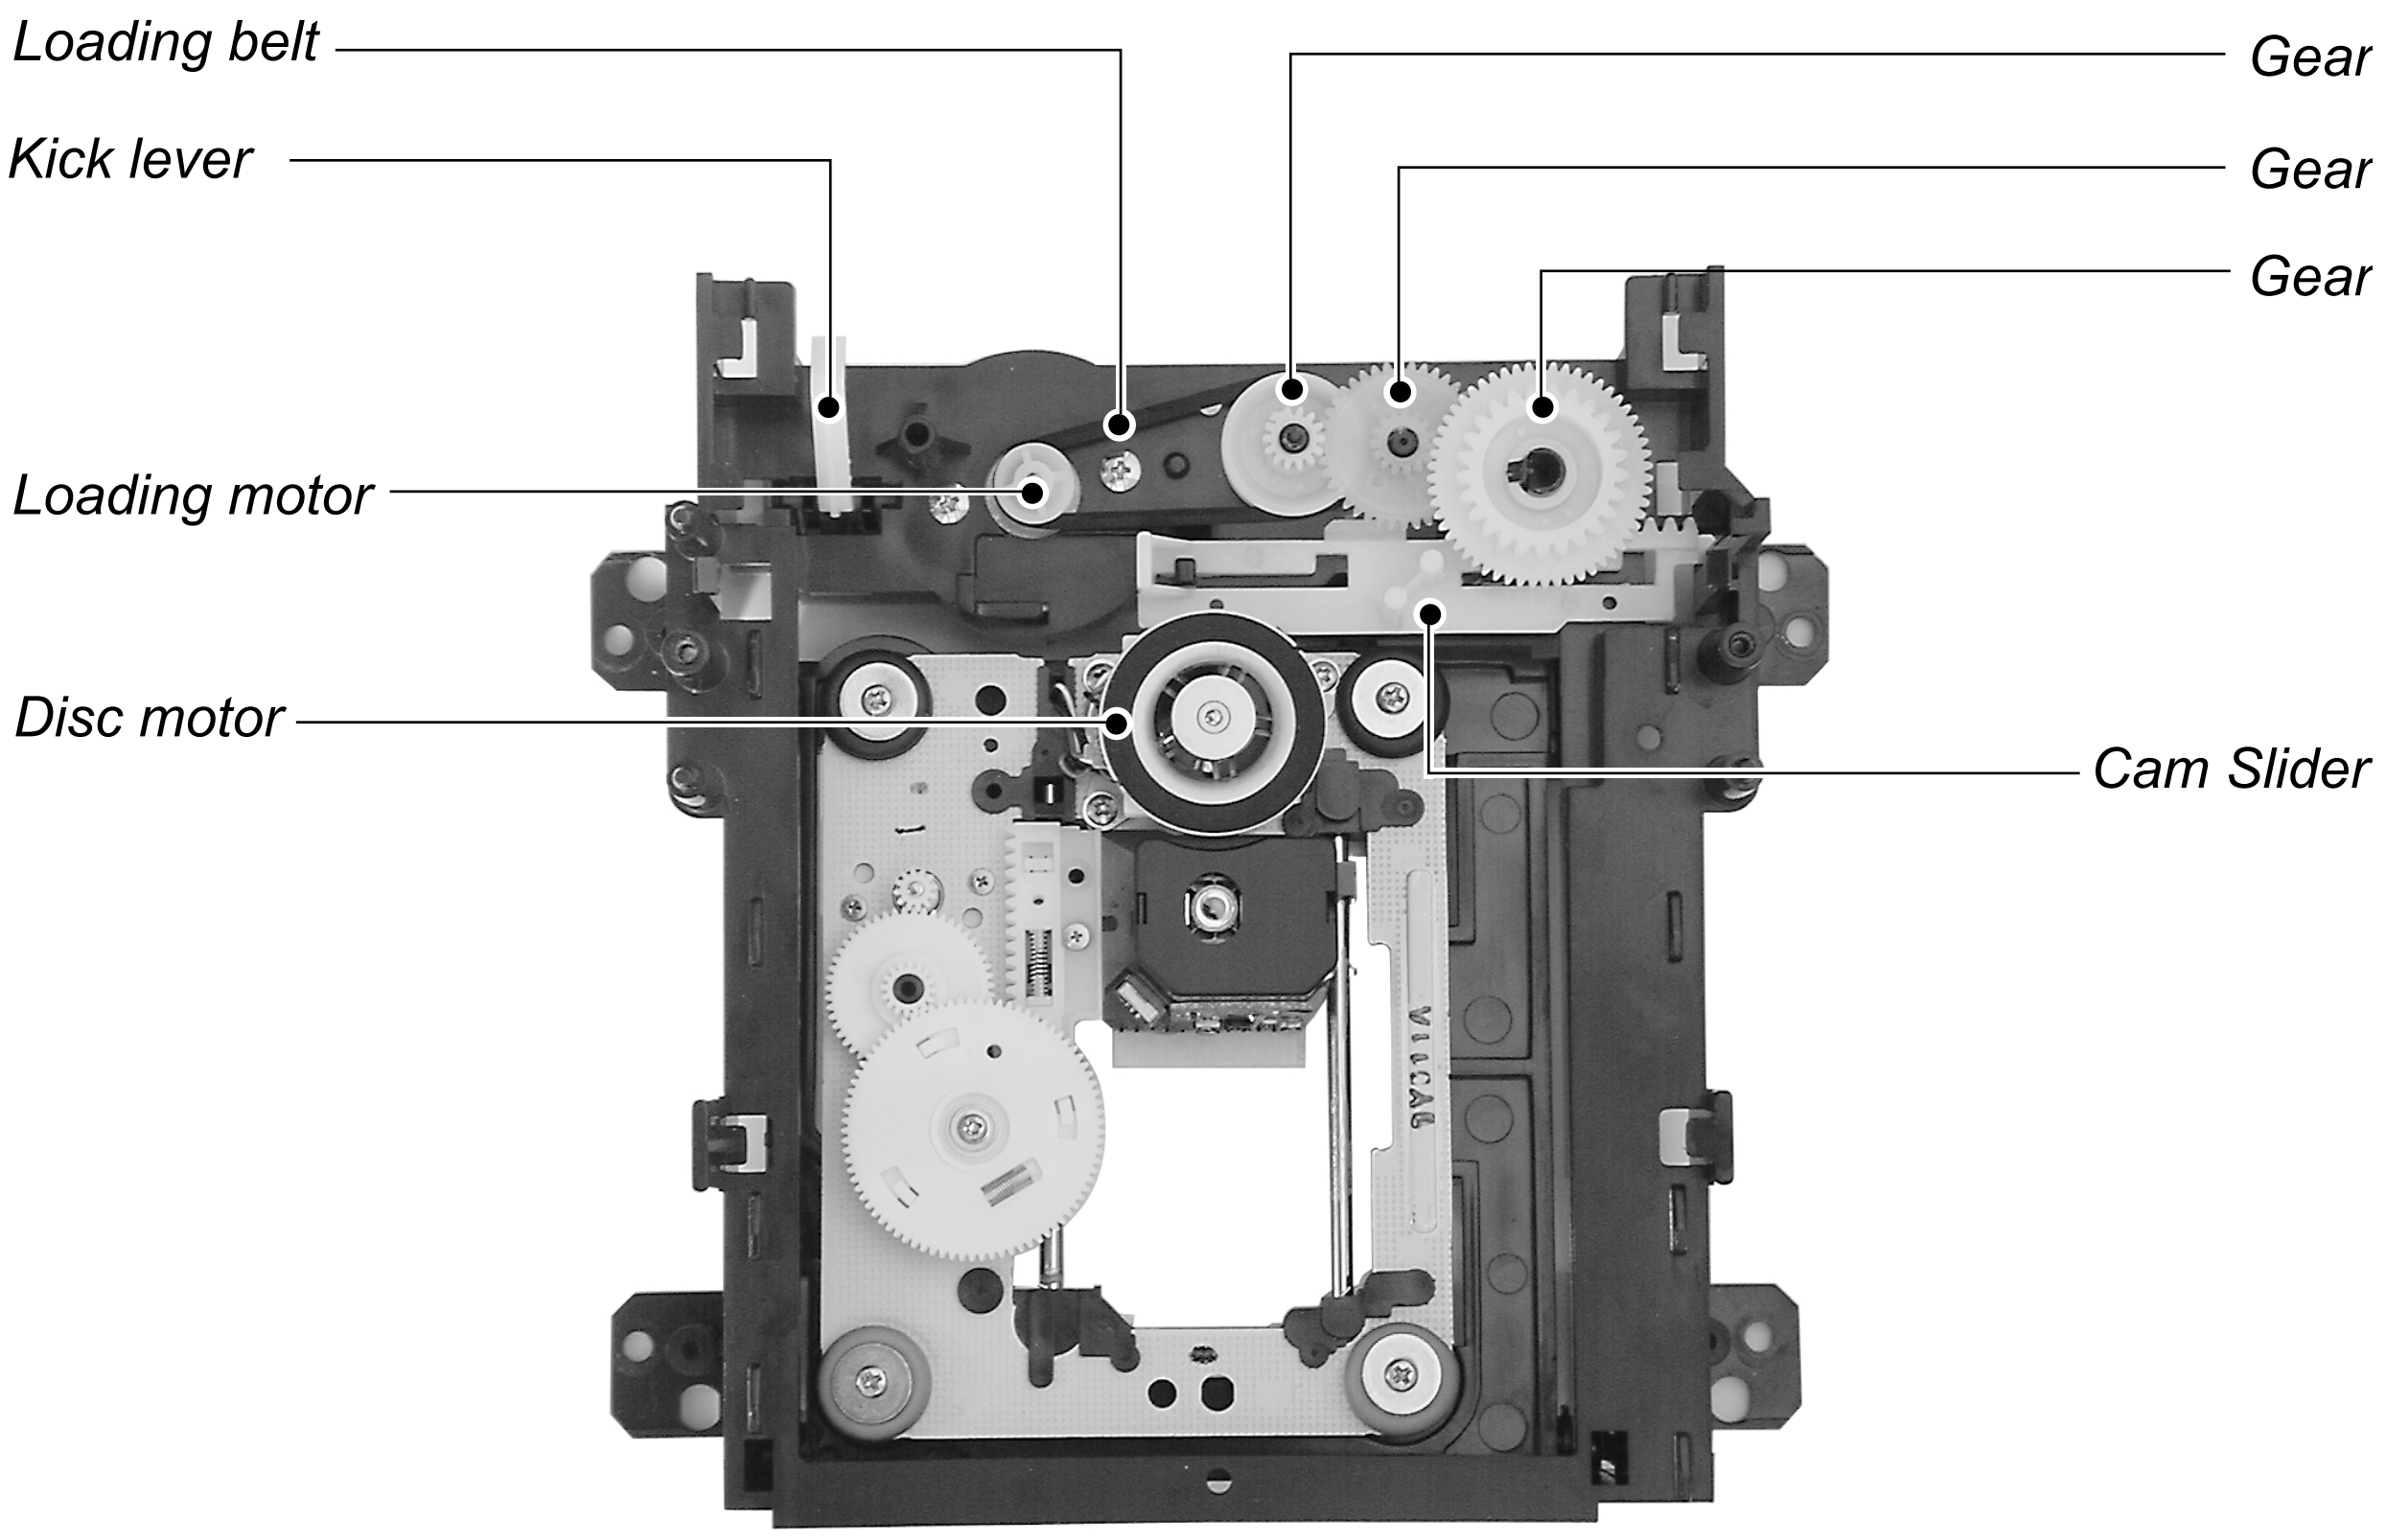
Loading belt
Kick lever
Loading motor
Disc motor
Gear
Gear
Gear
Cam Slider
VIICAL

Fig. 1-2-9 Mechanism chassis assembly (Internal side)

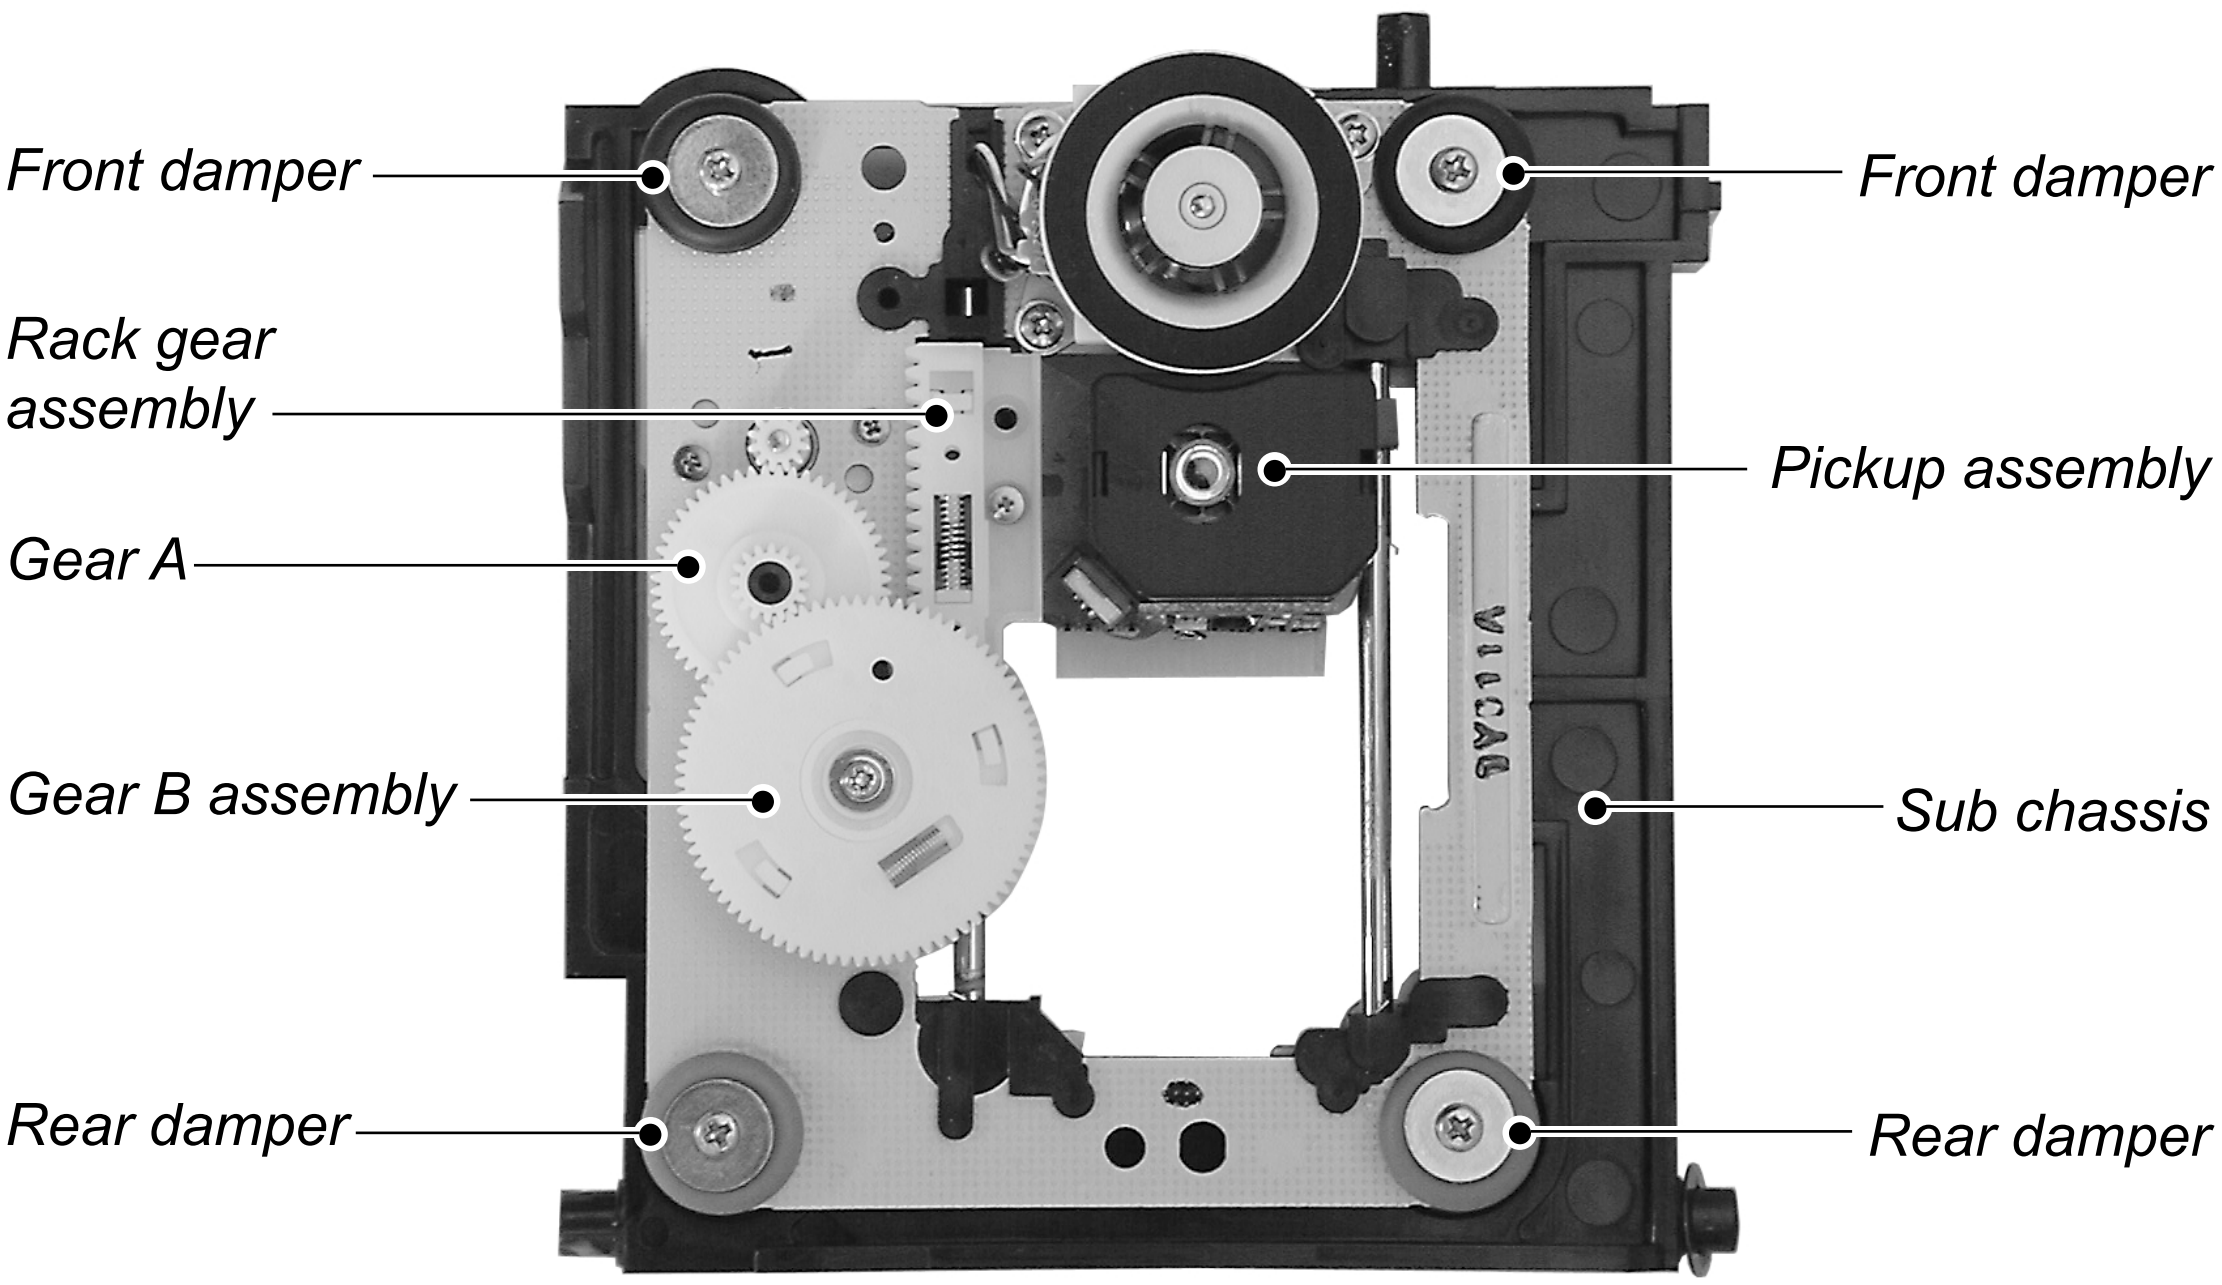
Front damper
Rack gear assembly
Gear A
Gear B assembly
Rear damper
Front damper
Pickup assembly
Sub chassis
Rear damper

Fig. 1-2-10 Pickup mechanism chassis assembly (Top side)

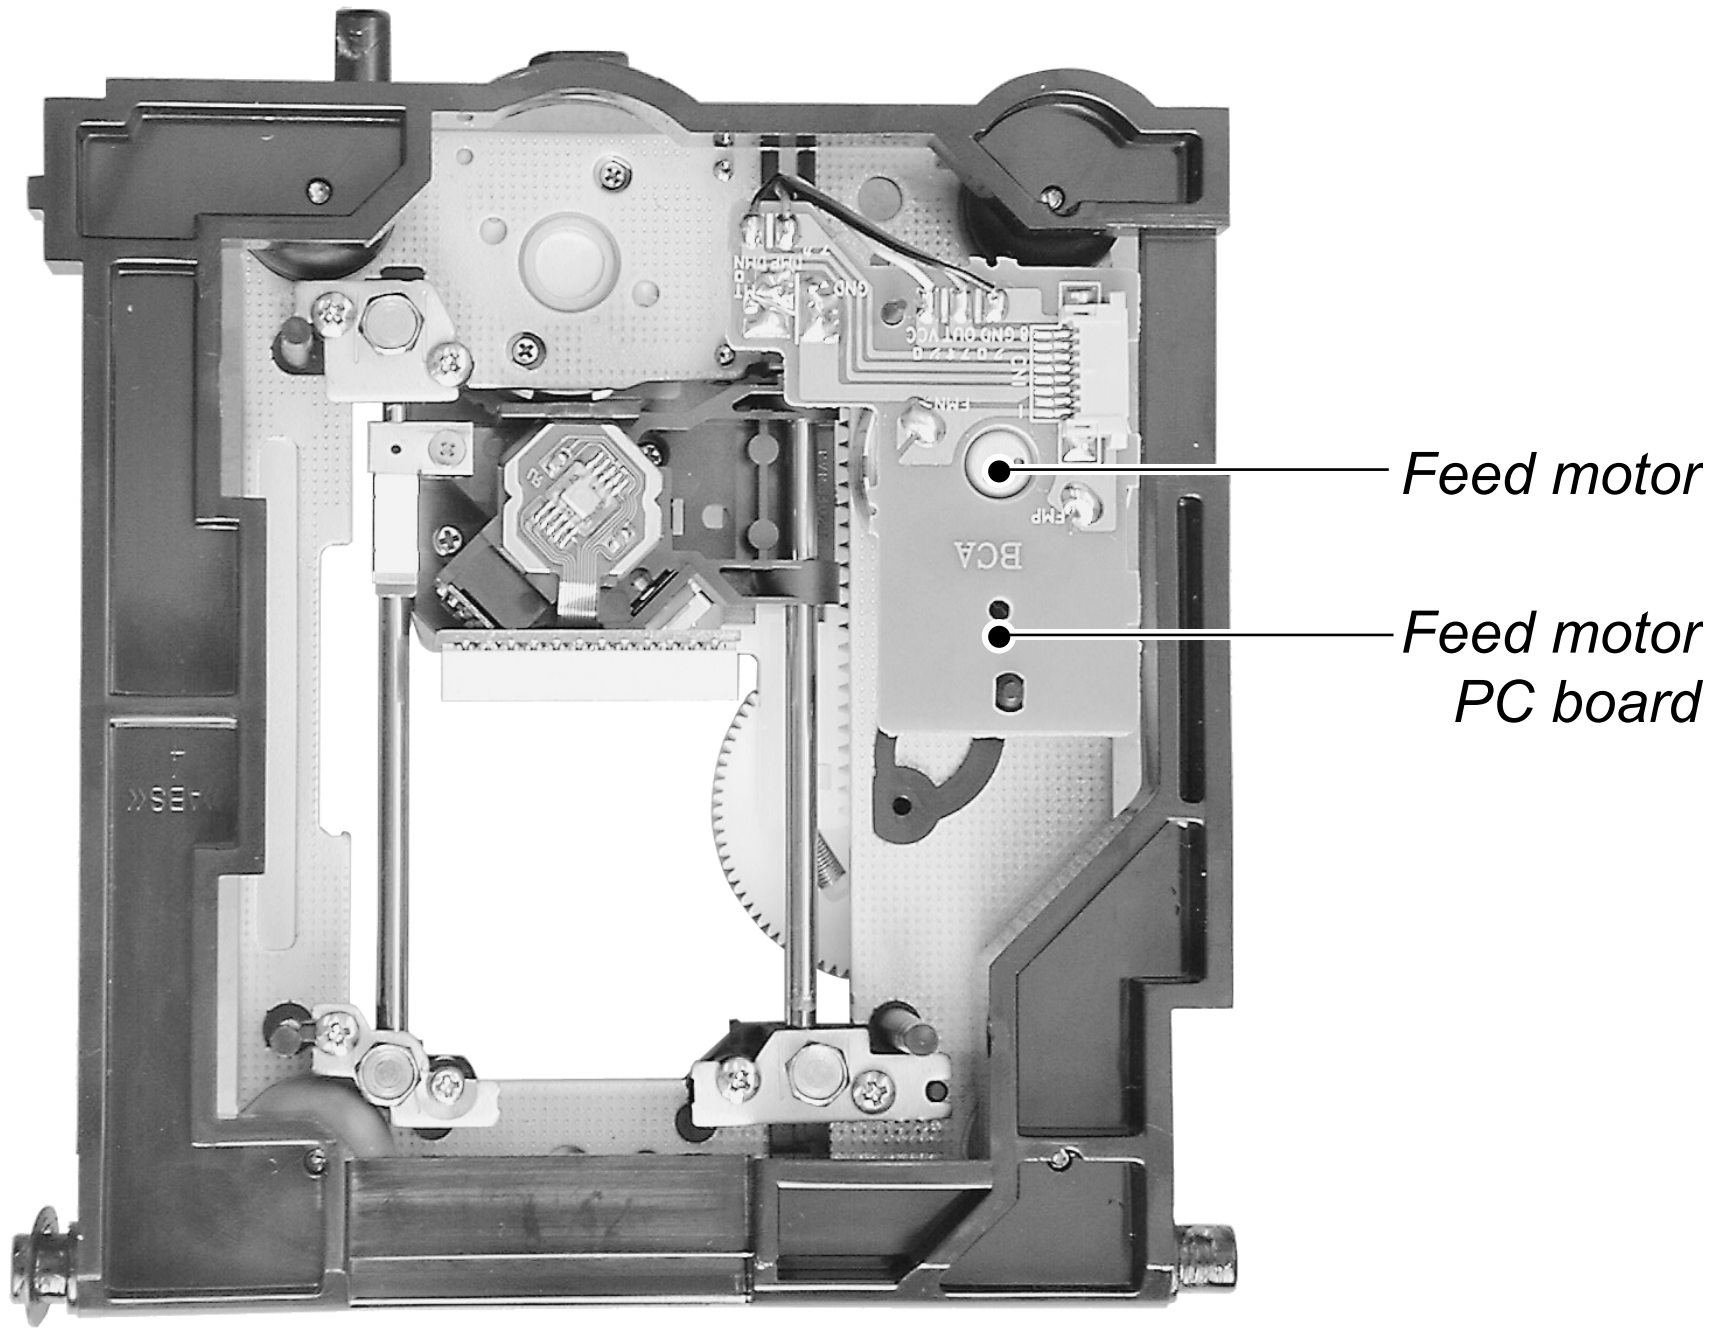
Feed motor
Feed motor PC board

Fig. 1-2-11 Pickup mechanism chassis assembly (Bottom side)

3. TROUBLESHOOTING

3-1. Main Circuit

3-1-1. Servo System

(1) Initial Operation after Power ON

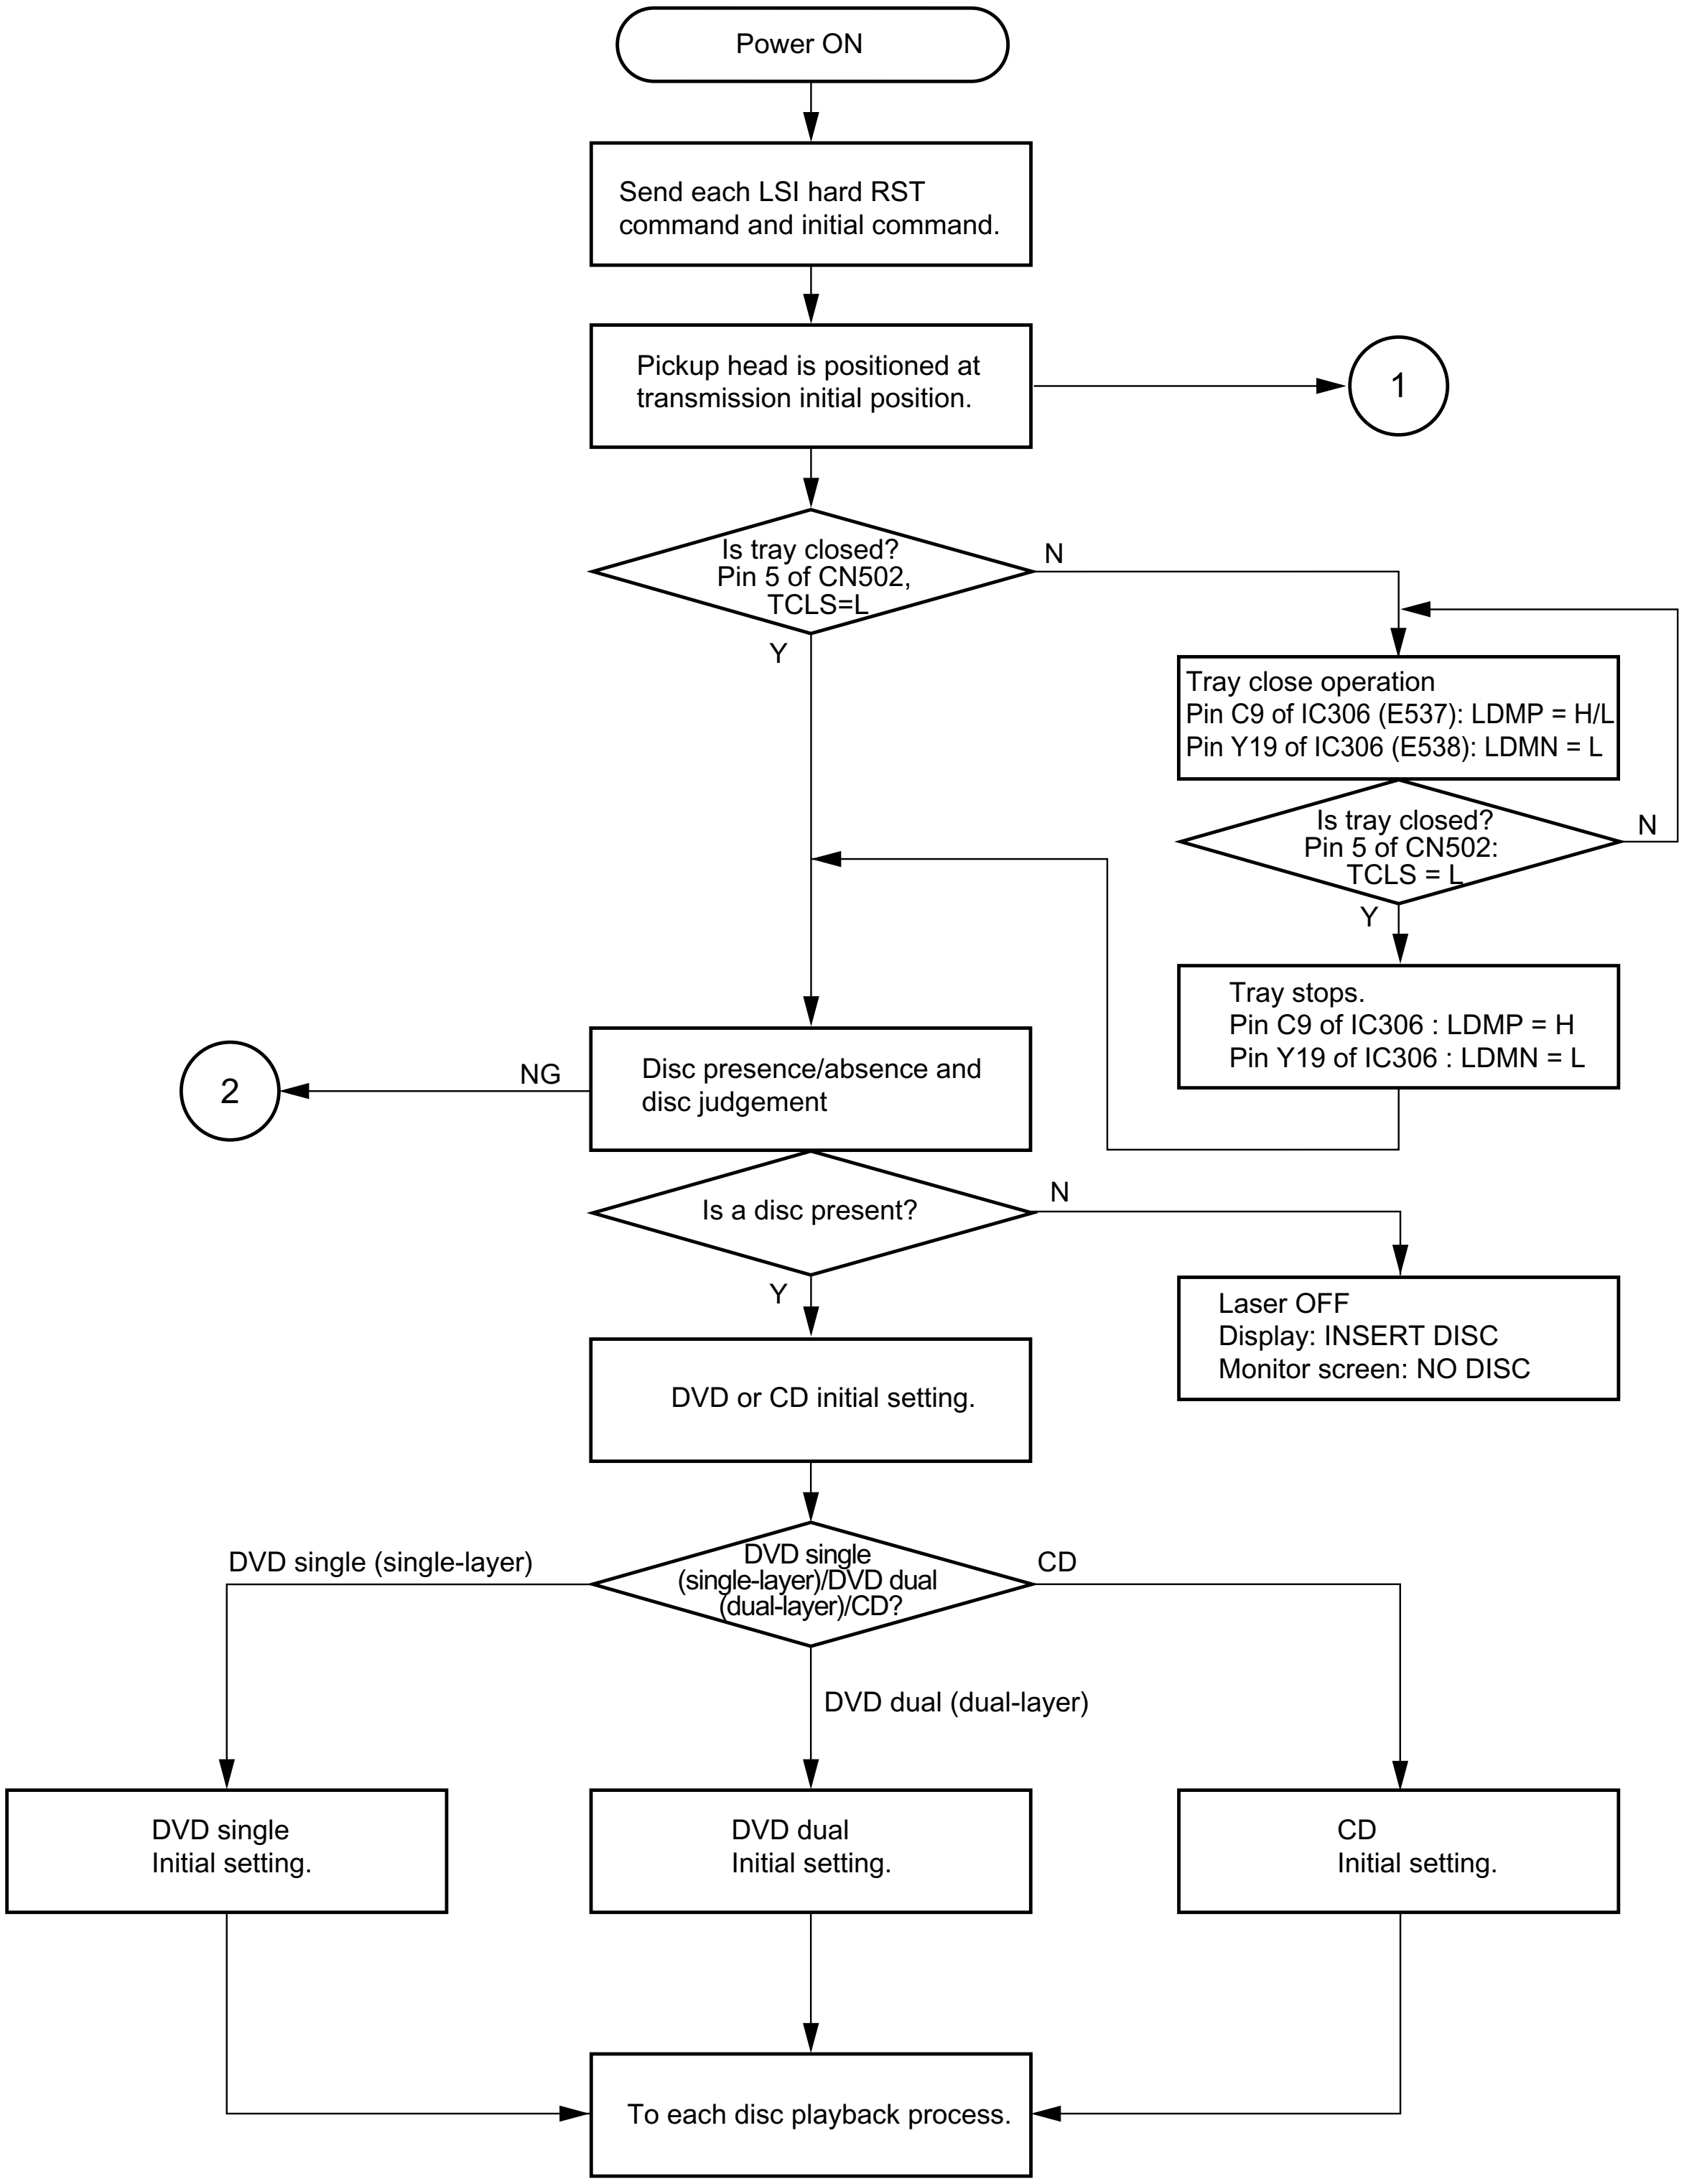

Power ON
Send each LSI hard RST command and initial command.
Pickup head is positioned at transmission initial position.
1
Is tray closed? Pin 5 of CN502, TCLS=L
N
Y
Tray close operation
Pin C9 of IC306 (E537): LDMP = H/L
Pin Y19 of IC306 (E538): LDMN = L
Is tray closed? Pin 5 of CN502: TCLS = L
N
Y
Tray stops.
Pin C9 of IC306 : LDMP = H
Pin Y19 of IC306 : LDMN = L
2
NG
Disc presence/absence and disc judgement
Is a disc present?
N
Y
Laser OFF
Display: INSERT DISC
Monitor screen: NO DISC
DVD or CD initial setting.
DVD single (single-layer)
DVD single (single-layer)/DVD dual (dual-layer)/CD?
CD
DVD dual (dual-layer)
DVD single Initial setting.
DVD dual Initial setting.
CD Initial setting.
To each disc playback process.

Fig. 1-3-1

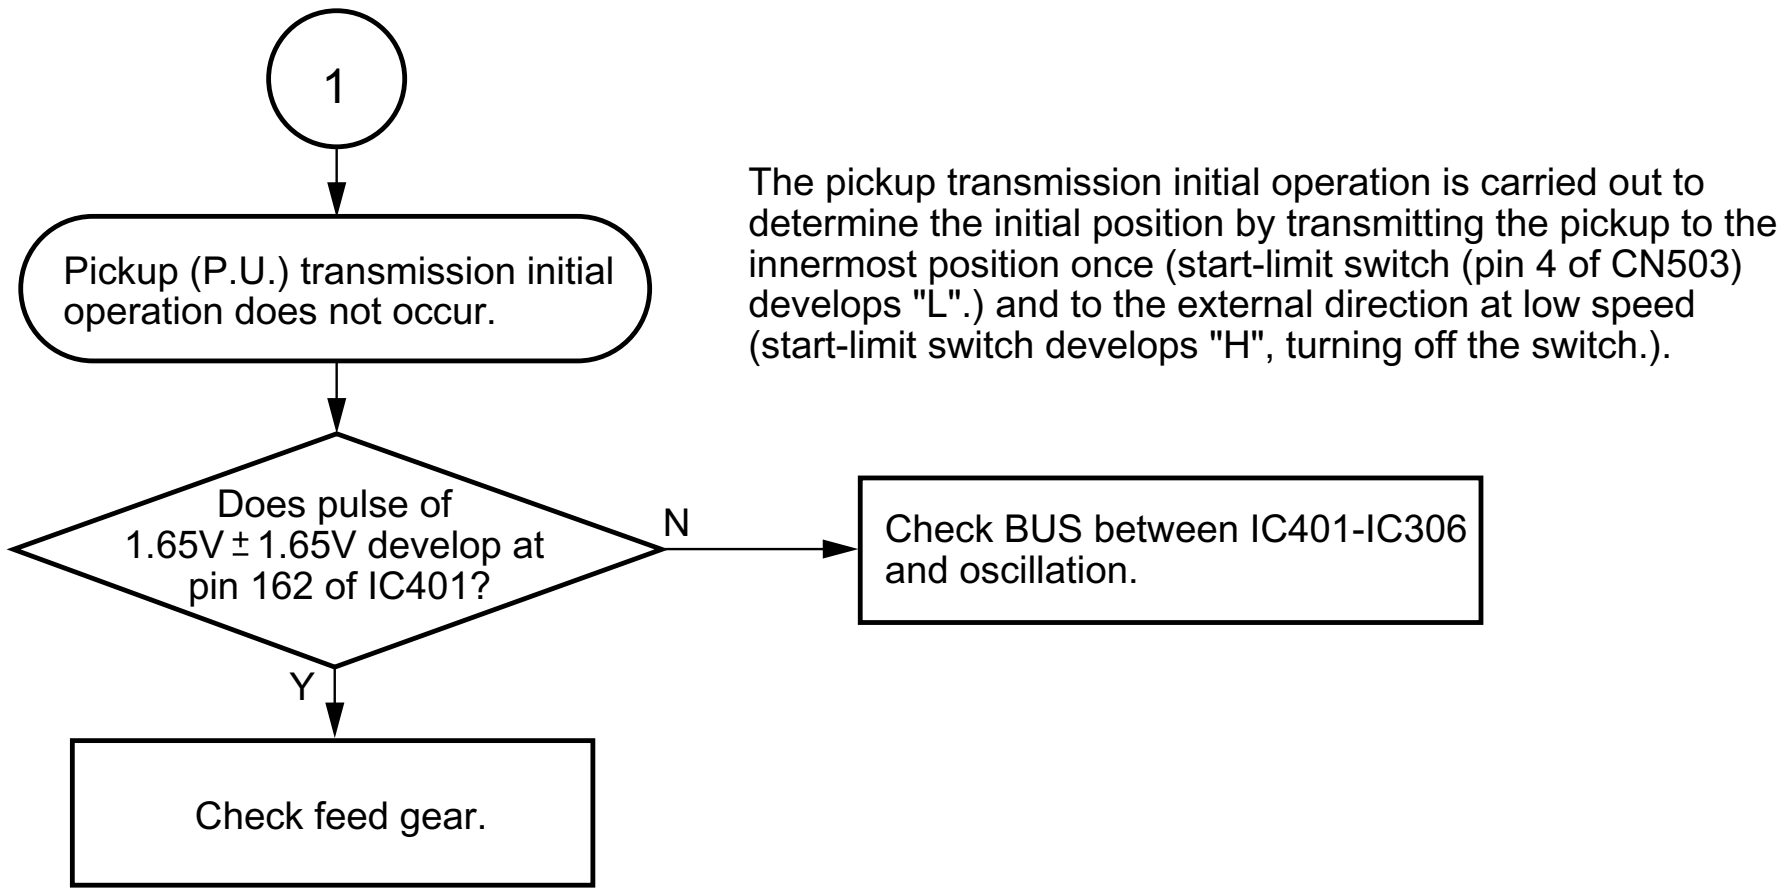
1
Pickup (P.U.) transmission initial operation does not occur.
Does pulse of 1.65V ± 1.65V develop at pin 162 of IC401?
N
Check BUS between IC401-IC306 and oscillation.
Y
Check feed gear.

The pickup transmission initial operation is carried out to determine the initial position by transmitting the pickup to the innermost position once (start-limit switch (pin 4 of CN503) develops "L".) and to the external direction at low speed (start-limit switch develops "H", turning off the switch.).

Fig. 1-3-2

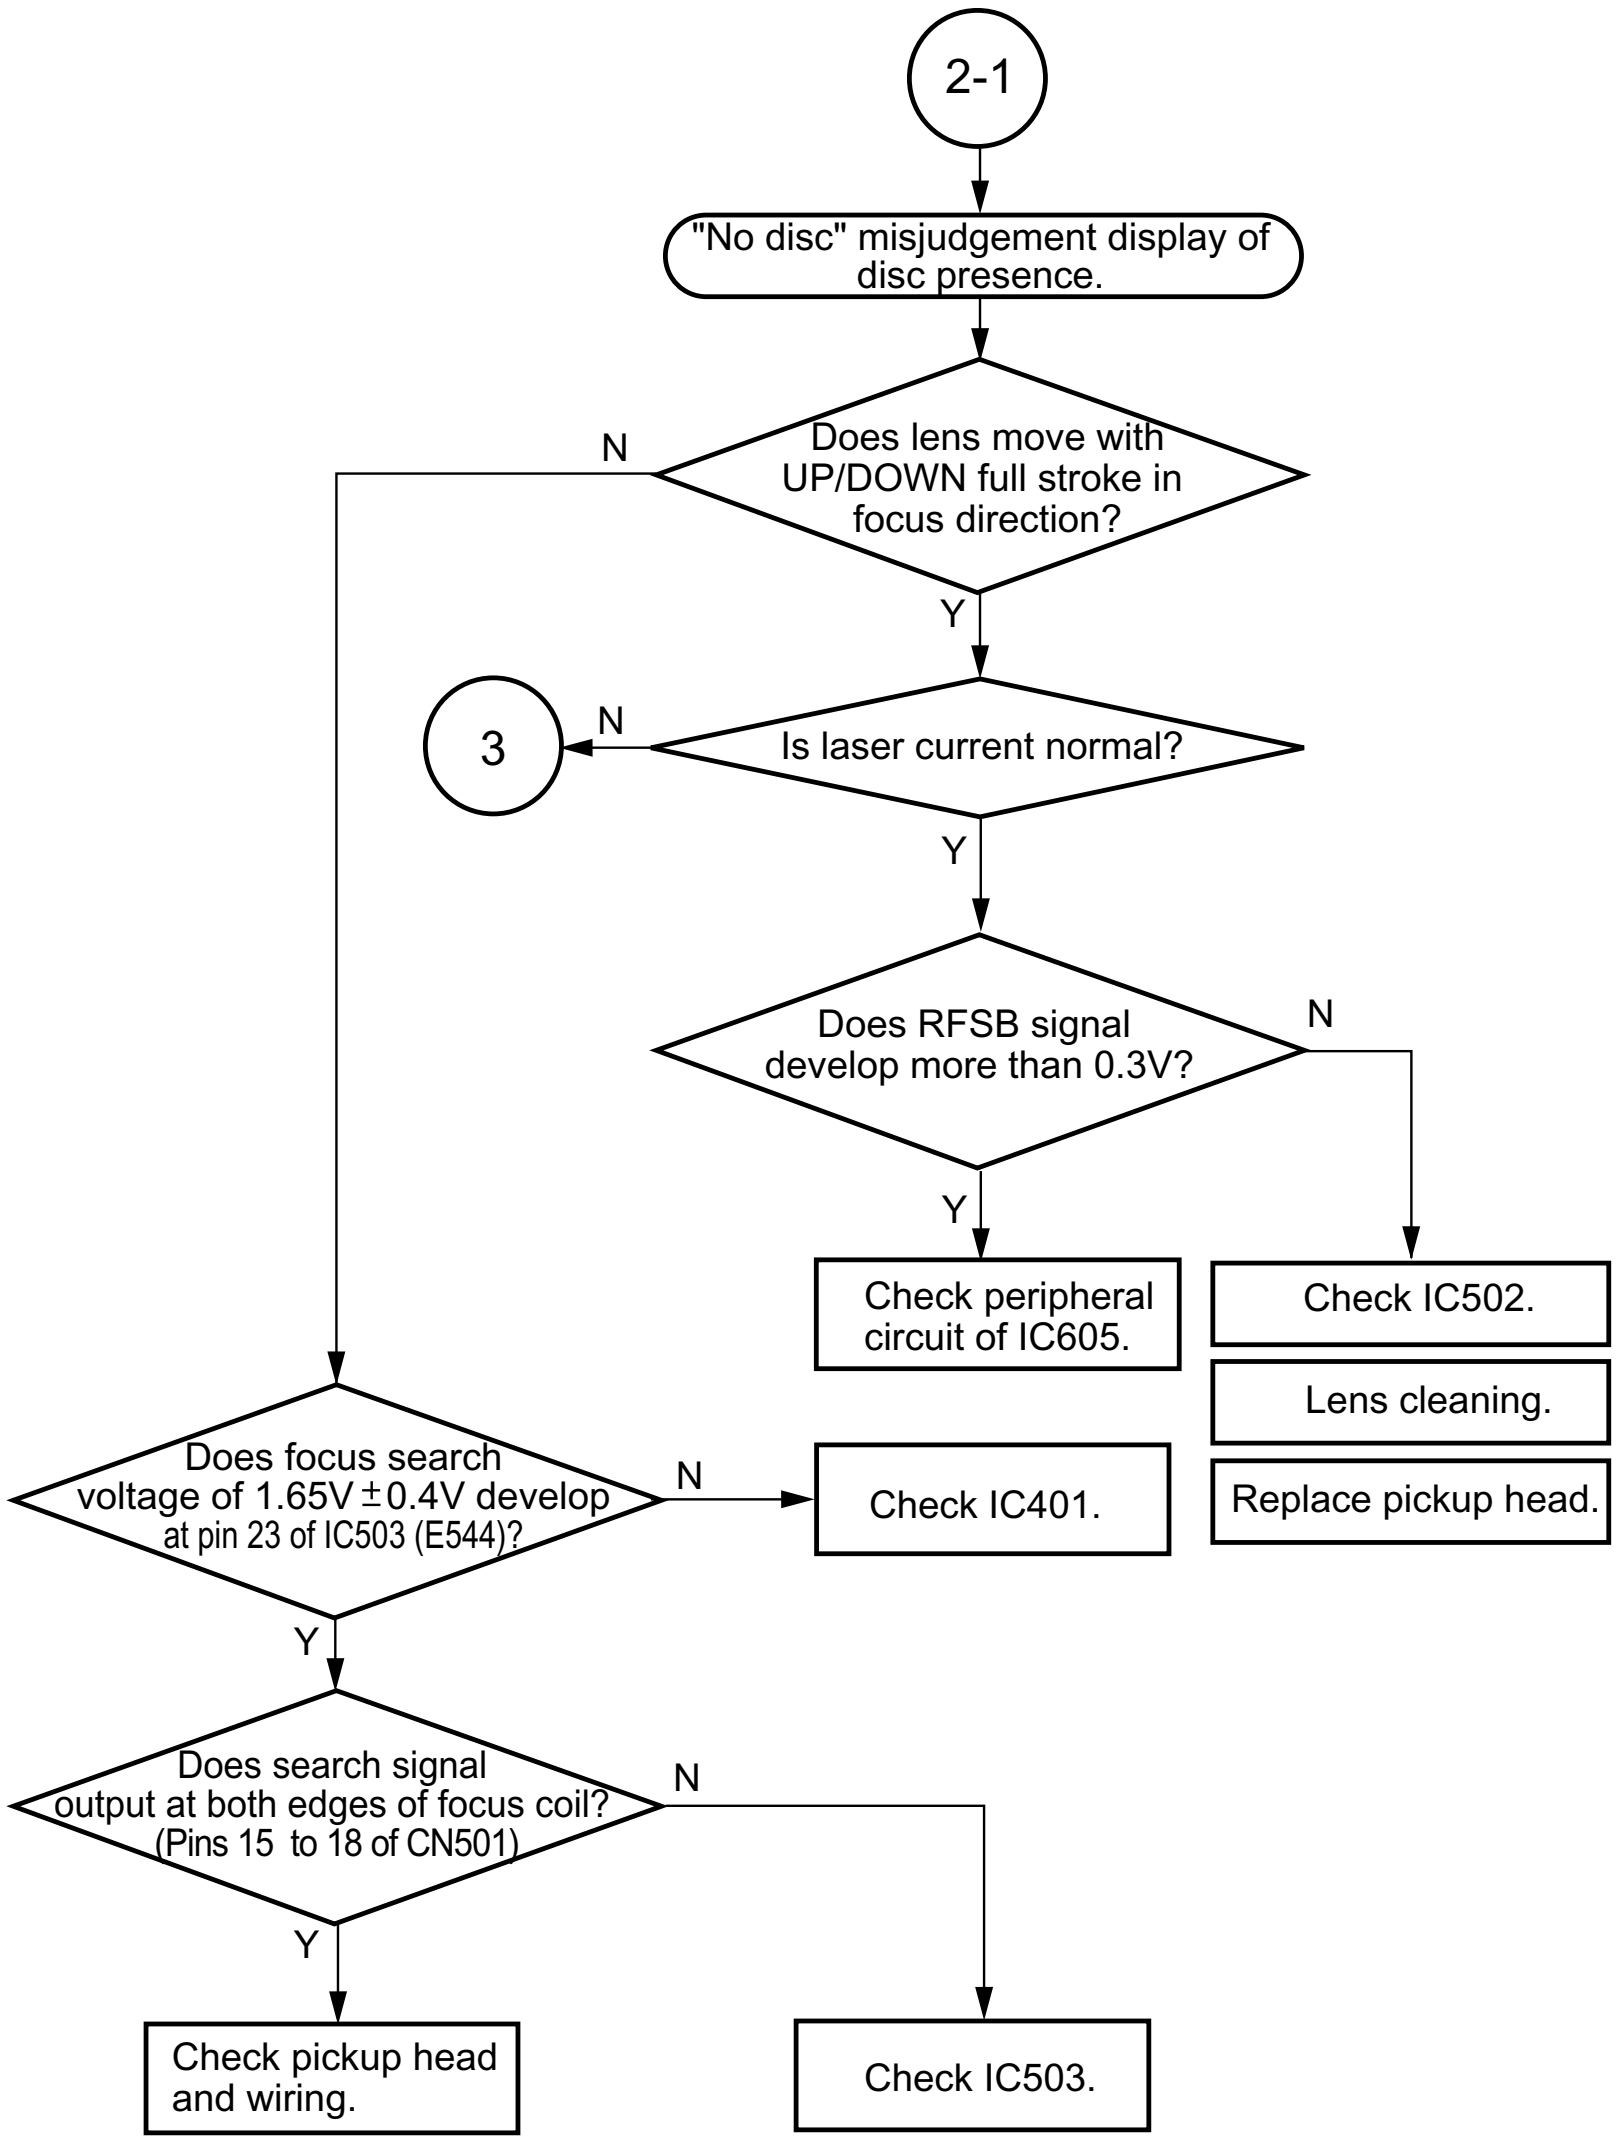
2-1
"No disc" misjudgement display of disc presence.
Does lens move with UP/DOWN full stroke in focus direction?
N
Y
3
N
Is laser current normal?
Y
Does RFSB signal develop more than 0.3V?
N
Y
Check peripheral circuit of IC605.
Check IC502.
Lens cleaning.
Replace pickup head.
Does focus search voltage of 1.65V ± 0.4V develop at pin 23 of IC503 (E544)?
N
Check IC401.
Y
Does search signal output at both edges of focus coil? (Pins 15 to 18 of CN501)
N
Y
Check pickup head and wiring.
Check IC503.

Fig. 1-3-3

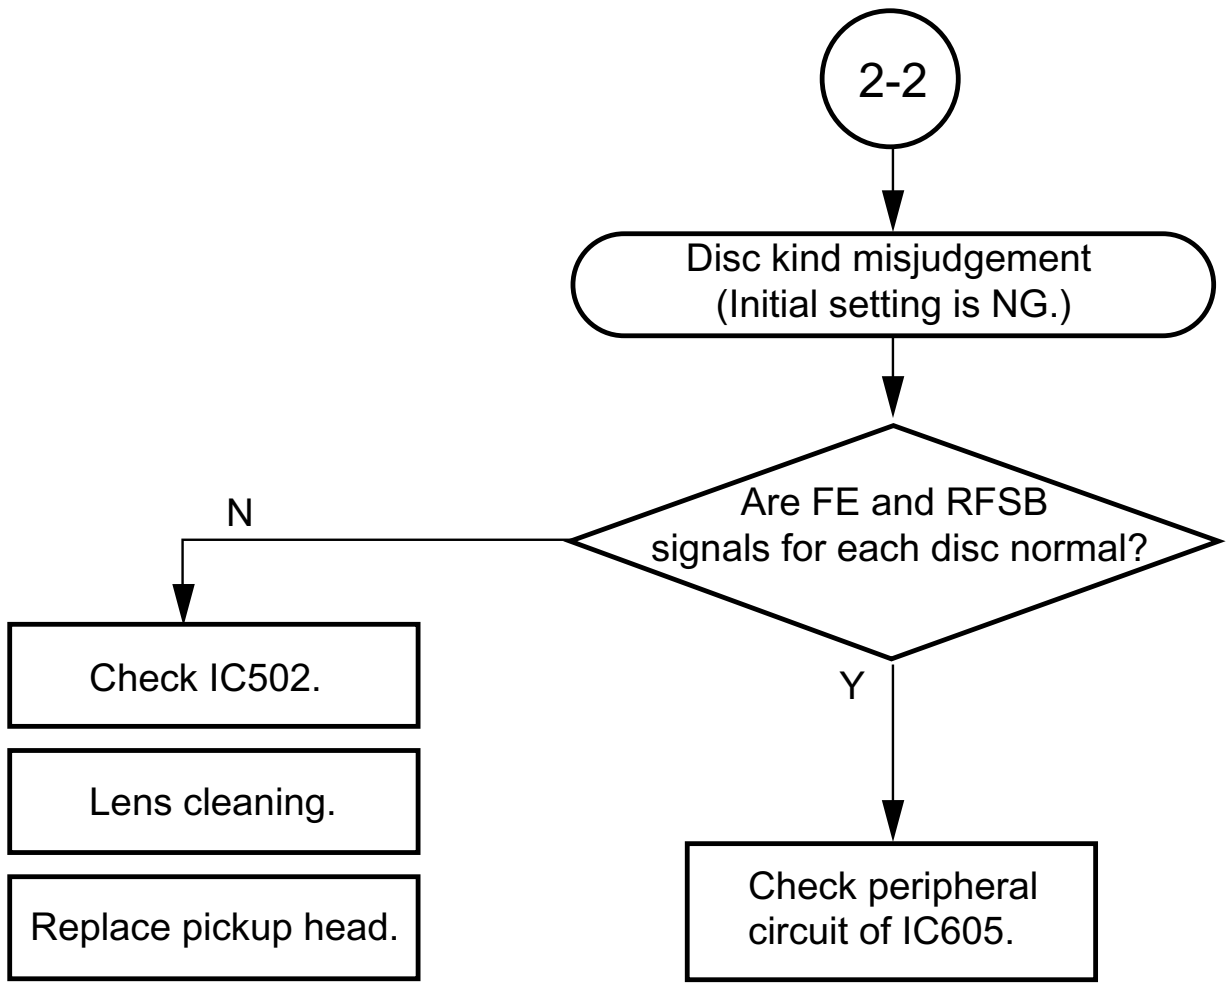
2-2
Disc kind misjudgement
(Initial setting is NG.)
Are FE and RFSB signals for each disc normal?
N
Y
Check IC502.
Lens cleaning.
Replace pickup head.
Check peripheral circuit of IC605.

Fig. 1-3-4

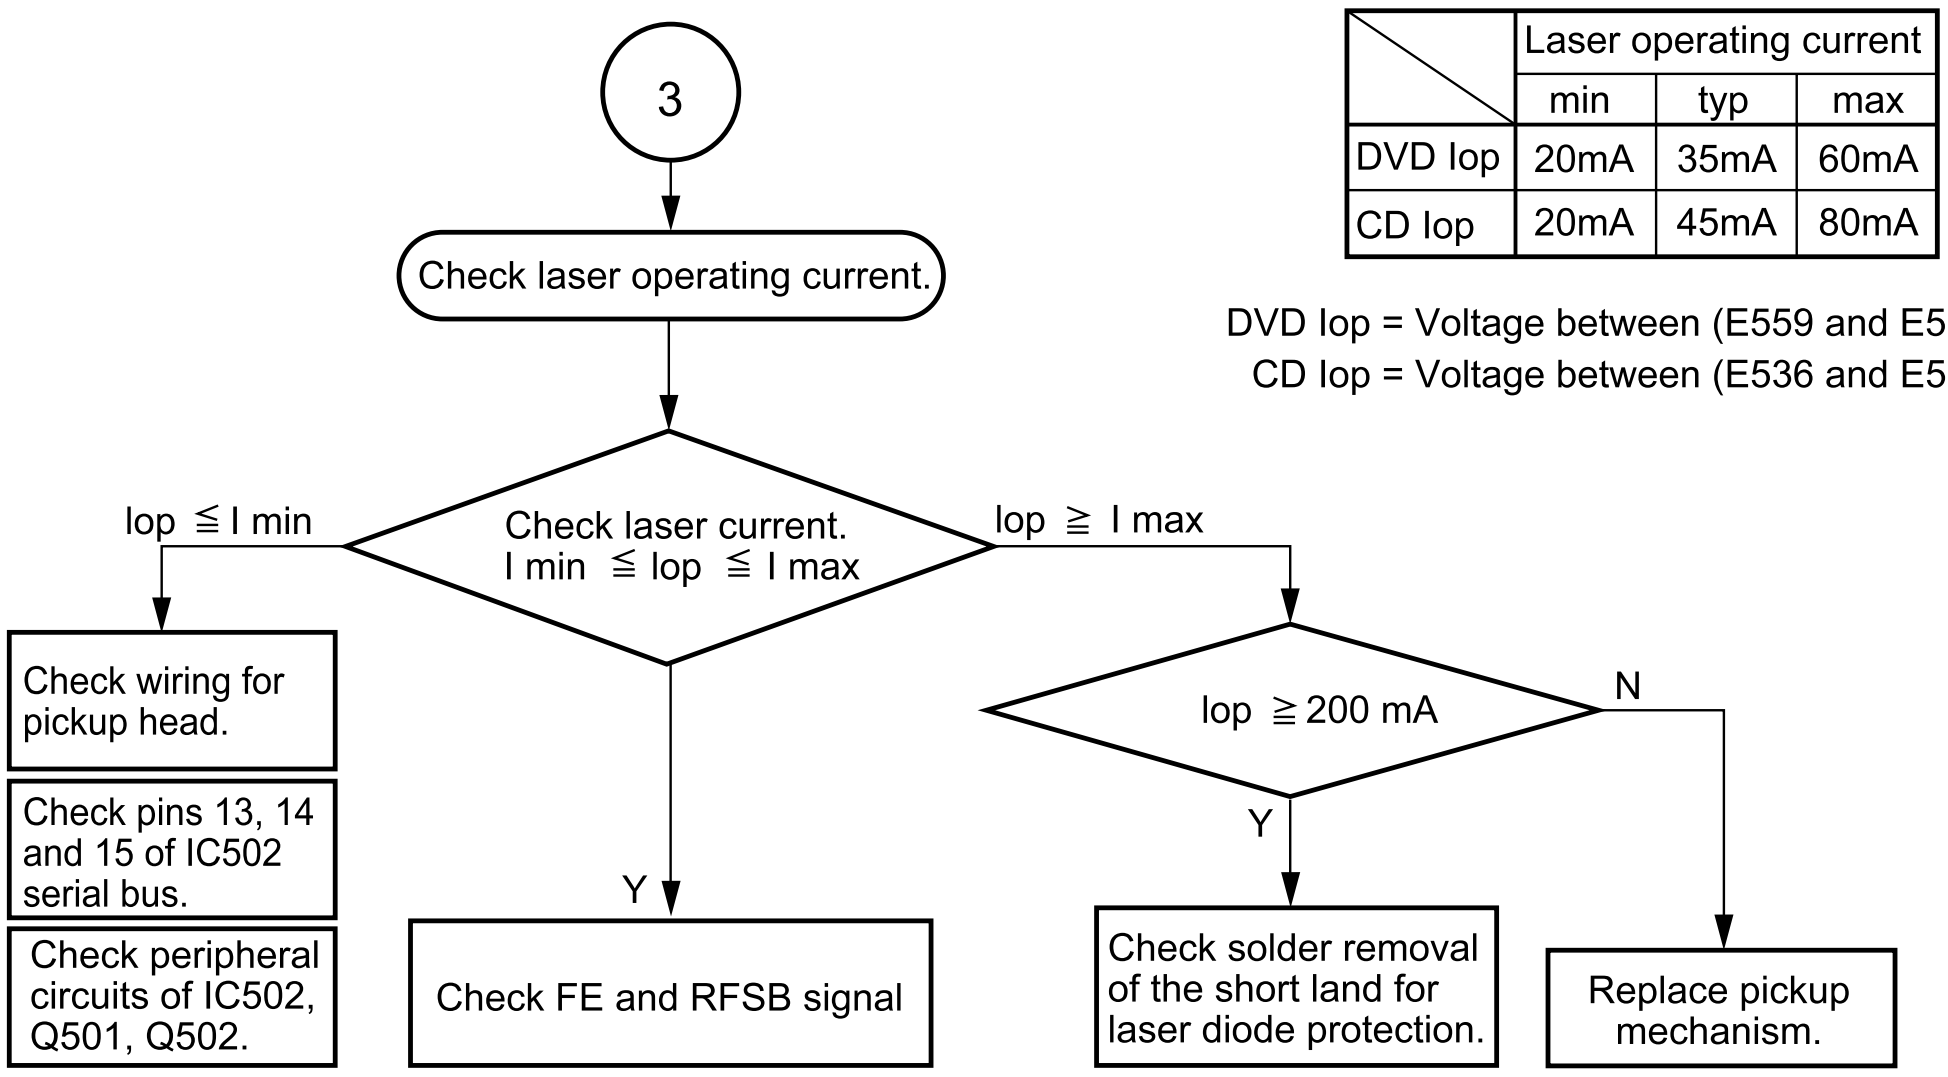
3
Check laser operating current.
Check laser current.
I min ≦ Iop ≦ I max
Iop ≦ I min
Iop ≧ I max
Y
Check wiring for pickup head.
Check pins 13, 14 and 15 of IC502 serial bus.
Check peripheral circuits of IC502, Q501, Q502.
Check FE and RFSB signal
Iop ≧ 200 mA
N
Y
Check solder removal of the short land for laser diode protection.
Replace pickup mechanism.

	Laser operating current		
	min	typ	max
DVD Iop	20mA	35mA	60mA
CD Iop	20mA	45mA	80mA

DVD Iop = Voltage between (E559 and E591) /10Ω
CD Iop = Voltage between (E536 and E591) /10Ω

To turn on each laser diode forcibly, press the following buttons on the remote controller.
DVD LD: ZOOM, 0, 3, 0, ZOOM
CD LD: ZOOM, 0, 3, 1, ZOOM
After checked the laser current, press POWER or OPEN/CLOSE button to turn it off.

CAUTION
- The laser ray emitting out from the pickup head is very harmful to your eyes. Keep your eyes from the objective lens at least 300mm distance during the pickup head operating.
- When you perform solder removal work, please turn OFF a set power supply and perform the ground of human body and a tool.

Fig. 1-3-5

DVD single (single-layer) disc detection waveform

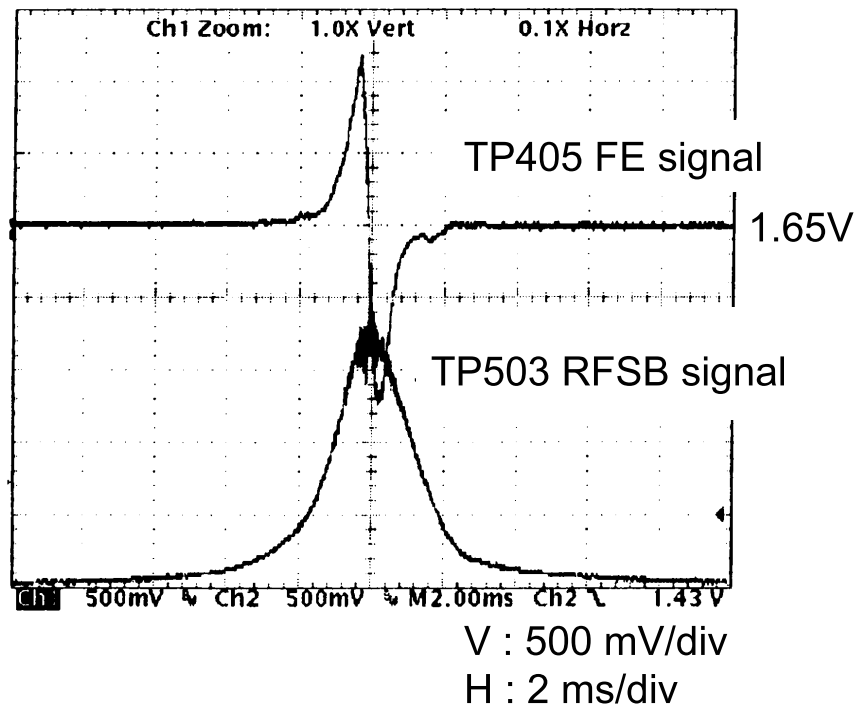

Fig. 1-3-6

DVD dual (dual-layer) disc detection waveform

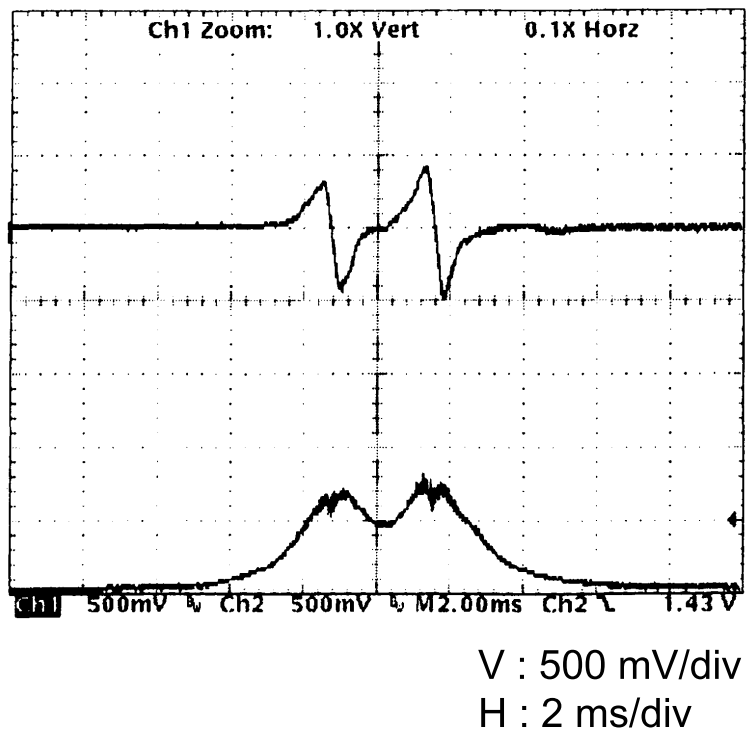

Fig. 1-3-7

CD disc detection waveform

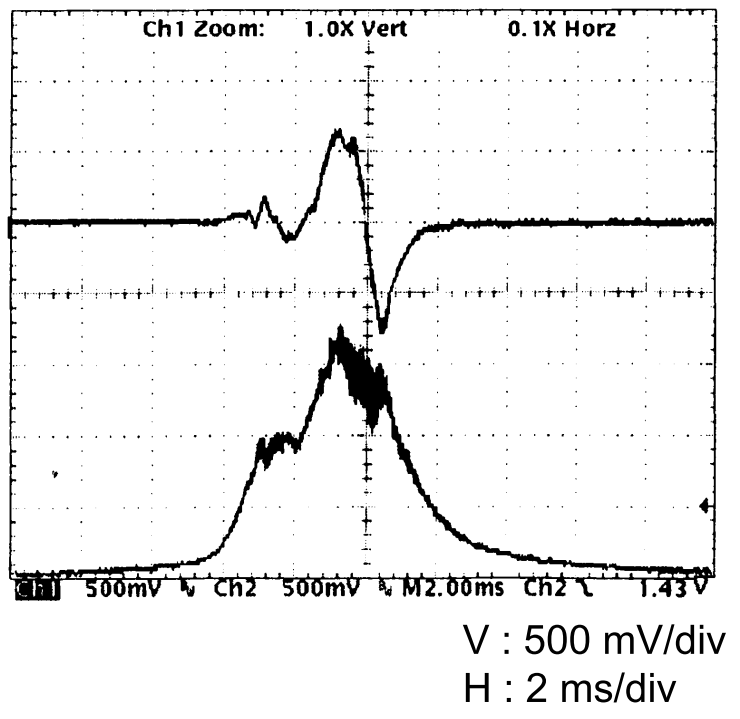

Fig. 1-3-8

(2) Picture appears (PLAY)

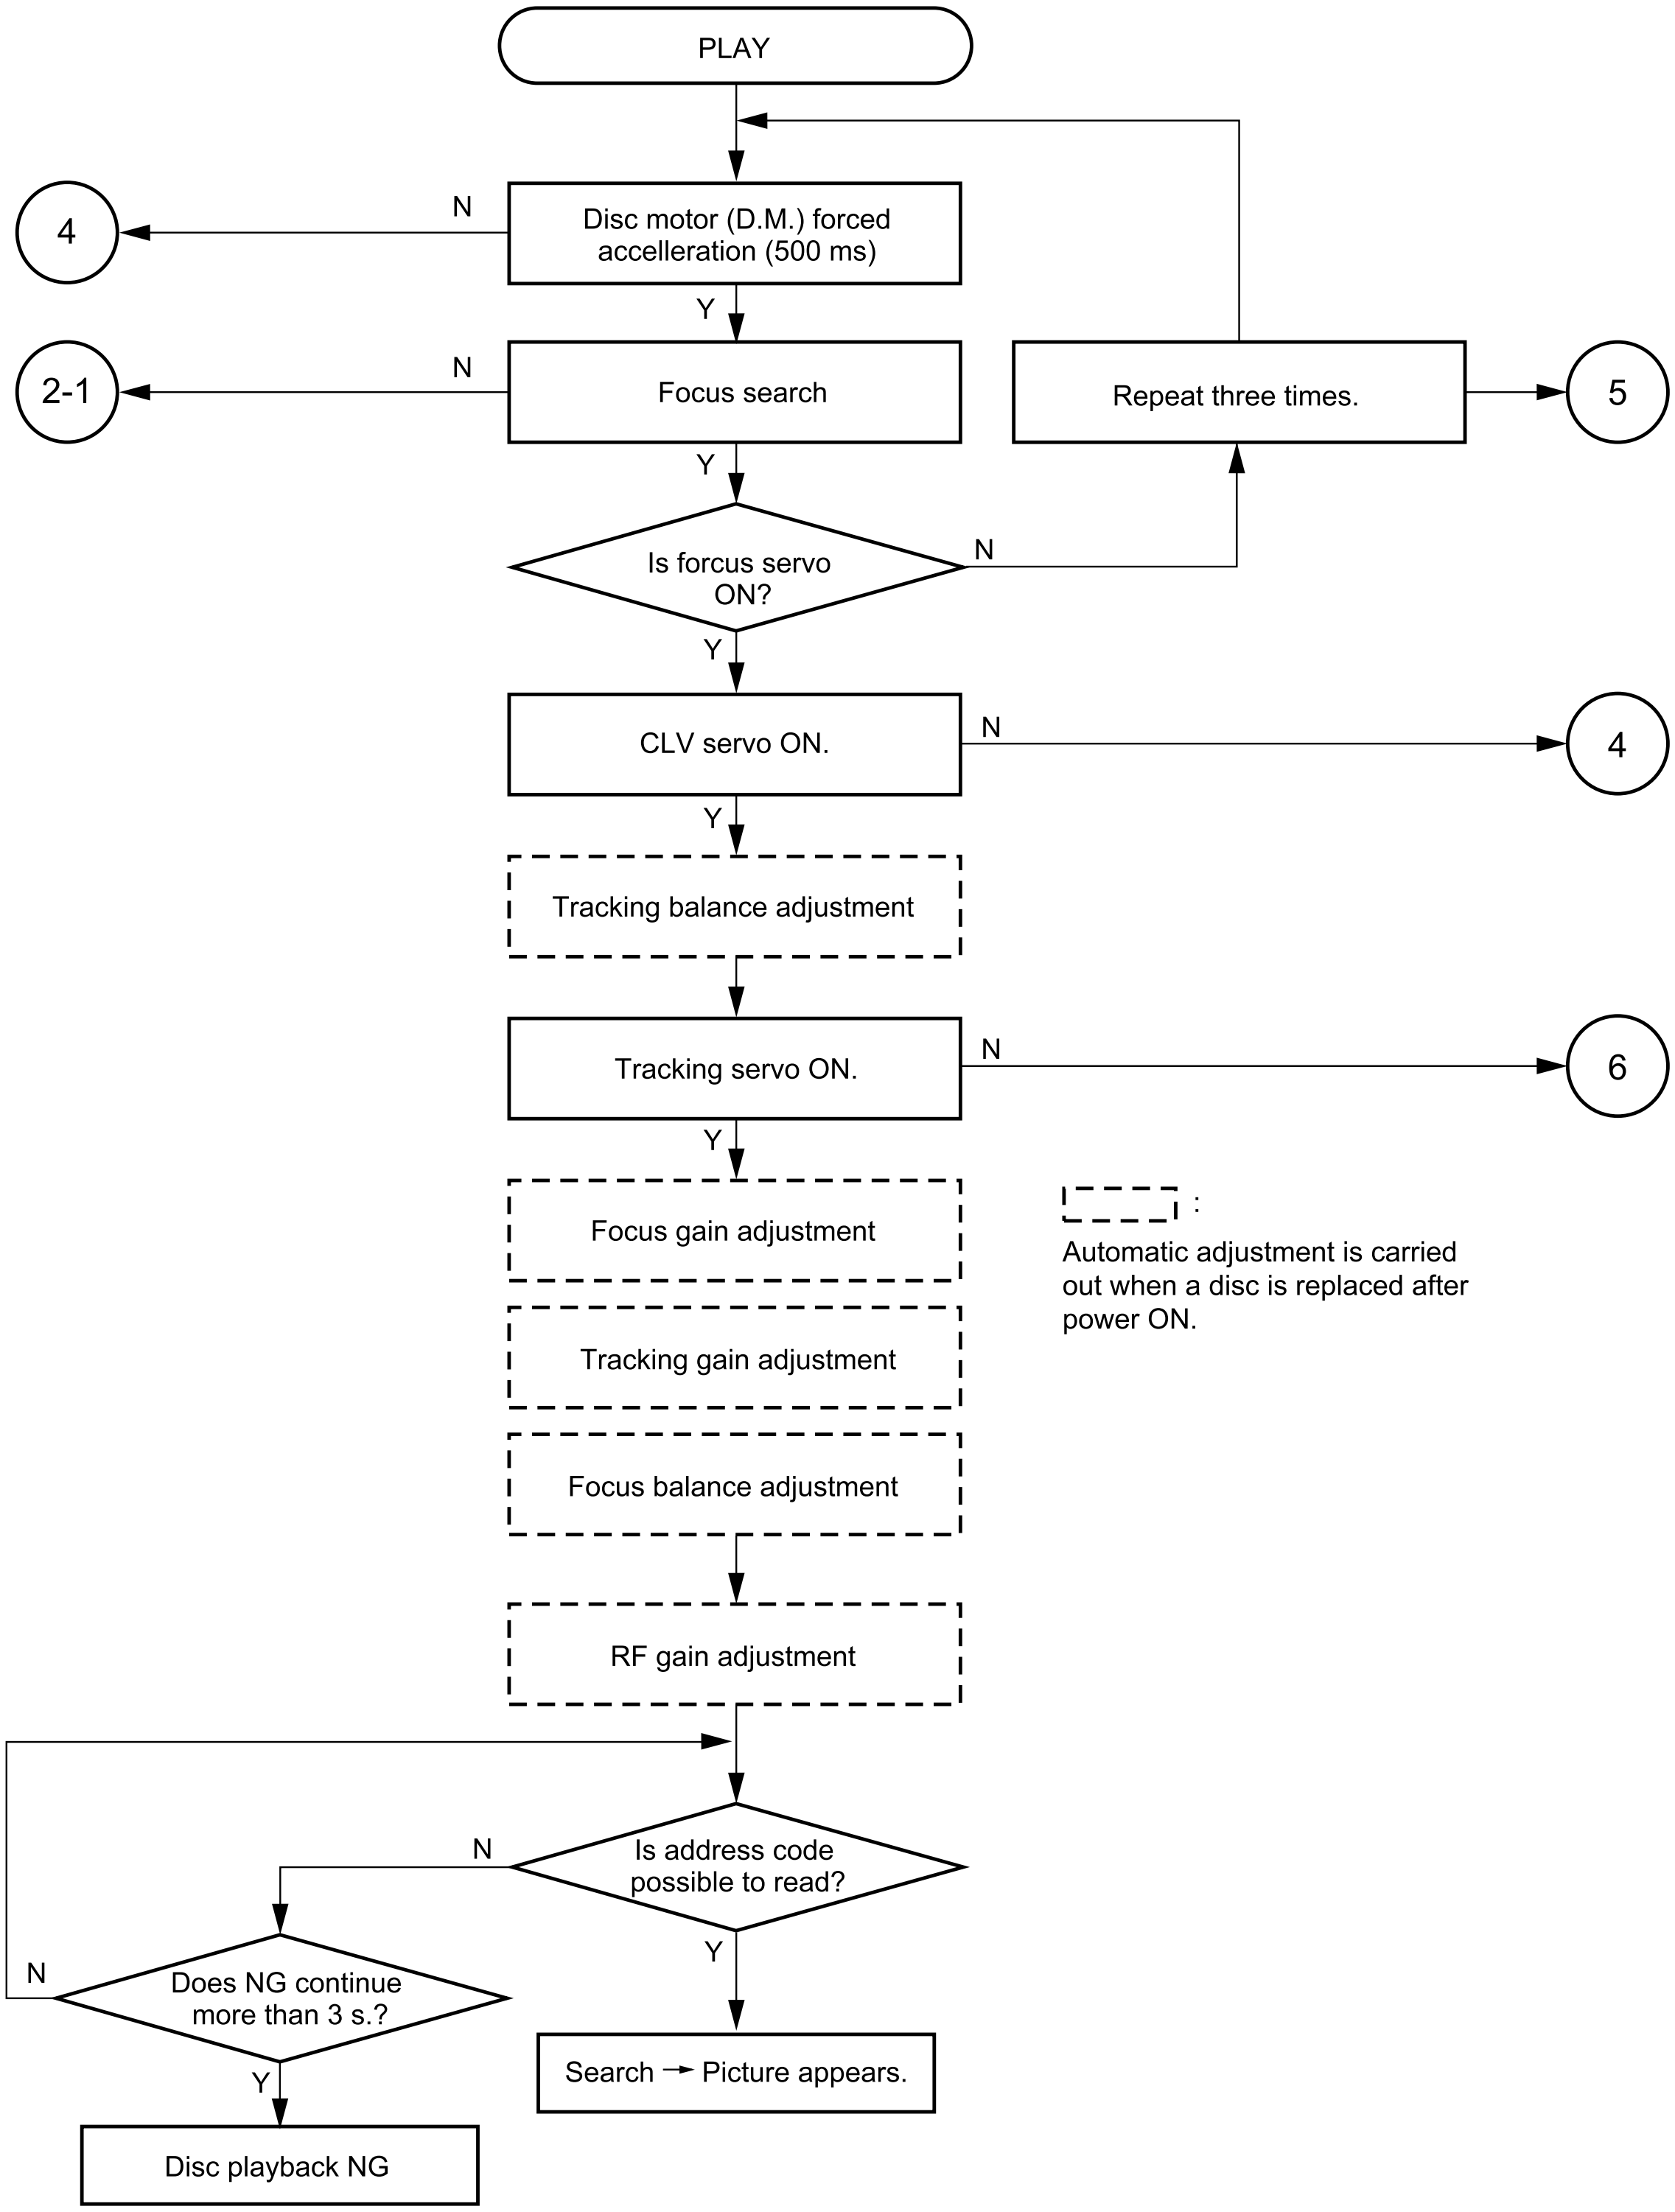
PLAY
Disc motor (D.M.) forced accelleration (500 ms)
N
4
Y
Focus search
N
2-1
Repeat three times.
5
Y
Is forcus servo ON?
N
Y
CLV servo ON.
N
4
Y
Tracking balance adjustment
Tracking servo ON.
N
6
Y
Focus gain adjustment
:
Automatic adjustment is carried out when a disc is replaced after power ON.
Tracking gain adjustment
Focus balance adjustment
RF gain adjustment
Is address code possible to read?
N
Y
Does NG continue more than 3 s.?
N
Y
Search → Picture appears.
Disc playback NG

Fig. 1-3-9

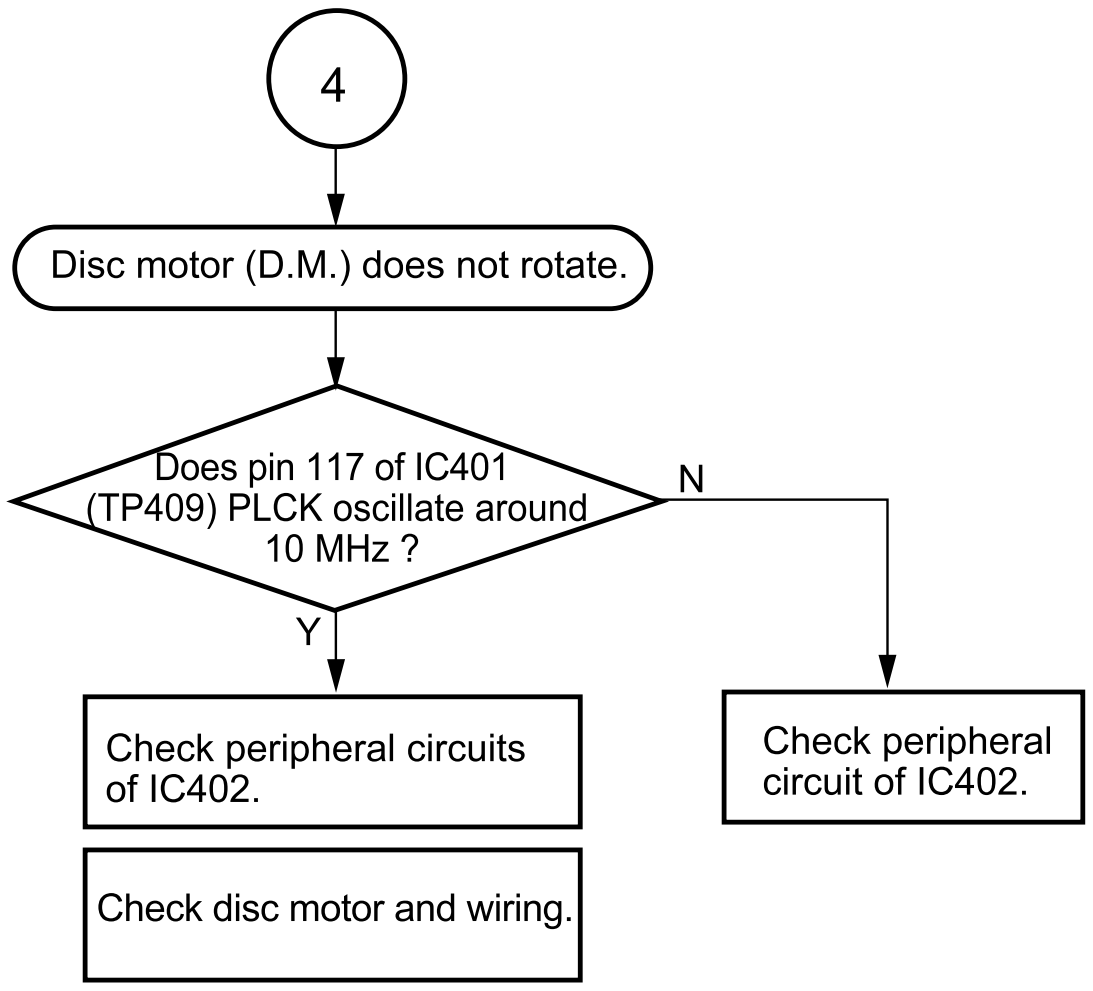
4
Disc motor (D.M.) does not rotate.
Does pin 117 of IC401 (TP409) PLCK oscillate around 10 MHz ?
N
Y
Check peripheral circuits of IC402.
Check disc motor and wiring.
Check peripheral circuit of IC402.

Fig. 1-3-10

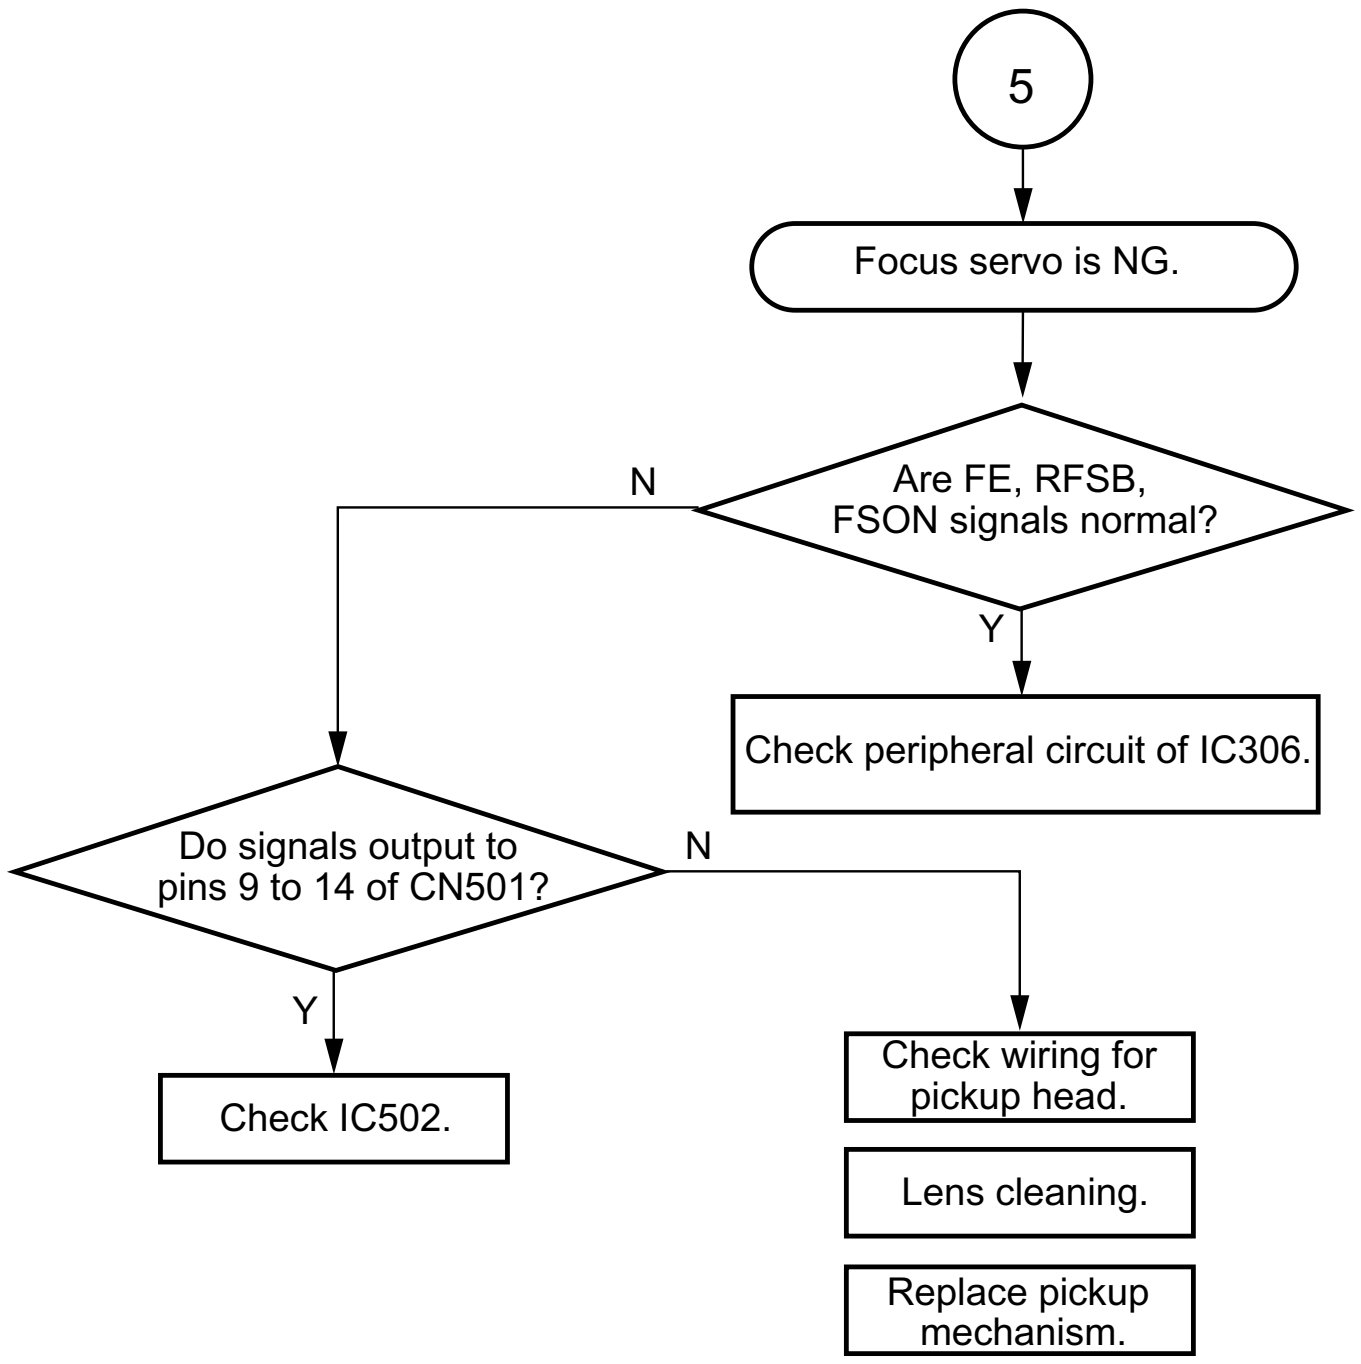
5
Focus servo is NG.
Are FE, RFSB, FSON signals normal?
N
Y
Check peripheral circuit of IC306.
Do signals output to pins 9 to 14 of CN501?
N
Y
Check IC502.
Check wiring for pickup head.
Lens cleaning.
Replace pickup mechanism.

Fig. 1-3-11

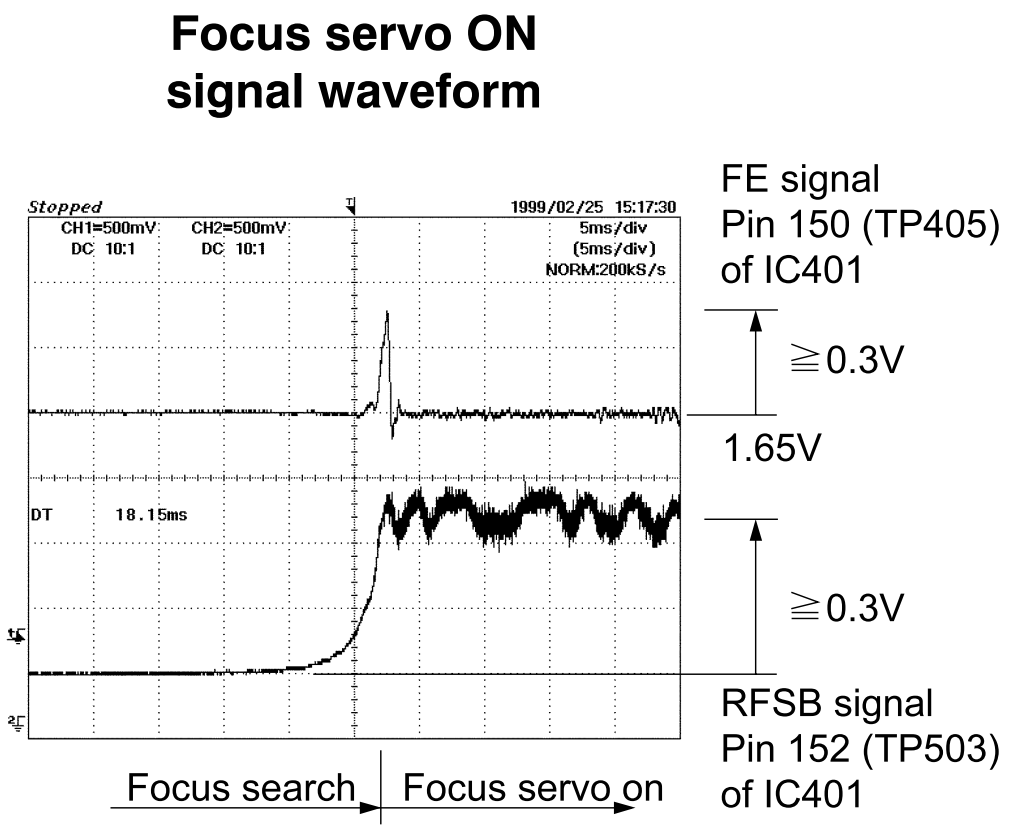

Fig. 1-3-12

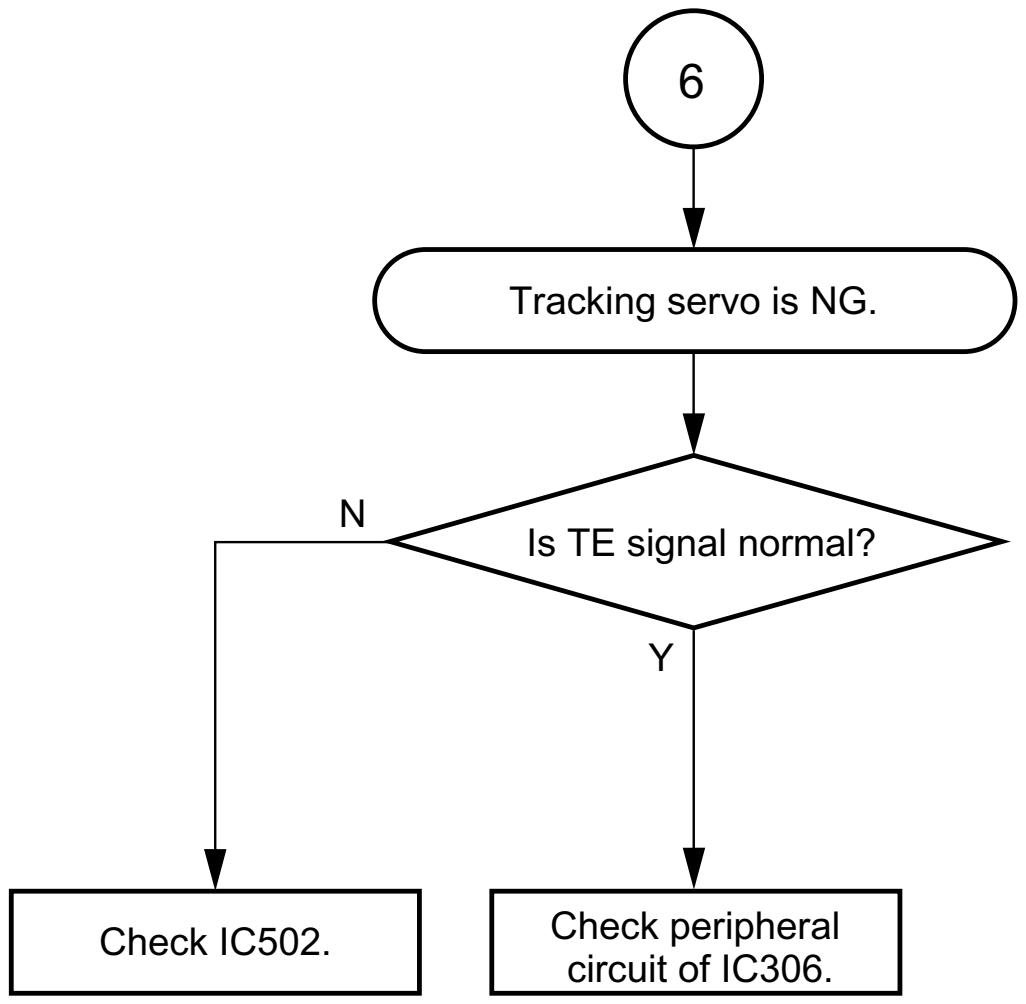
6
Tracking servo is NG.
Is TE signal normal?
N
Y
Check IC502.
Check peripheral circuit of IC306.

Fig. 1-3-13

Signal waveform at tracking servo ON (CD)

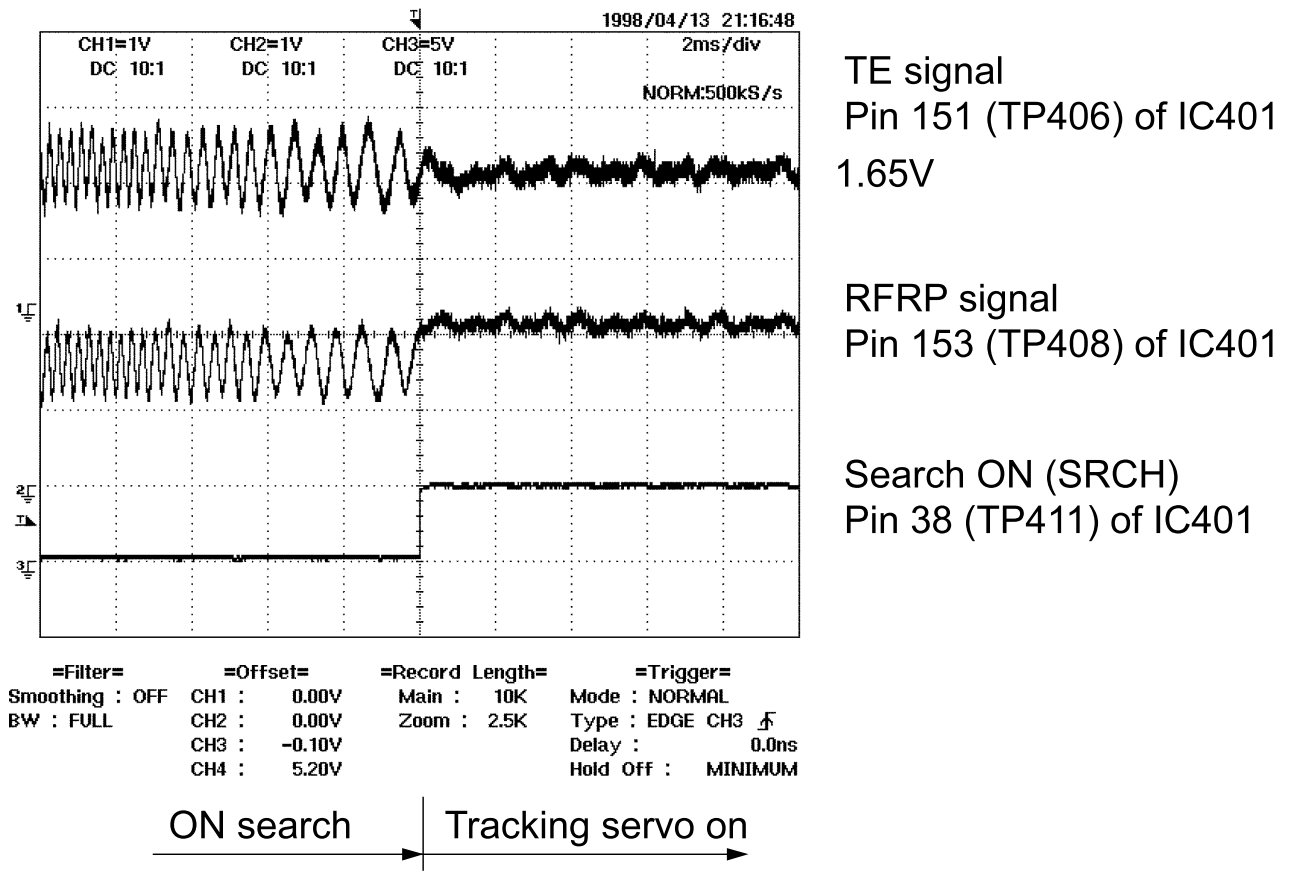

Fig. 1-3-14

Signal waveform at tracking servo ON (DVD)

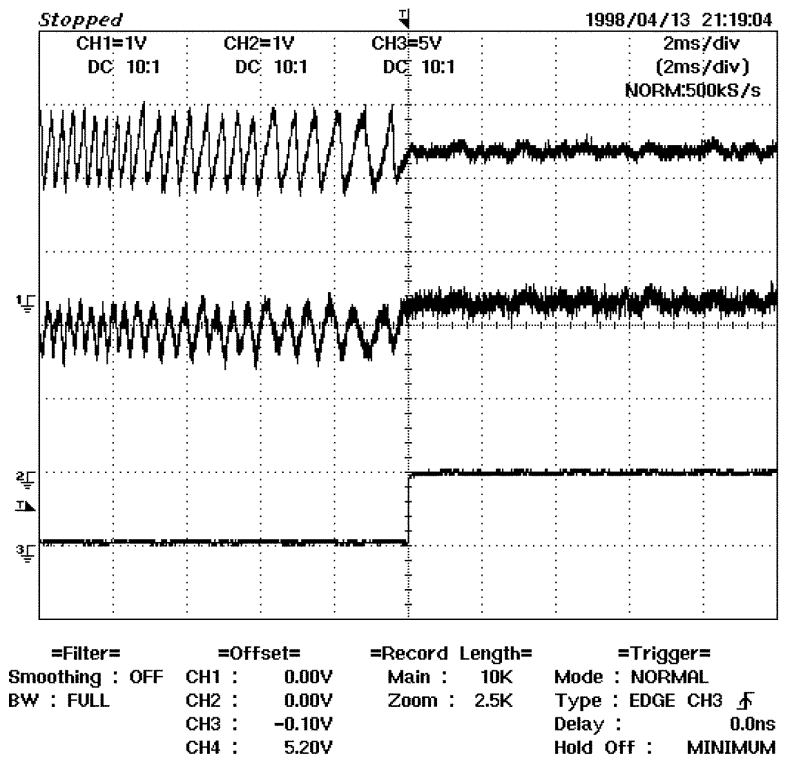

Fig. 1-3-15

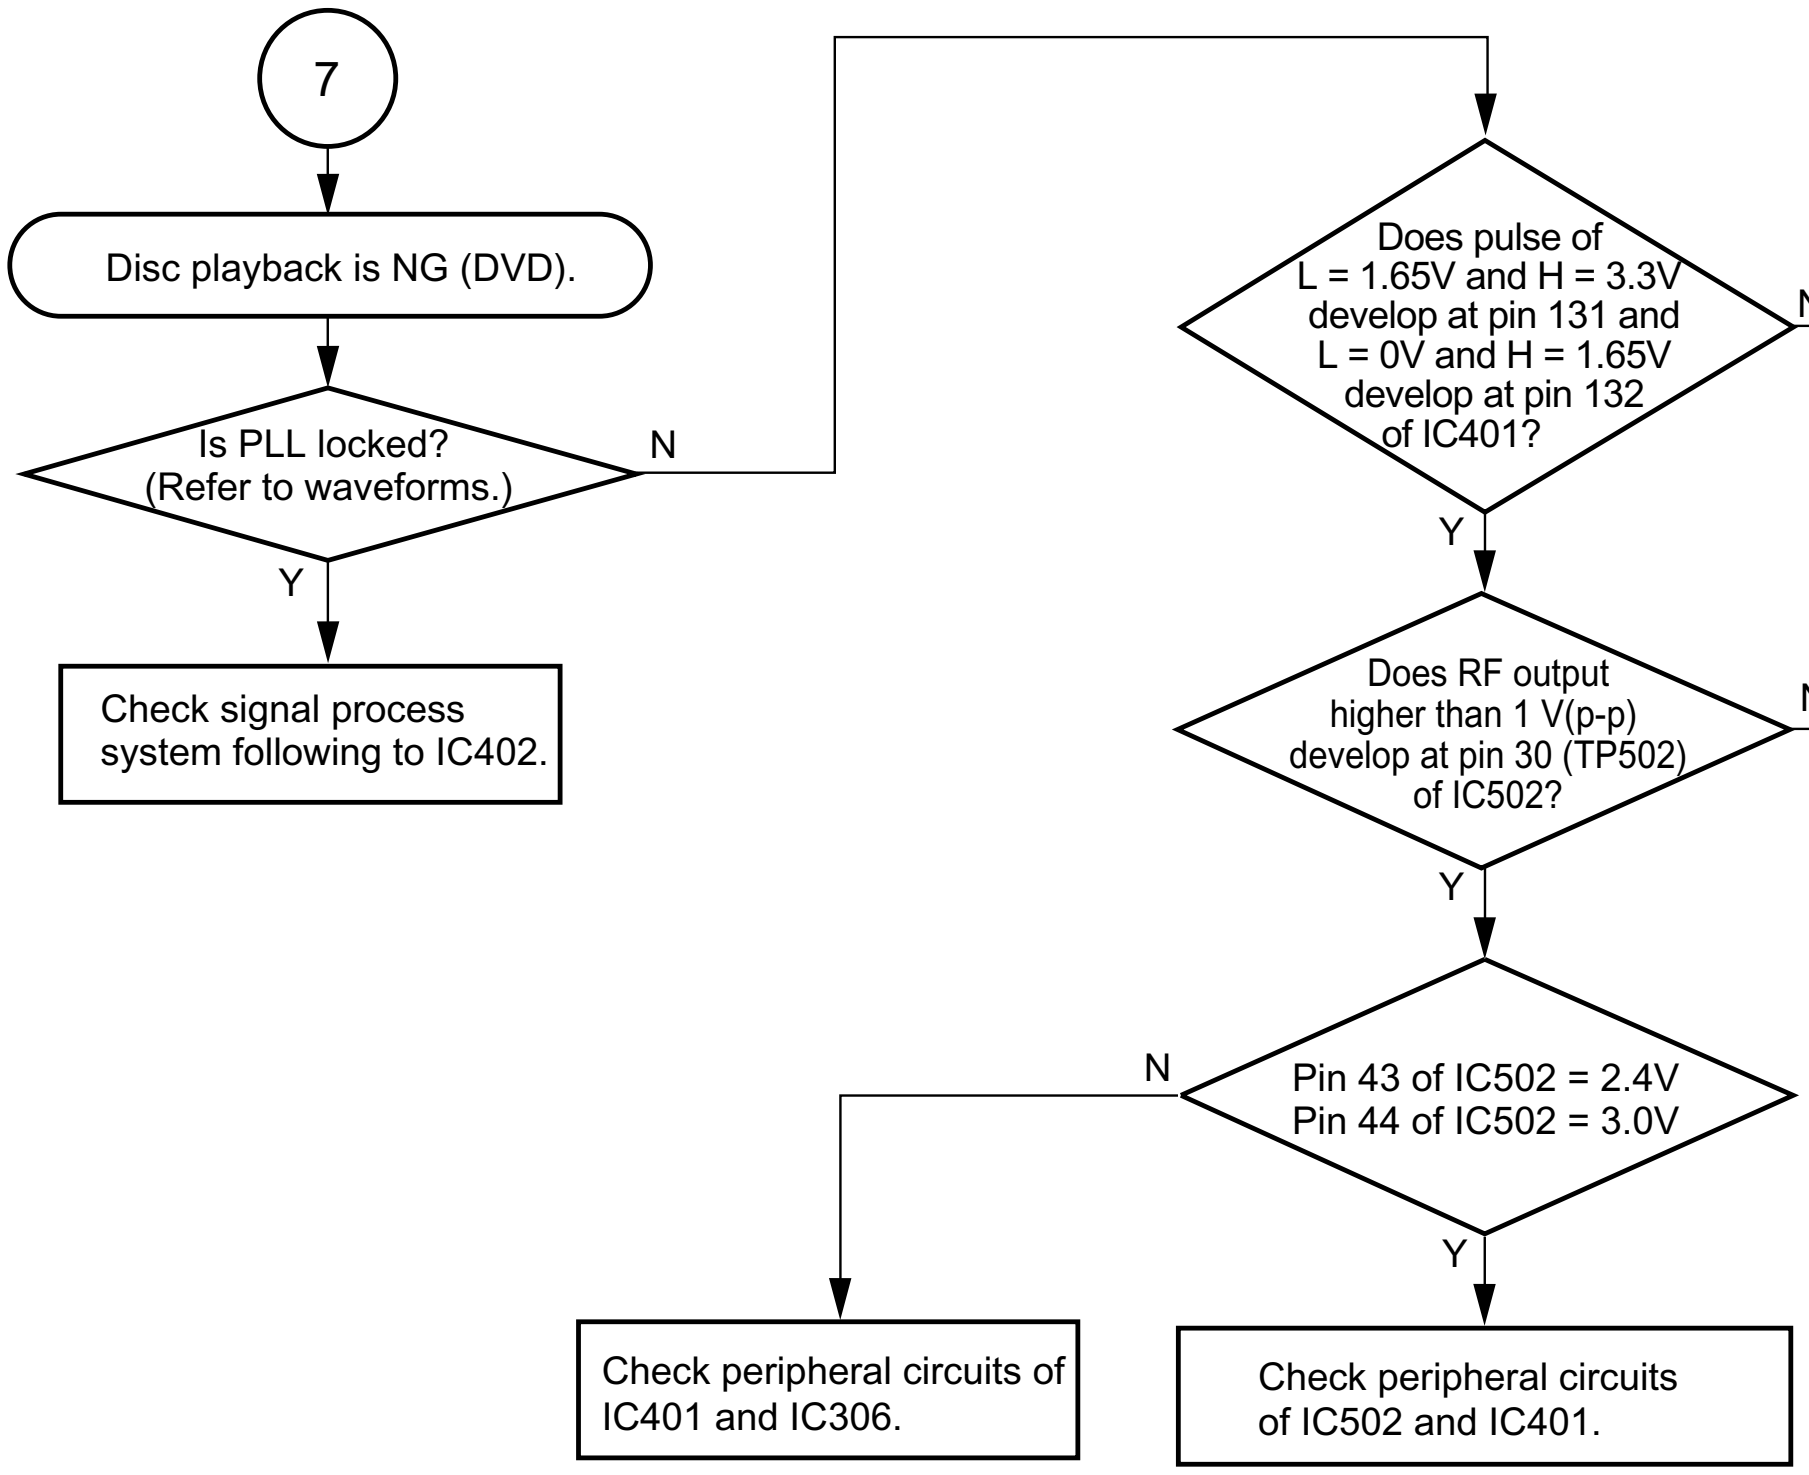
7
Disc playback is NG (DVD).
Is PLL locked?
(Refer to waveforms.)
N
Y
Check signal process system following to IC402.
Does pulse of L = 1.65V and H = 3.3V develop at pin 131 and L = 0V and H = 1.65V develop at pin 132 of IC401?
N
Check peripheral circuits of IC401 and IC306.
Y
Does RF output higher than 1 V(p-p) develop at pin 30 (TP502) of IC502?
N
Check IC502.
Lens cleaning.
Pickup mechanism replacement
Y
Pin 43 of IC502 = 2.4V
Pin 44 of IC502 = 3.0V
N
Check peripheral circuits of IC401 and IC306.
Y
Check peripheral circuits of IC502 and IC401.

Fig. 1-3-16

DVD RF signal

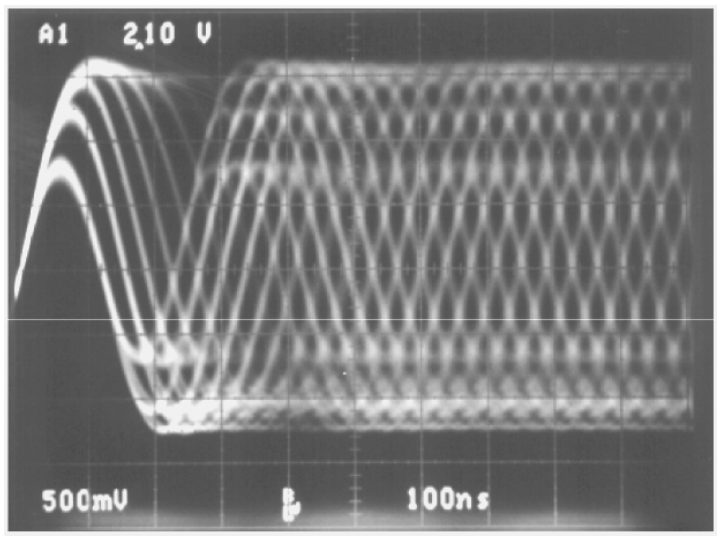

DVD RF signal
Pin 30 (TP502) of IC502

V : 500 mV/div
H : 50 ns/div

Fig. 1-3-17

CD RF signal

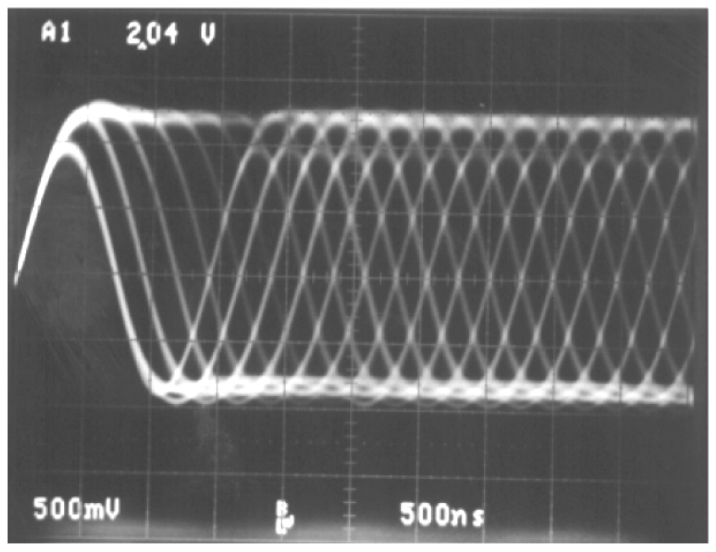

CD RF signal
Pin 30 (TP502) of IC502

V : 500 mV/div
H : 100 ns/div

Fig. 1-3-18

PLL works as a servo loop to generate a clock signal for reading RF signal binary data. With the PLL locked, the eye pattern is identified clearly when triggered with the read clock PLCK.

DVD playback waveform

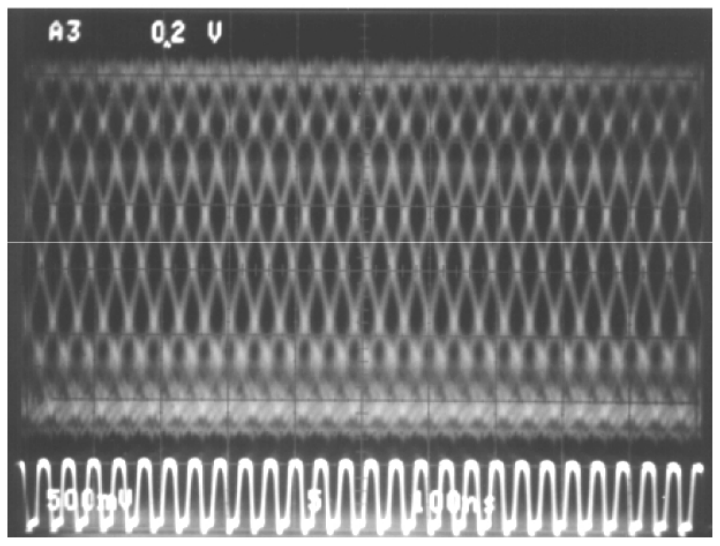

DVD RF signal
Pin 30 (TP502) of IC502

DVD PLCK
Pin 117 (TP409) of IC401

CH1 : TP502 DVDRF 500 mV/div
CH2 : TP409 DVDPLCK 5 V/div
50 ns/div

Fig. 1-3-19

CD playback waveform

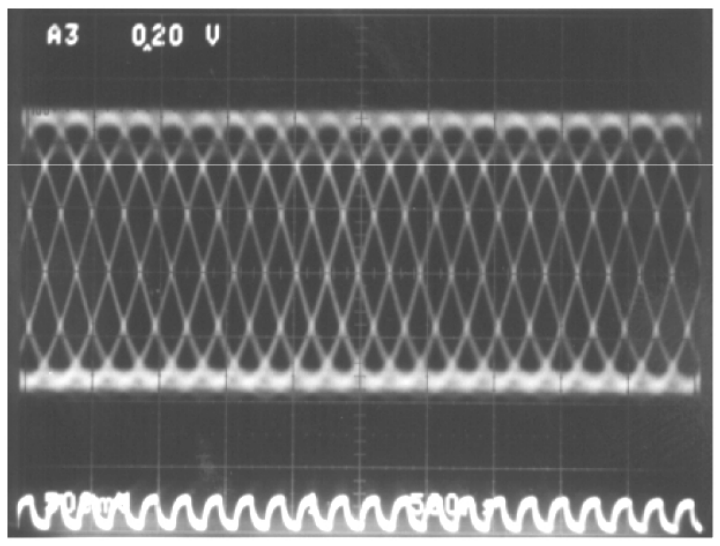

CD RF signal
Pin 30 (TP502) of IC502

CD PLCK
Pin 117 (TP409) of IC401

CH1 : TP502 CDRF 500 mV/div
CH2 : TP409 CDPLCK 5 V/div
100 ns/div

Fig. 1-3-20

3-1-2. Location Diagram of Servo Test Point

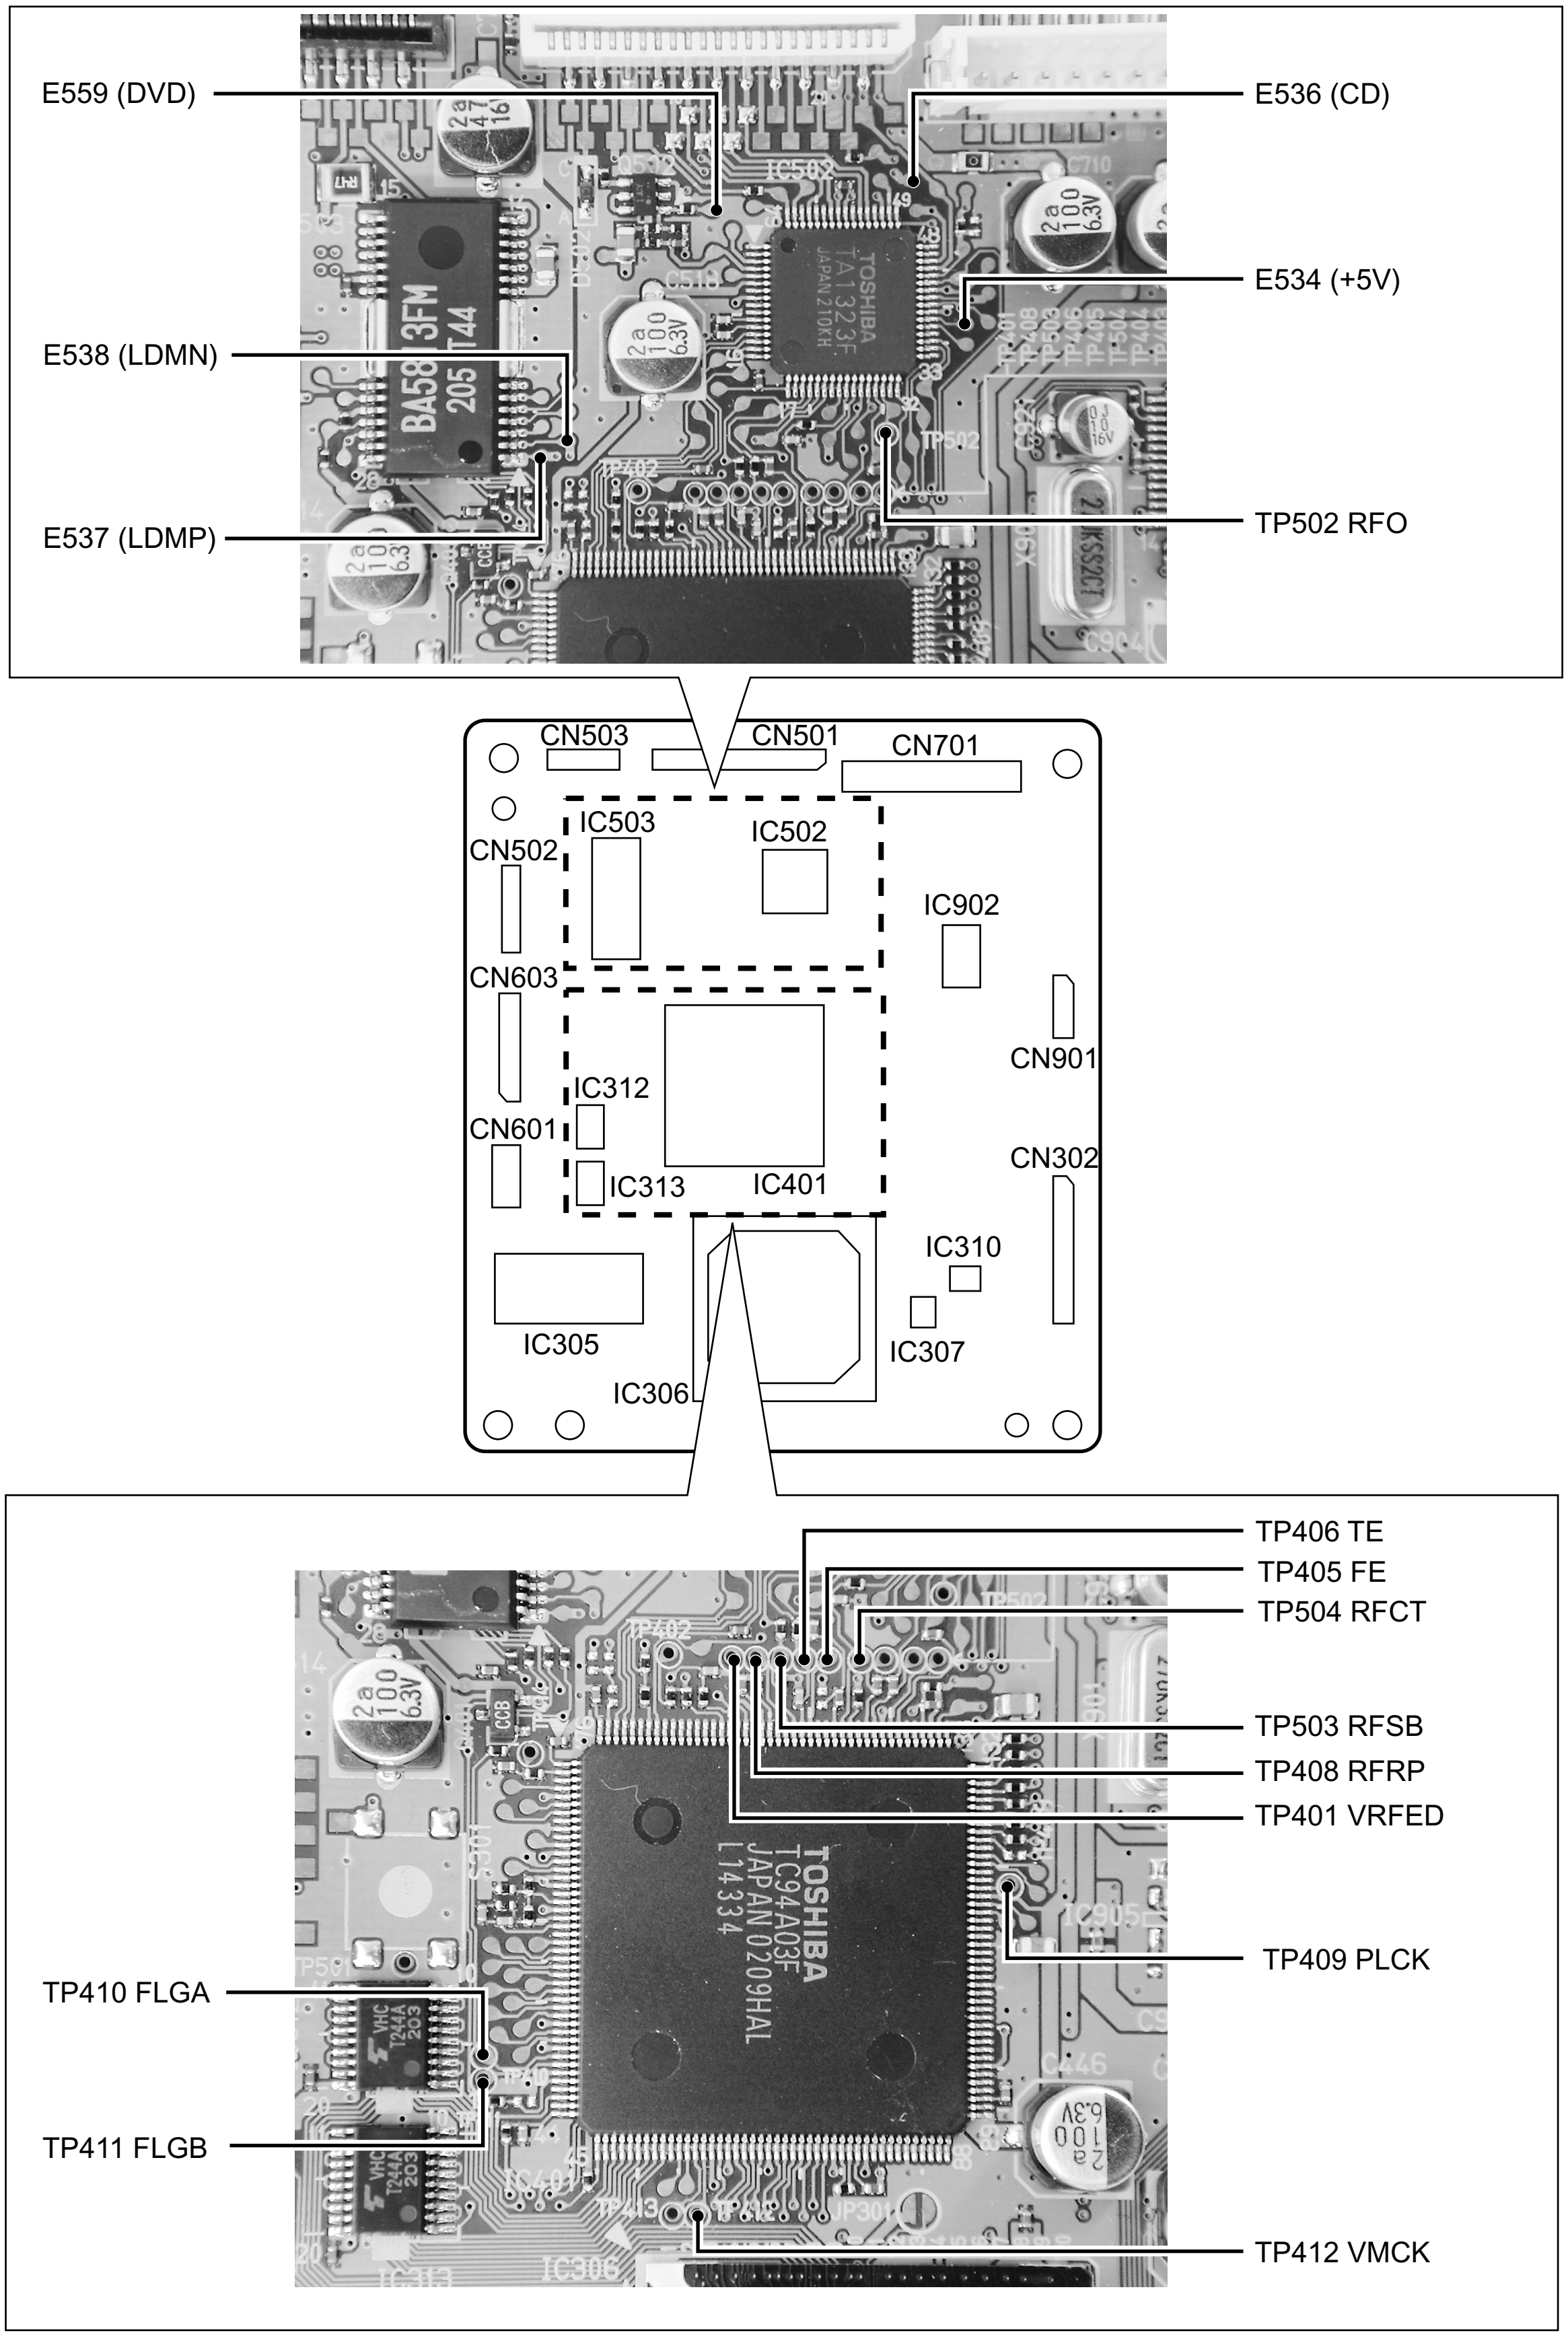
E559 (DVD)
E536 (CD)
E534 (+5V)
E538 (LDMN)
E537 (LDMP)
TP502 RFO
CN503
CN501
CN701
IC503
IC502
CN502
IC902
CN603
CN901
IC312
CN601
IC313
IC401
CN302
IC310
IC305
IC307
IC306
TP406 TE
TP405 FE
TP504 RFCT
TP503 RFSB
TP408 RFRP
TP401 VRFED
TP409 PLCK
TP410 FLGA
TP411 FLGB
TP412 VMCK

Fig. 1-3-21

SECTION 2
PART REPLACEMENT AND ADJUSTMENT PROCEDURES

CAUTIONS BEFORE STARTING SERVICING

Electronic parts are susceptible to static electricity and may easily damaged, so do not forget to take a proper grounding treatment as required.

Many screws are used inside the unit. To prevent missing, dropping, etc. of the screws, always use a magnetized screwdriver in servicing. Several kinds of screws are used and some of them need special cautions. That is, take care of the tapping screws securing molded parts and fine pitch screws used to secure metal parts. If they are used improperly, the screw holes will be easily damaged and the parts can not be fixed.

1. REPLACEMENT OF MECHANICAL PARTS (TYPE A)

1-1. Cabinet Replacement

1-1-1. Top Cover

1. Remove seven screws (1), then remove the top cover (2).

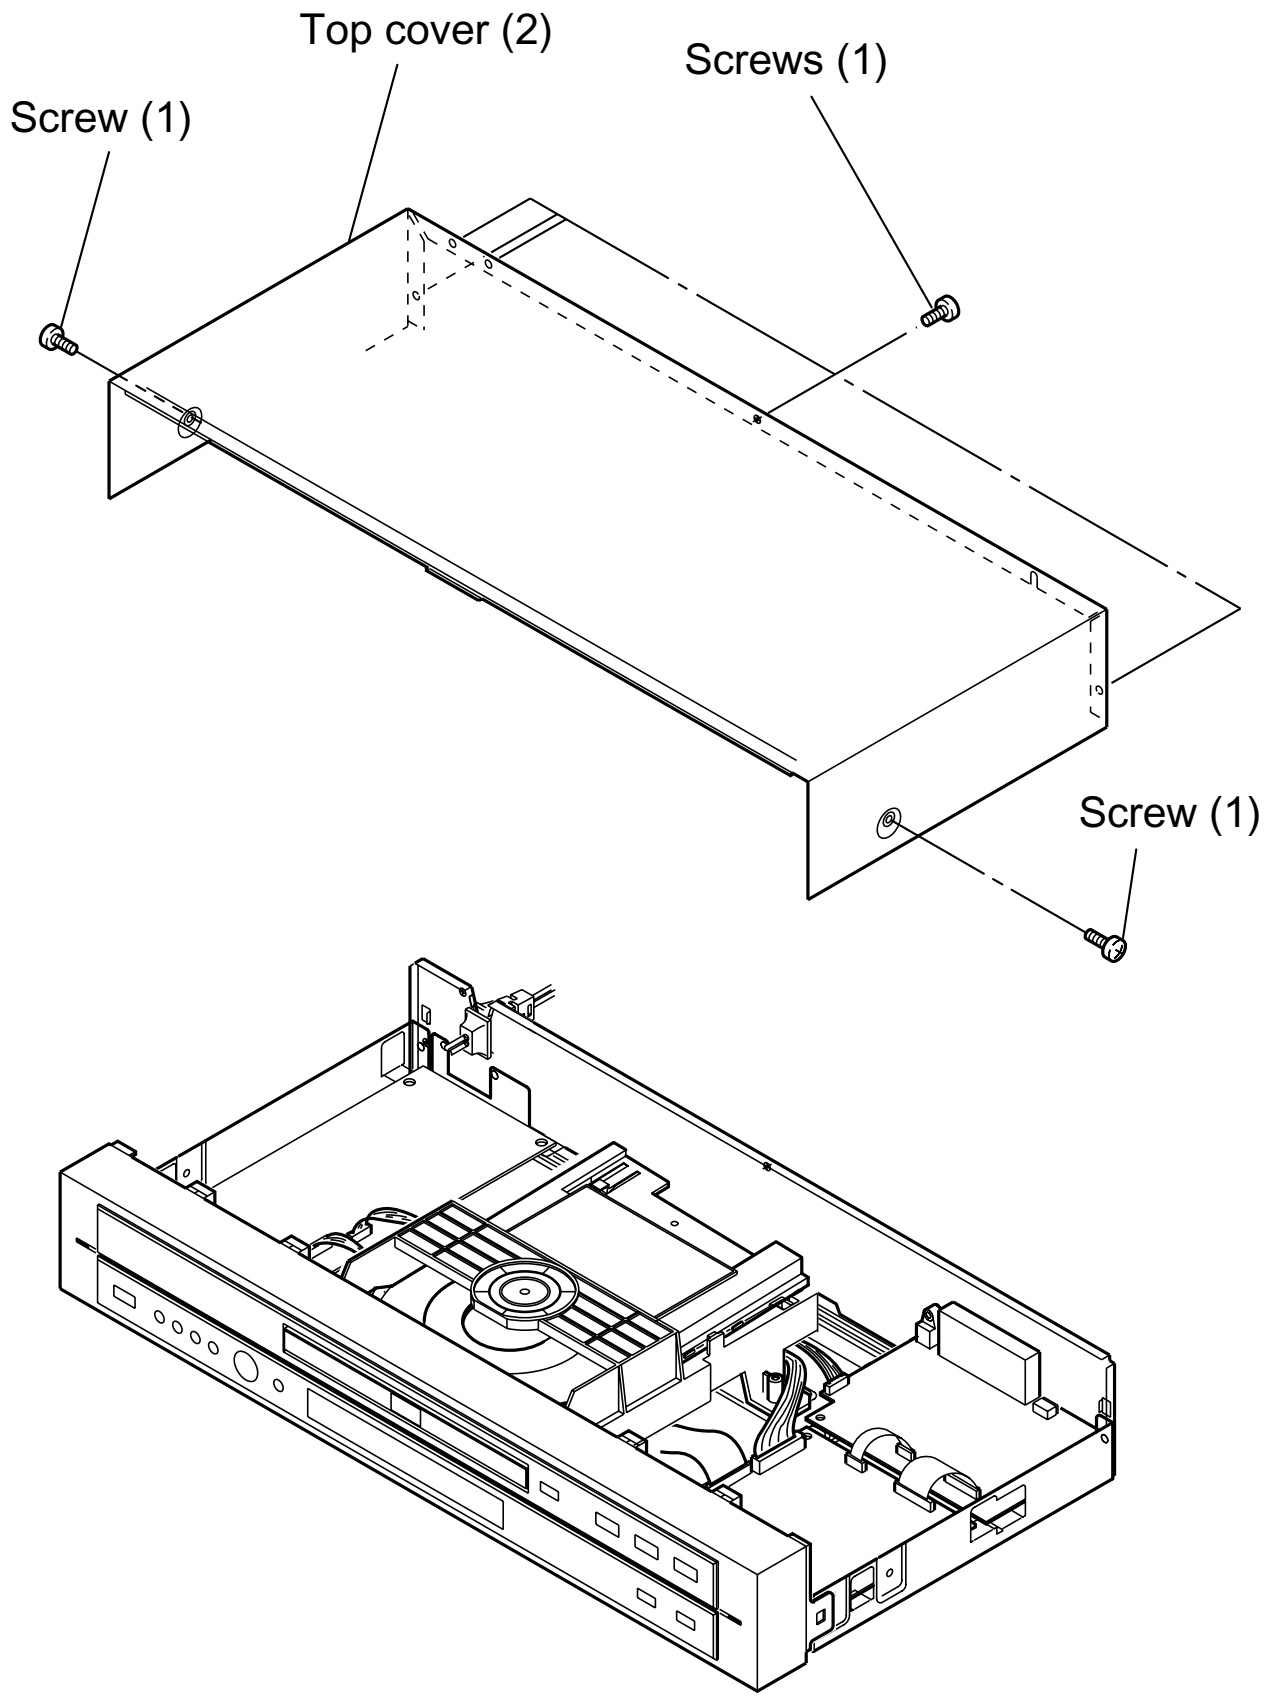
Top cover (2)
Screws (1)
Screw (1)
Screw (1)

Fig. 2-1-1

1-1-2. Tray Panel

<Tray Ejection>

1. Insert a paper clip, etc. into the hole A to eject the tray (1).

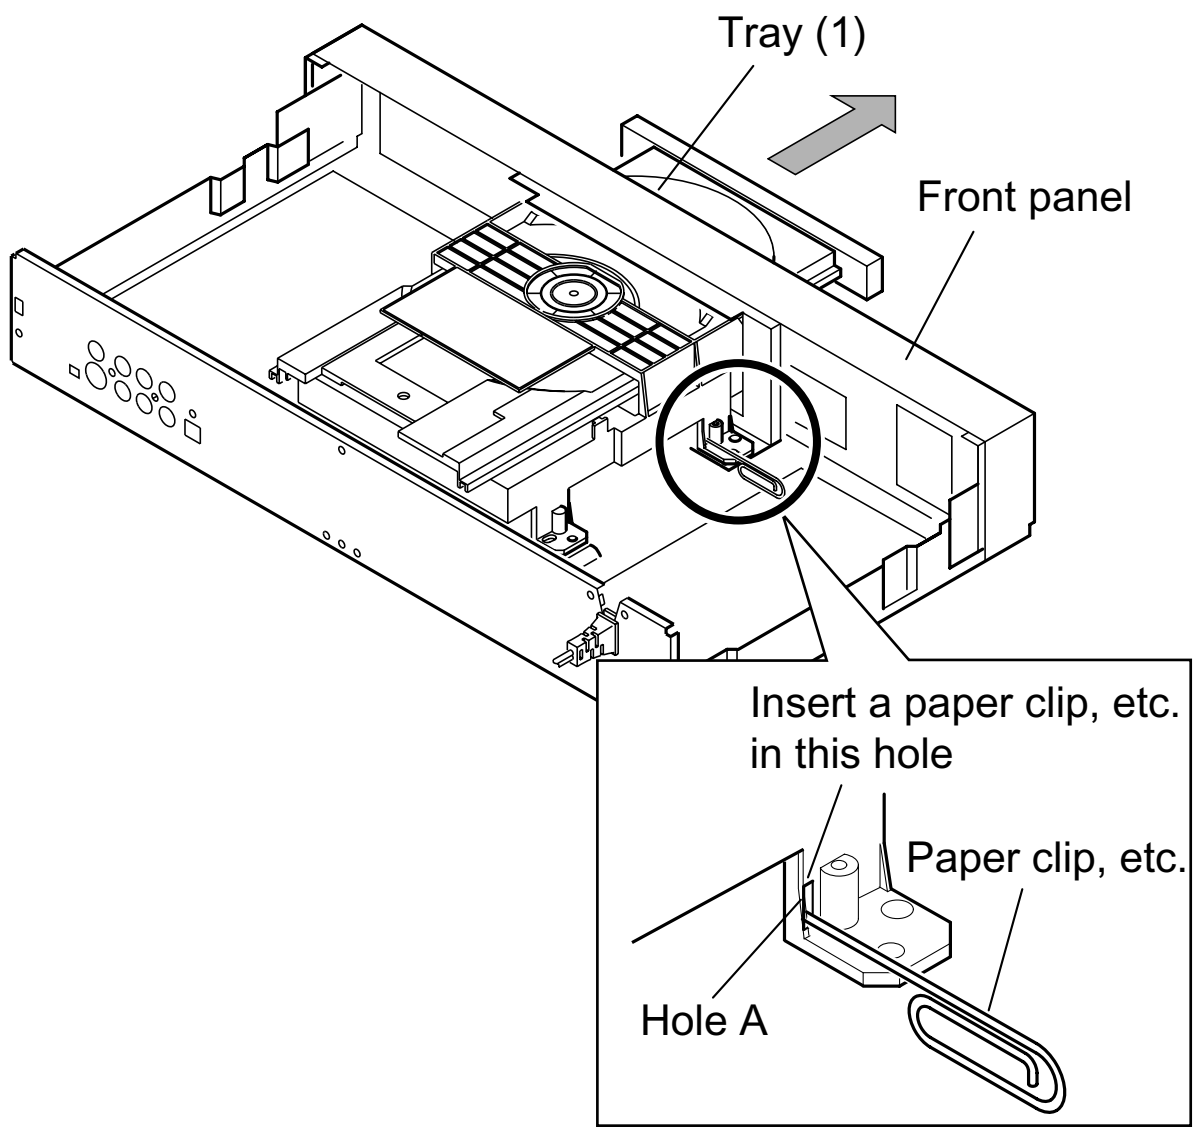
Tray (1)
Front panel
Insert a paper clip, etc. in this hole
Paper clip, etc.
Hole A

Fig. 2-1-2

<Tray Panel Removal>

1. Eject the tray (1). (Refer to item 1-1-2.)
2. Twist the tray panel (2) a little in the arrow A direction with the tray (1) hold by hand to release two claws and lift up the tray panel (2) in the arrow B direction, then the tray panel (2) is removed.
3. When mounting the tray panel (2), insert the tray panel (2) along the grooves of the both sides of the tray (1) until clicking.

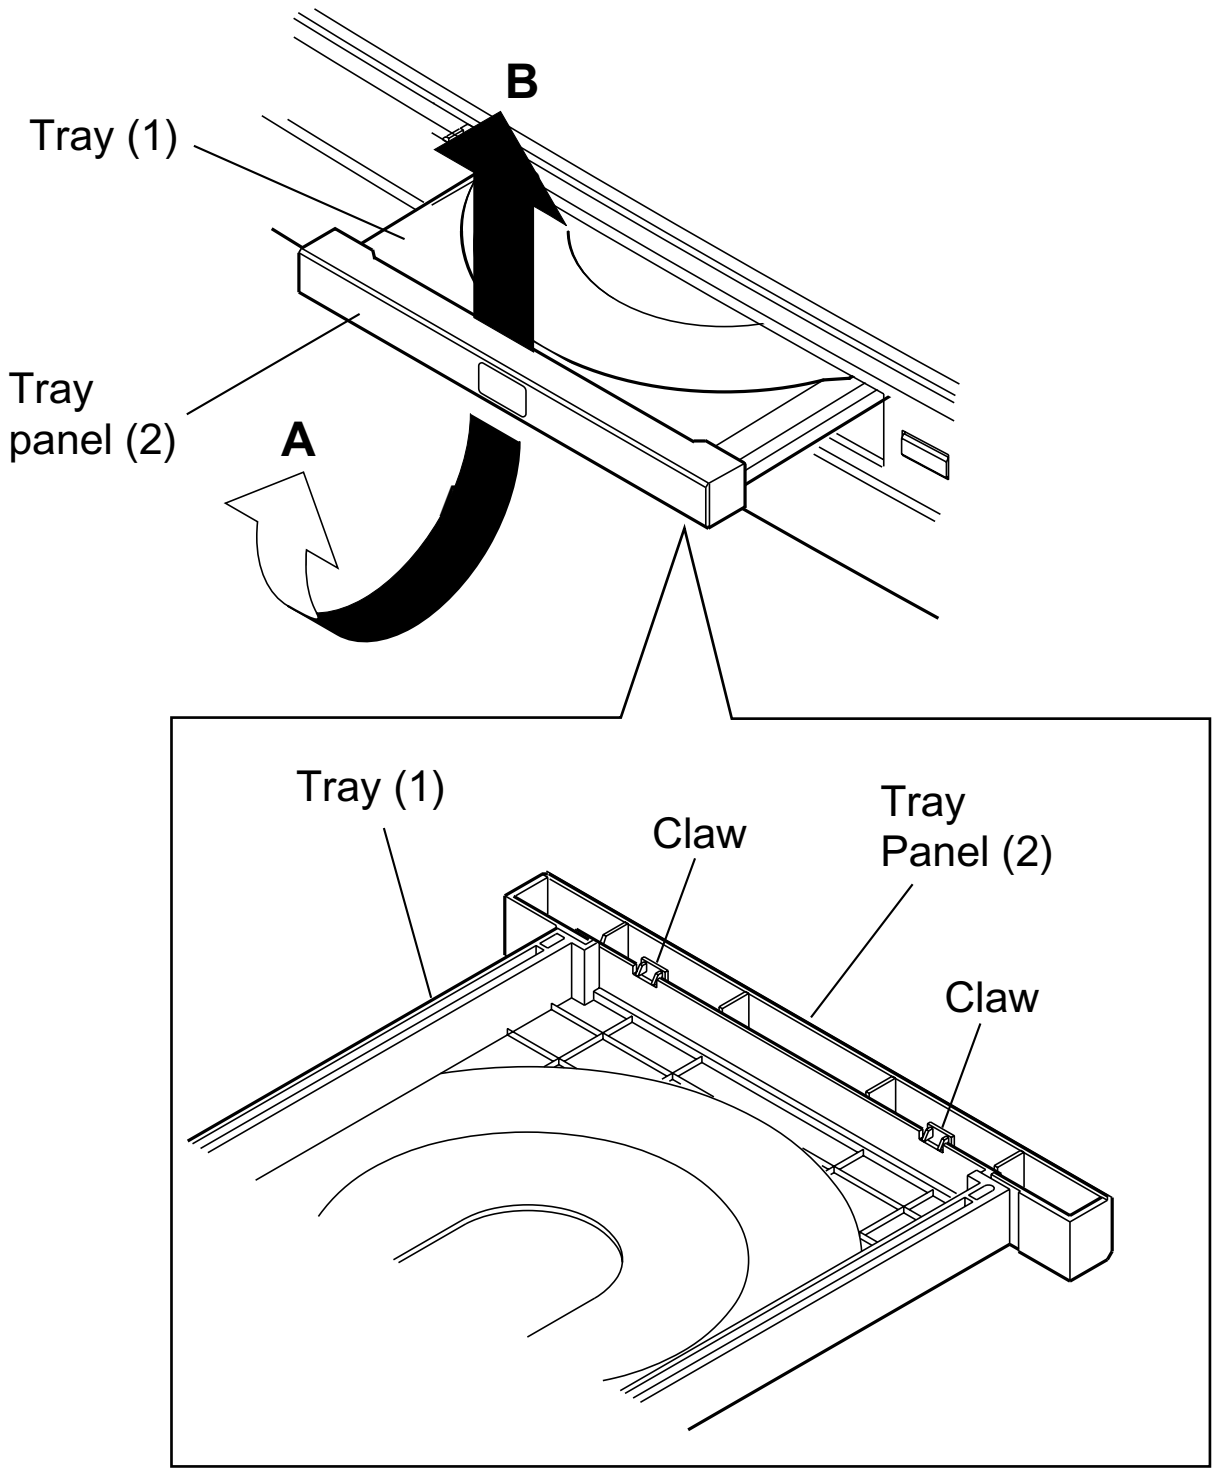

B
Tray (1)
Tray panel (2)
A
Tray (1)
Claw
Tray Panel (2)
Claw

Fig. 2-1-3

1-1-3. Front Panel

1. Remove one flexible cable (1).
2. Release four claws, then remove the front panel (2).

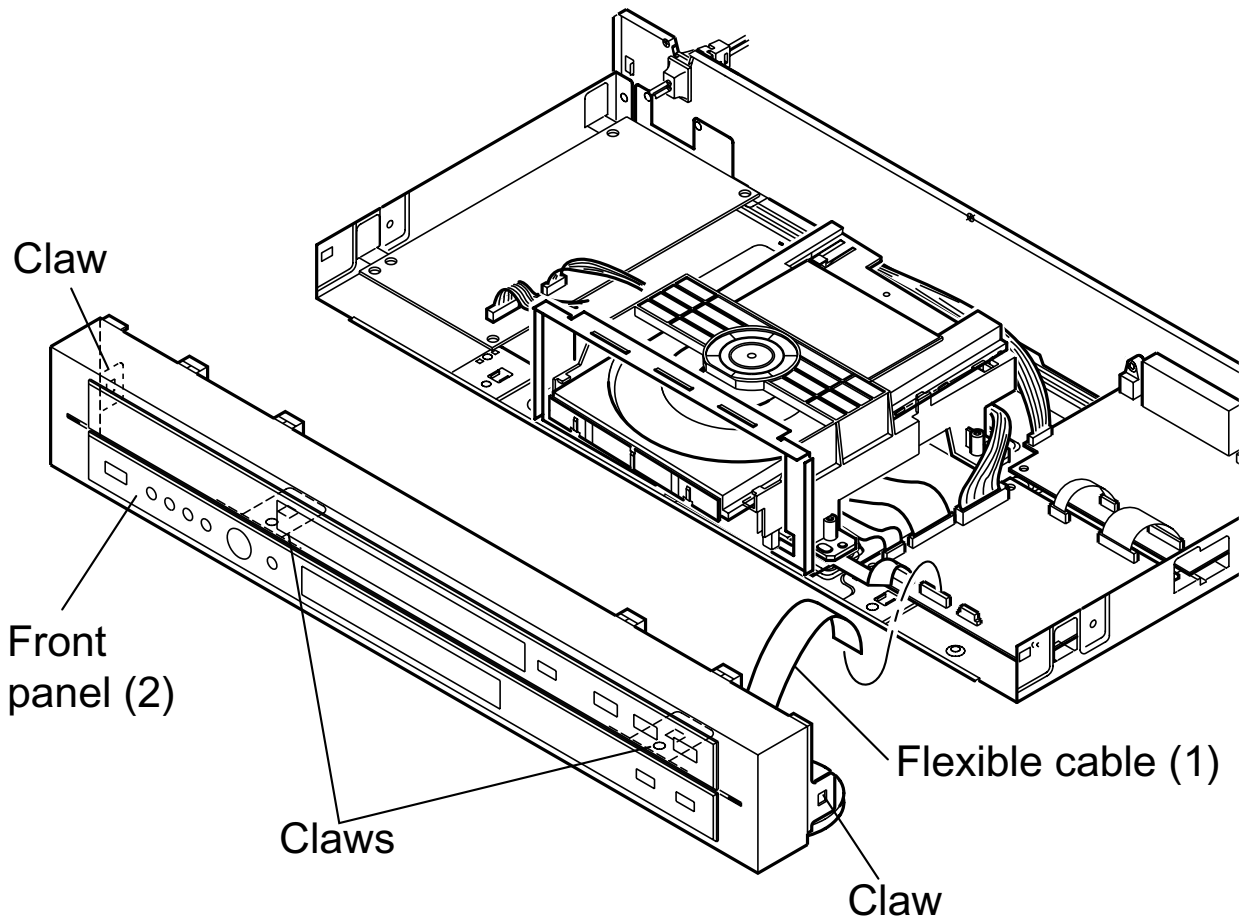

Claw
Front panel (2)
Flexible cable (1)
Claws
Claw

Fig. 2-1-4

1-1-4. Tray

1. Pull out the tray (1) towards you until it stops.
2. Lift up claw A with a minus screwdriver, and pull out the tray (1) towards you, then remove the tray (1).

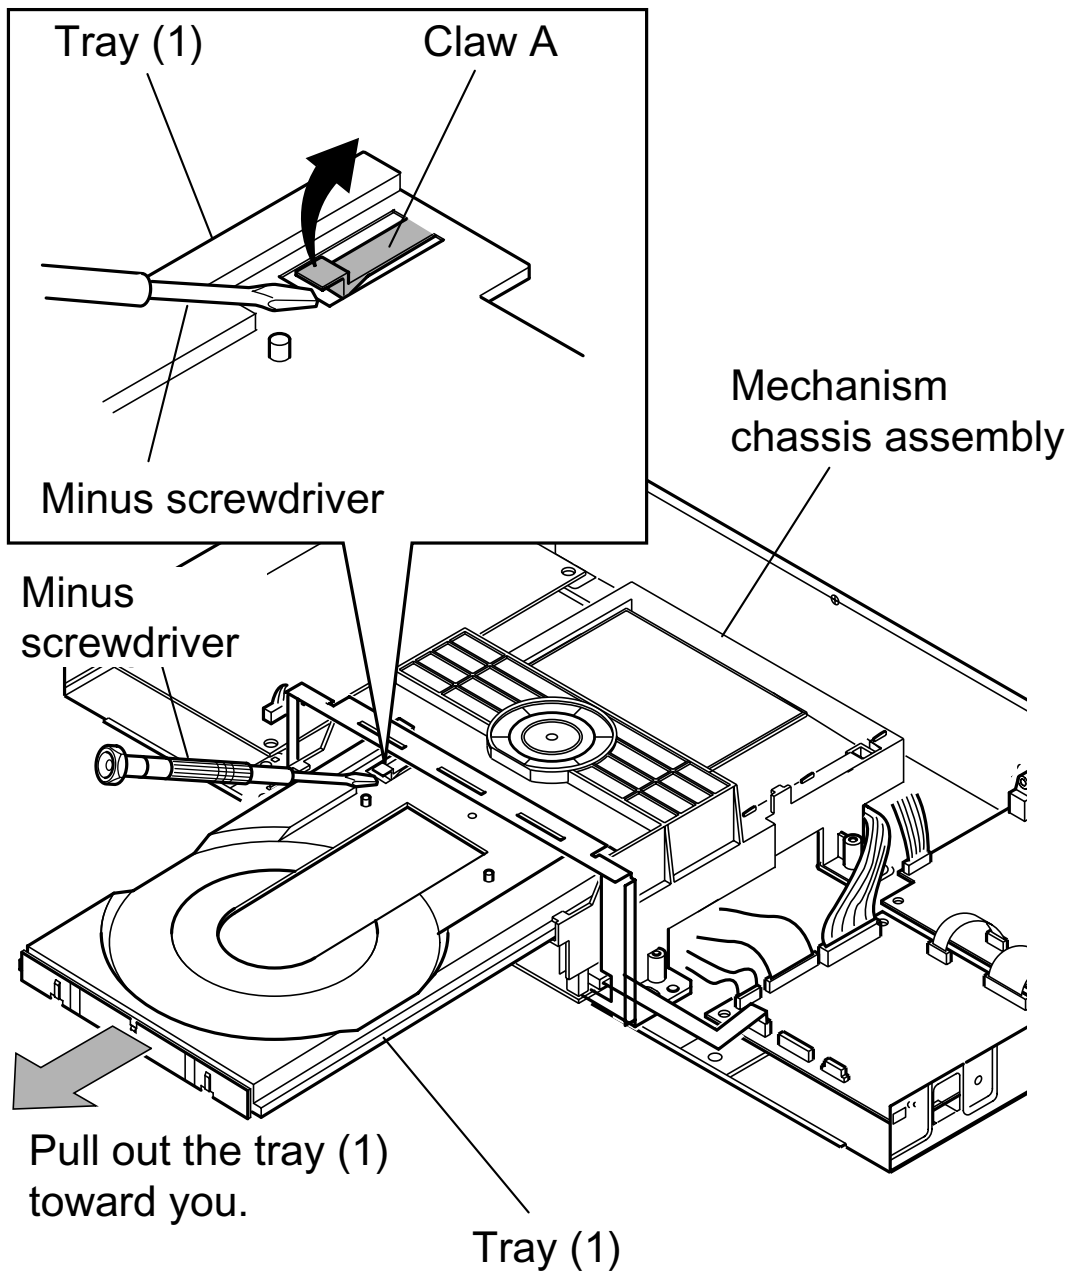

Tray (1)
Claw A
Minus screwdriver
Mechanism chassis assembly
Minus screwdriver
Pull out the tray (1) toward you.
Tray (1)

Fig. 2-1-5

1-1-5. Rear Panel

1. Remove the bush (1).
2. Remove four screws (2), then remove the rear panel (3).

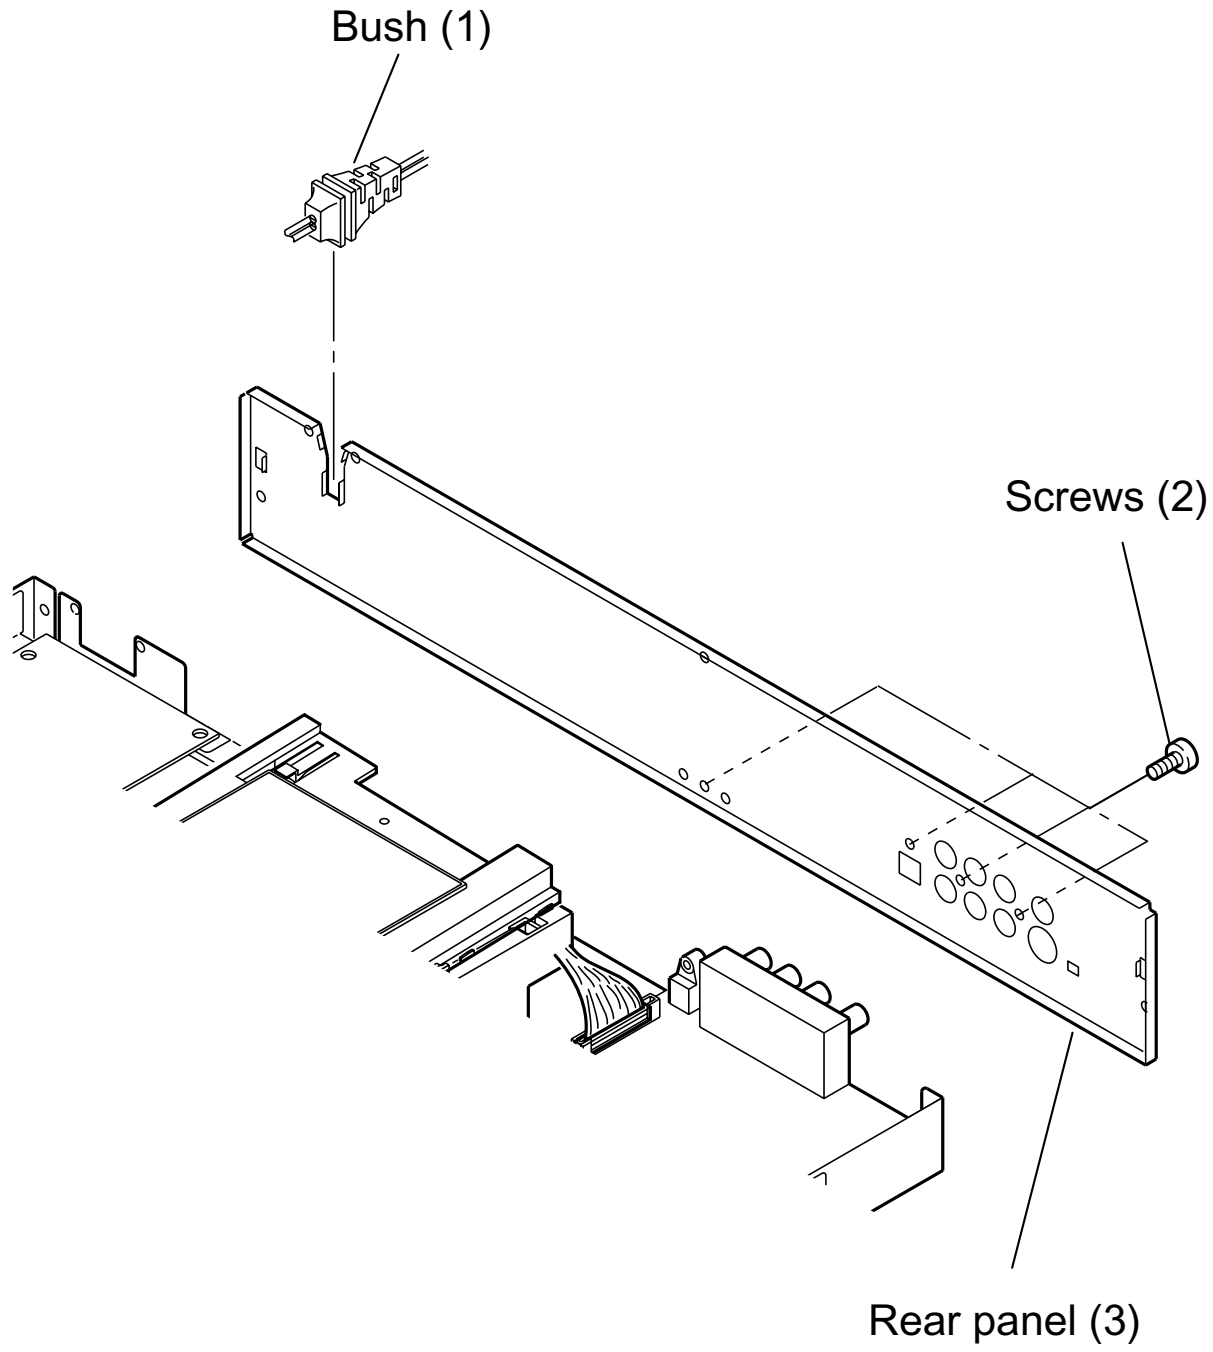

Bush (1)
Screws (2)
Rear panel (3)

Fig. 2-1-6

1-2. PC Board Replacement

1-2-1. Main PC Board

Note:

- Before removing the main PC board (4), be sure to short-circuit the laser diode output land.

  After replacing, open the land as it was after inserting the flexible cables (1).

1. Remove the top cover. (Refer to item 1-1-1.)
2. Eject the tray. (Refer to item 1-1-2.)
3. Remove six flexible cables (1) and remove one connector (2).
4. Remove four screws (3), then remove the main PC board (4).

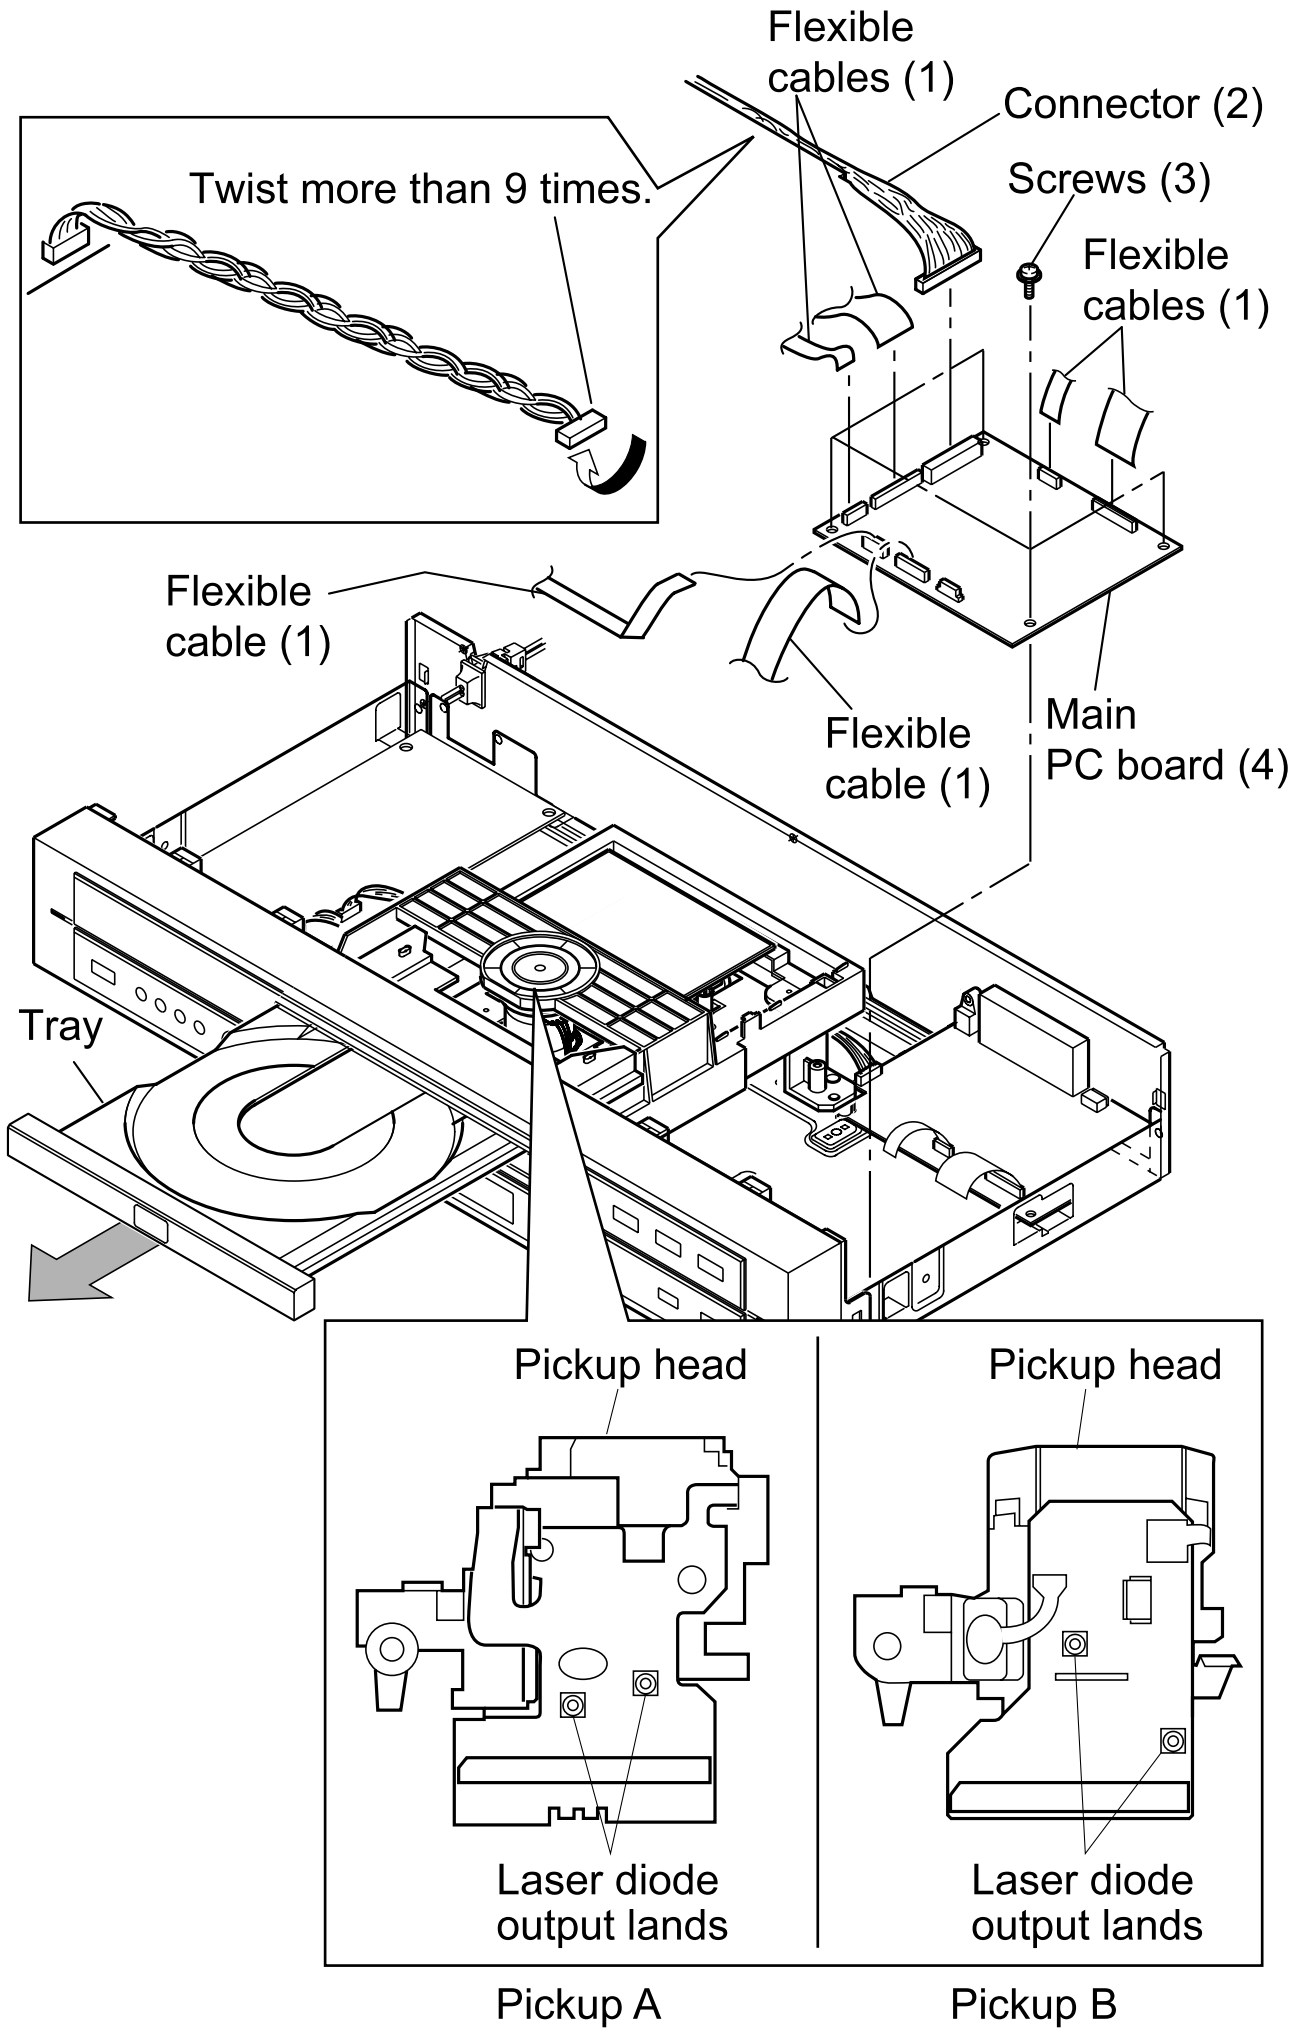
Flexible cables (1)
Connector (2)
Twist more than 9 times.
Screws (3)
Flexible cables (1)
Flexible cable (1)
Flexible cable (1)
Main PC board (4)
Tray
Pickup head
Pickup head
Laser diode output lands
Laser diode output lands
Pickup A
Pickup B

Fig. 2-1-7

1-2-2. Output PC Board

1. Remove the top cover. (Refer to item 1-1-1.)
2. Peel off two tapes (1) and remove the connector (2).
3. Remove two flexible cables (3).
4. Remove five screws (4), then remove the output PC board (5).

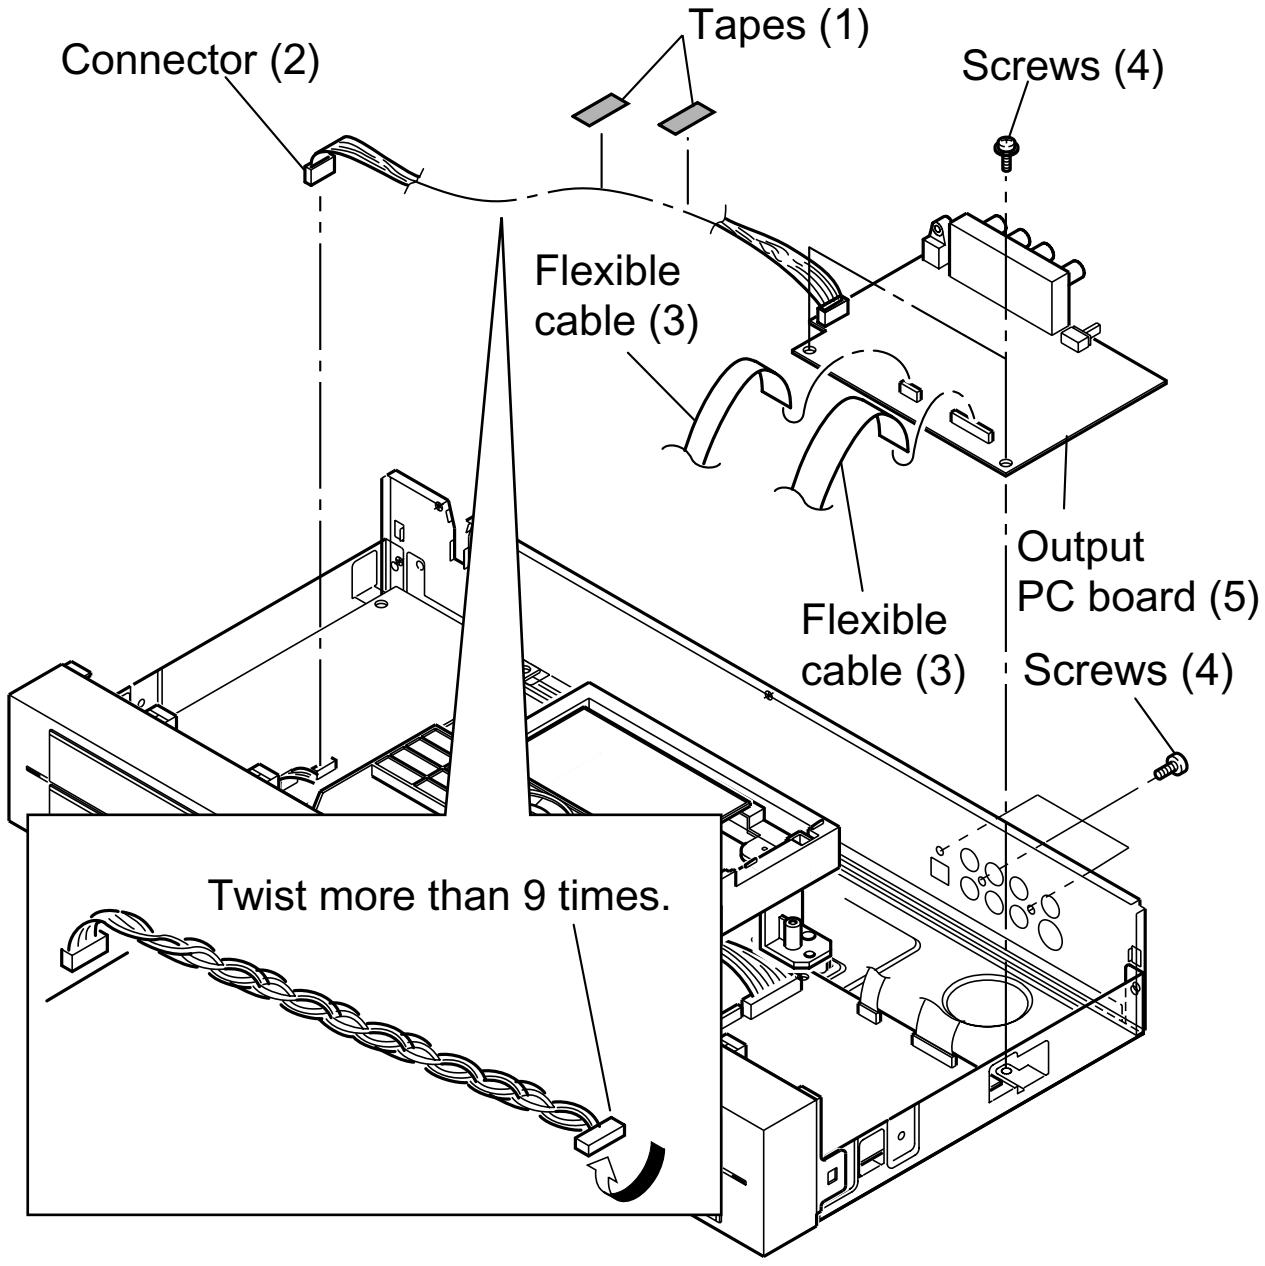
Connector (2)
Tapes (1)
Screws (4)
Flexible cable (3)
Output PC board (5)
Flexible cable (3)
Screws (4)
Twist more than 9 times.

Fig. 2-1-8

1-2-3. Power PC board

1. Remove the bush (1).
2. Peel off two tapes (2) and remove two connectors (3).
3. Remove four screws (4), then remove the power supply PC board (5).

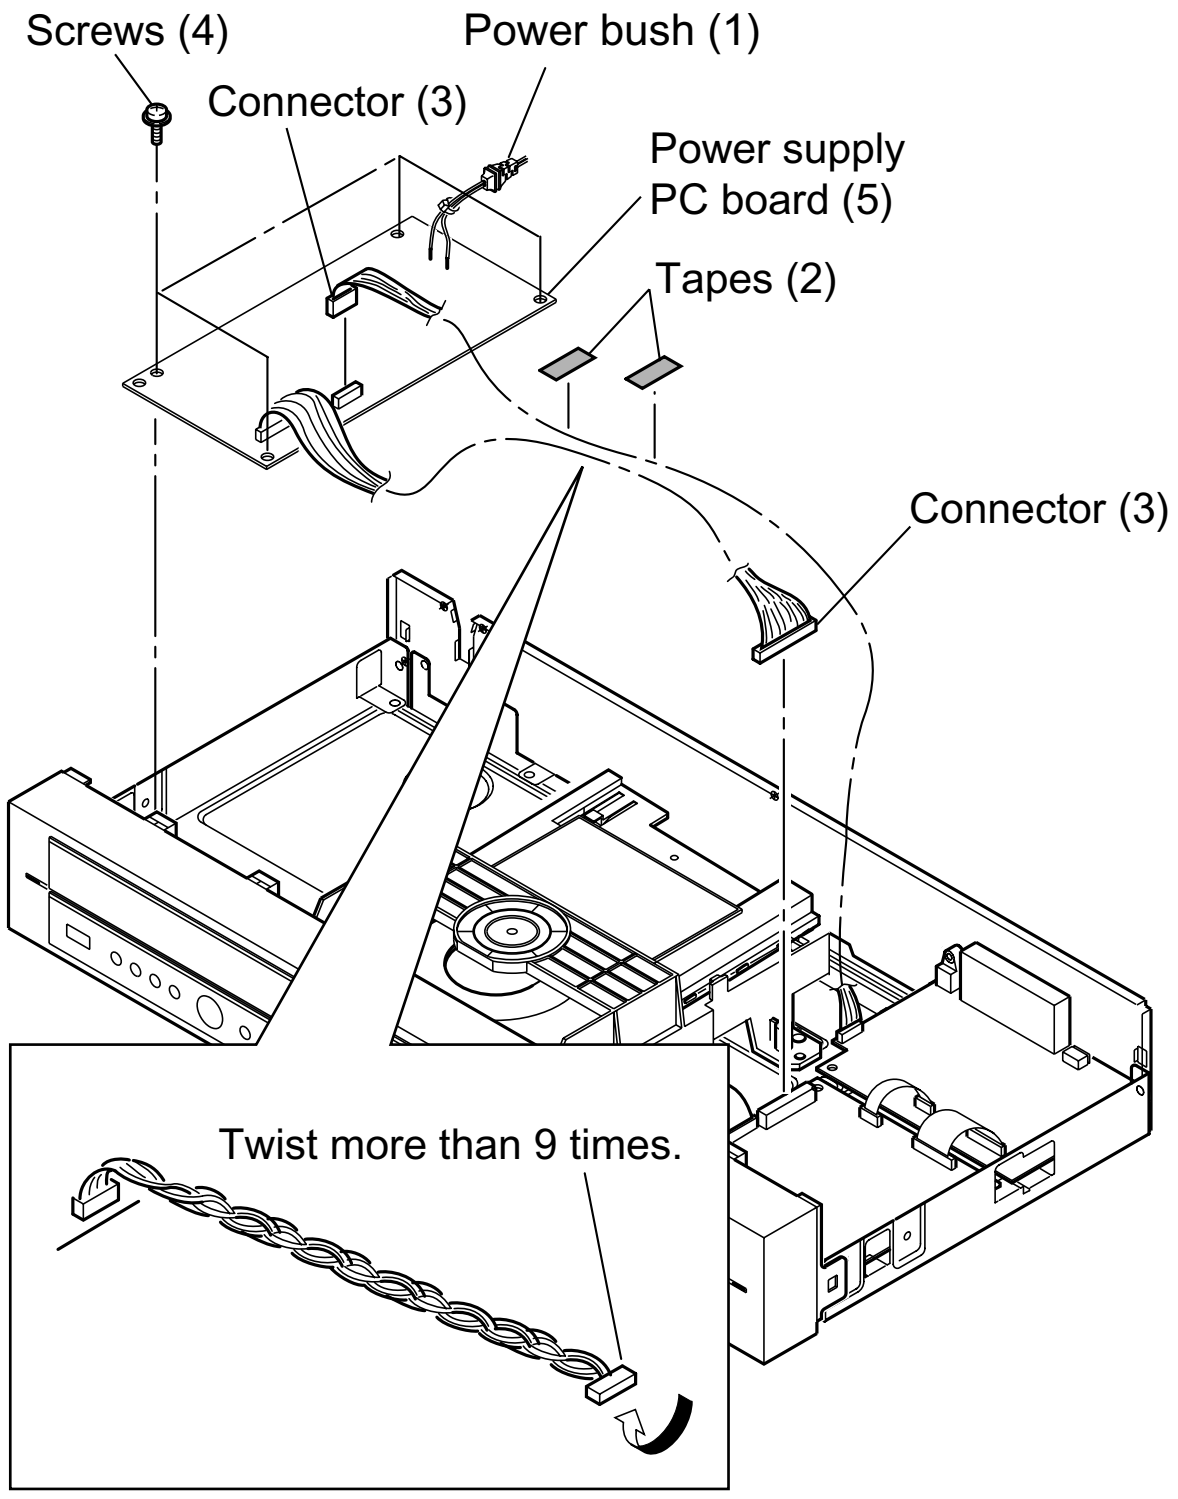
Screws (4)
Power bush (1)
Connector (3)
Power supply PC board (5)
Tapes (2)
Connector (3)
Twist more than 9 times.

Fig. 2-1-9

1-2-4. Front PC Board

1. Remove the front panel. (Refer to item 1-1-3.)
2. Remove the flexible cable (1).
3. Remove nine screws (2), then remove the front display PC board (3).
4. Remove two screws (4), then remove the power switch PC board (5).
5. Remove three screws (6), then remove the ENTER switch (7).

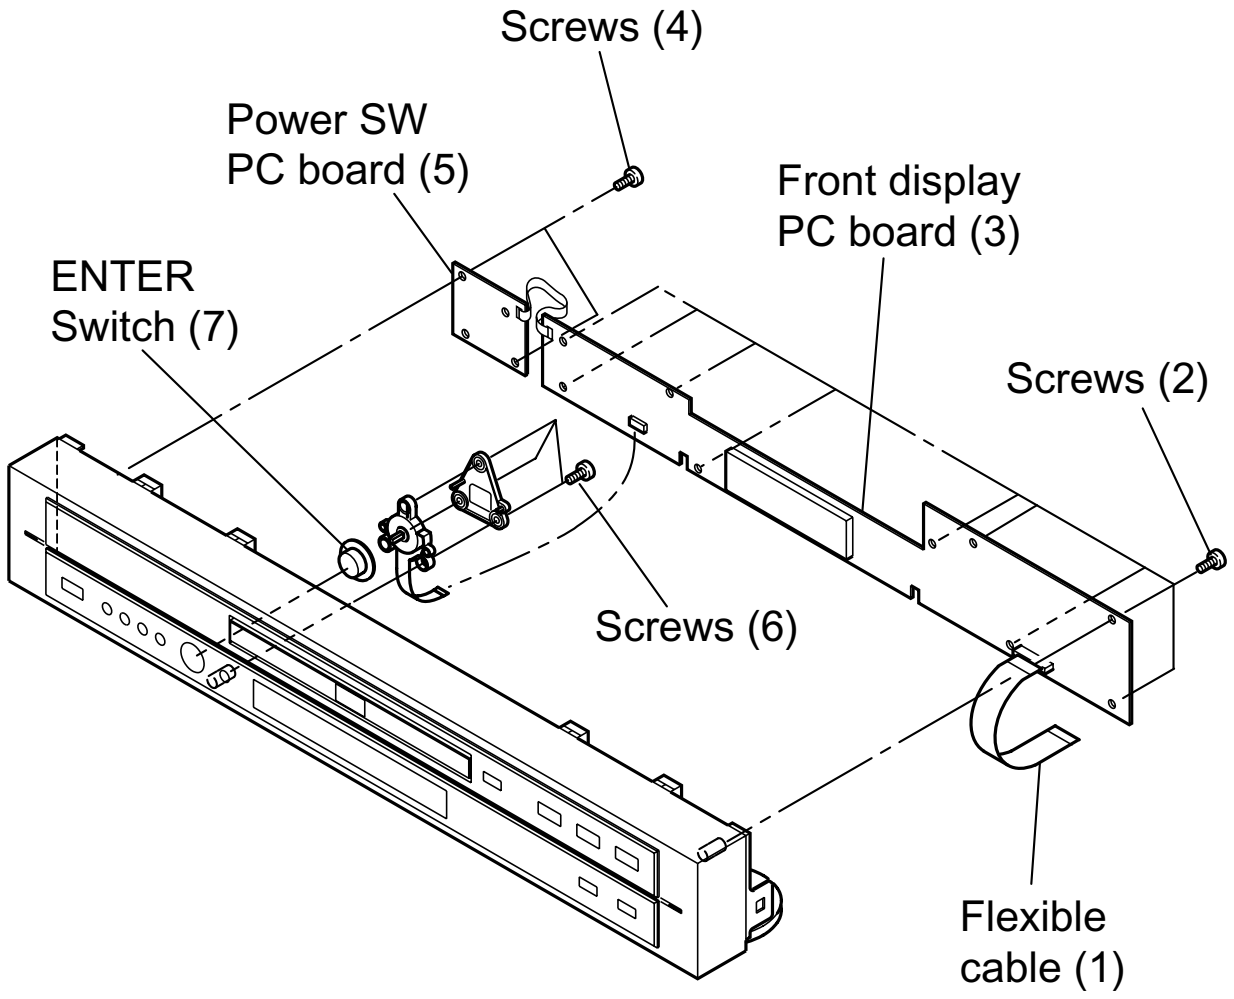
Screws (4)
Power SW PC board (5)
Front display PC board (3)
ENTER Switch (7)
Screws (2)
Screws (6)
Flexible cable (1)

Fig. 2-1-10

1-3. Mechanism Parts

1-3-1. Mechanism Chassis Assembly

Note:

- When removing the mechanism chassis assembly (3), be sure to short-circuit the laser diode output land before removing the connector and the flexible cables.

  After replacing, open the land as it was after inserting the connector and flexible cables.

1. Remove the front panel. (Refer to item 1-1-3.)
2. Remove three flexible cables (1).
3. Remove four screws (2), then remove the mechanism chassis assembly (3).

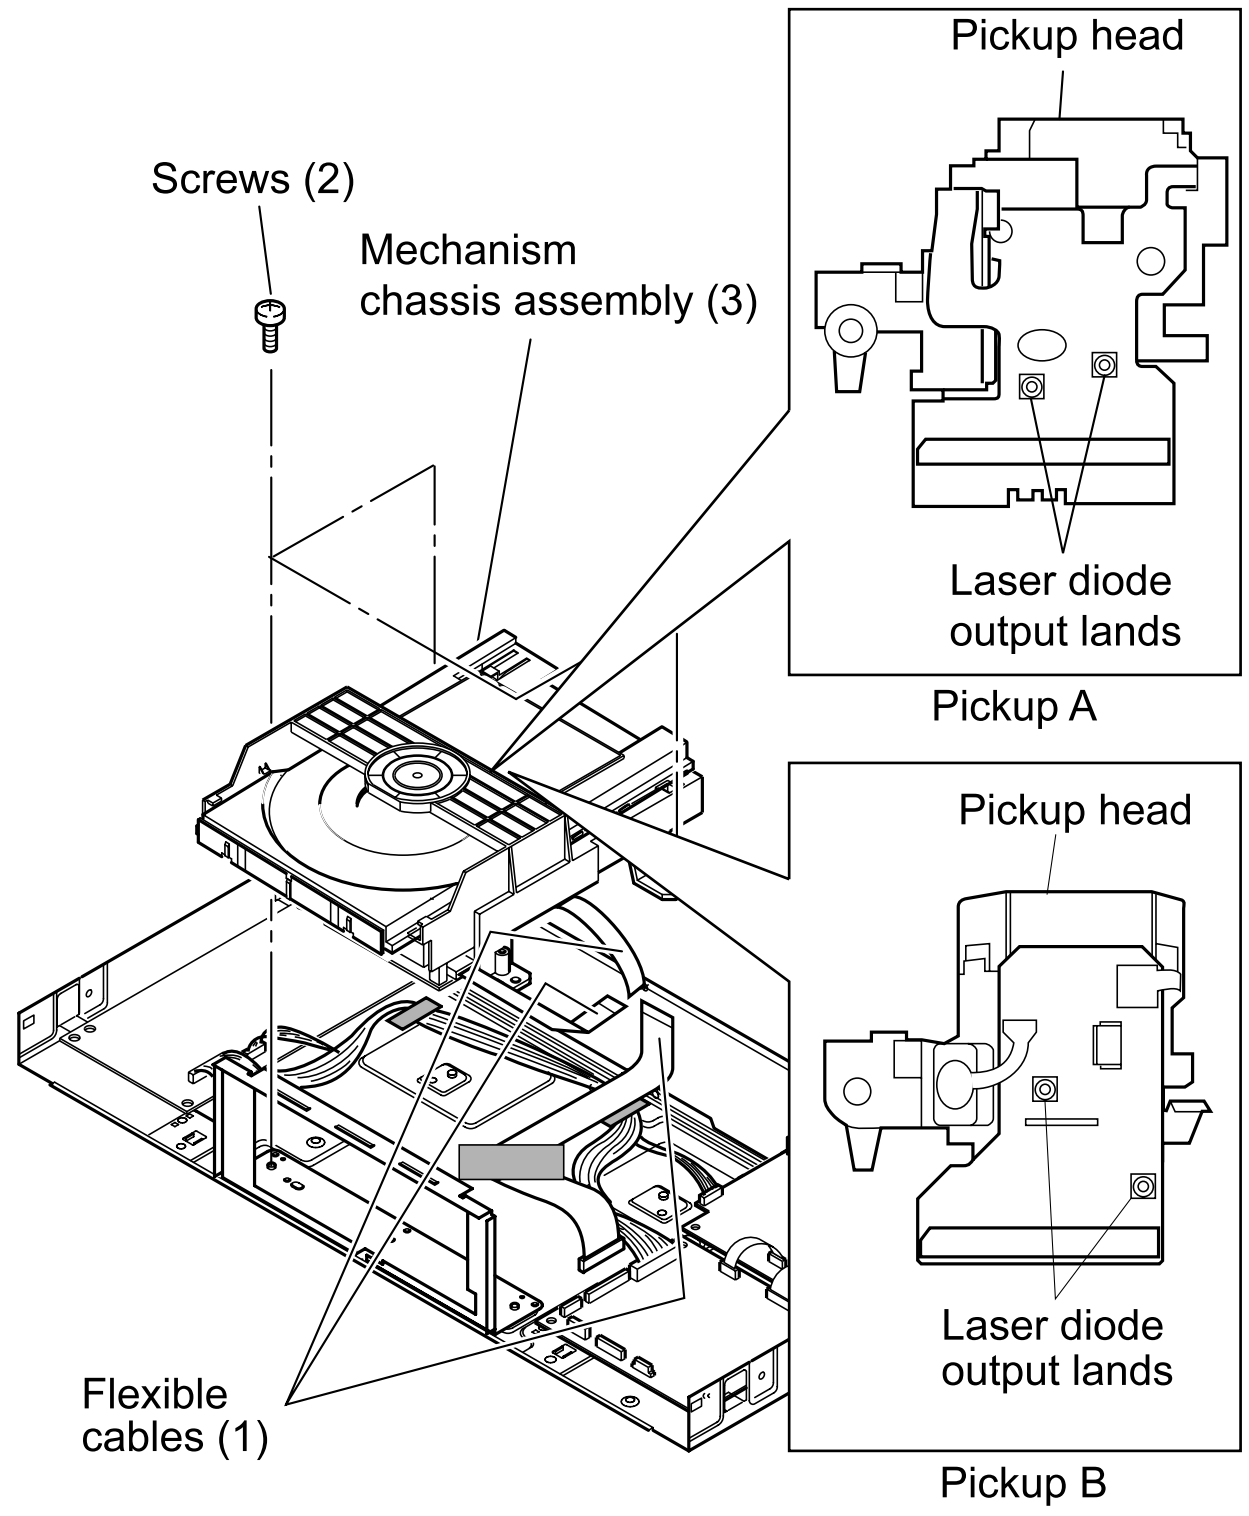
Screws (2)
Mechanism chassis assembly (3)
Pickup head
Laser diode output lands
Pickup A
Pickup head
Laser diode output lands
Pickup B
Flexible cables (1)

Fig. 2-1-11

2. REPLACEMENT OF MECHANICAL PARTS (TYPE B)

2-1. Cabinet Replacement

2-1-1. Top Cover

1. Remove seven screws (1), then remove the top cover (2).

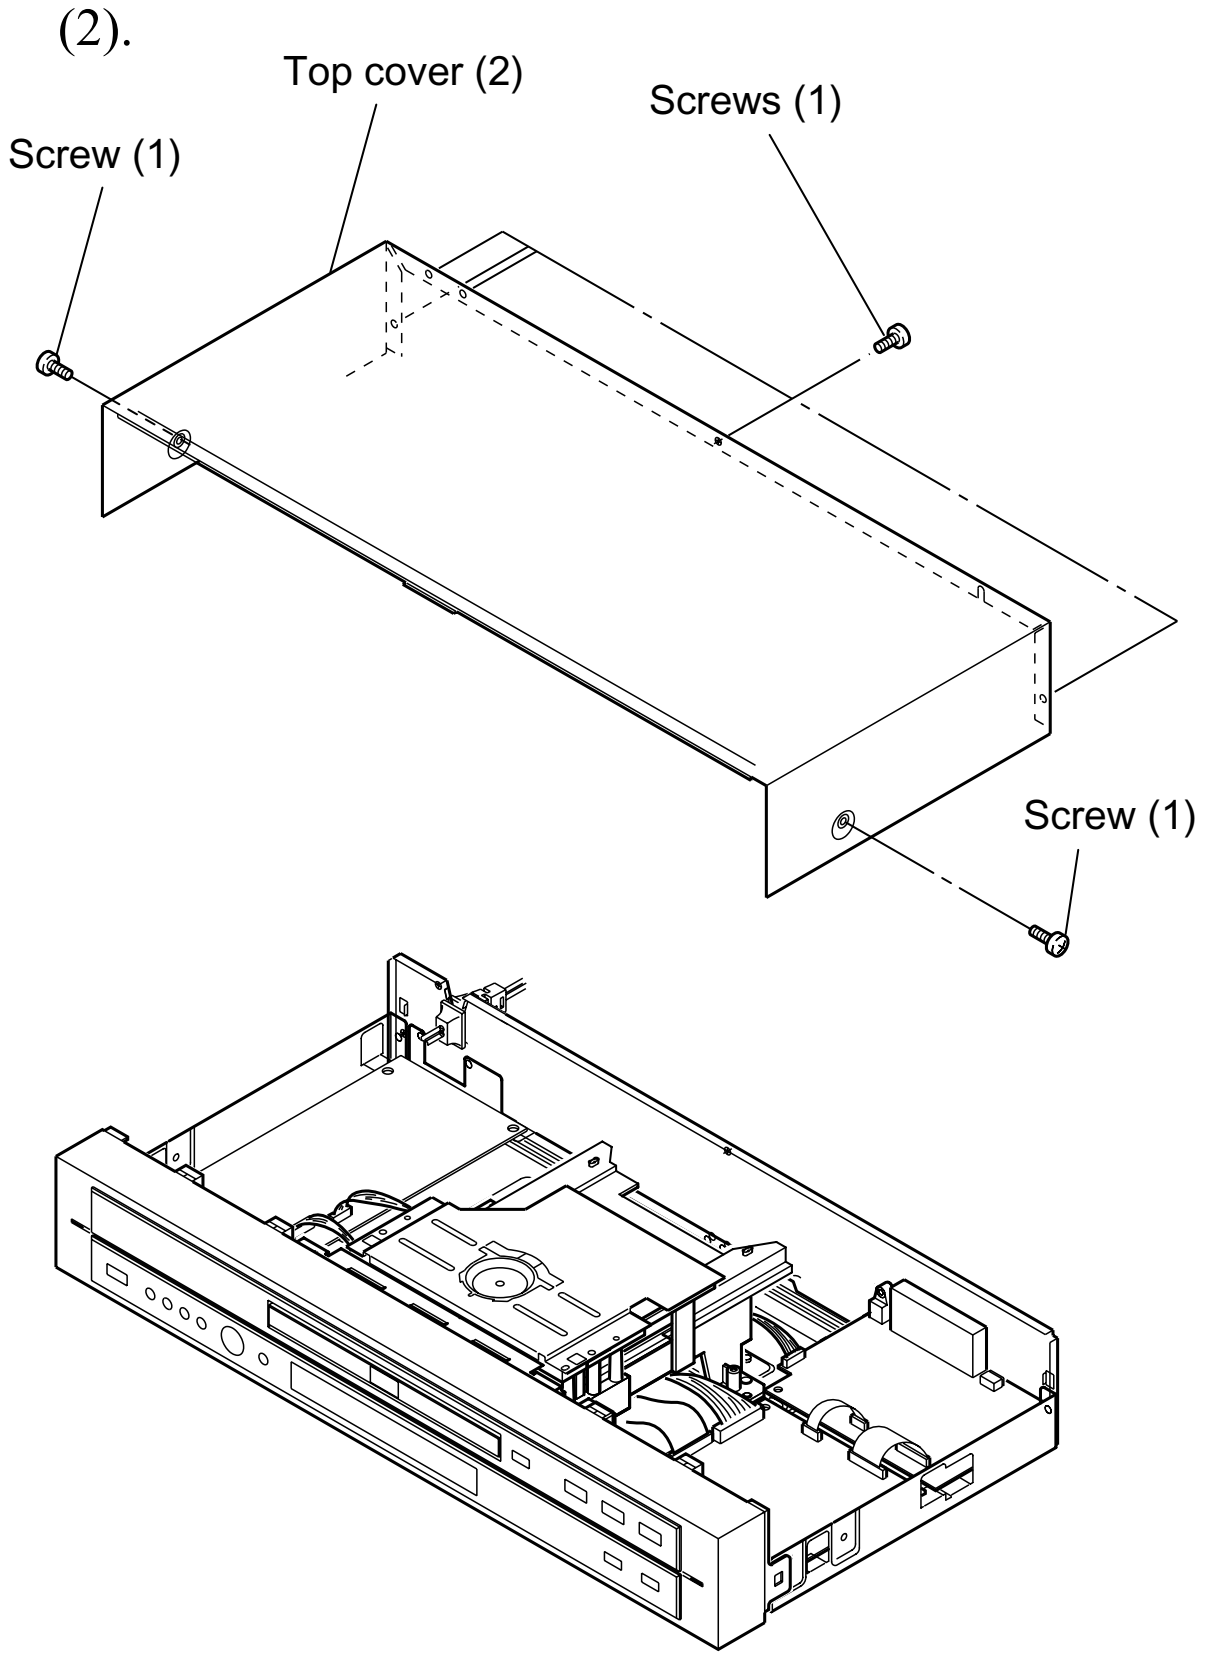
Top cover (2)
Screws (1)
Screw (1)
Screw (1)

Fig. 2-1-12

2-1-2. Clamper Stay

<Removal>

1. Remove two screws (1).
2. Release two claws and remove the clamper stay (2).

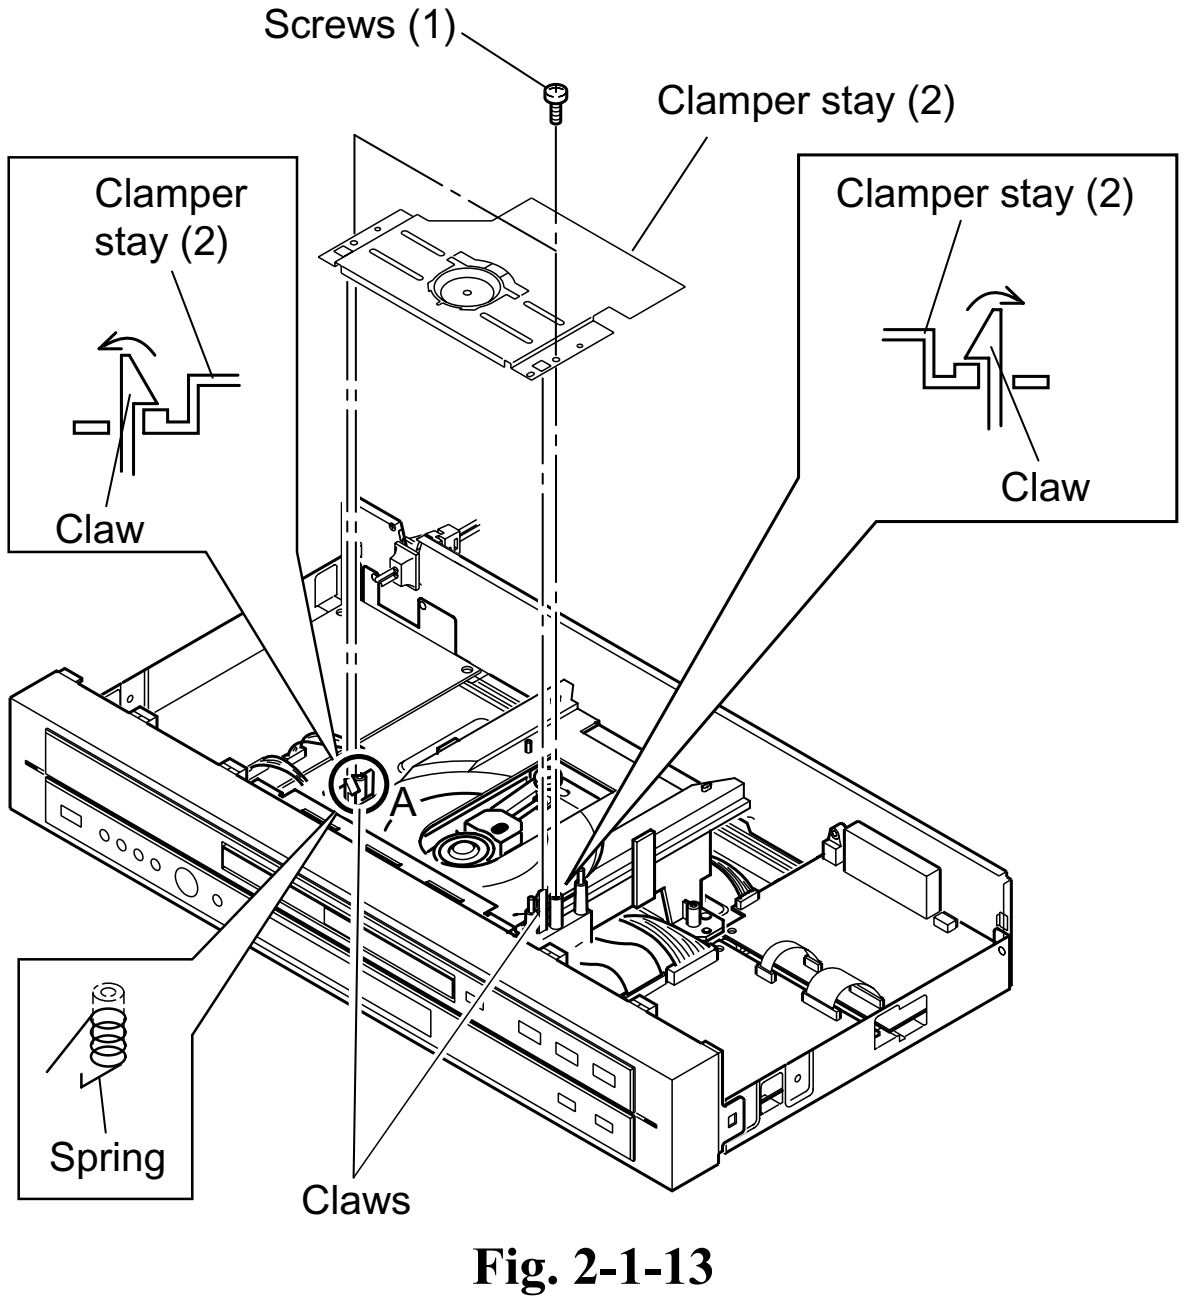
Screws (1)
Clamper stay (2)
Clamper stay (2)
Claw
Clamper stay (2)
Claw
A
Spring
Claws

Fig. 2-1-13

<Mounting >

1. The spring for tray side pressure is inserted into the portion “A”. (Refer to Fig. 2-1-13.)
2. By referring to Fig. 2-1-14, insert the spring normally and mount the clamper stay.

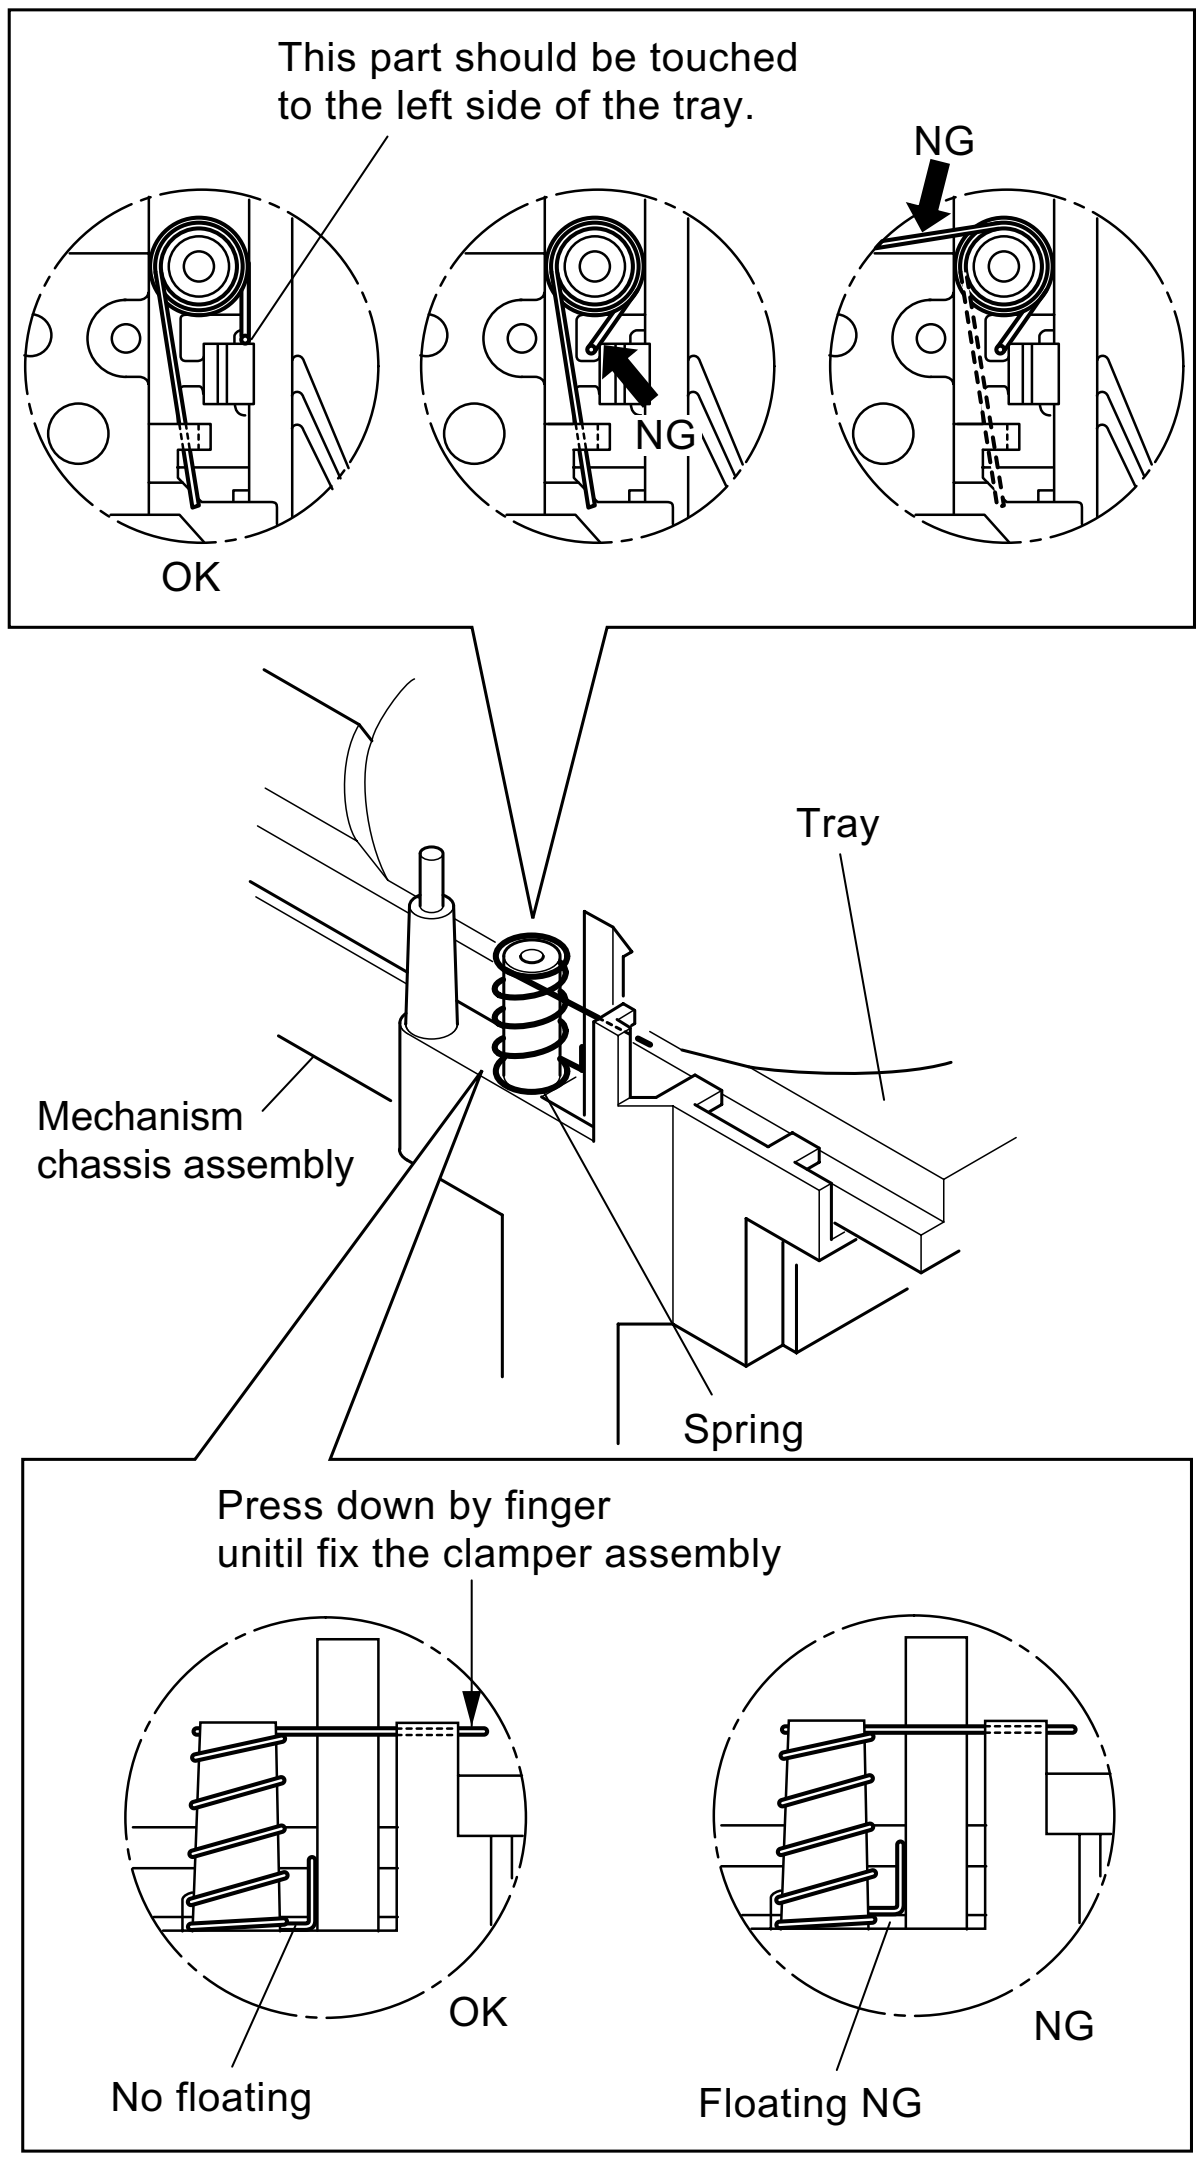
This part should be touched to the left side of the tray.
NG
NG
OK
Tray
Mechanism chassis assembly
Spring
Press down by finger unitil fix the clamper assembly
OK
NG
No floating
Floating NG

Fig. 2-1-14

2-1-3. Tray Panel

<Tray Ejection>

1. Slide the slider (2) of the mechanism chassis assembly (1) with a screwdriver, etc. in the arrow direction, so that the tray (3) is ejected.

Note:

- Take care not to damage the pickup and other parts.

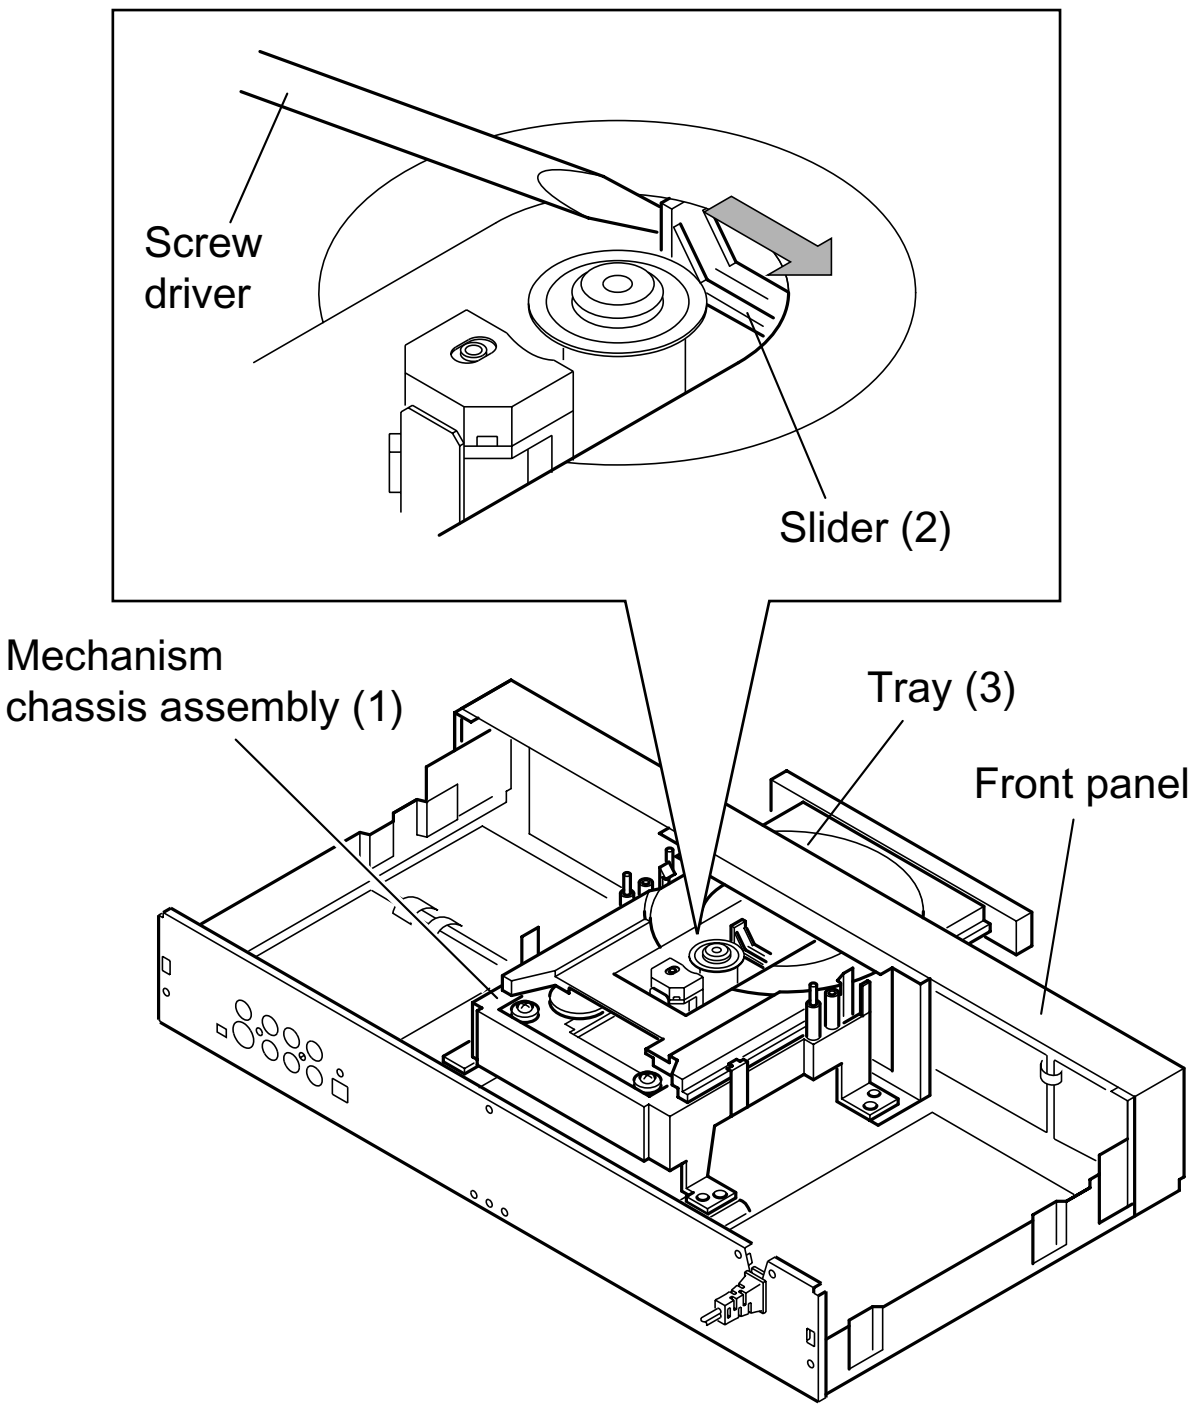
Screw driver
Slider (2)
Mechanism chassis assembly (1)
Tray (3)
Front panel

Fig. 2-1-15

<Tray Panel Removal>

1. Eject the tray (3).
2. Twist the tray panel (4) a little in the arrow A direction with the tray (3) hold by hand to release two claws and lift up the tray panel (4) in the arrow B direction, then the tray panel (4) is removed. (Refer to Fig. 2-1-16.)
3. When mounting the tray panel (4), insert the tray panel (4) along the grooves of the both sides of the tray (3) until clicking.

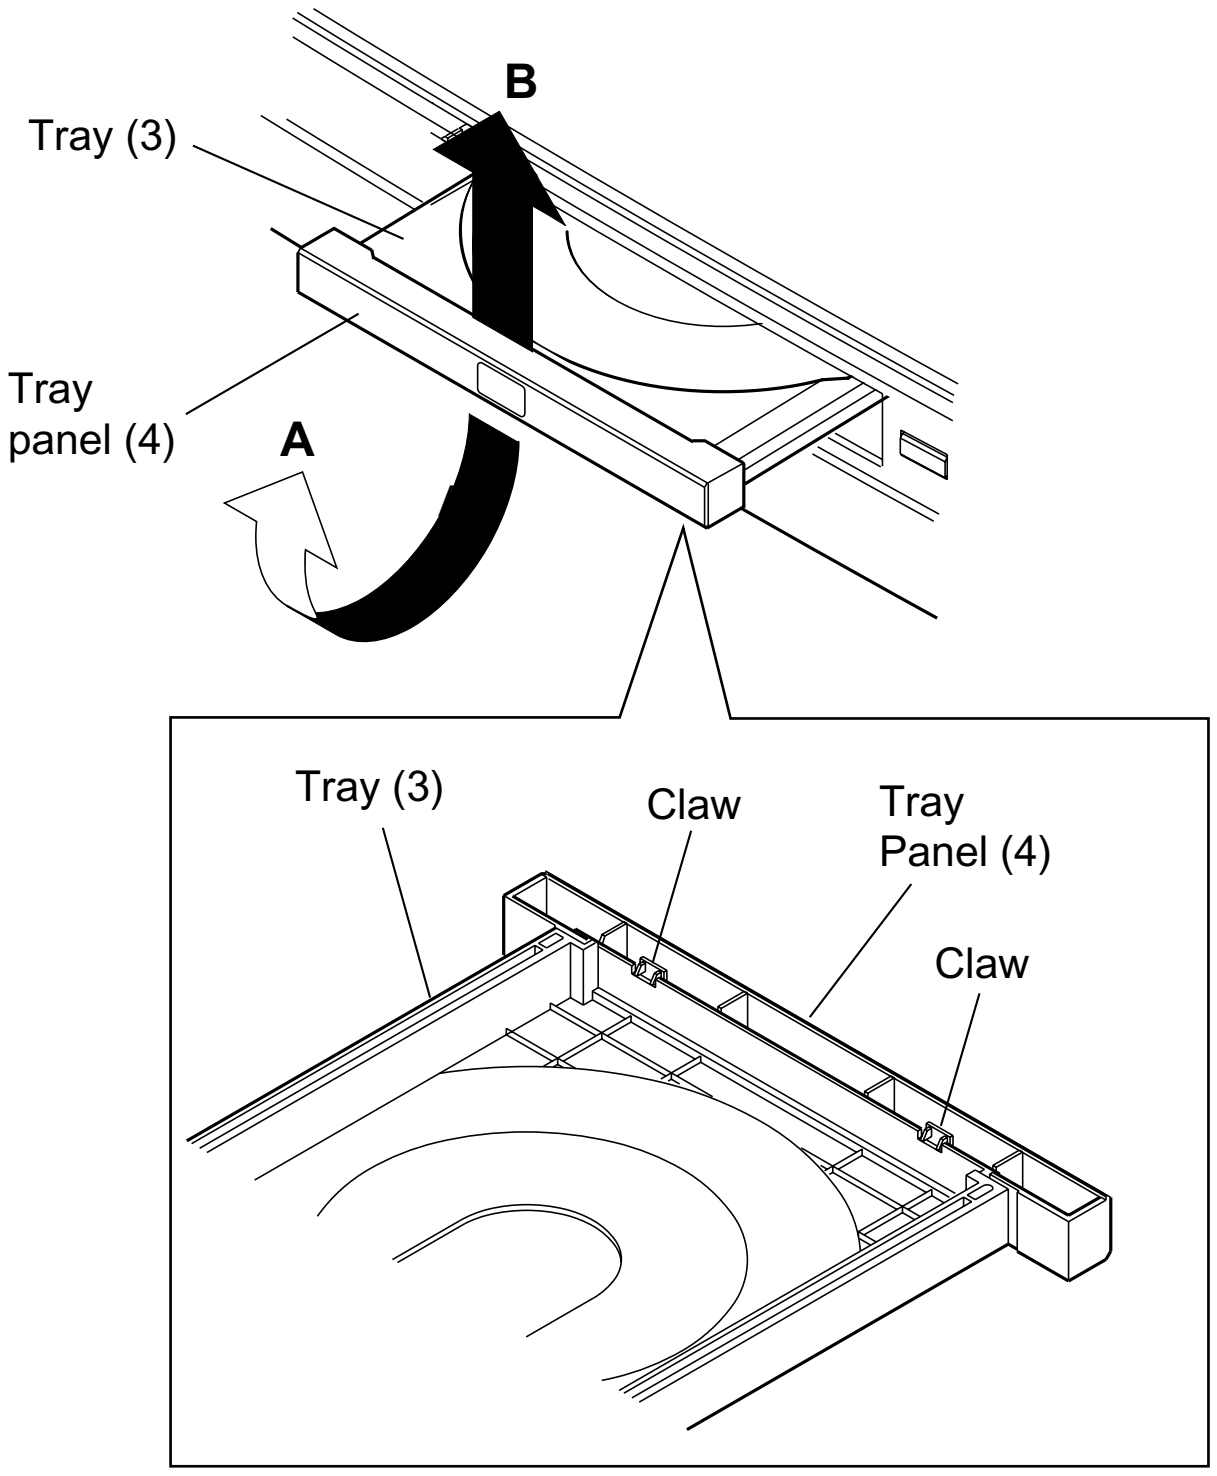
B
Tray (3)
Tray panel (4)
A
Tray (3)
Claw
Tray Panel (4)
Claw

Fig. 2-1-16

2-1-4. Front Panel and Tray

1. Remove the flexible cable (1).
2. Release four claws and remove the front panel (2).
3. Pull out the tray (3) towards you.

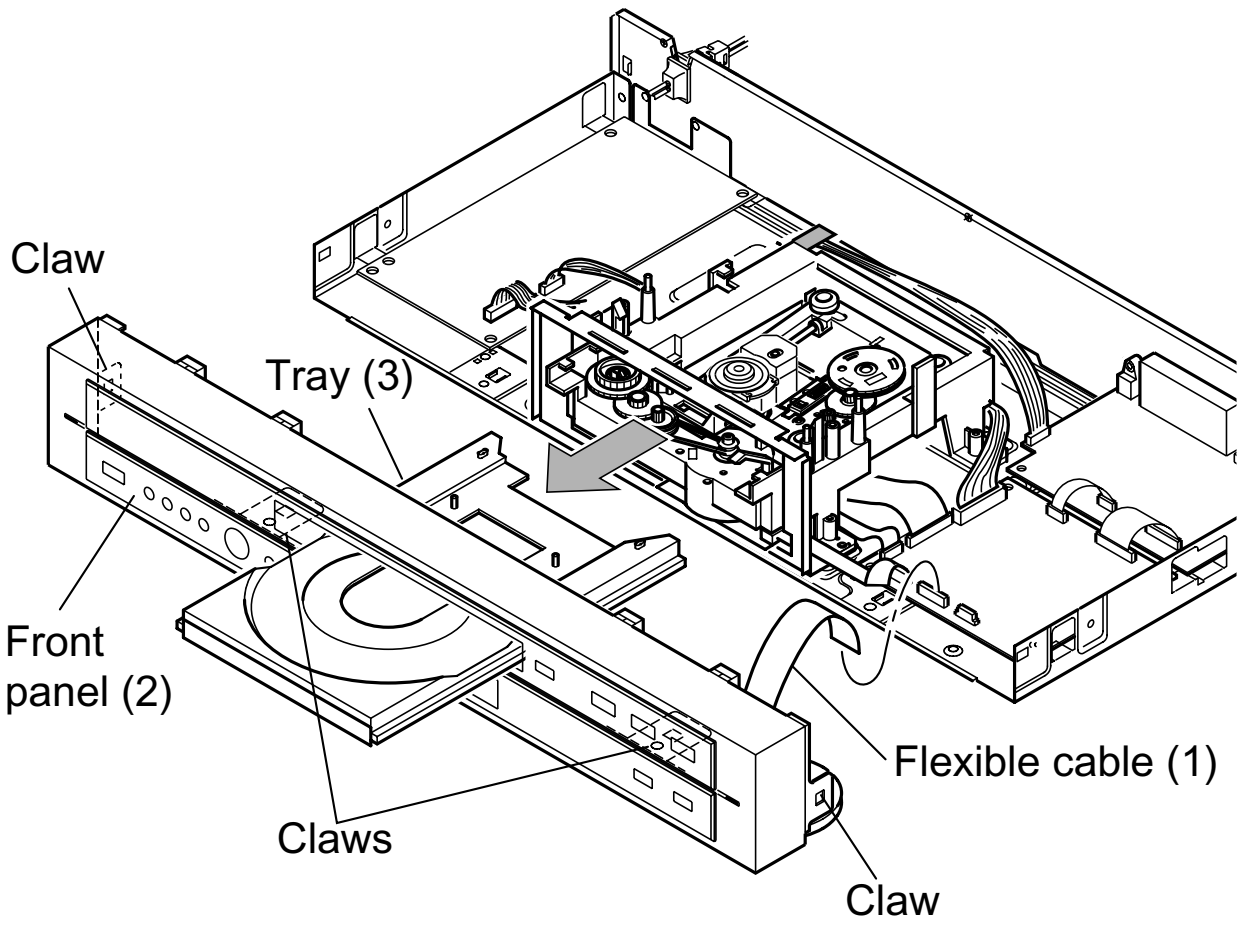
Claw
Tray (3)
Front panel (2)
Claws
Flexible cable (1)
Claw

Fig. 2-1-17

Note:

- Insert the tray (3) with the front side of the pickup mechanism assembly descended. (The slider positions to the left side.)
- The gears are required to match their phases each other. After setting the gear (4) as shown in the figure “A”, insert the tray (3). When inserting a tray (3), push the rack gear side shown by the arrow.

- Confirm that the mark of the gear matches with the triangle mark on the reverse side of the tray in the tray close status. (The gear is rotated with the slider locks.) (Refer to Fig. B.)

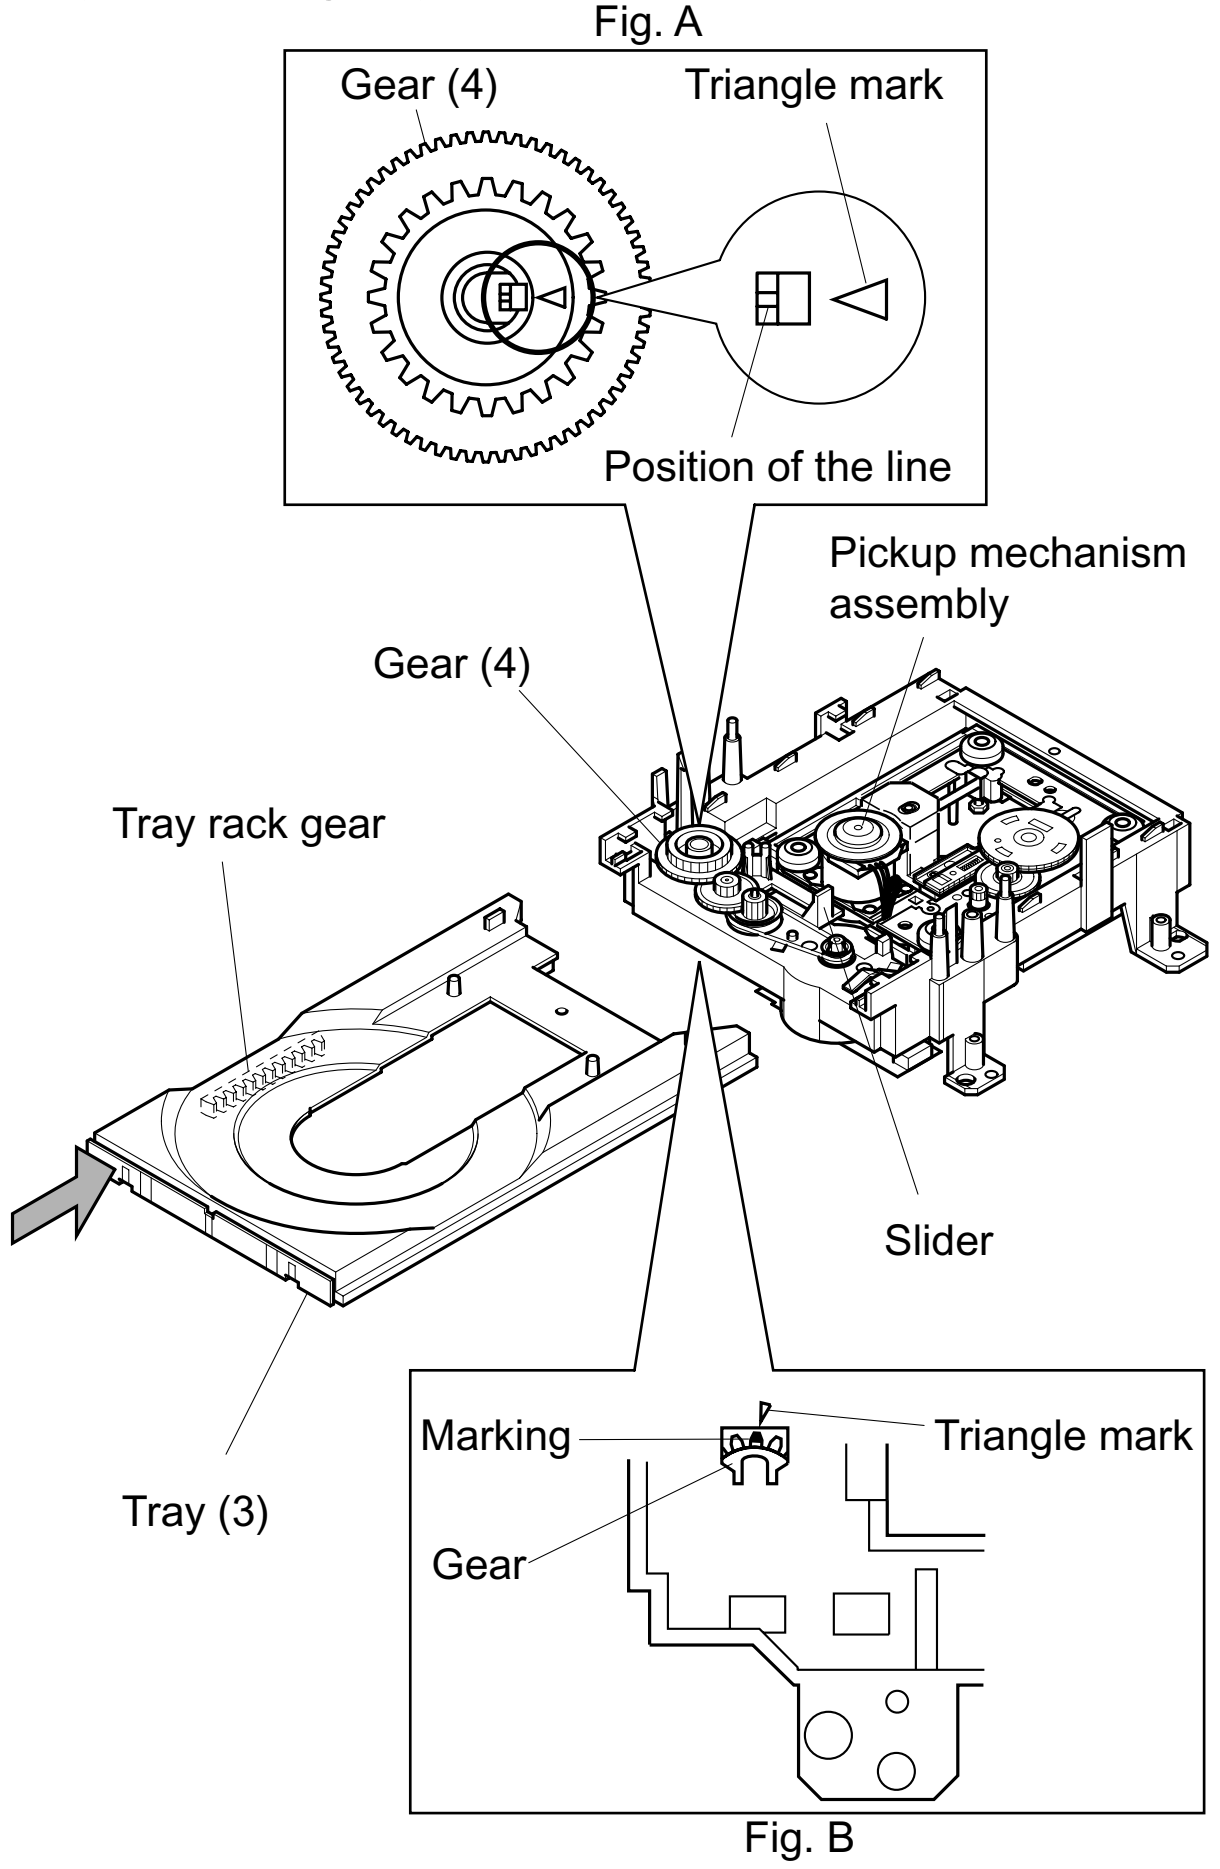
Fig. A
Gear (4)
Triangle mark
Position of the line
Pickup mechanism assembly
Gear (4)
Tray rack gear
Slider
Tray (3)
Marking
Triangle mark
Gear
Fig. B

Fig. 2-1-18

2-1-5. Rear Panel

1. Remove the bush (1).
2. Remove four screws (2), then remove the rear panel (3).

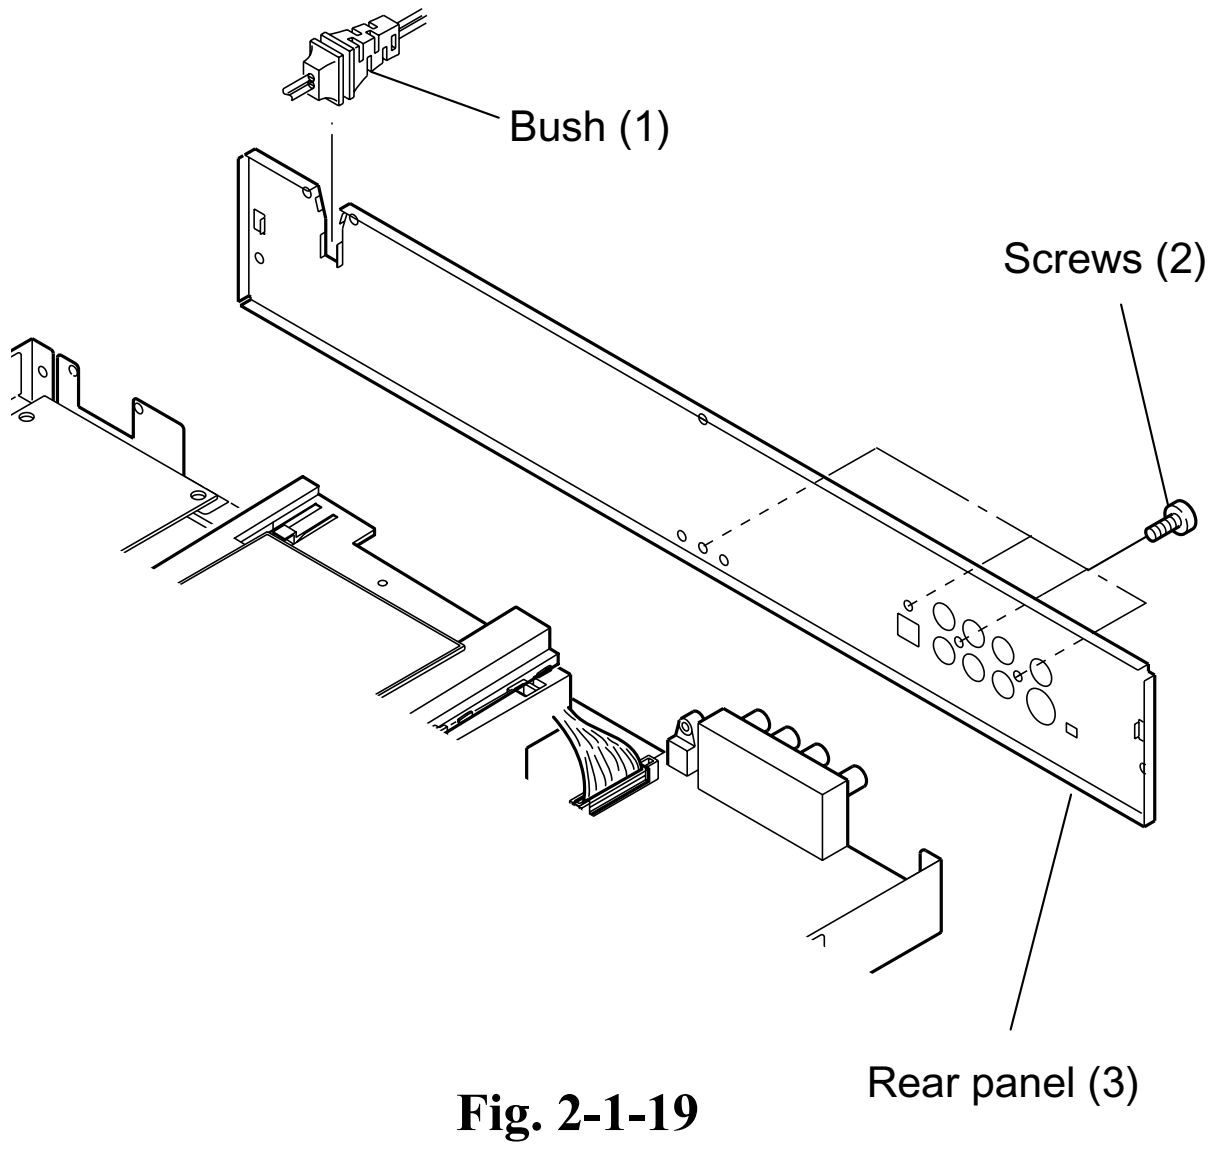
Bush (1)
Screws (2)
Rear panel (3)

Fig. 2-1-19

2-2. PC Board Replacement

2-2-1. Main PC Board

Note:

- Before removing the main PC board (4), be sure to short-circuit the laser diode output land.

  After replacing, open the land as it was after inserting the flexible cables (1).

1. Remove the top cover. (Refer to item 2-1-1.)
2. Eject the tray. (Refer to item 2-1-3.)
3. Remove six flexible cables (1) and remove one connector (2).
4. Remove four screws (3), then remove the main PC board (4).

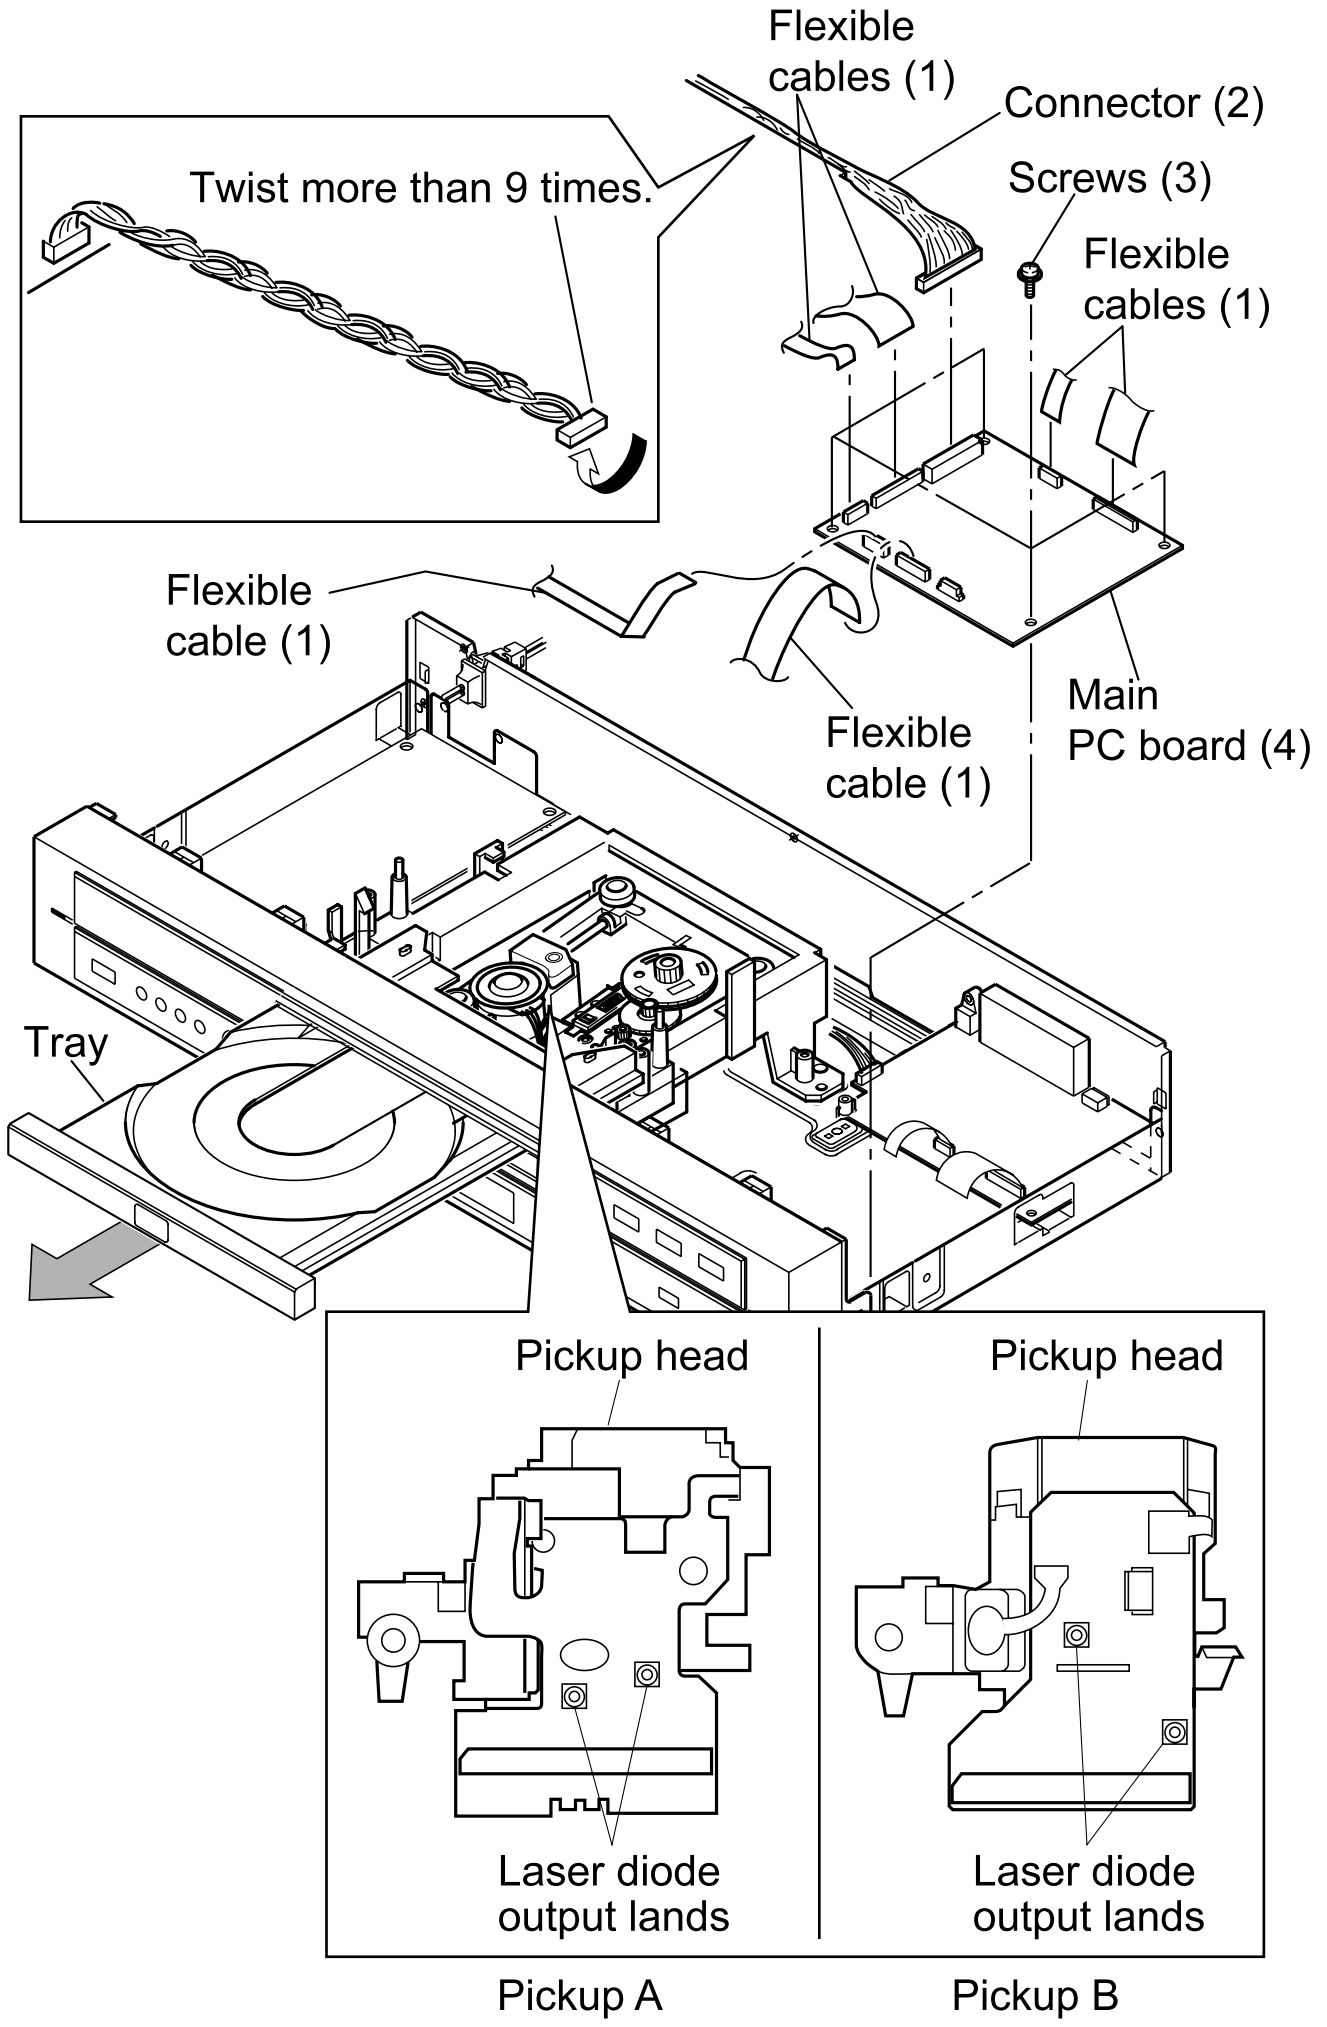
Flexible cables (1)
Connector (2)
Screws (3)
Flexible cables (1)
Twist more than 9 times.
Flexible cable (1)
Flexible cable (1)
Main PC board (4)
Tray
Pickup head
Pickup head
Laser diode output lands
Laser diode output lands
Pickup A
Pickup B

Fig. 2-1-20

2-2-2. Output PC Board

1. Remove the top cover. (Refer to item 2-1-1.)
2. Peel off two tapes (1) and remove the connector (2).
3. Remove two flexible cables (3).
4. Remove five screws (4), then remove the output PC board (5).

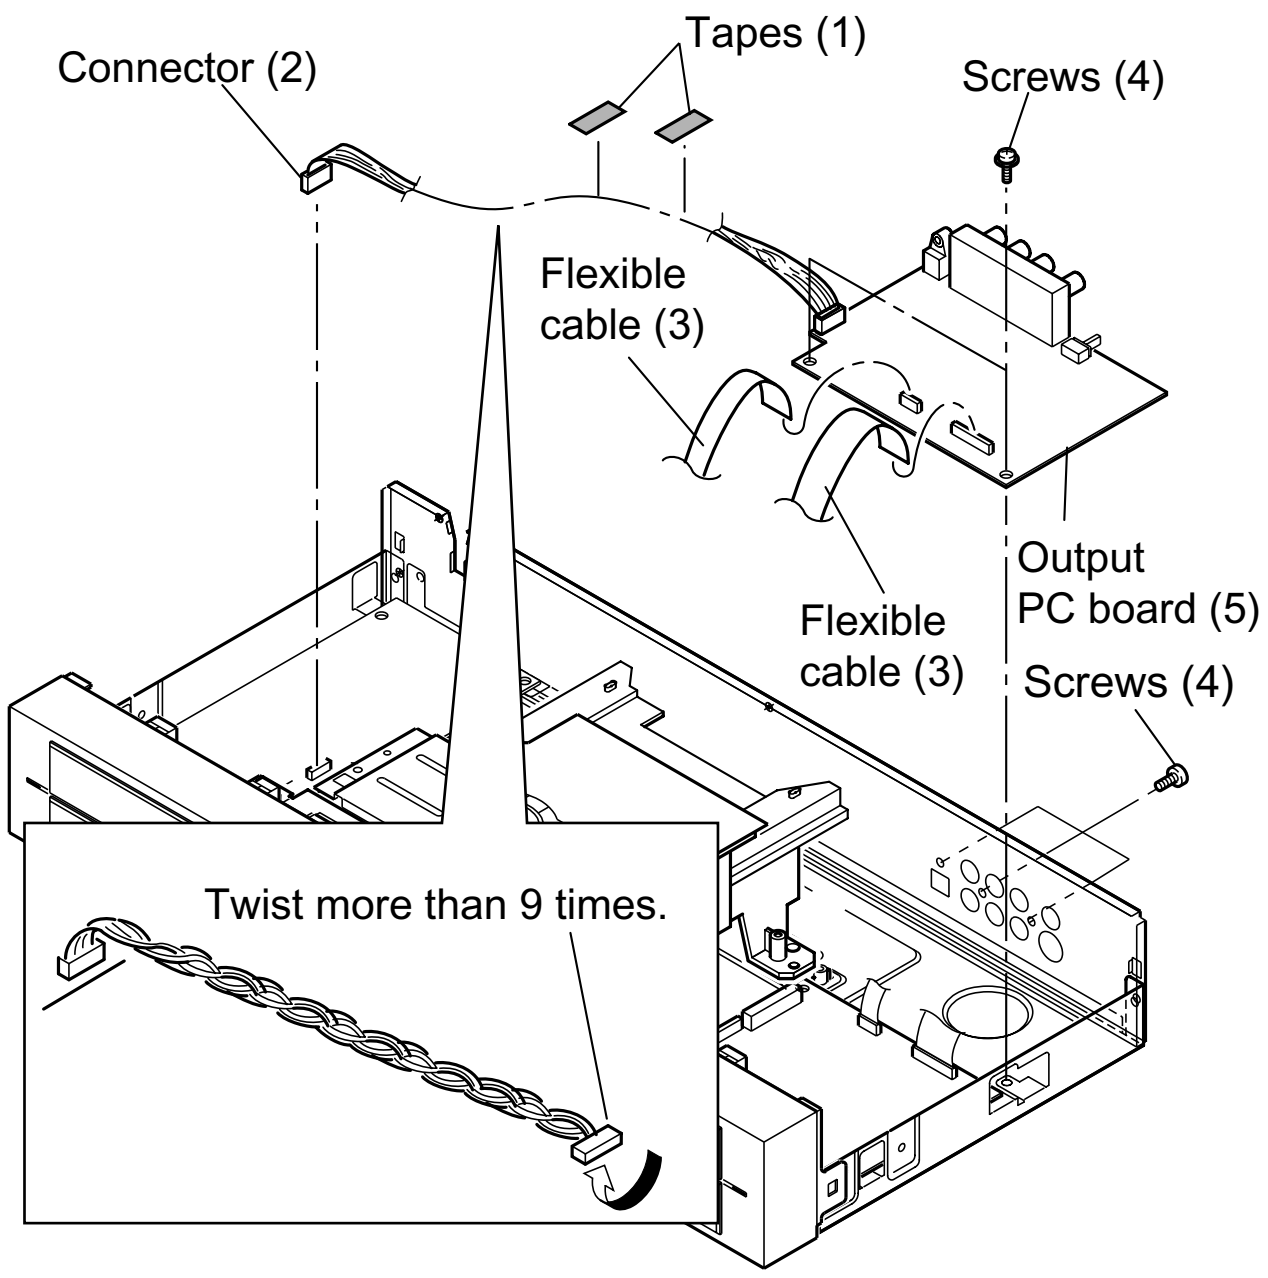
Connector (2)
Tapes (1)
Screws (4)
Flexible cable (3)
Flexible cable (3)
Output PC board (5)
Screws (4)
Twist more than 9 times.

Fig. 2-1-21

2-2-3. Power PC board

1. Remove the power bush (1).
2. Peel off two tapes (2) and remove two connectors (3).
3. Remove four screws (4), then remove the power supply PC board (5).

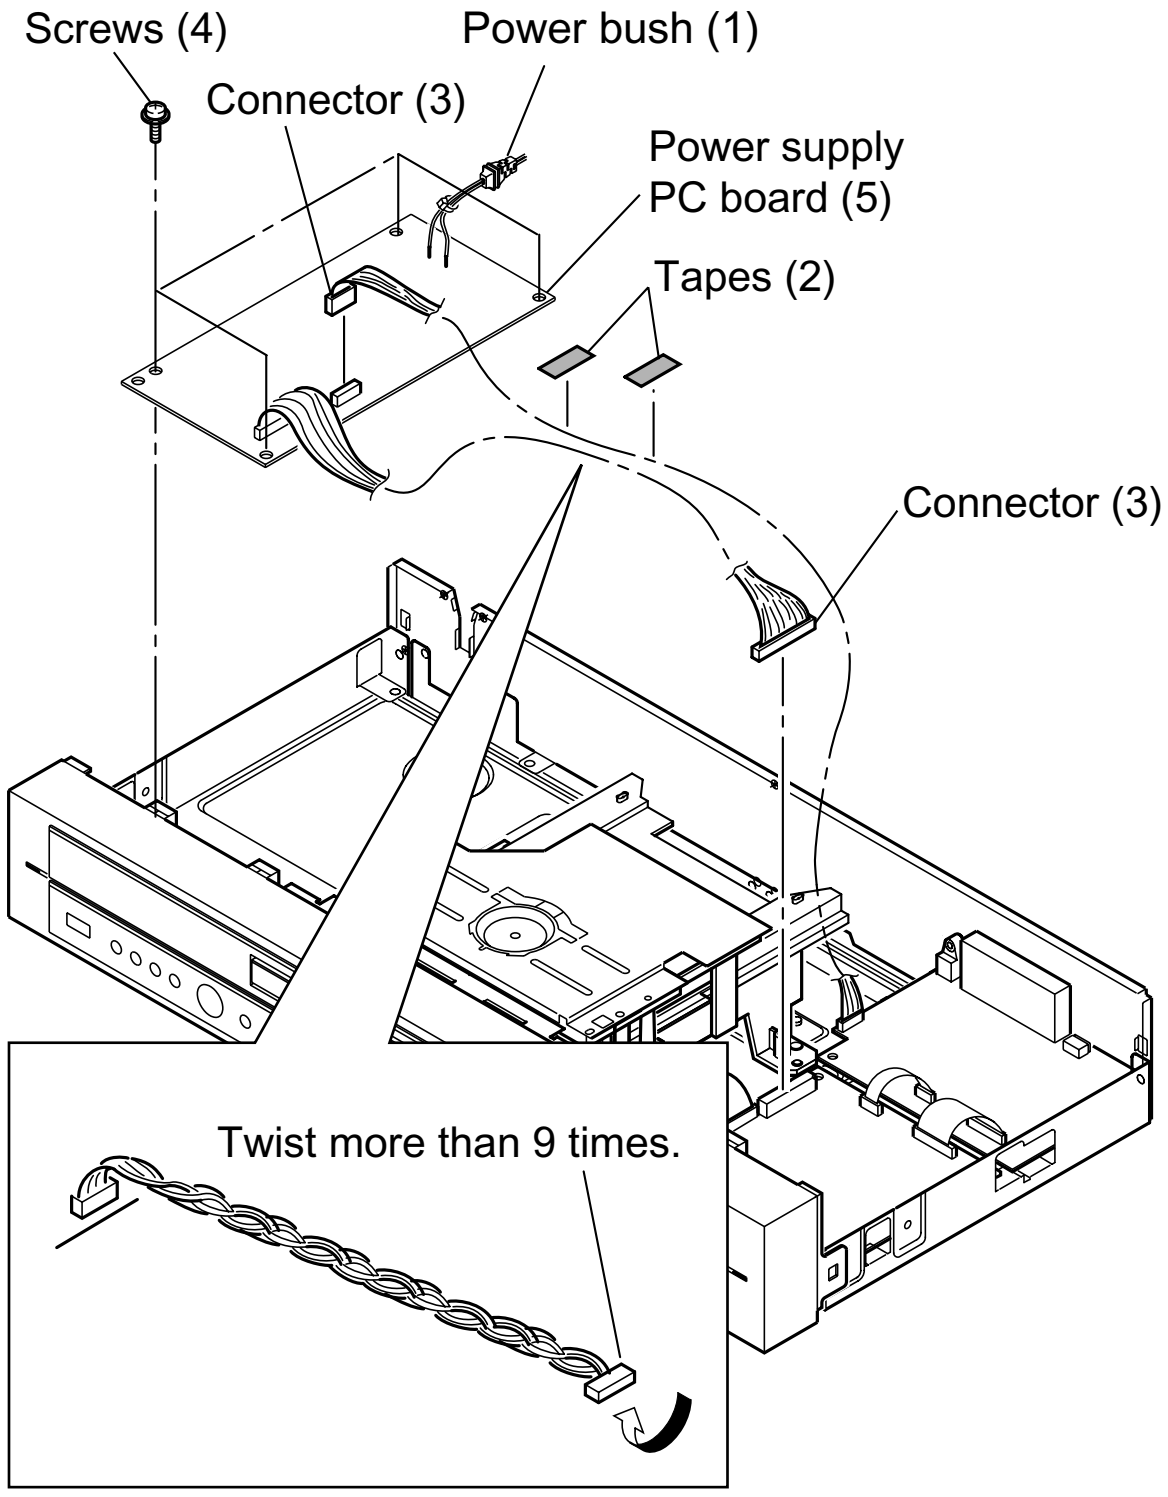
Screws (4)
Power bush (1)
Connector (3)
Power supply PC board (5)
Tapes (2)
Connector (3)
Twist more than 9 times.

Fig. 2-1-22

2-2-4. Front PC Board

1. Remove the front panel. (Refer to item 2-1-4.)
2. Remove the flexible cable (1).
3. Remove six screws (2), then remove the front display PC board (3).
4. Remove two screws (4), then remove the power switch PC board (5).
5. Remove three screws (6), then remove the ENTER switch (7).

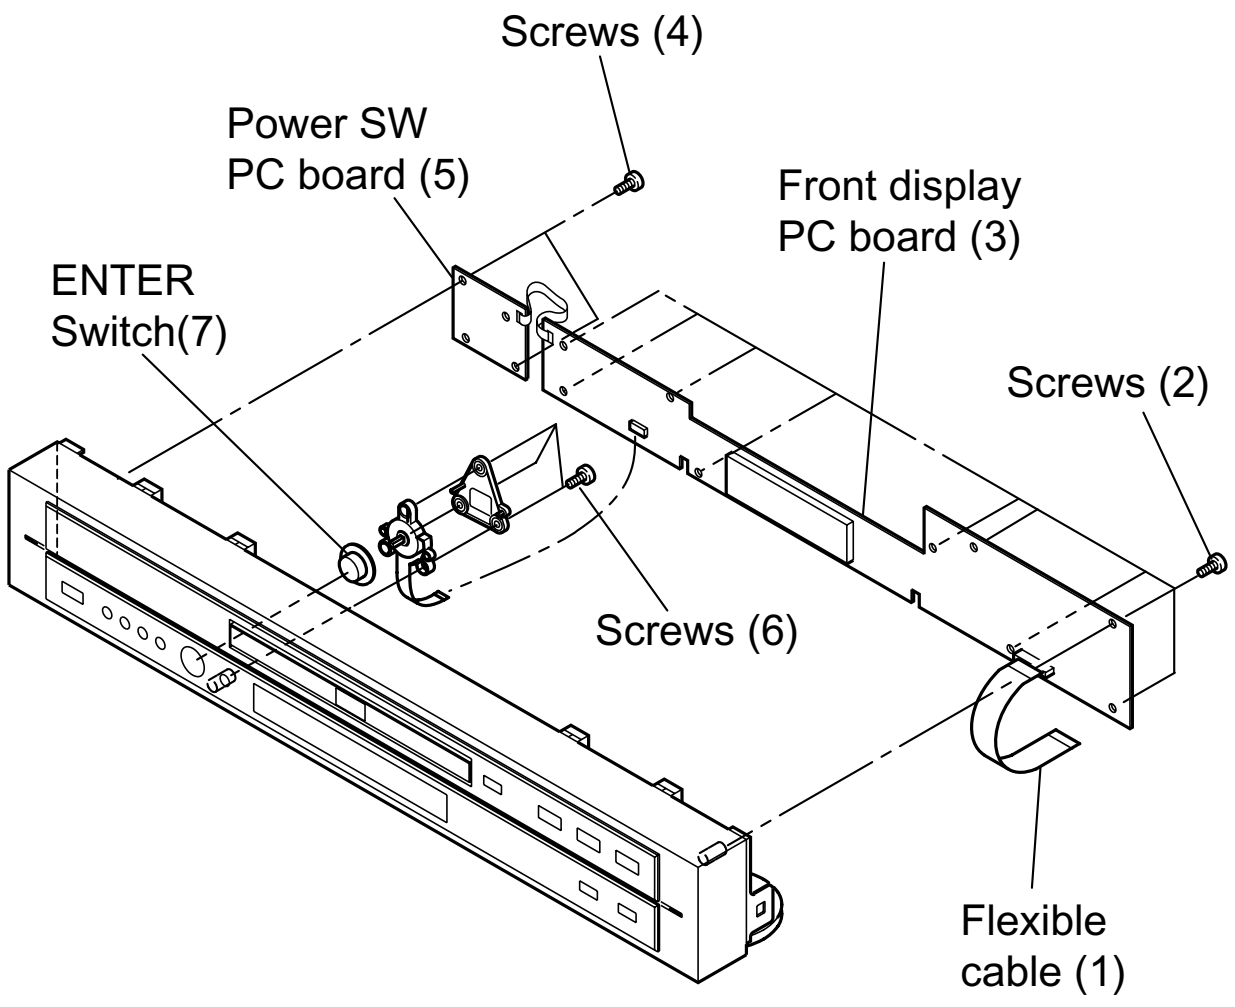
Screws (4)
Power SW PC board (5)
Front display PC board (3)
ENTER Switch(7)
Screws (2)
Screws (6)
Flexible cable (1)

Fig. 2-1-23

2-3. Mechanism Parts

2-3-1. Mechanism Chassis Assembly

Note:

- When removing the mechanism chassis assembly (3), be sure to short-circuit the laser diode output land before removing the connector and the flexible cables.

  After replacing, open the land as it was after inserting the connector and flexible cables.

1. Remove the tray. (Refer to items 2-1-3 and 2-1-4.)
2. Remove three flexible cables (1).
3. Remove four screws (2), then remove the mechanism chassis assembly (3).

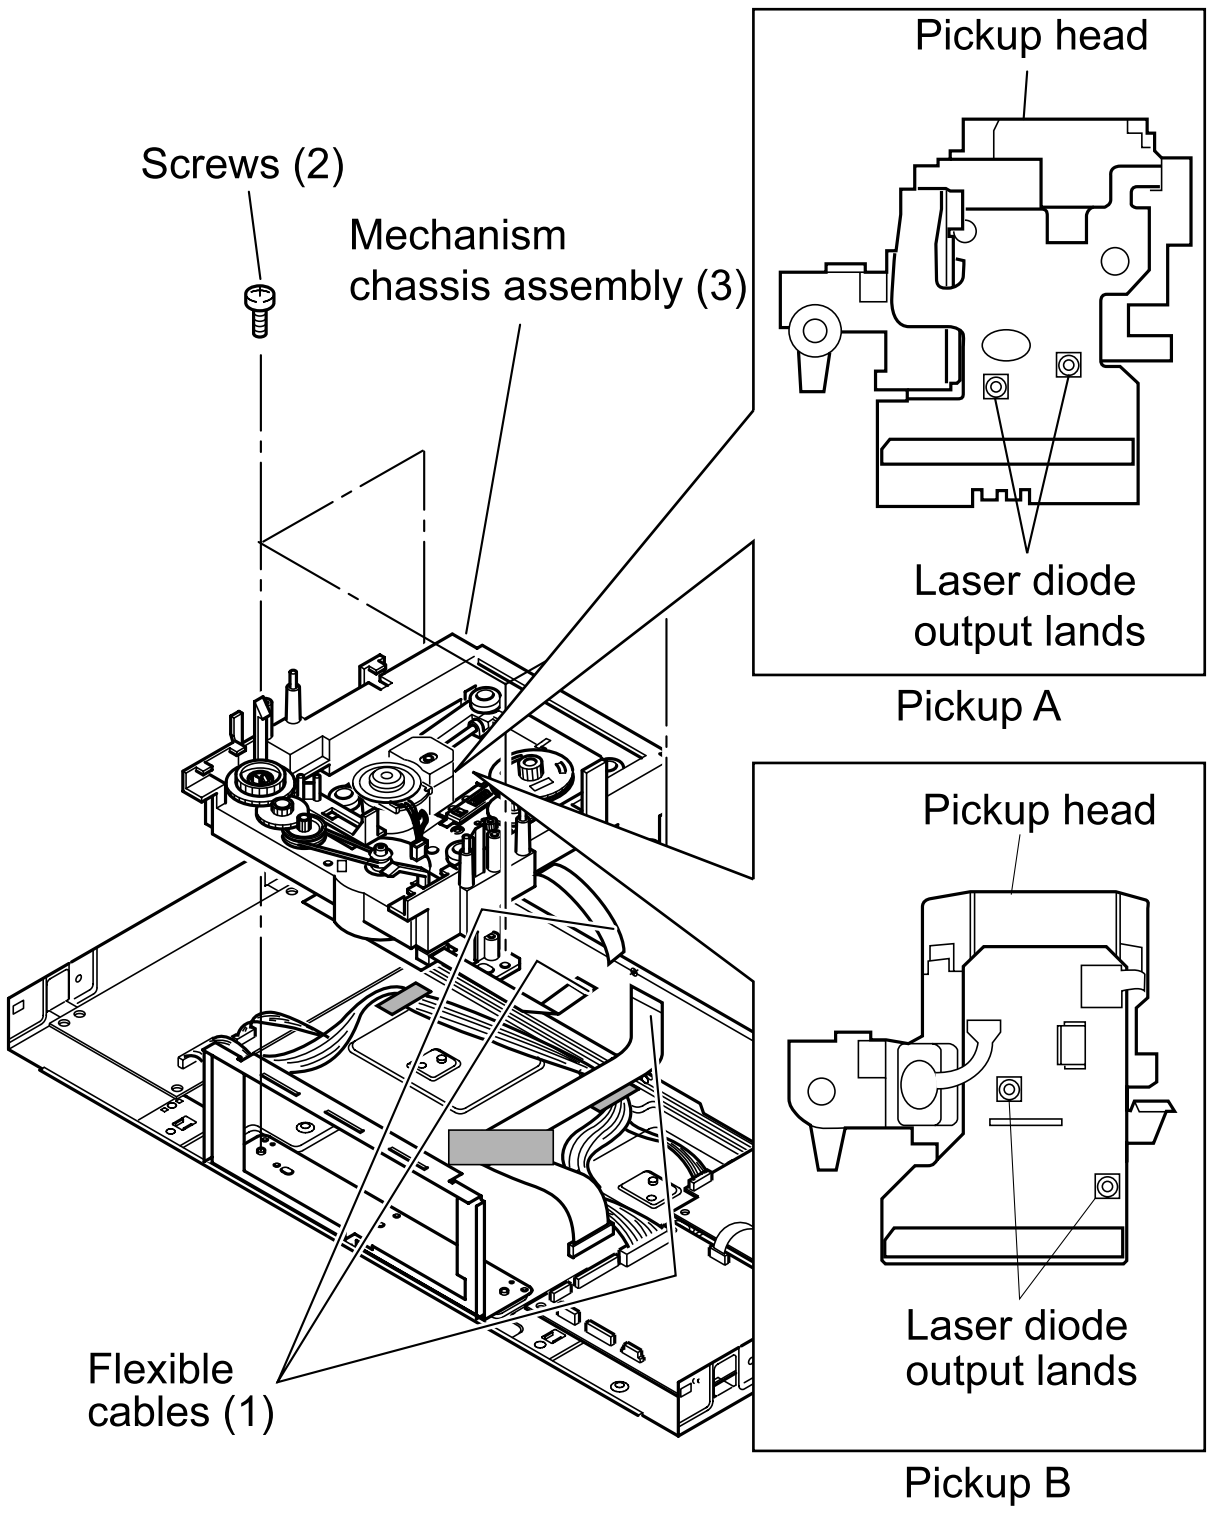
Pickup head
Screws (2)
Mechanism chassis assembly (3)
Laser diode output lands
Pickup A
Pickup head
Laser diode output lands
Flexible cables (1)
Pickup B

Fig. 2-1-24

SECTION 3
SERVICING DIAGRAMS

1. STANDING PC BOARDS FOR SERVICING

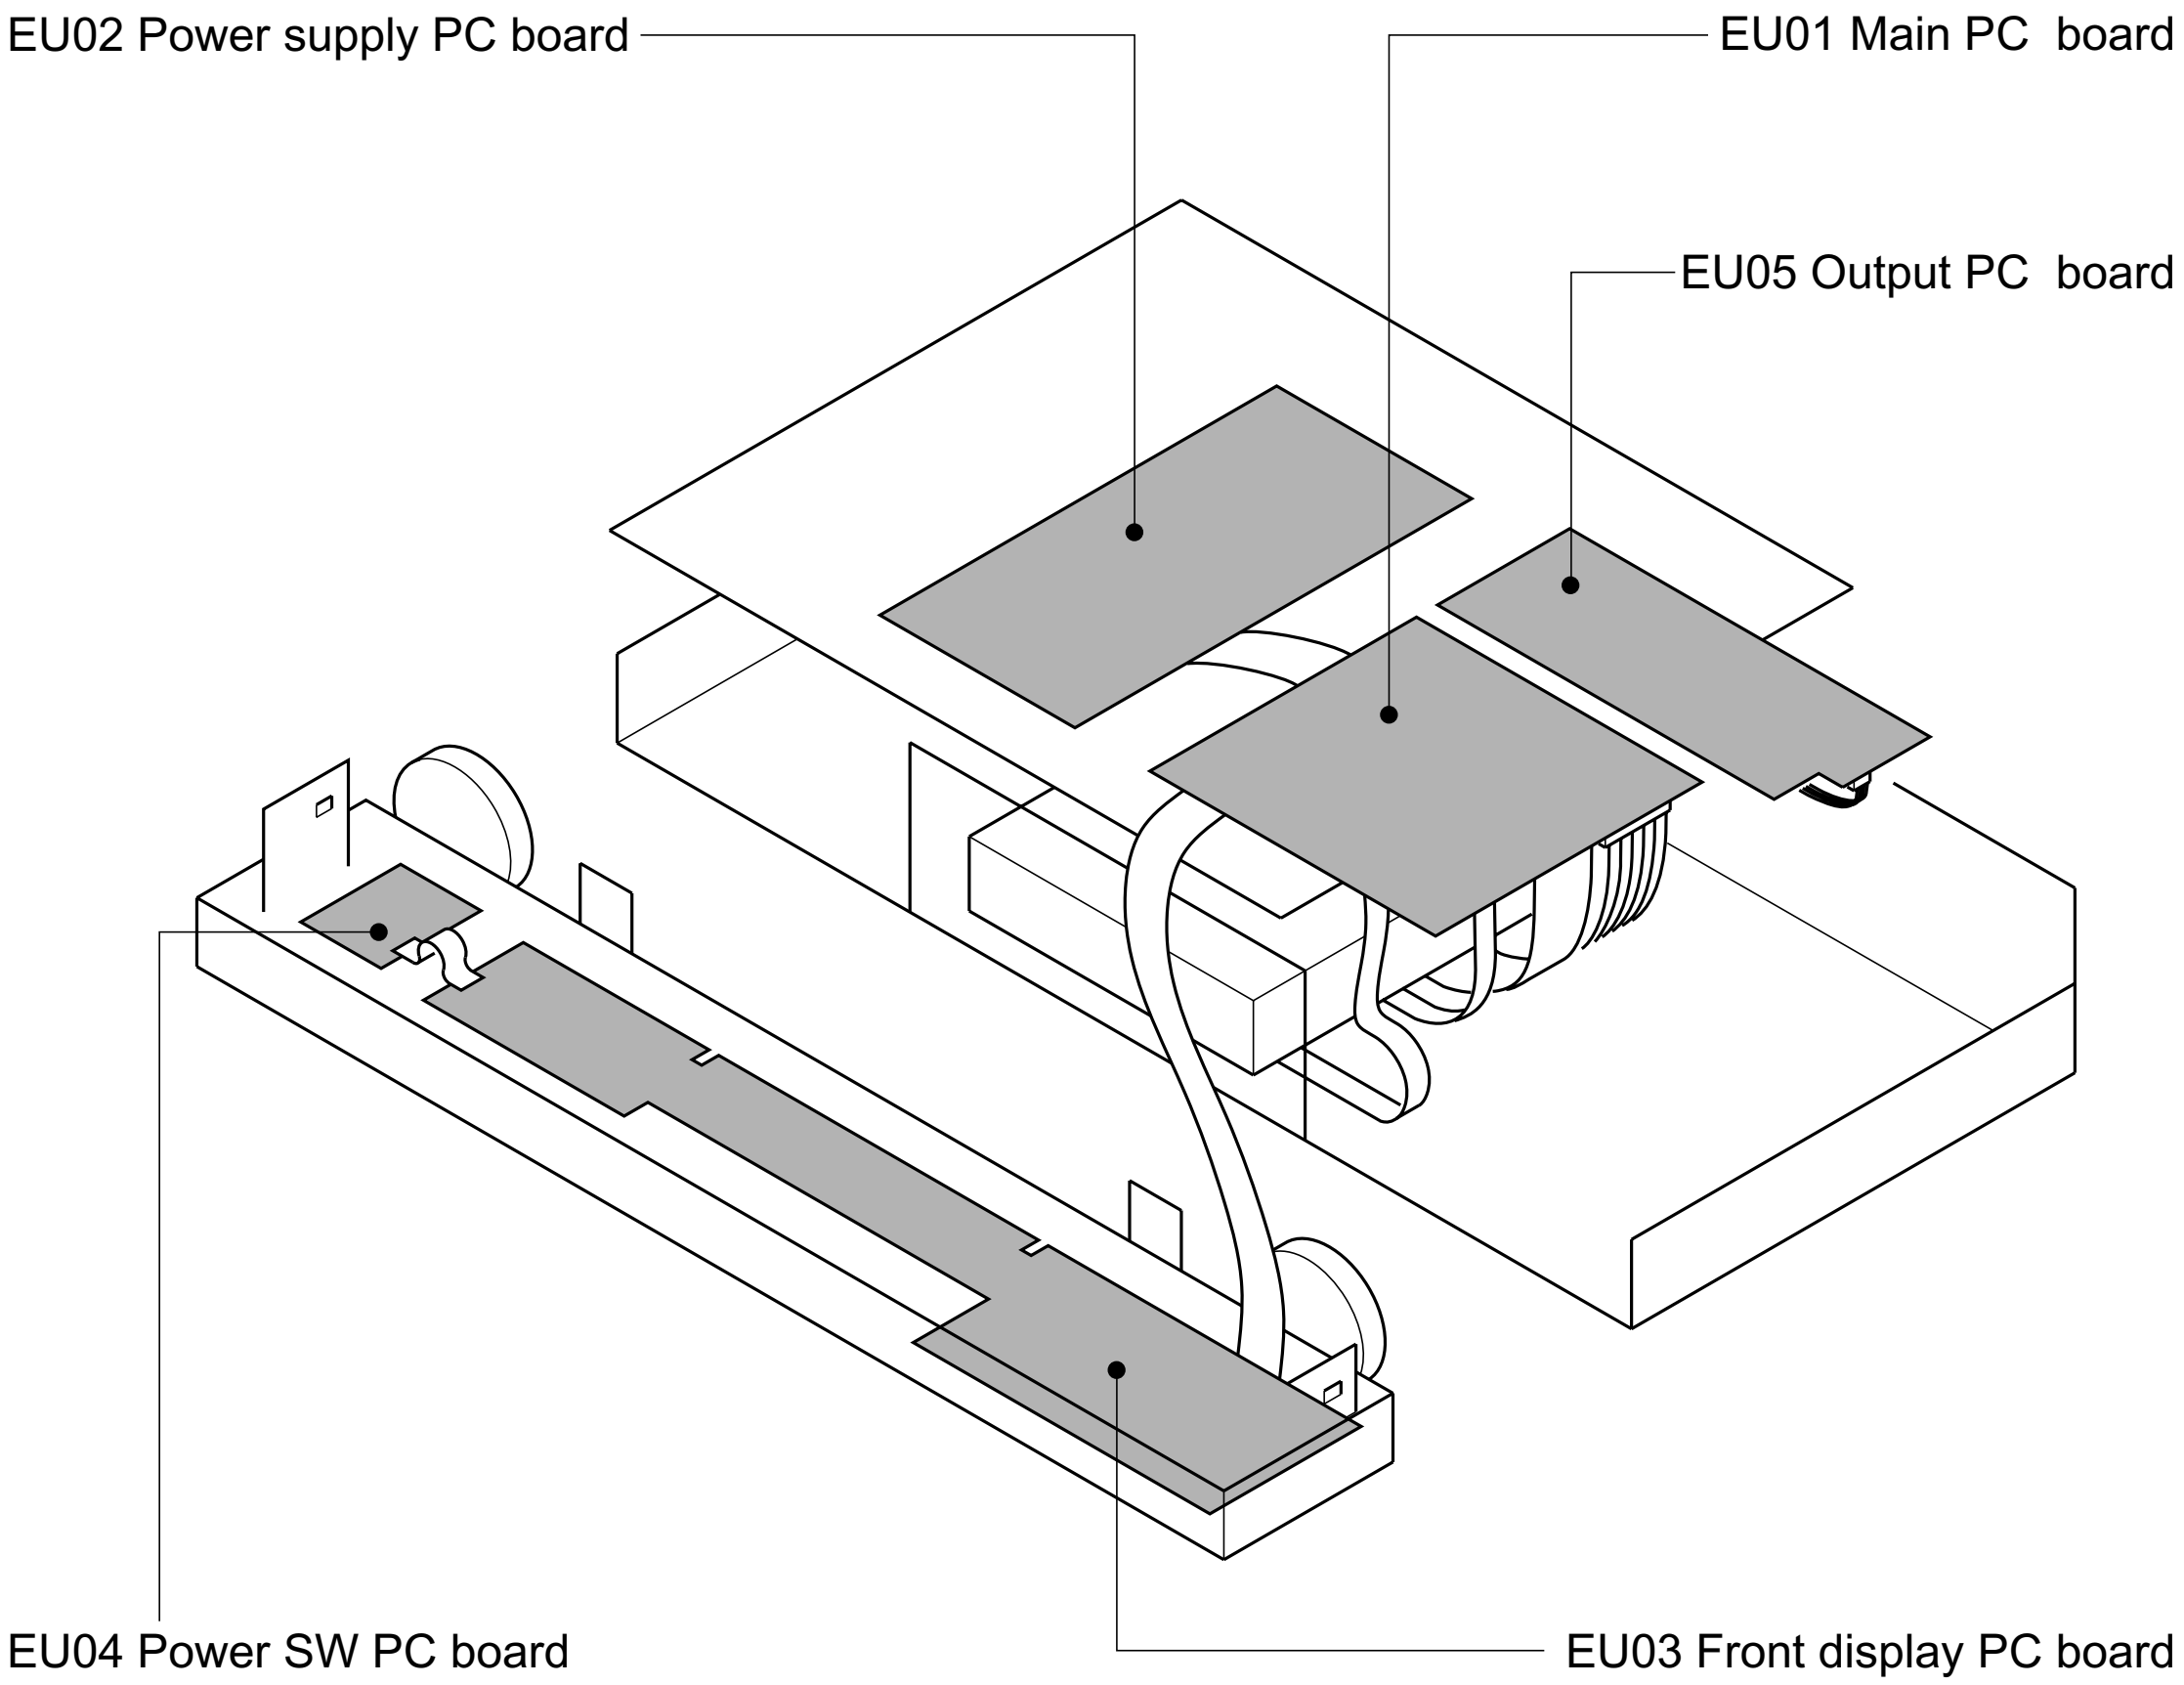
EU02 Power supply PC board
EU01 Main PC board
EU05 Output PC board
EU04 Power SW PC board
EU03 Front display PC board

Fig. 3-1-1

2. CIRCUIT SYMBOLS AND SUPPLEMENTARY EXPLANATION

2-1. Precautions for Part Replacement

- In the schematic diagram, parts marked ⚠ (ex. ⚠ F801) are critical part to meet the safety regulations, so always use the parts bearing specified part codes (SN) when replacing them.
- Using the parts other than those specified shall violate the regulations, and may cause troubles such as operation failures, fire etc.

2-2. Solid Resistor Indication

Unit	None .... Ω K .... kΩ M .... MΩ
Tolerance	None .... ±5% B .... ±0.1% C .... ±0.25% D .... ±0.5% F .... ±1% G .... ±2% K .... ±10% M .... ±20%
Rated Wattage	(1) Chip Parts None .... 1/16W (2) Other Parts None .... 1/6W Other than above, described in the Circuit Diagram.
Type	None .... Carbon film S .... Solid R .... Oxide metal film W .... Metal film W .... Cement FR .... Fusible

Eg. 1

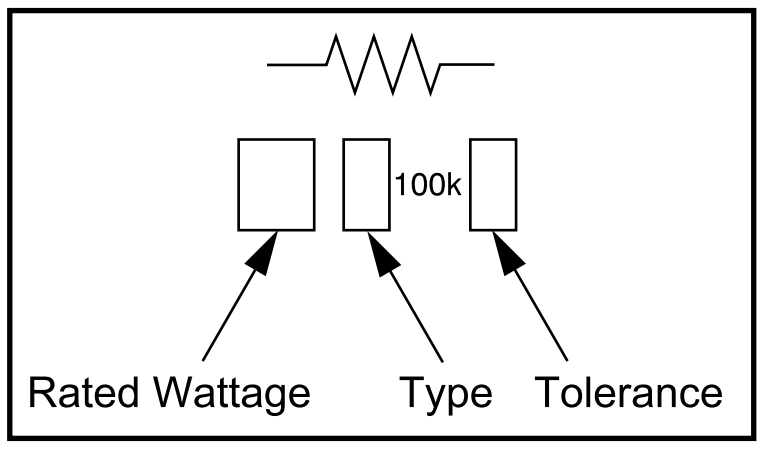
100k
Rated Wattage
Type
Tolerance

Fig. 3-2-1

2-3. Capacitance Indication

Symbol	........... Electrolytic, Special electrolytic ........... Non polarity electrolytic  .... Ceramic, plastic ........... Film  .... Trimmer
Unit	None .... F μ .... μF p .... pF
Rated voltage	None .... 50V For other than 50V and electrolytic capacitors, described in the Circuit Diagram.
Tolerance	(1) Ceramic, plastic, and film capacitors of which capacitance are more than 10 pF. None .... ±5% or more B .... ±0.1% C .... ±0.25% D .... ±0.5% F .... ±1% G .... ±2% (2) Ceramic, plastic, and film capacitors of which capacitance are 10 pF or less. None .... more than ±5% pF B .... ±0.1 pF C .... ±0.25 pF (3) Electrolytic, Trimmer Tolerance is not described.
Temperature characteristic (Ceramic capacitor)	None .... SL For others, temperature characteristics are described. (For capacitors of 0.01 μF and no indications are described as F.)
Static electricity capacity (Ceramic capacitor)	Sometimes described with abbreviated letters as shown in Eg. 3.

Eg. 2

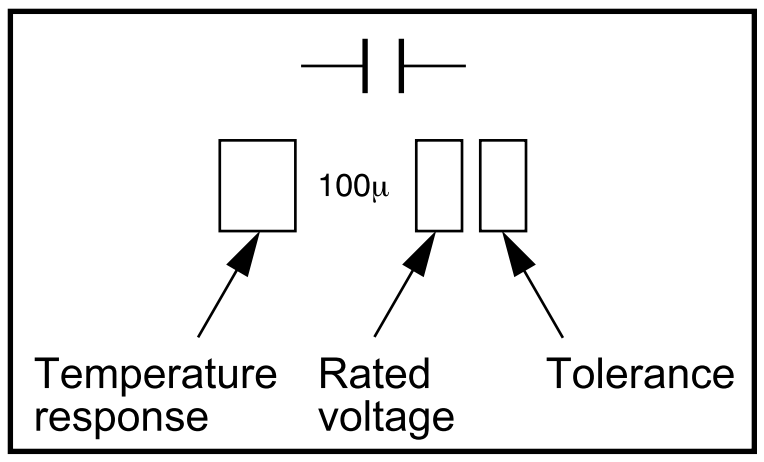
100μ
Temperature response
Rated voltage
Tolerance

Fig. 3-2-2

Eg. 3

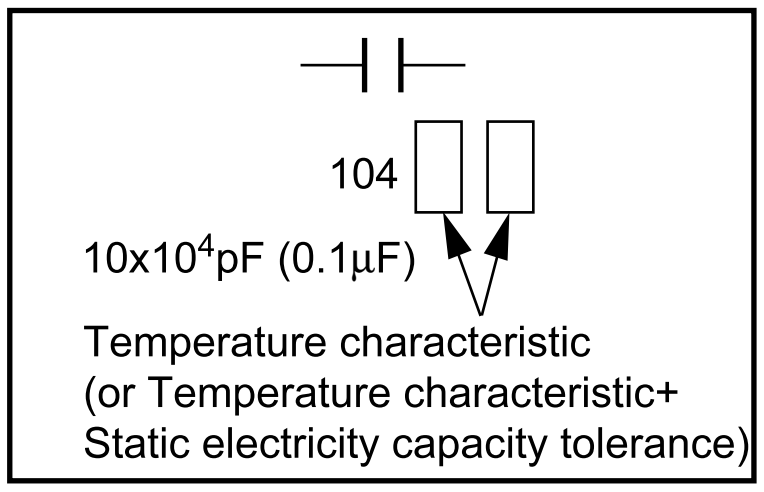
104
10x10⁴pF (0.1μF)
Temperature characteristic
(or Temperature characteristic+
Static electricity capacity tolerance)

Fig. 3-2-3

2-4. Inductor Indication

Unit	None .... H µ .... µH m .... mH
Tolerance	None .... ±5% B .... ±0.1% C .... ±0.25% D .... ±0.5% F .... ±1% G .... ±2% K .... ±10% M .... ±20%

Eg. 4

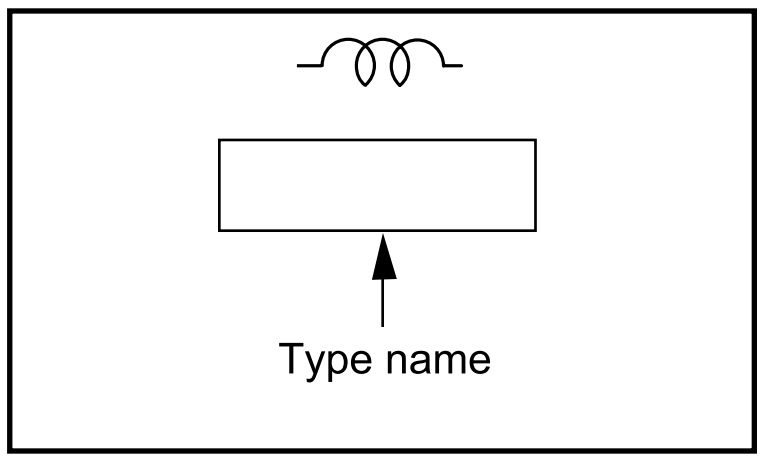

Fig. 3-2-4

2-5. Waveform and Voltage Measurement

- The waveforms for CD/DVD and RF shown in the circuit diagrams are obtained when a test disc is played back.
- All voltage values except the waveforms are expressed in DC and measured by a digital voltmeter.

2-6. Others

- The parts indicated with "NC" or "KETU" etc. are not used in the circuits of this model.

Eg. 5

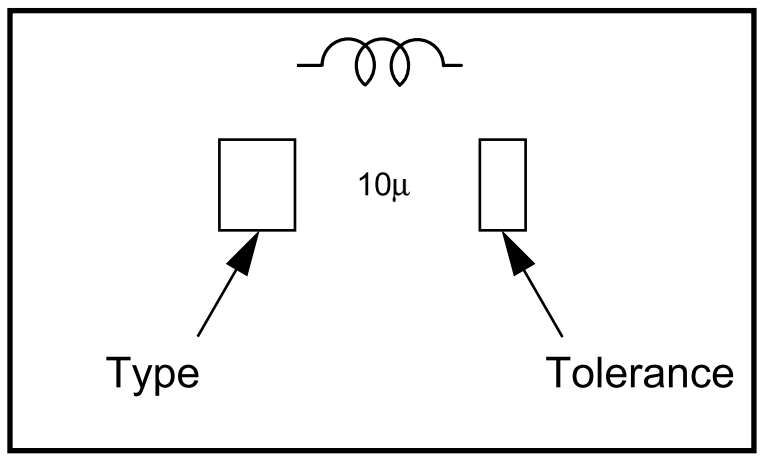

Fig. 3-2-5

3. PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM

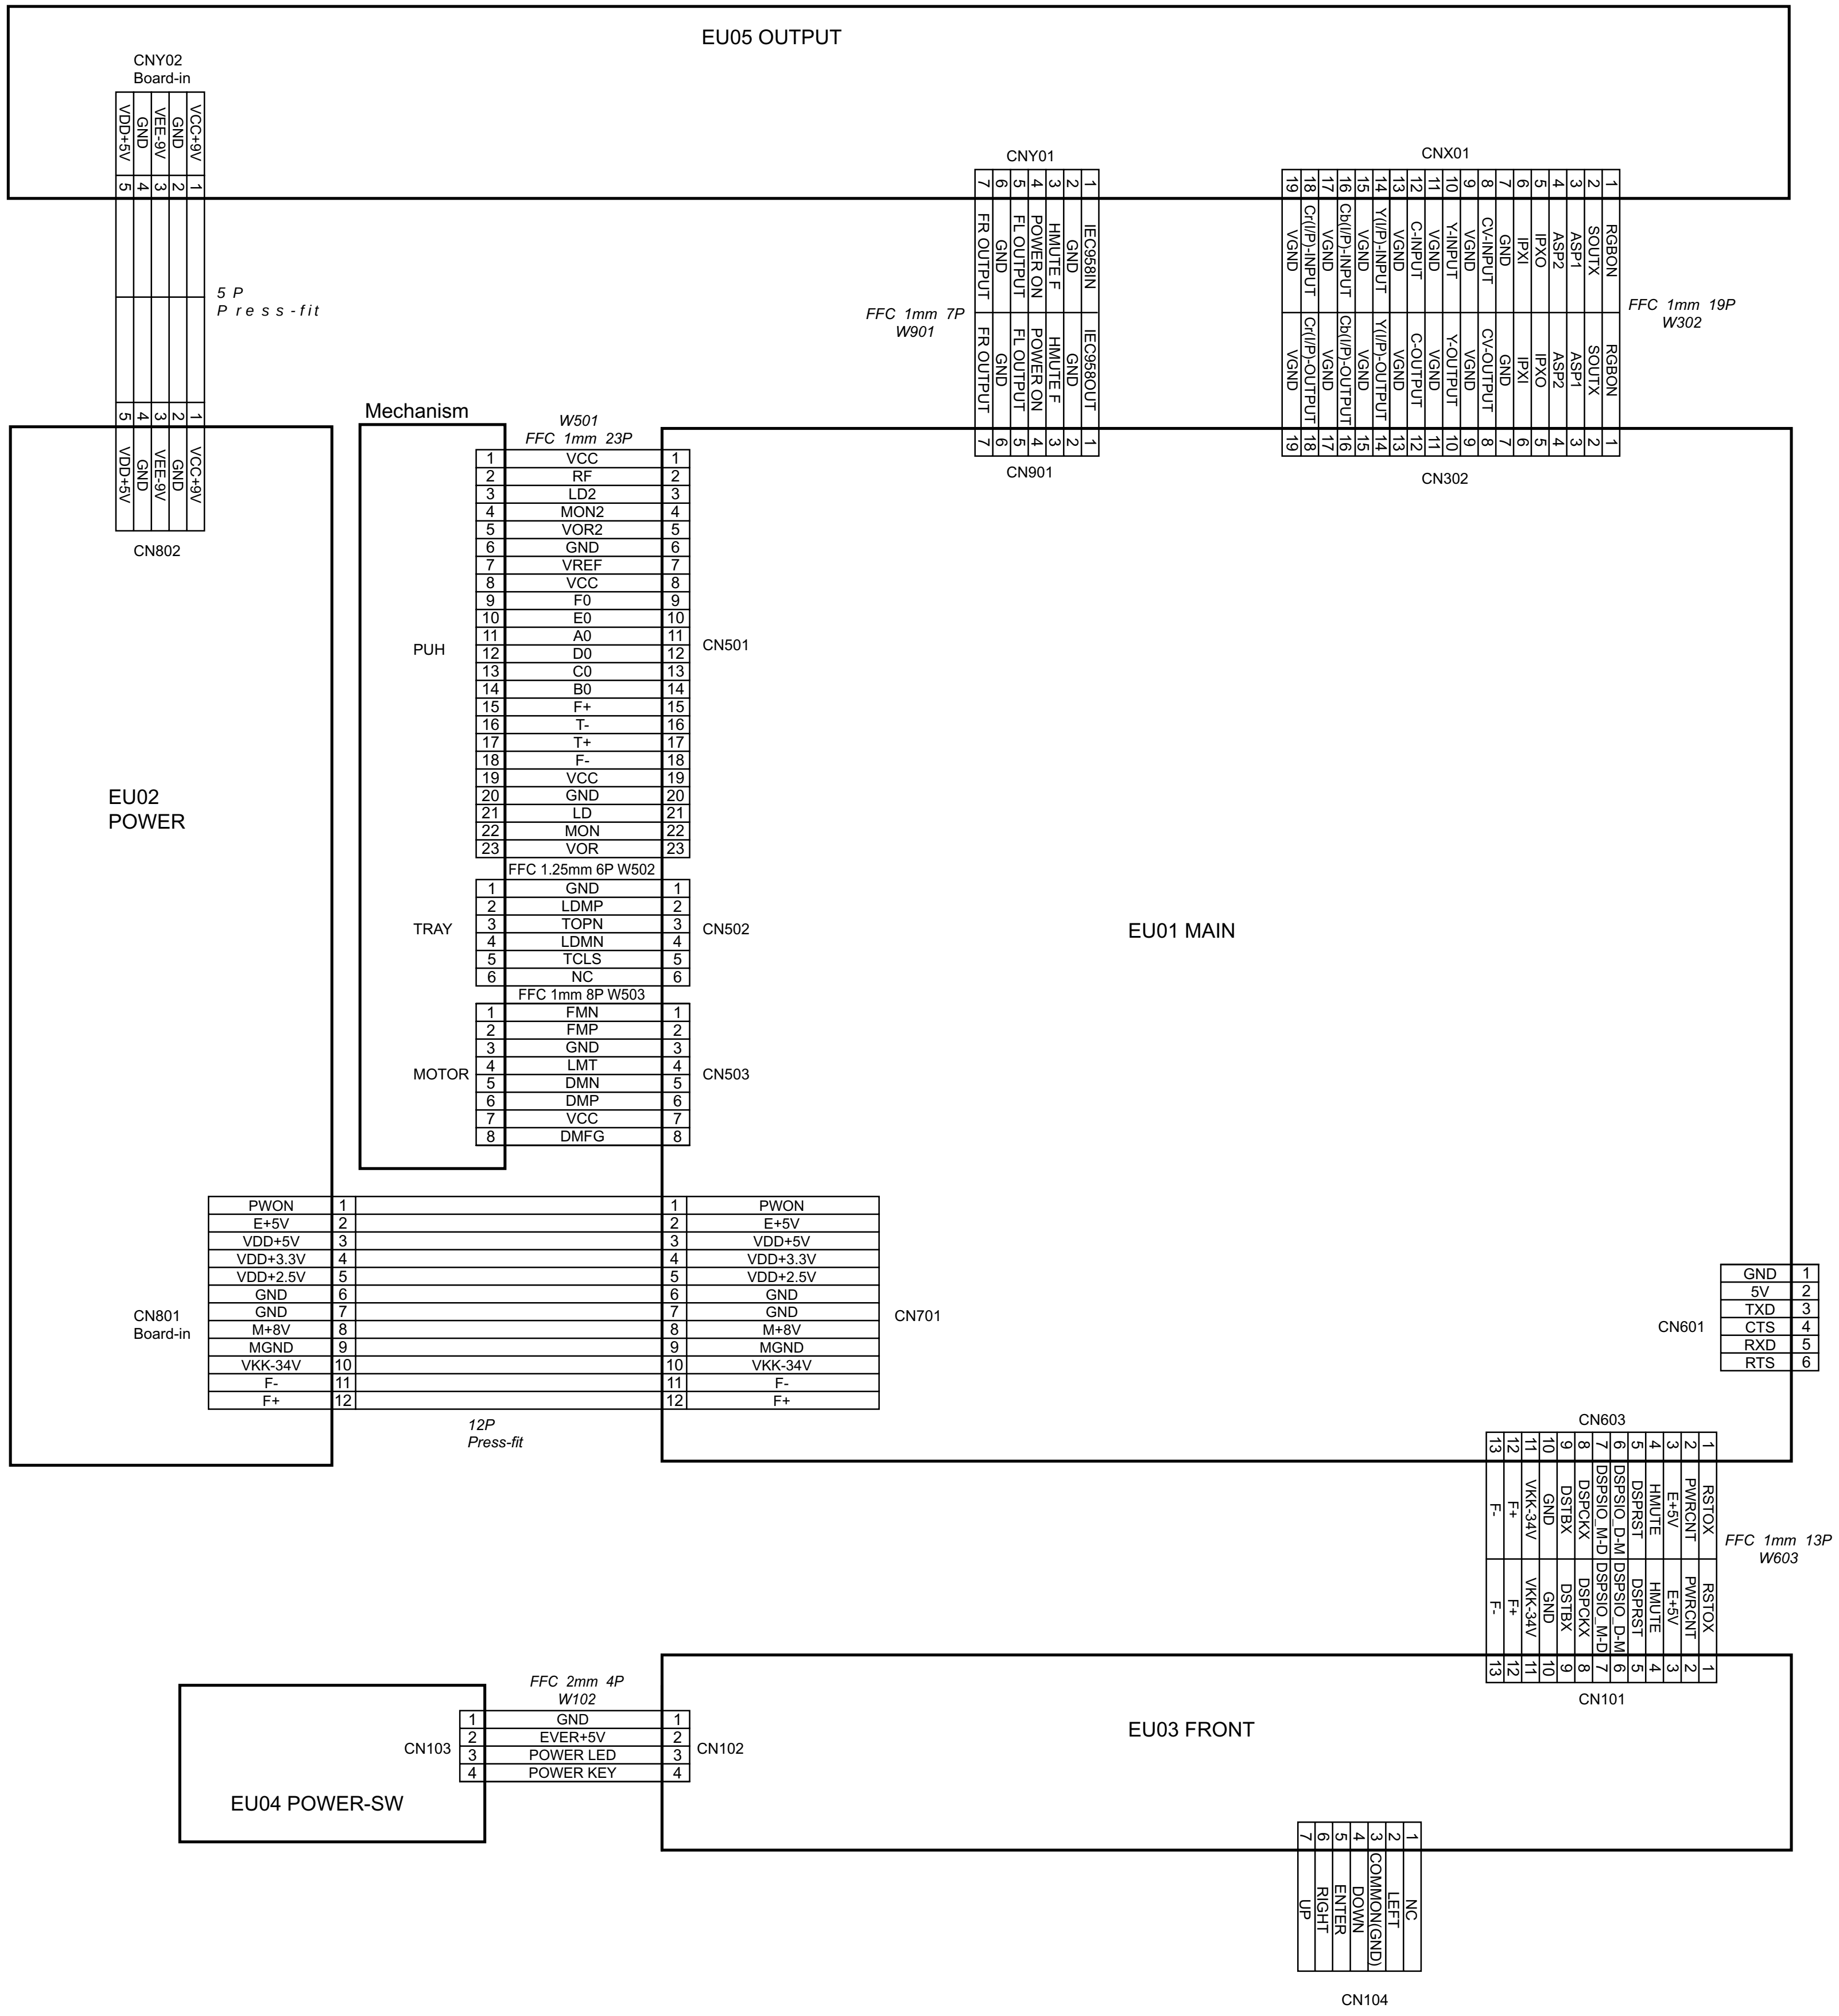
EU05 OUTPUT
CNY02
Board-in
1 VCC+9V
2 GND
3 VEE-9V
4 GND
5 VDD+5V
5 P
Press-fit
CN802
EU02
POWER
CNY01
1 IEC958IN
2 GND
3 HMUTE F
4 POWER ON
5 FL OUTPUT
6 GND
7 FR OUTPUT
FFC 1mm 7P
W901
1 IEC958OUT
2 GND
3 HMUTE F
4 POWER ON
5 FL OUTPUT
6 GND
7 FR OUTPUT
CN901
CNX01
1 RGBON
2 SOUTX
3 ASP1
4 ASP2
5 IPXO
6 IPXI
7 GND
8 CV-INPUT
9 VGND
10 Y-INPUT
11 VGND
12 C-INPUT
13 VGND
14 Y(I/P)-INPUT
15 VGND
16 Cb(I/P)-INPUT
17 VGND
18 Cr(I/P)-INPUT
19 VGND
FFC 1mm 19P
W302
1 RGBON
2 SOUTX
3 ASP1
4 ASP2
5 IPXO
6 IPXI
7 GND
8 CV-OUTPUT
9 VGND
10 Y-OUTPUT
11 VGND
12 C-OUTPUT
13 VGND
14 Y(I/P)-OUTPUT
15 VGND
16 Cb(I/P)-OUTPUT
17 VGND
18 Cr(I/P)-OUTPUT
19 VGND
CN302
Mechanism
W501
FFC 1mm 23P
PUH
1 VCC
2 RF
3 LD2
4 MON2
5 VOR2
6 GND
7 VREF
8 VCC
9 F0
10 E0
11 A0
12 D0
13 C0
14 B0
15 F+
16 T-
17 T+
18 F-
19 VCC
20 GND
21 LD
22 MON
23 VOR
CN501
FFC 1.25mm 6P W502
TRAY
1 GND
2 LDMP
3 TOPN
4 LDMN
5 TCLS
6 NC
CN502
FFC 1mm 8P W503
MOTOR
1 FMN
2 FMP
3 GND
4 LMT
5 DMN
6 DMP
7 VCC
8 DMFG
CN503
EU01 MAIN
CN801
Board-in
1 PWON
2 E+5V
3 VDD+5V
4 VDD+3.3V
5 VDD+2.5V
6 GND
7 GND
8 M+8V
9 MGND
10 VKK-34V
11 F-
12 F+
12P
Press-fit
CN701
CN601
1 GND
2 5V
3 TXD
4 CTS
5 RXD
6 RTS
CN603
1 RSTOX
2 PWRCNT
3 E+5V
4 HMUTE
5 DSPRST
6 DSPSIO_D-M
7 DSPSIO_M-D
8 DSPCKX
9 DSTBX
10 GND
11 VKK-34V
12 F+
13 F-
FFC 1mm 13P
W603
CN101
EU03 FRONT
FFC 2mm 4P
W102
CN103
1 GND
2 EVER+5V
3 POWER LED
4 POWER KEY
CN102
EU04 POWER-SW
CN104
1 NC
2 LEFT
3 COMMON(GND)
4 DOWN
5 ENTER
6 RIGHT
7 UP

Fig. 3-3-1

4. BLOCK DIAGRAMS

4-1. Overall Block Diagram

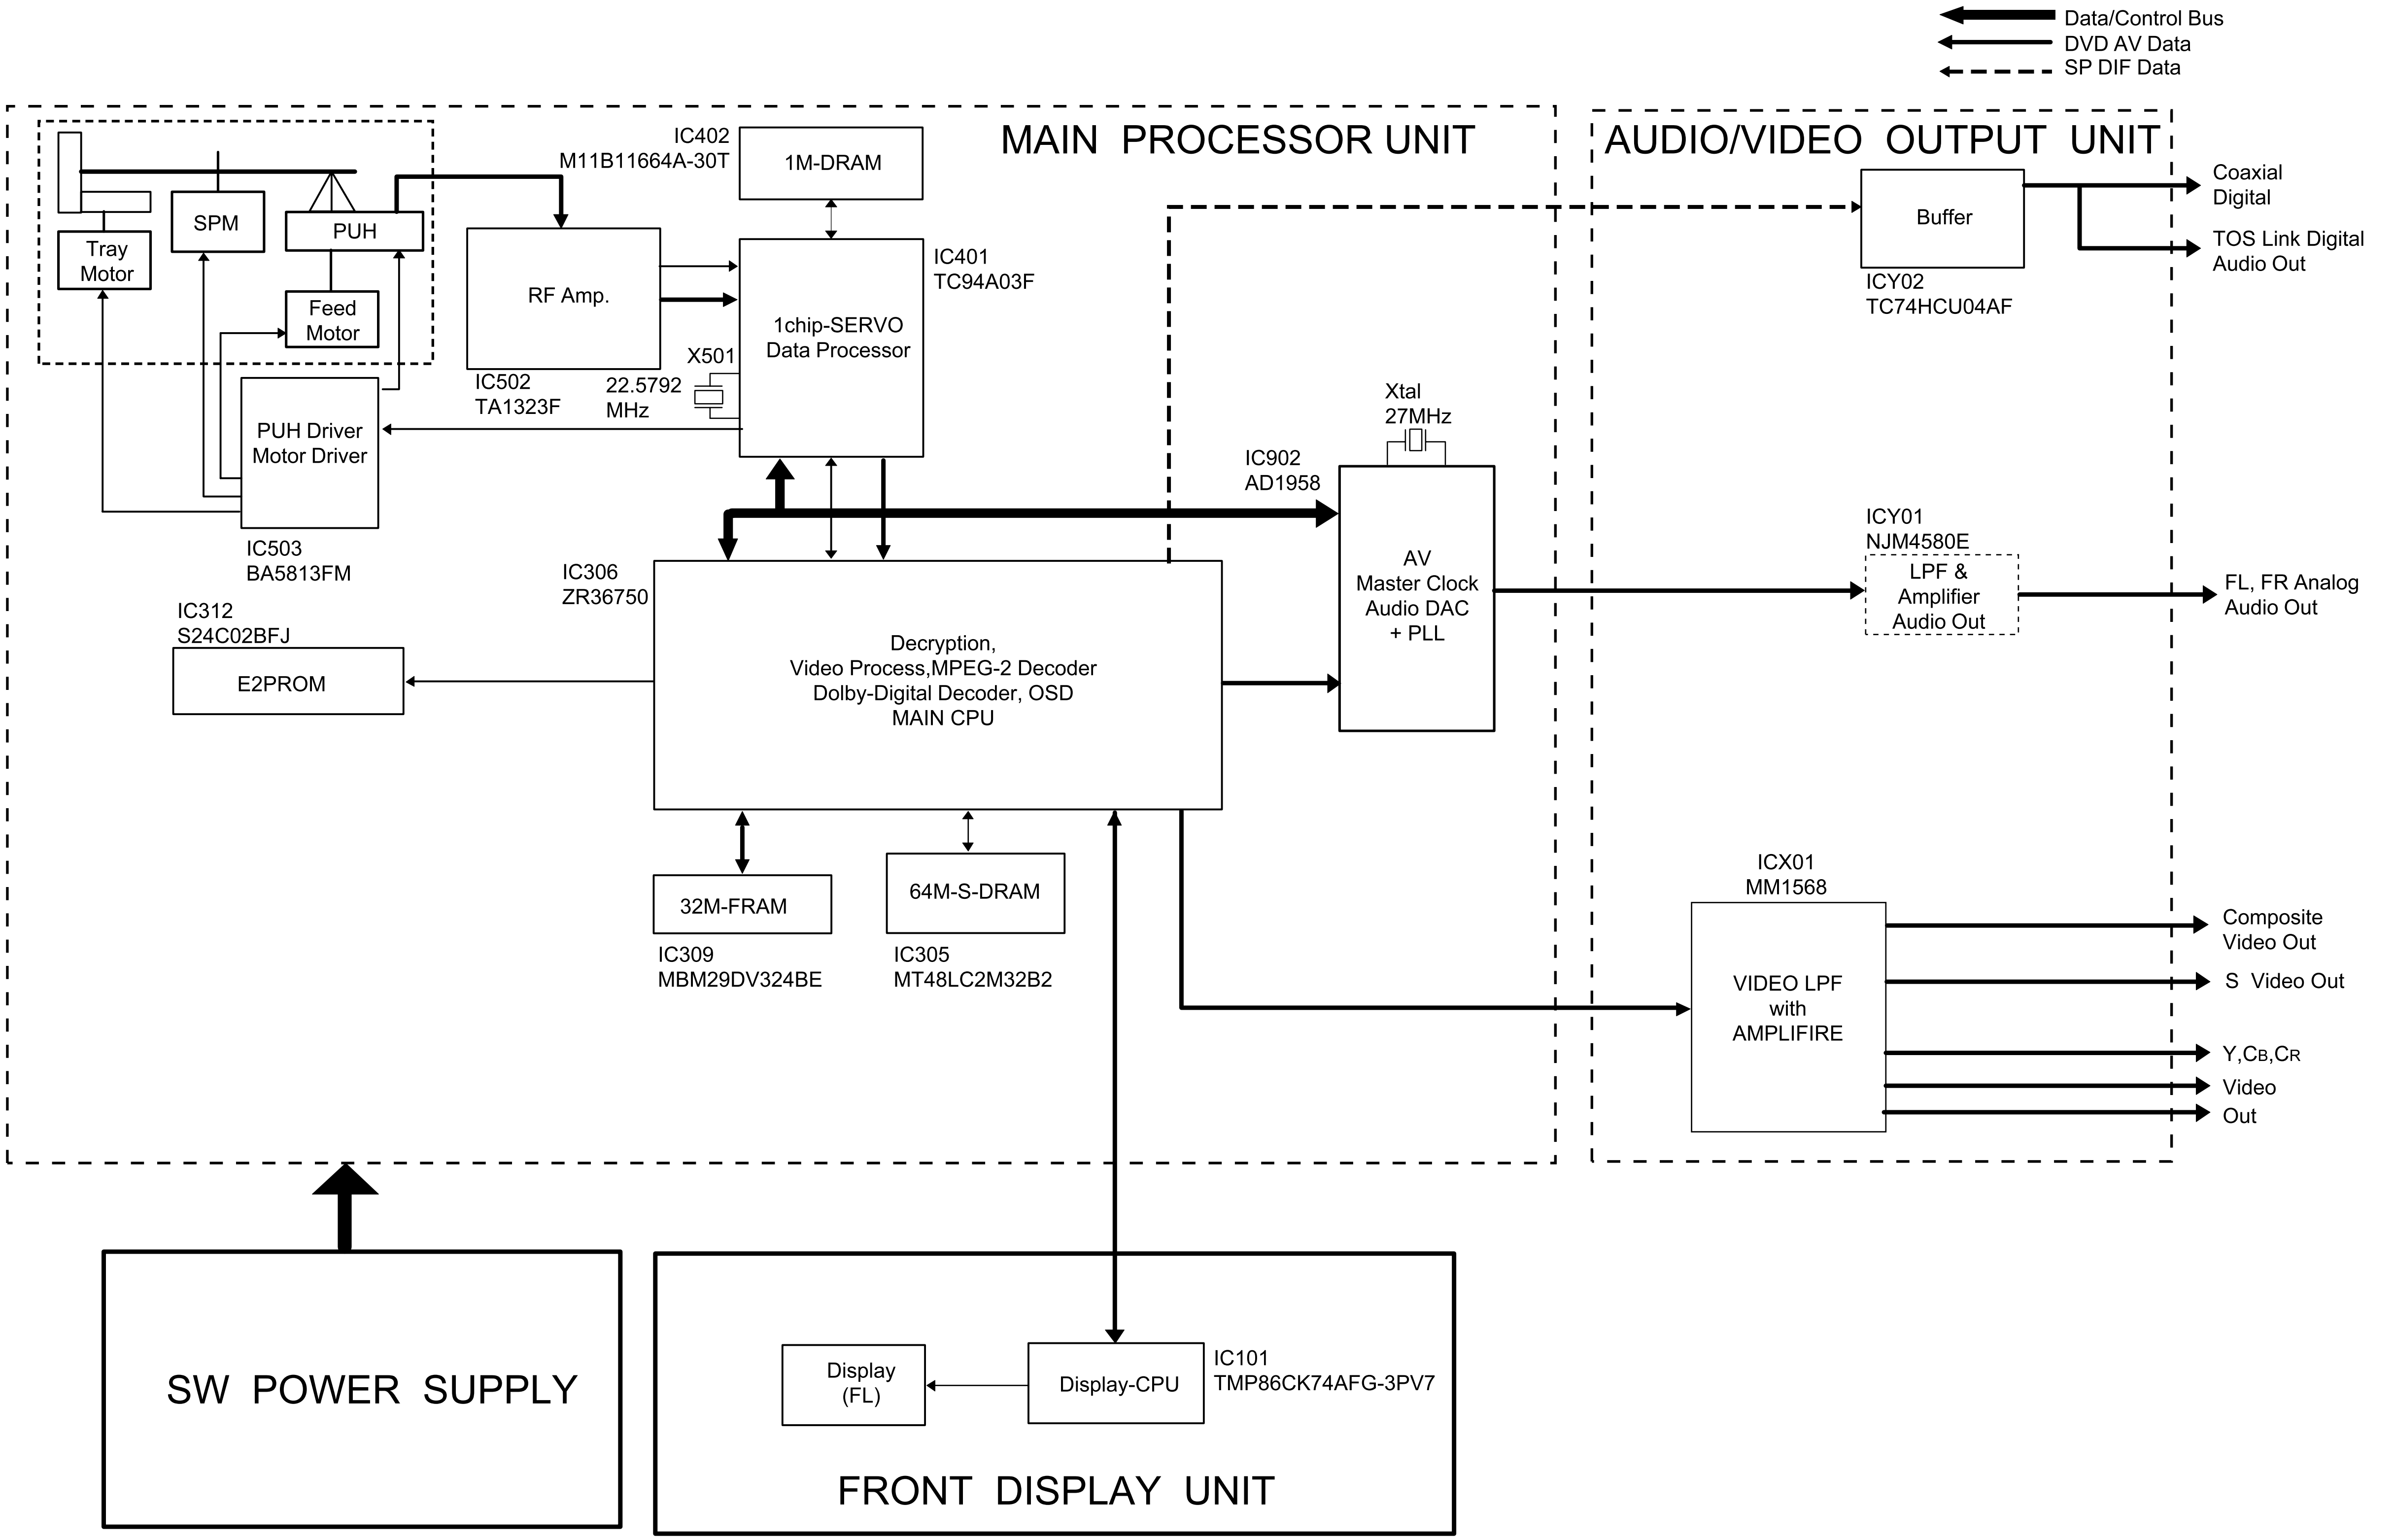

Data/Control Bus
DVD AV Data
SP DIF Data
MAIN PROCESSOR UNIT
AUDIO/VIDEO OUTPUT UNIT
Tray Motor
SPM
PUH
Feed Motor
IC402
M11B11664A-30T
1M-DRAM
RF Amp.
IC502
TA1323F
22.5792 MHz
X501
1chip-SERVO Data Processor
IC401
TC94A03F
PUH Driver Motor Driver
IC503
BA5813FM
IC306
ZR36750
Decryption, Video Process,MPEG-2 Decoder Dolby-Digital Decoder, OSD MAIN CPU
IC312
S24C02BFJ
E2PROM
32M-FRAM
IC309
MBM29DV324BE
64M-S-DRAM
IC305
MT48LC2M32B2
IC902
AD1958
Xtal 27MHz
AV Master Clock Audio DAC + PLL
Buffer
ICY02
TC74HCU04AF
Coaxial Digital
TOS Link Digital Audio Out
ICY01
NJM4580E
LPF & Amplifier Audio Out
FL, FR Analog Audio Out
ICX01
MM1568
VIDEO LPF with AMPLIFIRE
Composite Video Out
S Video Out
Y,CB,CR
Video
Out
SW POWER SUPPLY
Display (FL)
Display-CPU
IC101
TMP86CK74AFG-3PV7
FRONT DISPLAY UNIT

Fig.3-4-1

4-2. Power Supply Block Diagram

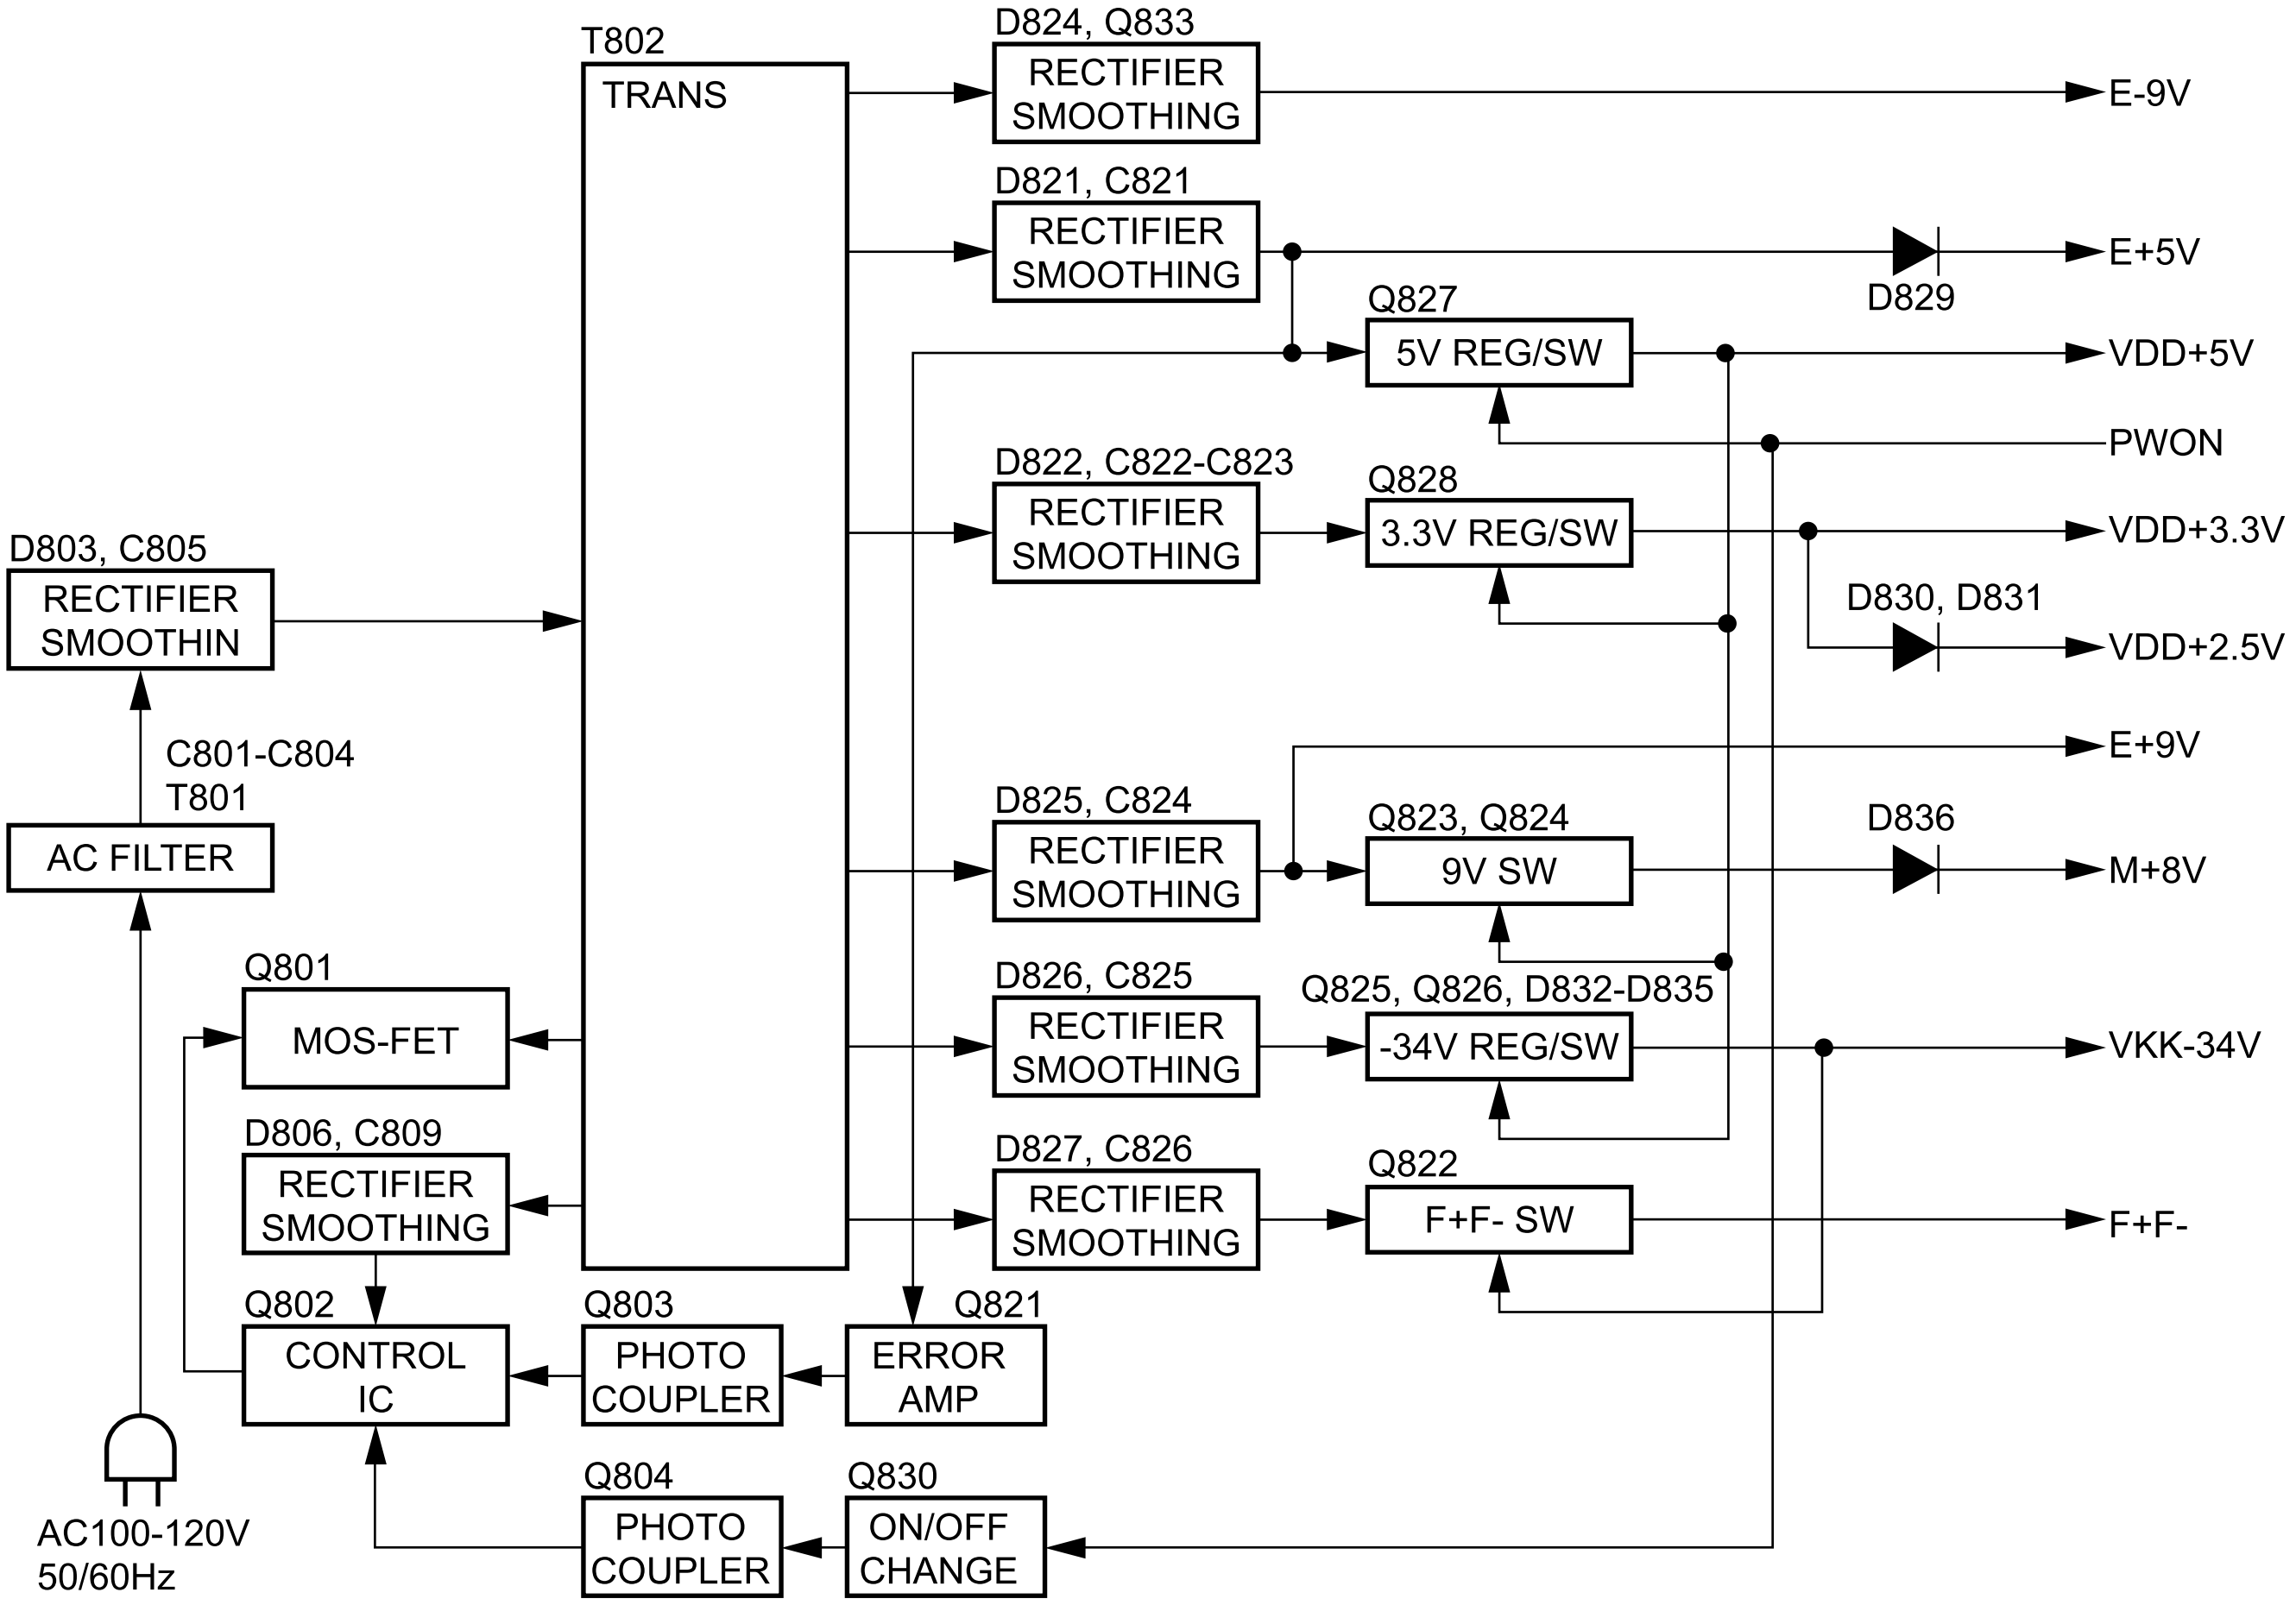
T802
TRANS
D824, Q833
RECTIFIER SMOOTHING
E-9V
D821, C821
RECTIFIER SMOOTHING
D829
E+5V
Q827
5V REG/SW
VDD+5V
PWON
D822, C822-C823
RECTIFIER SMOOTHING
Q828
3.3V REG/SW
VDD+3.3V
D830, D831
VDD+2.5V
E+9V
D825, C824
RECTIFIER SMOOTHING
Q823, Q824
9V SW
D836
M+8V
D826, C825
RECTIFIER SMOOTHING
Q825, Q826, D832-D835
-34V REG/SW
VKK-34V
D827, C826
RECTIFIER SMOOTHING
Q822
F+F- SW
F+F-
D803, C805
RECTIFIER SMOOTHIN
C801-C804
T801
AC FILTER
Q801
MOS-FET
D806, C809
RECTIFIER SMOOTHING
Q802
CONTROL IC
Q803
PHOTO COUPLER
Q821
ERROR AMP
Q804
PHOTO COUPLER
Q830
ON/OFF CHANGE
AC100-120V
50/60Hz

Fig. 3-4-2

4-3. Front Display, Power Switch Block Diagram

4-3-1. Front Display

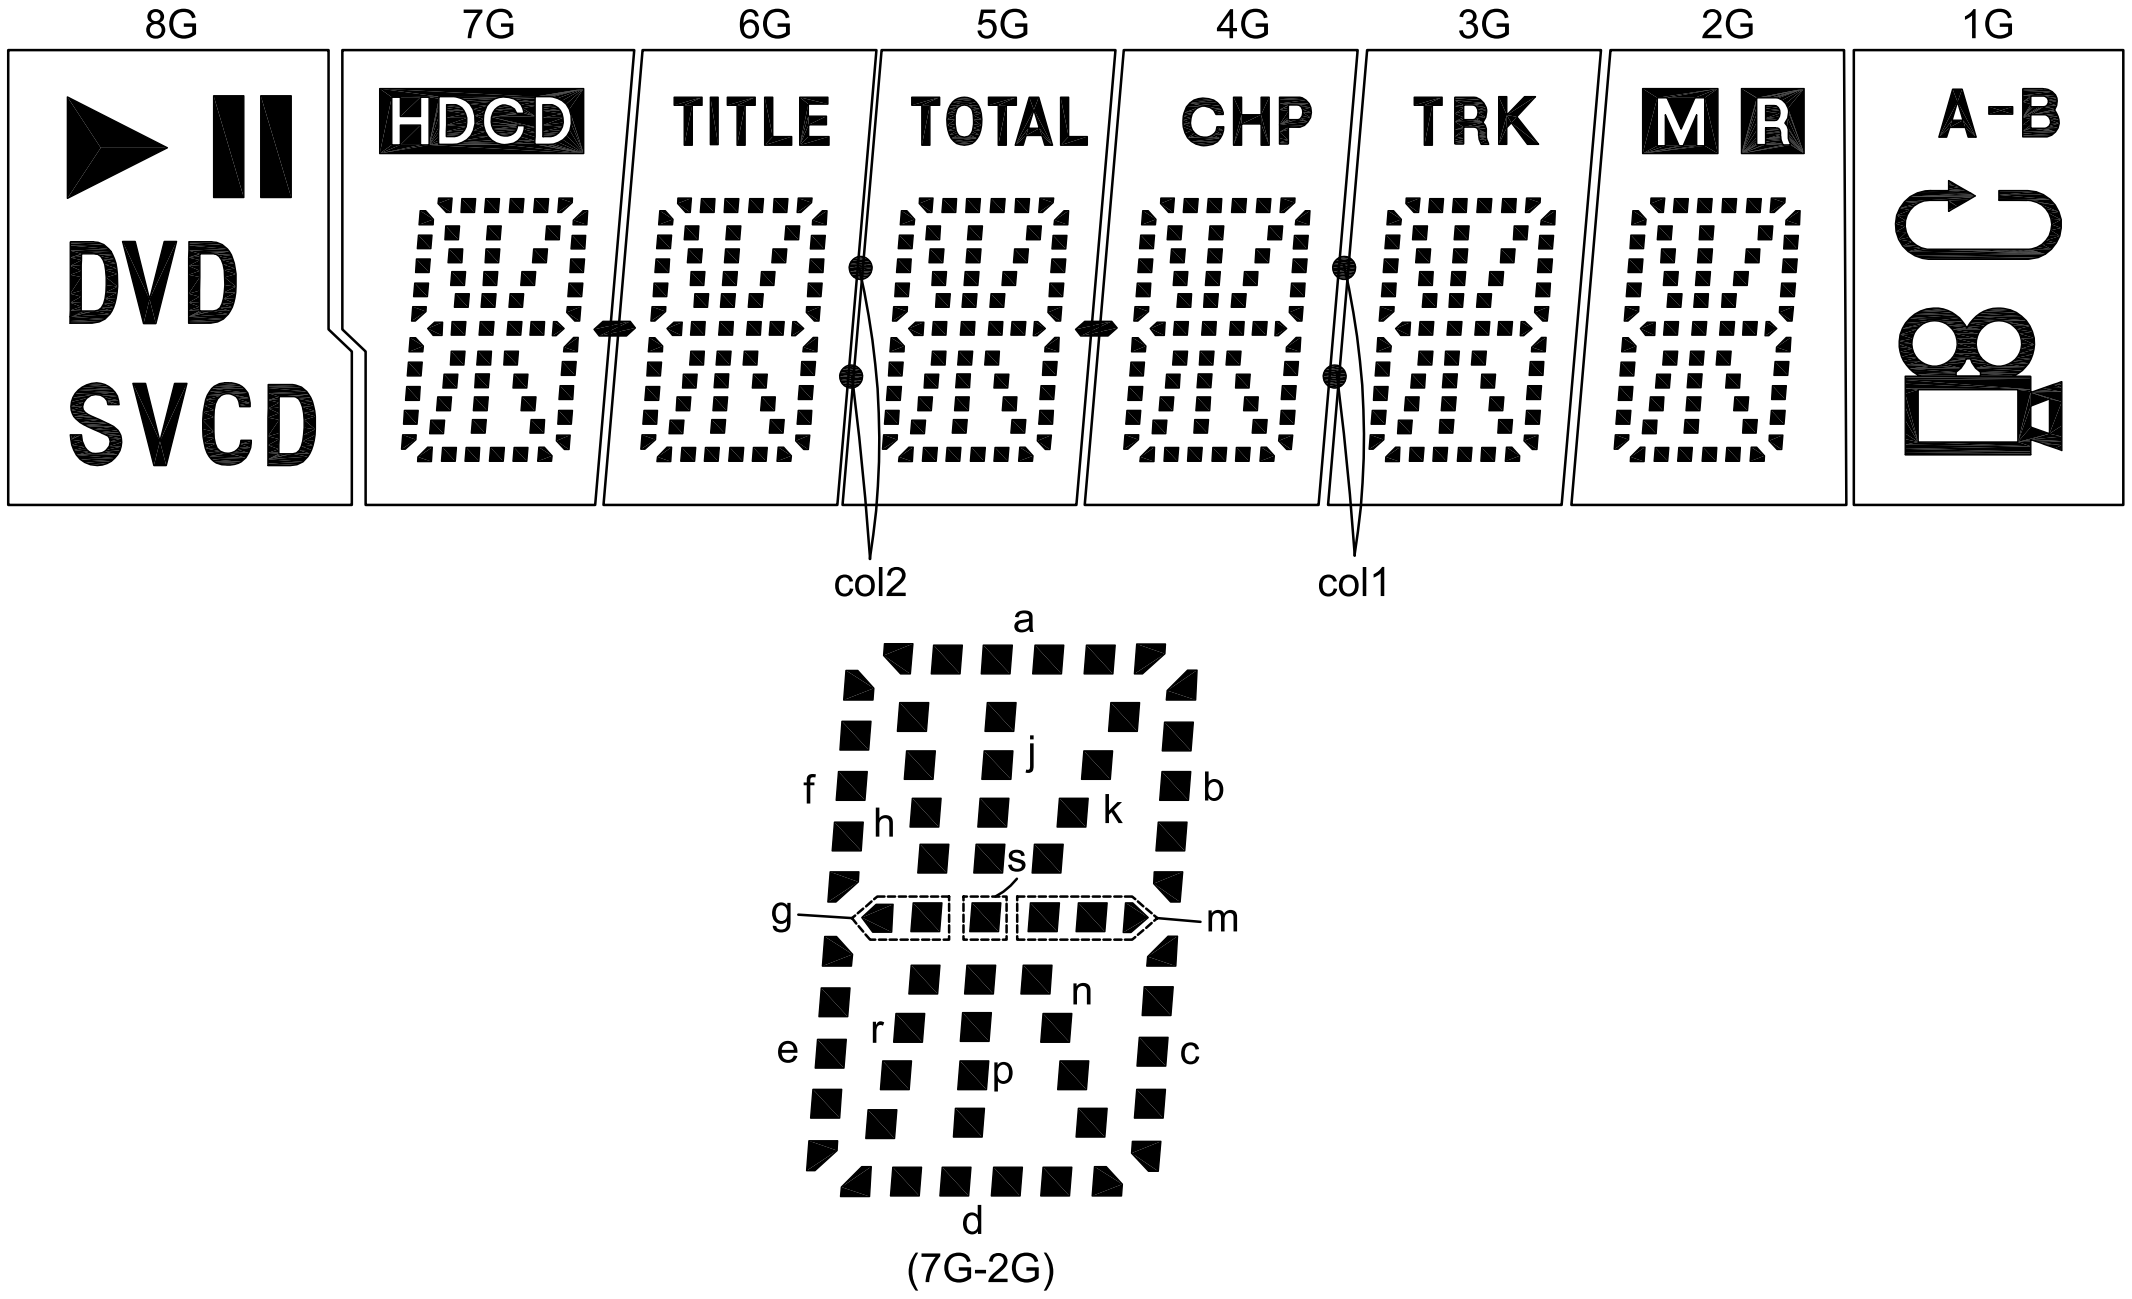
8G
7G
6G
5G
4G
3G
2G
1G
DVD
SVCD
HDCD
TITLE
TOTAL
CHP
TRK
M
R
A-B
col2
col1
a
j
f
h
k
b
s
g
m
n
r
e
c
p
d
(7G-2G)

Fig. 3-4-3

4-3-2. Front Display Pattern

	8G	7G	6G	5G	4G	3G	2G	1G
P1	▶	a	a	a	a	a	a	A
P2	❚❚	f	f	f	f	f	f	-B
P3	DVD	h	h	h	h	h	h	🔁
P4	S	j	j	j	j	j	j	🎥
P5	V	k	k	k	k	k	k	–
P6	CD	b	b	b	b	b	b	–
P7	–	g	g	g	g	g	g	–
P8	–	s	s	s	s	s	s	–
P9	–	m	m	m	m	m	m	–
P10	–	e	e	e	e	e	e	–
P11	–	r	r	r	r	r	r	–
P12	–	p	p	p	p	p	p	–
P13	–	n	n	n	n	n	n	–
P14	–	c	c	c	c	c	c	–
P15	–	d	d	d	d	d	d	–
P16	–	–	col2		col1		M	–
P17	–	▬		▬		–	R	–
P18	–	HDCD	TITLE	TOTAL	CHP	TRK	–	–

Fig. 3-4-4

4-3-3. Front Display, Power Switch Block Diagram

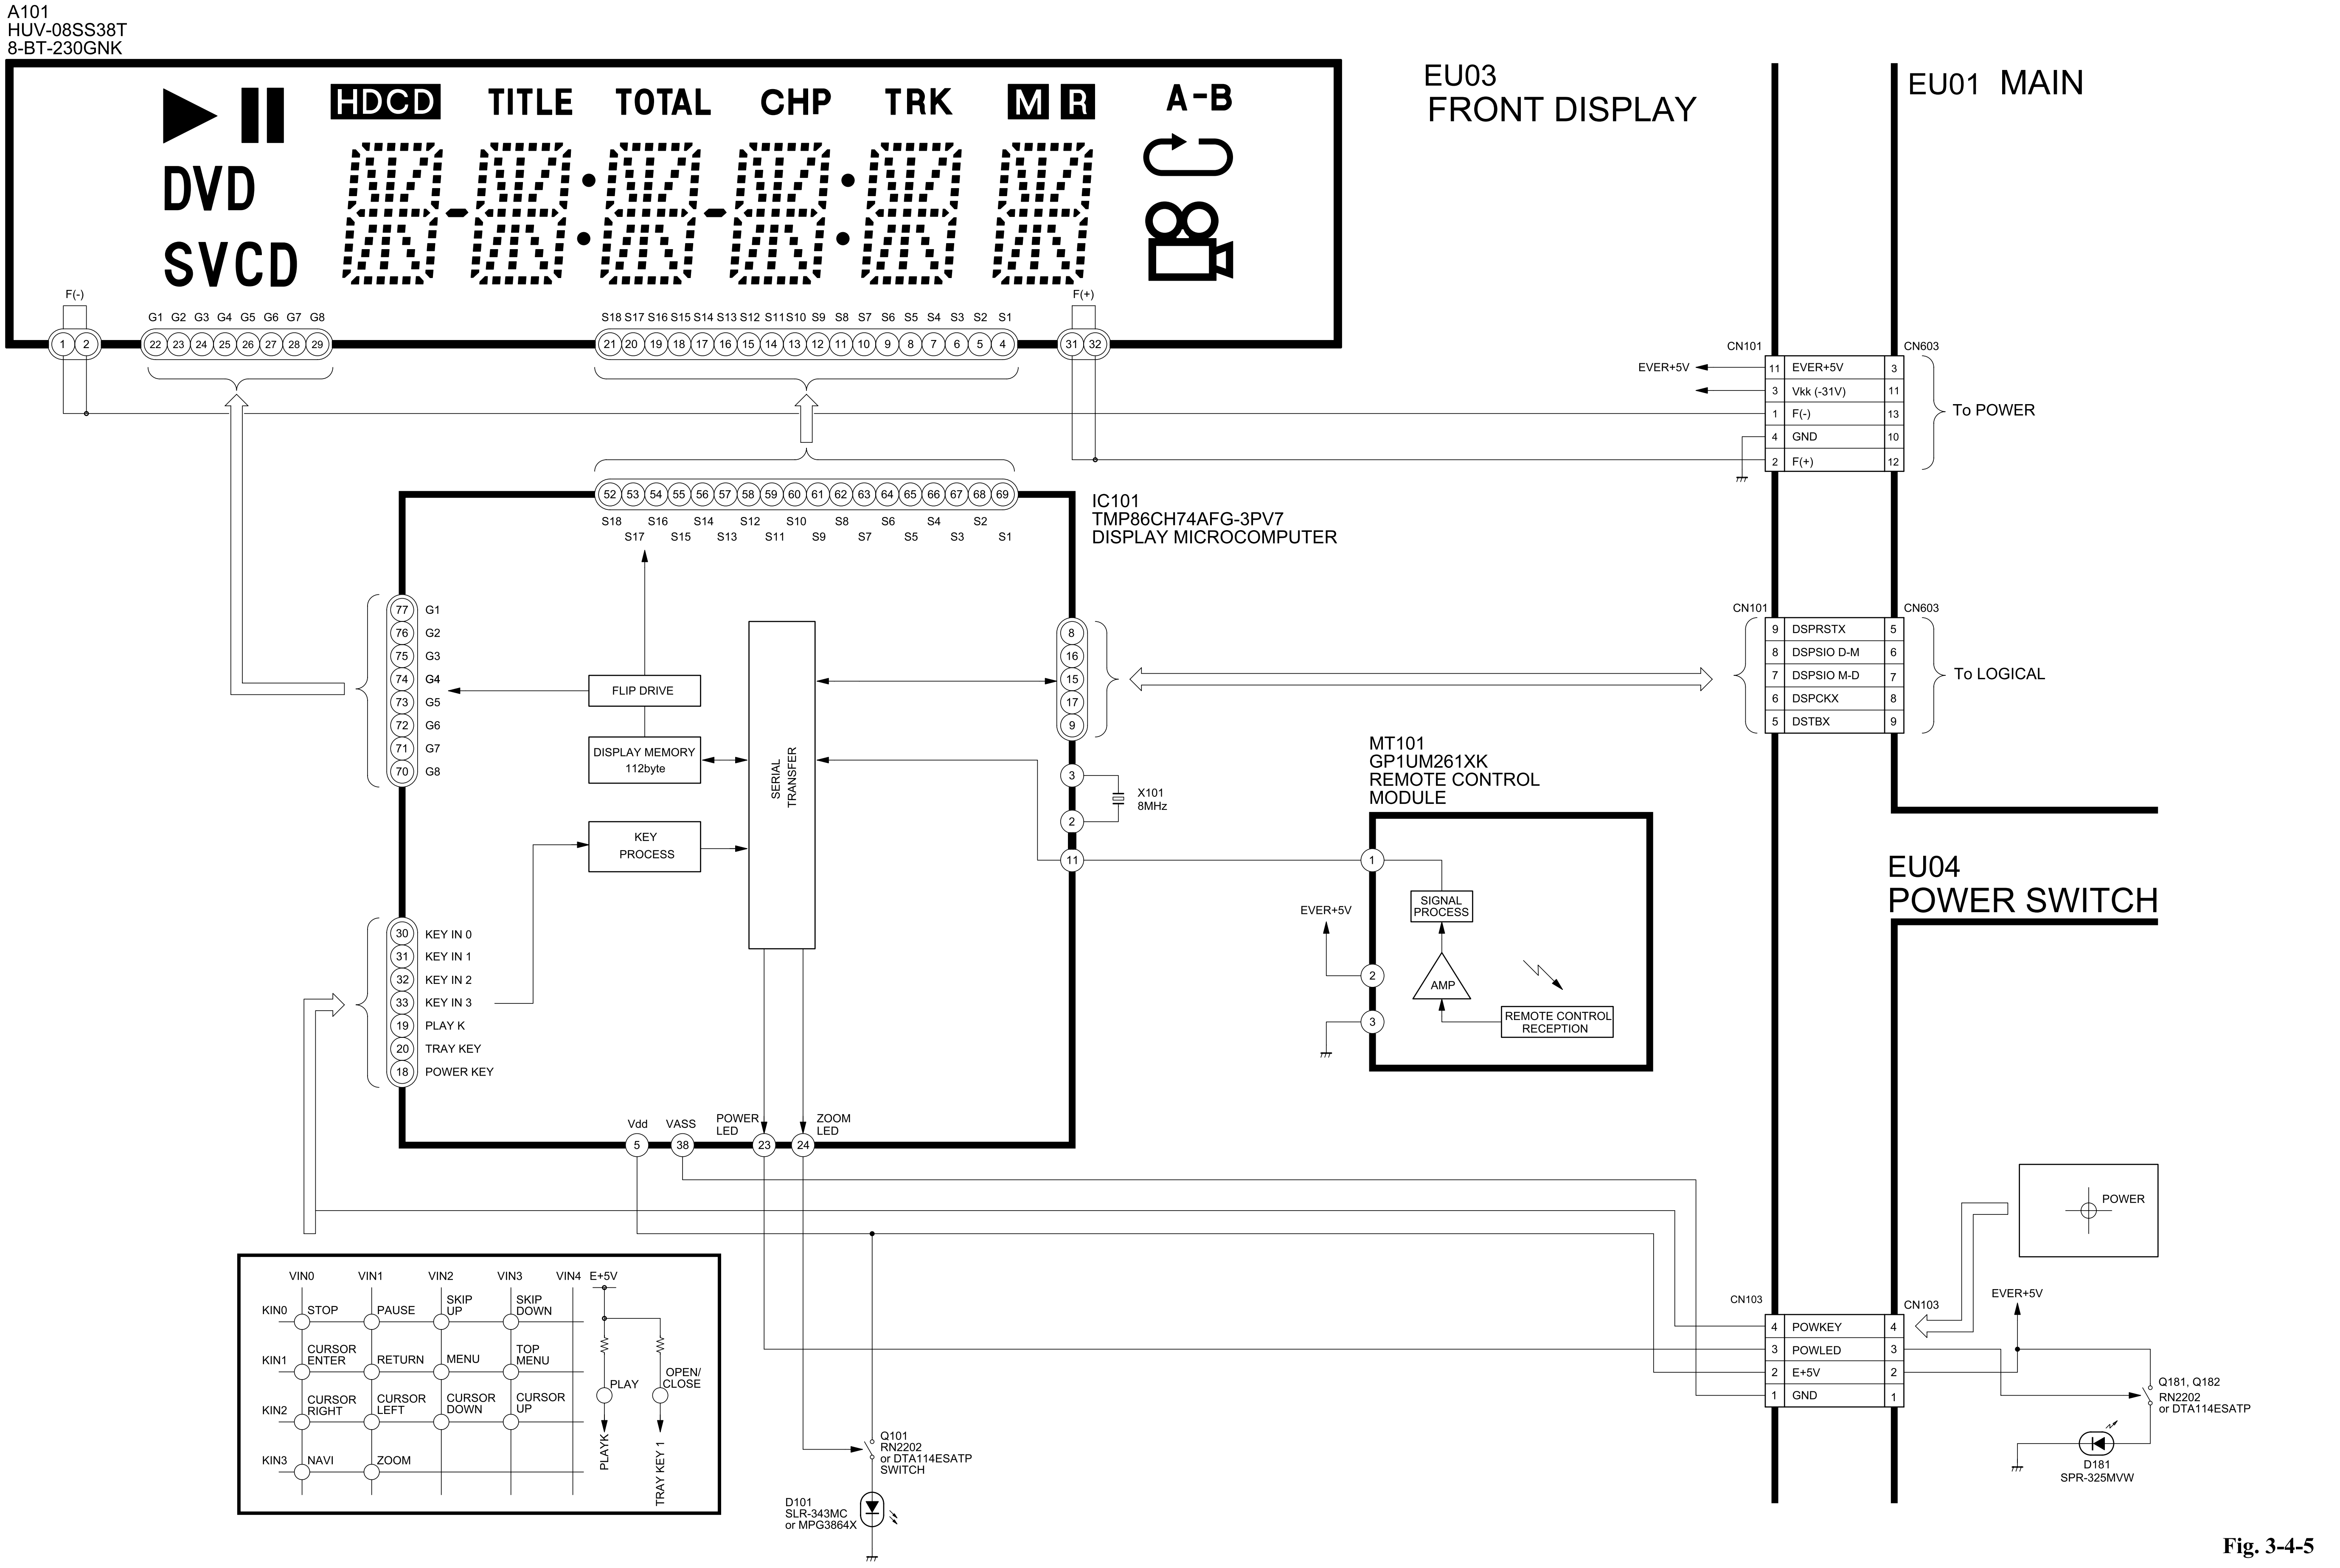
A101
HUV-08SS38T
8-BT-230GNK
HDCD
TITLE
TOTAL
CHP
TRK
M
R
A-B
DVD
SVCD
F(-)
F(+)
G1 G2 G3 G4 G5 G6 G7 G8
S18 S17 S16 S15 S14 S13 S12 S11 S10 S9 S8 S7 S6 S5 S4 S3 S2 S1
EU03
FRONT DISPLAY
EU01 MAIN
CN101
CN603
EVER+5V
Vkk (-31V)
F(-)
GND
F(+)
To POWER
IC101
TMP86CH74AFG-3PV7
DISPLAY MICROCOMPUTER
FLIP DRIVE
DISPLAY MEMORY
112byte
KEY
PROCESS
SERIAL
TRANSFER
KEY IN 0
KEY IN 1
KEY IN 2
KEY IN 3
PLAY K
TRAY KEY
POWER KEY
Vdd
VASS
POWER LED
ZOOM LED
DSPRSTX
DSPSIO D-M
DSPSIO M-D
DSPCKX
DSTBX
To LOGICAL
X101
8MHz
MT101
GP1UM261XK
REMOTE CONTROL
MODULE
SIGNAL PROCESS
AMP
REMOTE CONTROL RECEPTION
EU04
POWER SWITCH
POWER
CN103
POWKEY
POWLED
E+5V
GND
Q181, Q182
RN2202
or DTA114ESATP
D181
SPR-325MVW
VIN0
VIN1
VIN2
VIN3
VIN4
E+5V
KIN0
KIN1
KIN2
KIN3
STOP
PAUSE
SKIP UP
SKIP DOWN
CURSOR ENTER
RETURN
MENU
TOP MENU
CURSOR RIGHT
CURSOR LEFT
CURSOR DOWN
CURSOR UP
NAVI
ZOOM
PLAY
OPEN/CLOSE
PLAYK
TRAY KEY 1
Q101
RN2202
or DTA114ESATP
SWITCH
D101
SLR-343MC
or MPG3864X

Fig. 3-4-5

4-4. Main Block Diagrams

4-4-1. Servo System Block Diagram

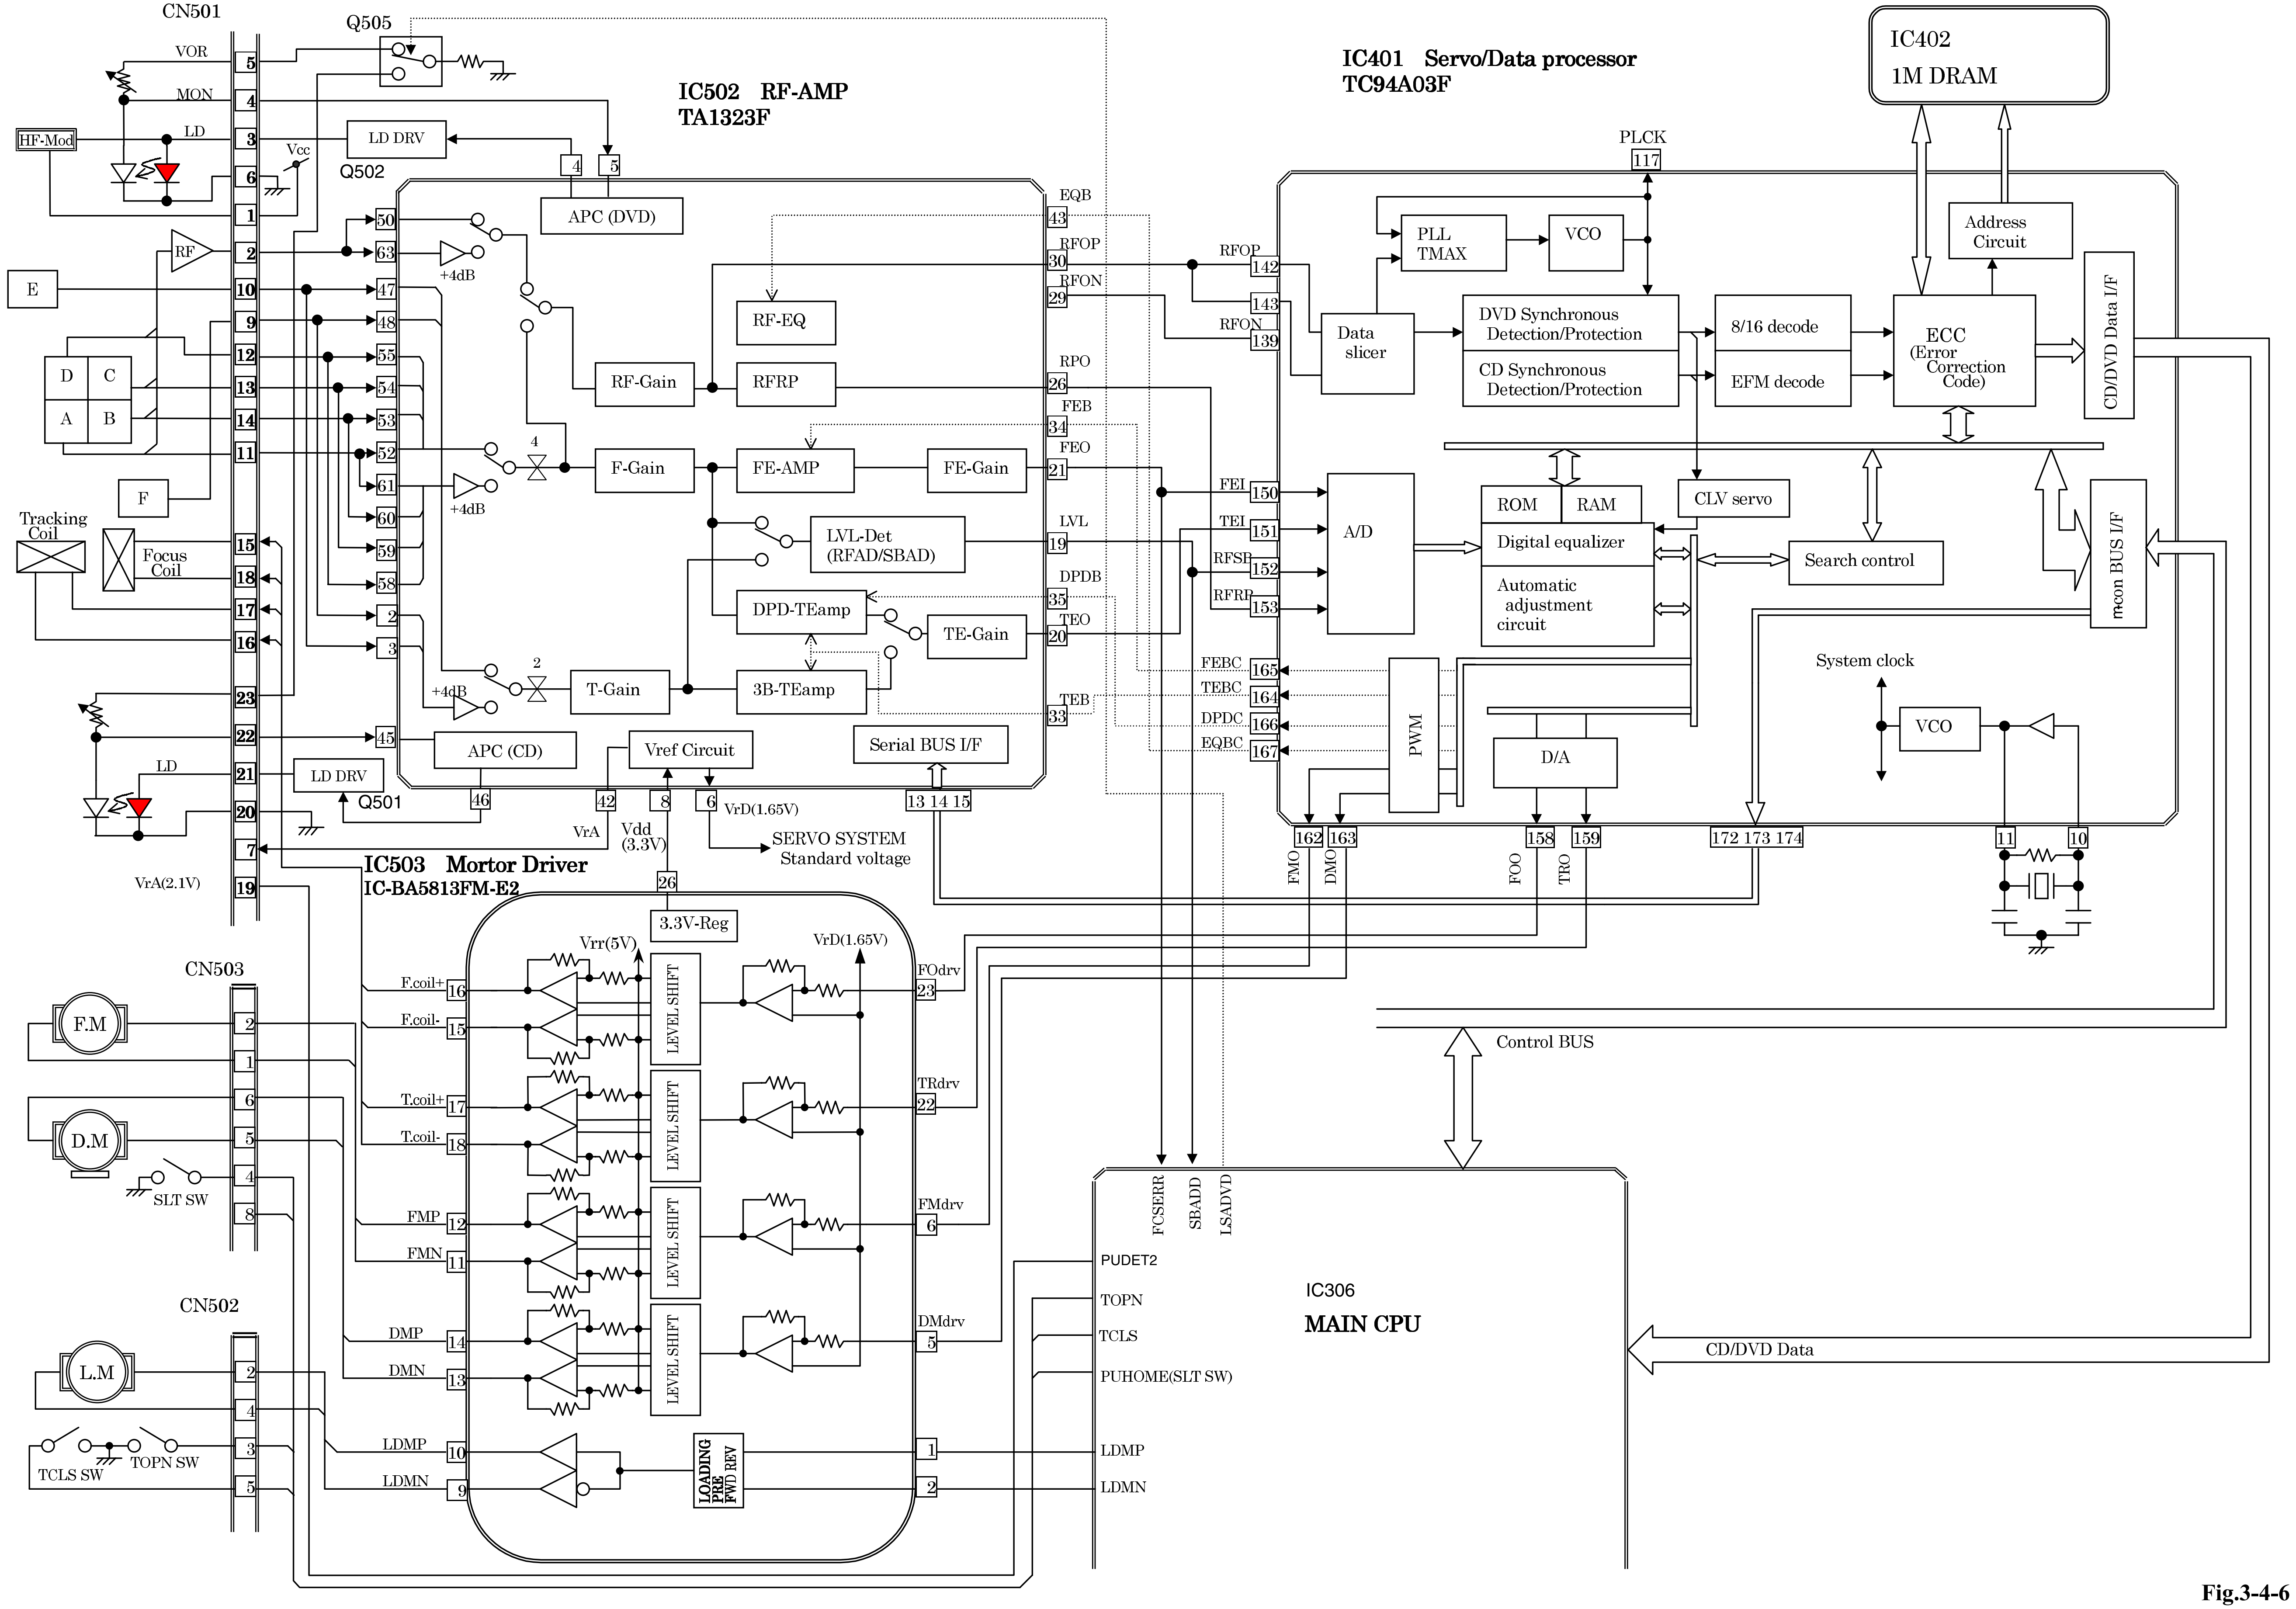
CN501
Q505
IC502 RF-AMP
TA1323F
IC401 Servo/Data processor
TC94A03F
IC402
1M DRAM
VOR
MON
LD
HF-Mod
Vcc
LD DRV
Q502
APC (DVD)
RF
E
D
C
A
B
F
Tracking Coil
Focus Coil
+4dB
RF-EQ
RF-Gain
RFRP
F-Gain
FE-AMP
FE-Gain
LVL-Det
(RFAD/SBAD)
DPD-TEamp
TE-Gain
T-Gain
3B-TEamp
APC (CD)
Vref Circuit
Serial BUS I/F
LD DRV
Q501
VrA(2.1V)
VrA
Vdd
(3.3V)
VrD(1.65V)
SERVO SYSTEM
Standard voltage
EQB
RFOP
RFON
RPO
FEB
FEO
LVL
DPDB
TEO
TEB
PLCK
PLL
TMAX
VCO
Address
Circuit
Data
slicer
DVD Synchronous
Detection/Protection
CD Synchronous
Detection/Protection
8/16 decode
EFM decode
ECC
(Error
Correction
Code)
CD/DVD Data I/F
FEI
TEI
RFSB
RFRP
A/D
ROM
RAM
Digital equalizer
Automatic
adjustment
circuit
CLV servo
Search control
mcon BUS I/F
System clock
VCO
FEBC
TEBC
DPDC
EQBC
PWM
D/A
FMO
DMO
FOO
TRO
162 163
158 159
172 173 174
IC503 Mortor Driver
IC-BA5813FM-E2
3.3V-Reg
Vrr(5V)
VrD(1.65V)
LEVEL SHIFT
F.coil+
F.coil-
T.coil+
T.coil-
FMP
FMN
DMP
DMN
LDMP
LDMN
FOdrv
TRdrv
FMdrv
DMdrv
LOADING
PRE
FWD REV
CN503
F.M
D.M
SLT SW
CN502
L.M
TCLS SW
TOPN SW
Control BUS
FCSERR
SBADD
LSADVD
PUDET2
TOPN
TCLS
PUHOME(SLT SW)
LDMP
LDMN
IC306
MAIN CPU
CD/DVD Data

Fig.3-4-6

4-4-2. Logical System Block Diagram

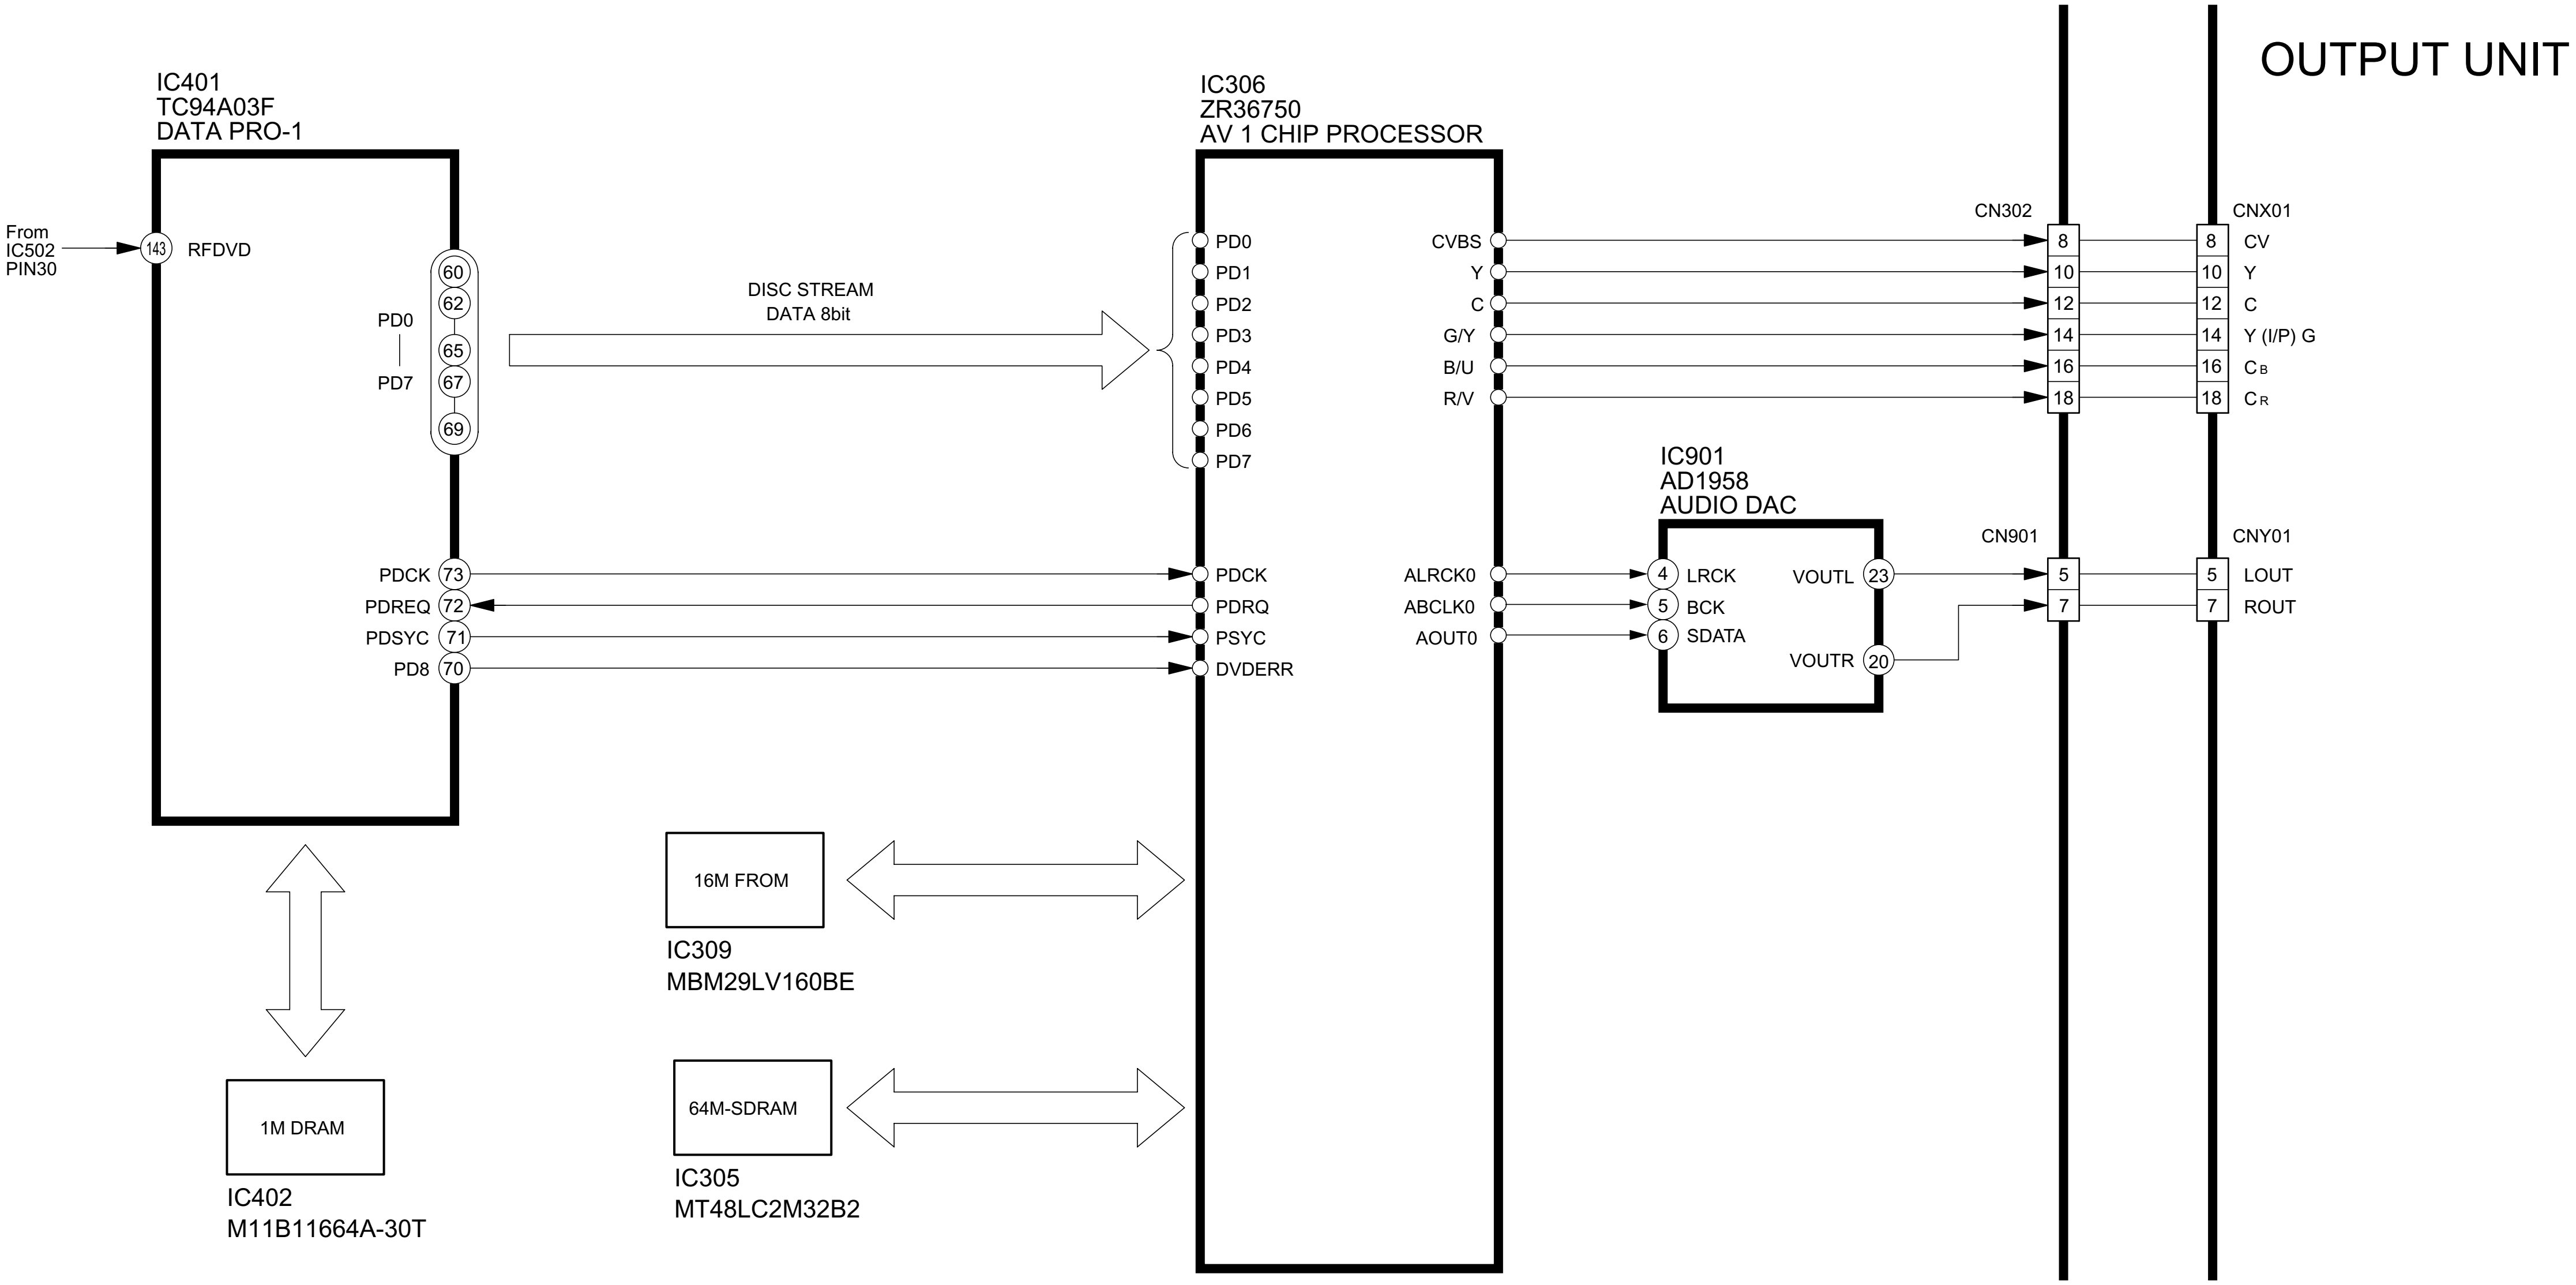
OUTPUT UNIT
IC401
TC94A03F
DATA PRO-1
From IC502 PIN30
143 RFDVD
PD0
PD7
60
62
65
67
69
DISC STREAM DATA 8bit
PDCK 73
PDREQ 72
PDSYC 71
PD8 70
IC306
ZR36750
AV 1 CHIP PROCESSOR
PD0
PD1
PD2
PD3
PD4
PD5
PD6
PD7
PDCK
PDRQ
PSYC
DVDERR
CVBS
Y
C
G/Y
B/U
R/V
ALRCK0
ABCLK0
AOUT0
IC901
AD1958
AUDIO DAC
4 LRCK
5 BCK
6 SDATA
VOUTL 23
VOUTR 20
CN302
8
10
12
14
16
18
CN901
5
7
CNX01
8 CV
10 Y
12 C
14 Y (I/P) G
16 CB
18 CR
CNY01
5 LOUT
7 ROUT
16M FROM
IC309
MBM29LV160BE
64M-SDRAM
IC305
MT48LC2M32B2
1M DRAM
IC402
M11B11664A-30T

Fig. 3-4-7

4-5. Output Block Diagram

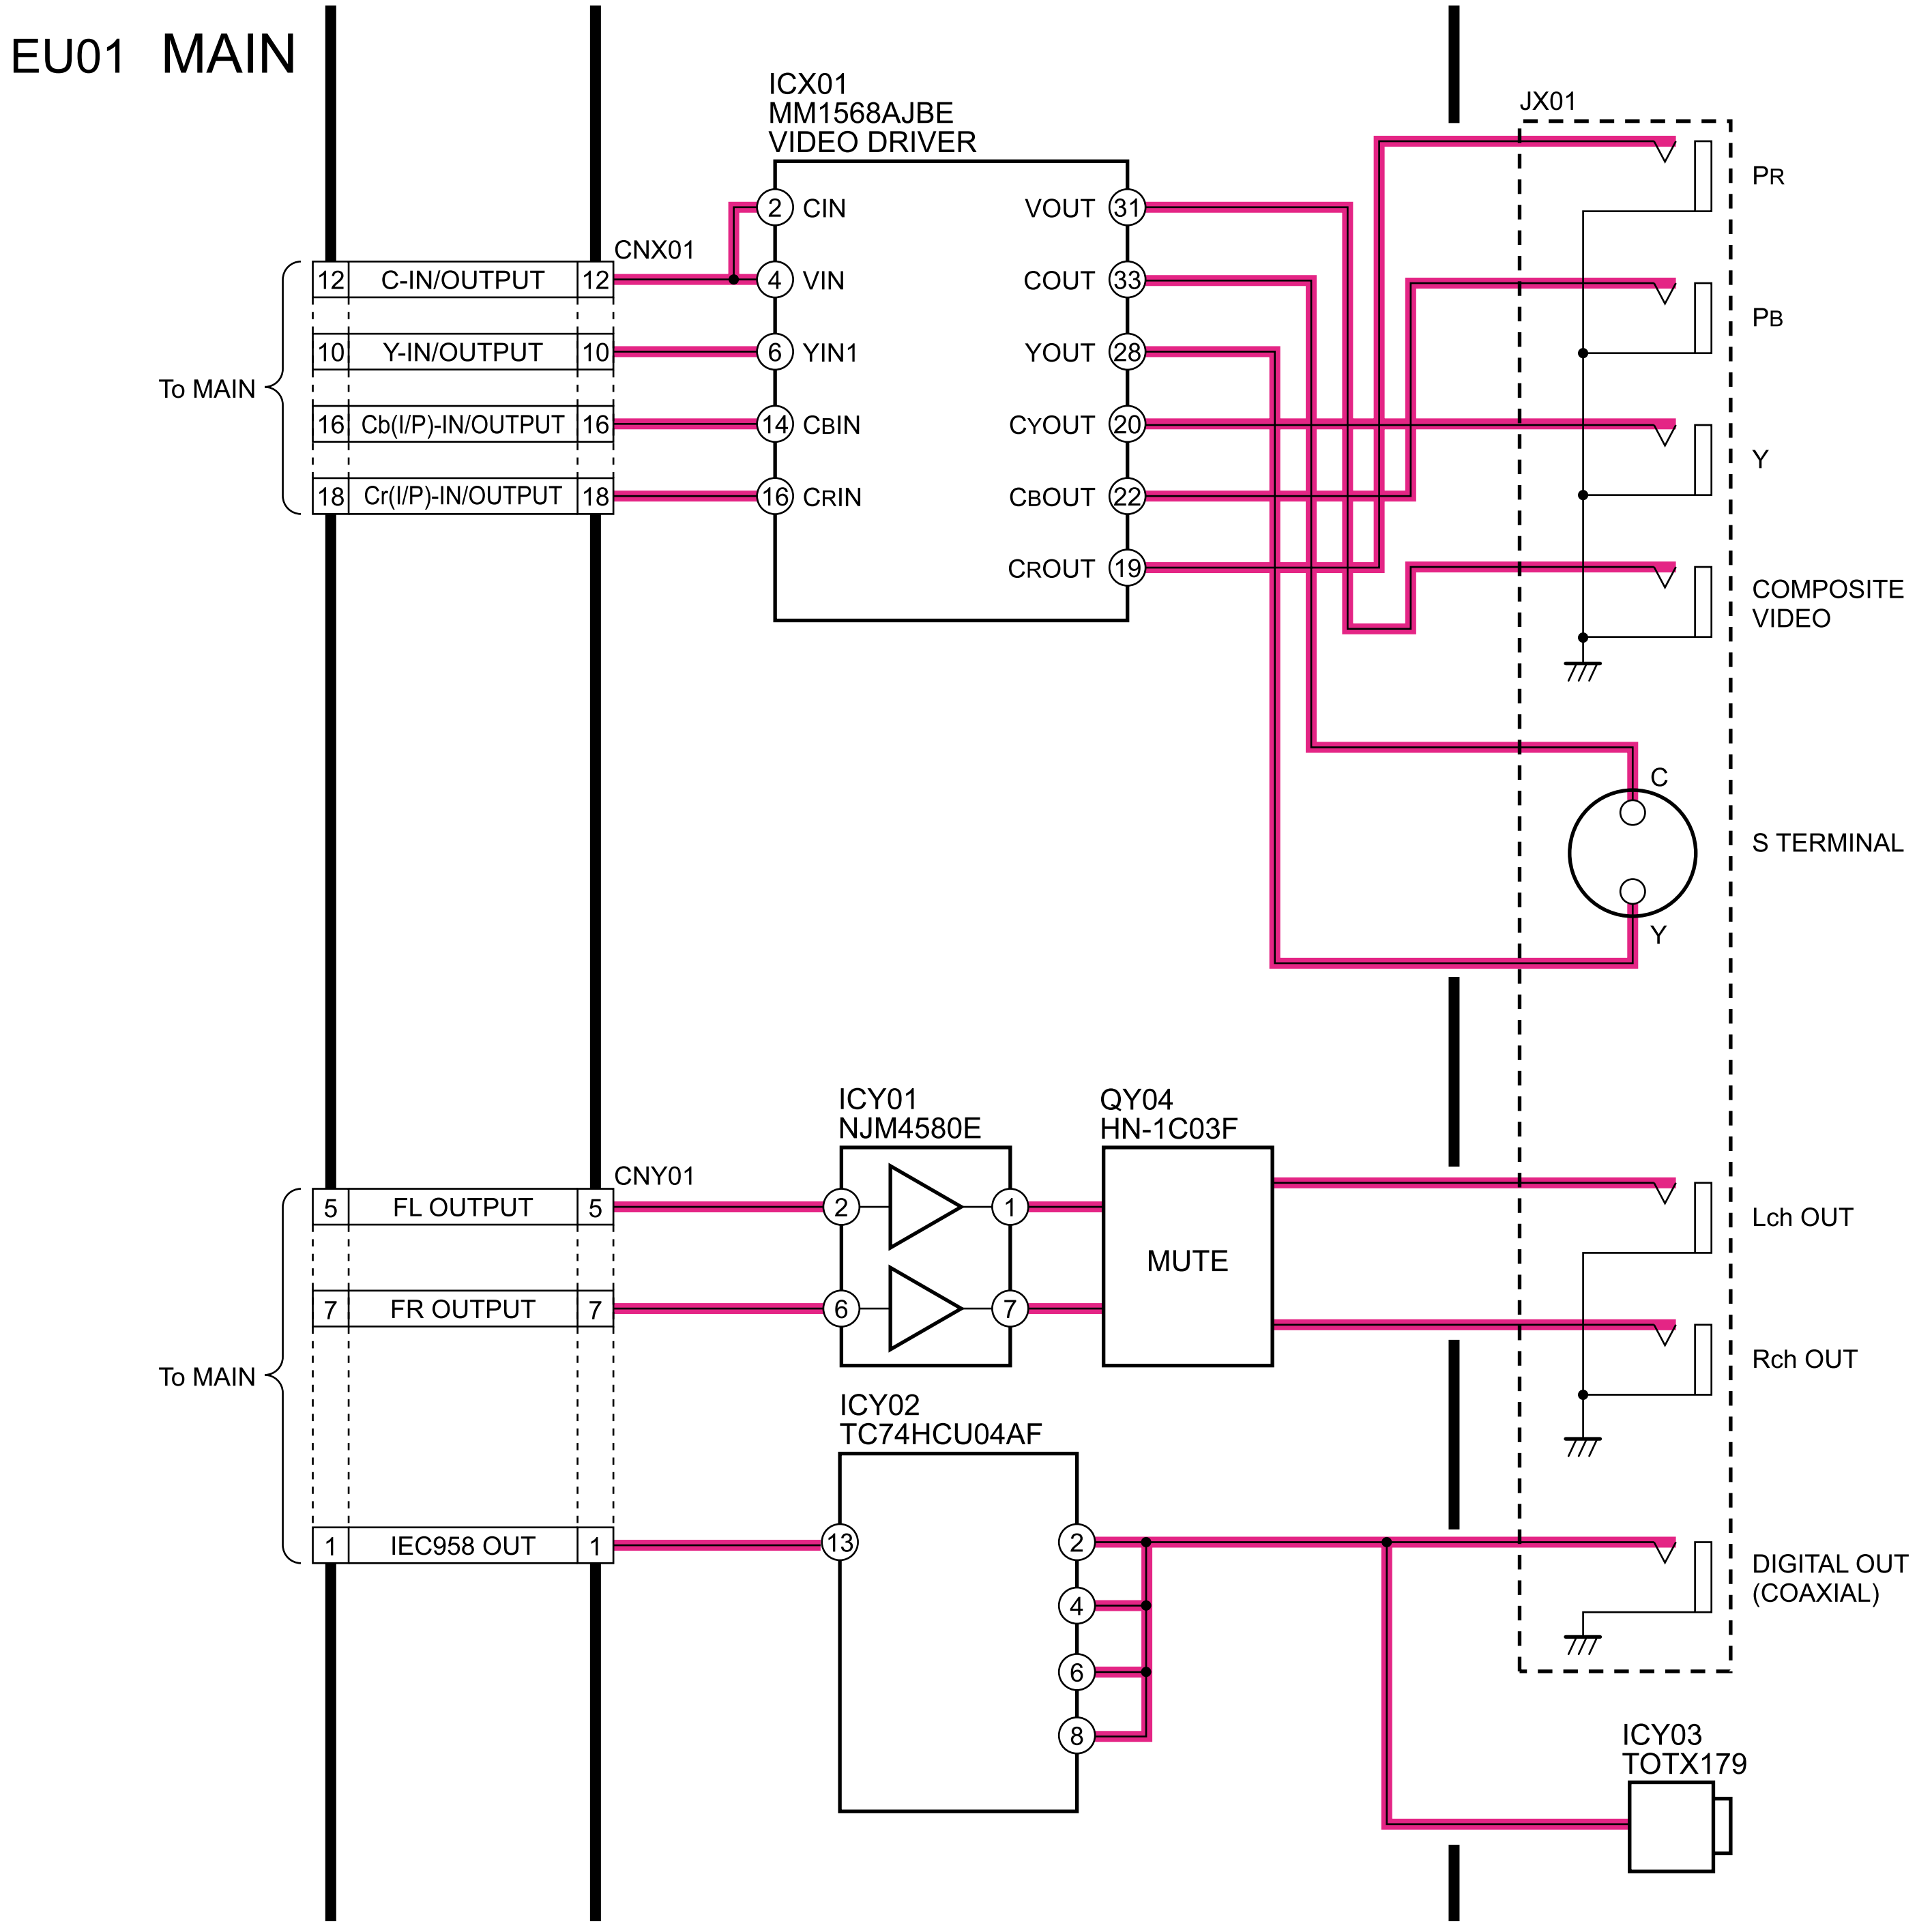
EU01 MAIN
ICX01
MM1568AJBE
VIDEO DRIVER
CNX01
To MAIN
12 C-IN/OUTPUT 12
10 Y-IN/OUTPUT 10
16 Cb(I/P)-IN/OUTPUT 16
18 Cr(I/P)-IN/OUTPUT 18
2 CIN
4 VIN
6 YIN1
14 CBIN
16 CRIN
VOUT 31
COUT 33
YOUT 28
CYOUT 20
CBOUT 22
CROUT 19
JX01
PR
PB
Y
COMPOSITE
VIDEO
C
S TERMINAL
Y
ICY01
NJM4580E
QY04
HN-1C03F
CNY01
To MAIN
5 FL OUTPUT 5
7 FR OUTPUT 7
1 IEC958 OUT 1
2
1
6
7
MUTE
Lch OUT
Rch OUT
ICY02
TC74HCU04AF
13
2
4
6
8
DIGITAL OUT
(COAXIAL)
ICY03
TOTX179

Fig. 3-4-8

5. CIRCUIT DIAGRAMS

5-1. Power Supply Circuit Diagram

EU02 POWER

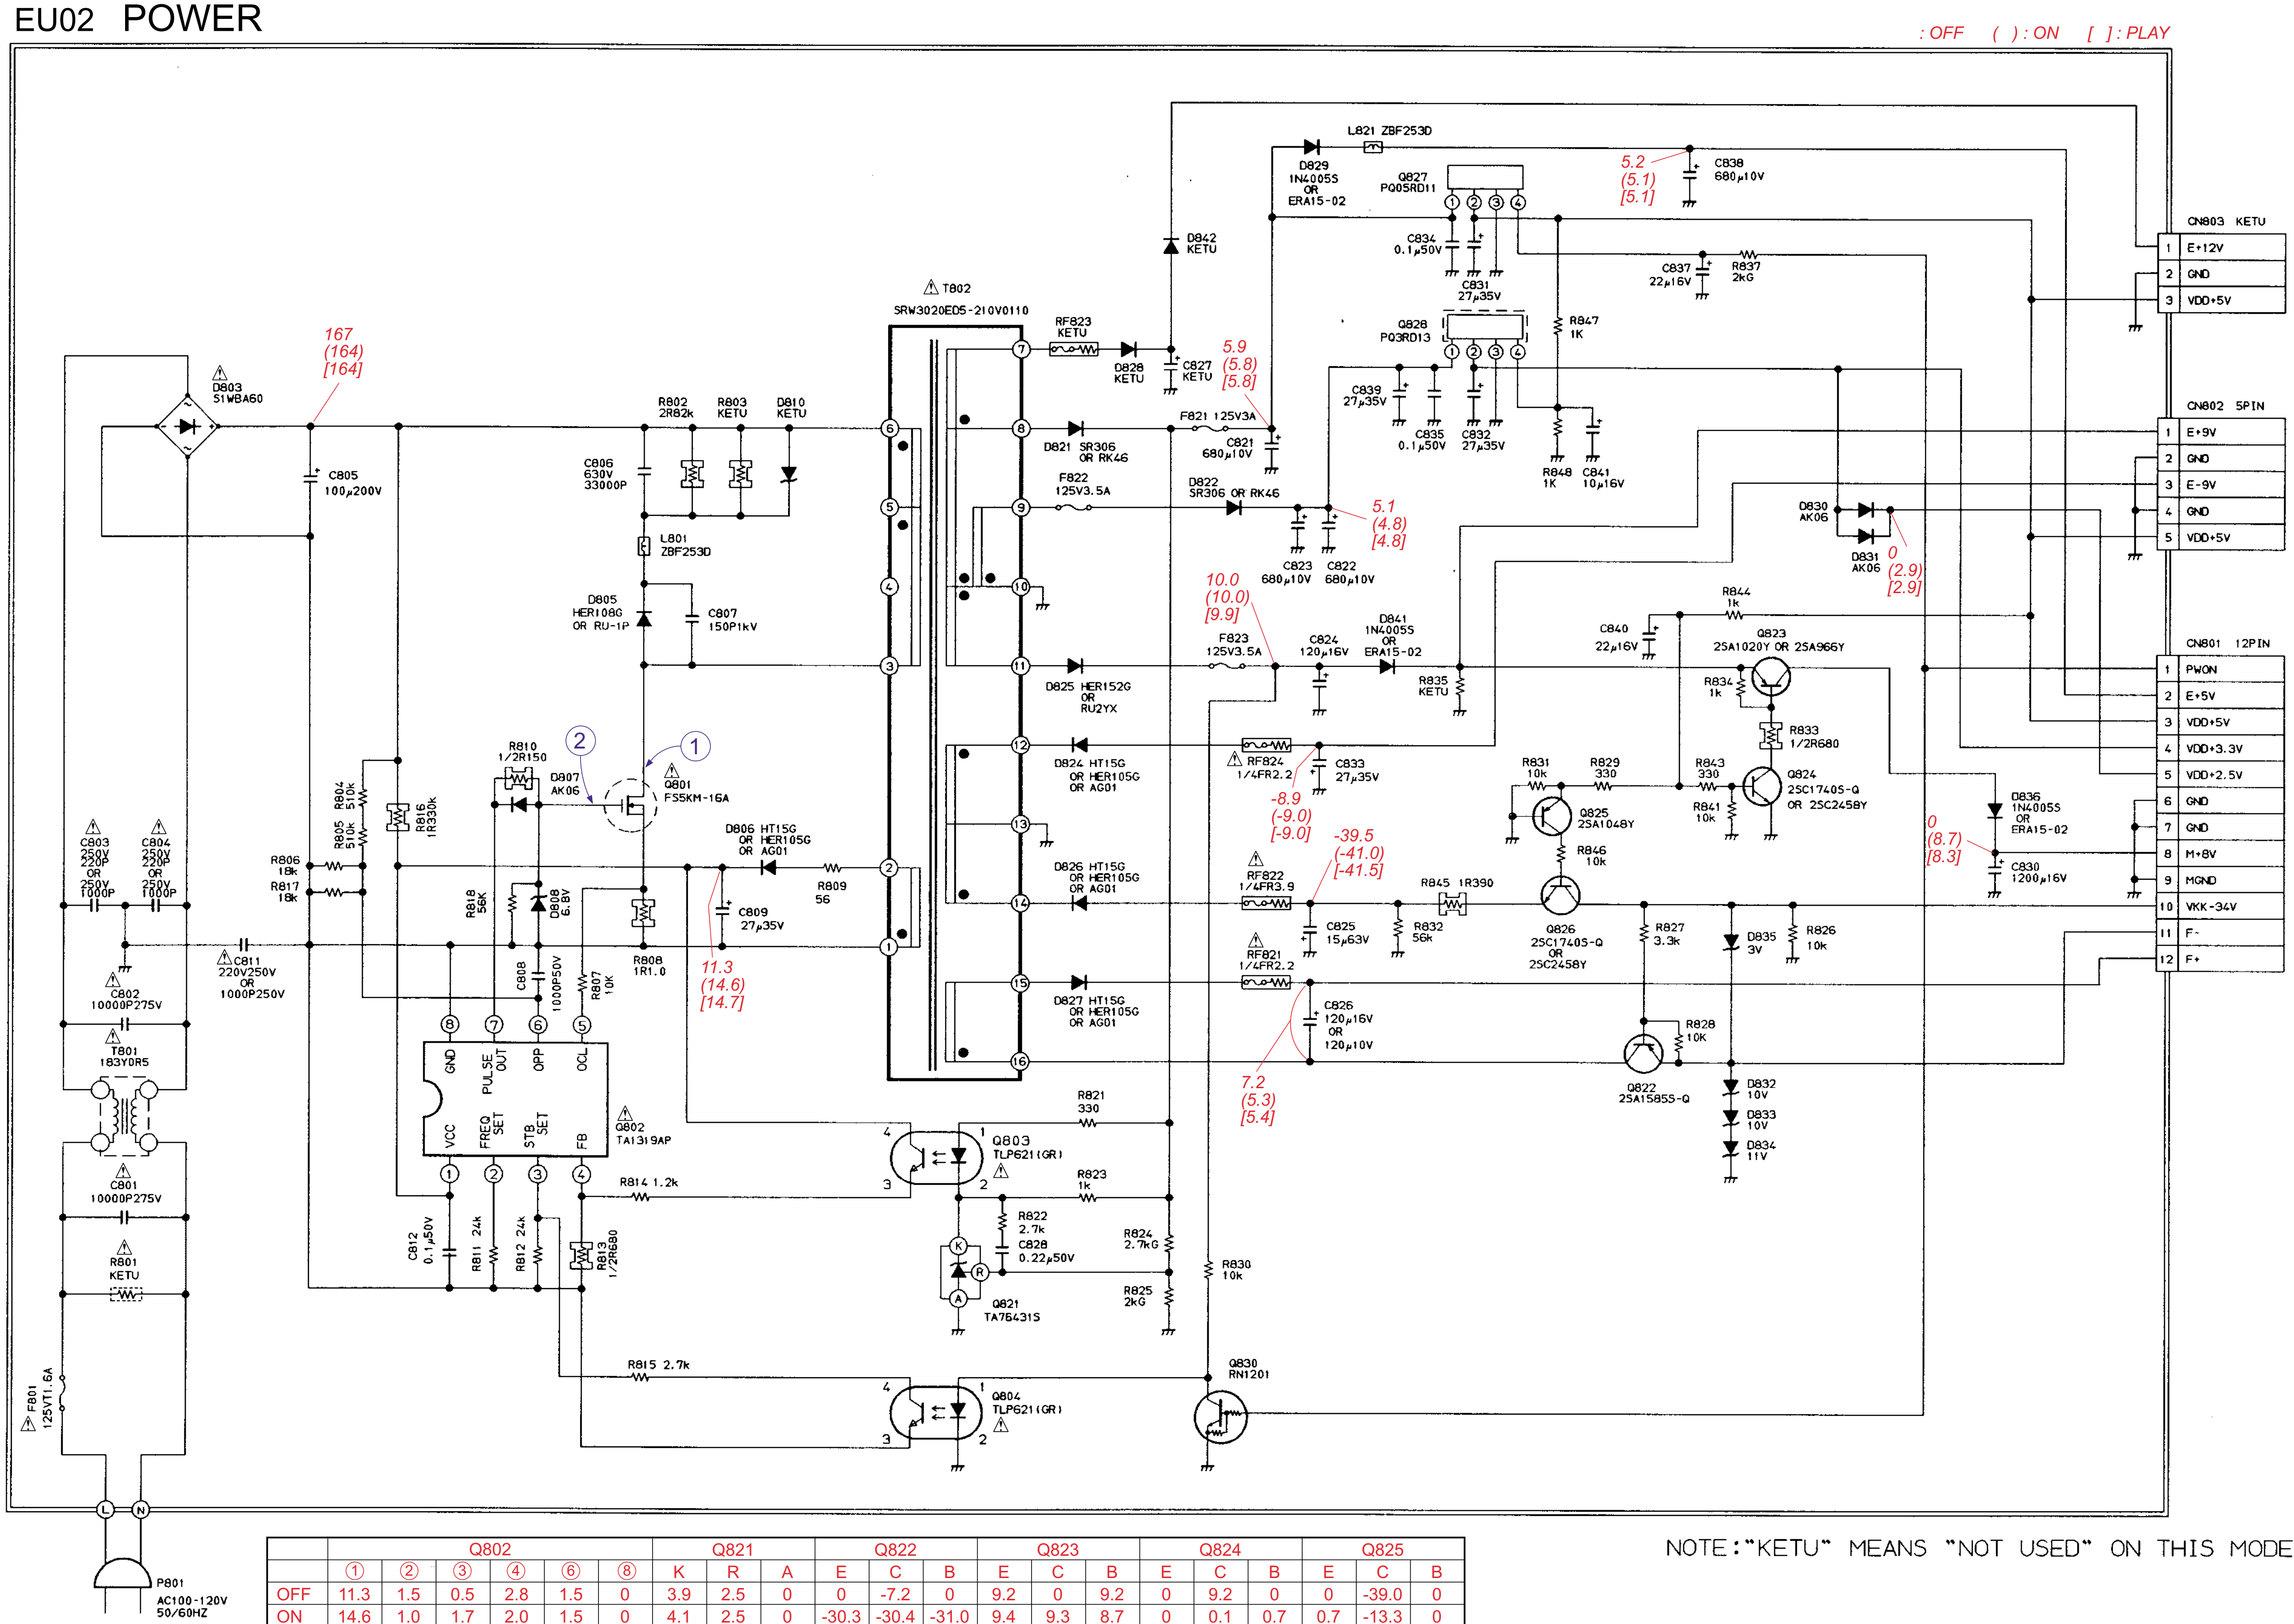
: OFF ( ): ON [ ]: PLAY
D803 S1WBA60
167 (164) [164]
C805 100µ200V
R802 2R82k
R803 KETU
D810 KETU
C806 630V 33000P
L801 ZBF253D
D805 HER108G OR RU-1P
C807 150P1kV
T802 SRW3020ED5-210V0110
RF823 KETU
D828 KETU
C827 KETU
5.9 (5.8) [5.8]
D842 KETU
D829 1N4005S OR ERA15-02
L821 ZBF253D
Q827 PQ05RD11
C834 0.1µ50V
C831 27µ35V
5.2 (5.1) [5.1]
C838 680µ10V
C837 22µ16V
R837 2kG
Q828 PQ3RD13
R847 1K
C839 27µ35V
C835 0.1µ50V
C832 27µ35V
R848 1K
C841 10µ16V
F821 125V3A
C821 680µ10V
D821 SR306 OR RK46
F822 125V3.5A
D822 SR306 OR RK46
C823 680µ10V
C822 680µ10V
5.1 (4.8) [4.8]
D830 AK06
D831 AK06
0 (2.9) [2.9]
10.0 (10.0) [9.9]
F823 125V3.5A
D825 HER152G OR RU2YX
C824 120µ16V
D841 1N4005S OR ERA15-02
R835 KETU
C840 22µ16V
R844 1k
Q823 2SA1020Y OR 2SA966Y
R834 1k
R833 1/2R680
Q824 2SC1740S-Q OR 2SC2458Y
R843 330
R841 10k
R831 10k
R829 330
Q825 2SA1048Y
R846 10k
D824 HT15G OR HER105G OR AG01
RF824 1/4FR2.2
C833 27µ35V
-8.9 (-9.0) [-9.0]
-39.5 (-41.0) [-41.5]
RF822 1/4FR3.9
D826 HT15G OR HER105G OR AG01
R845 1R390
C825 15µ63V
R832 56k
Q826 2SC1740S-Q OR 2SC2458Y
R827 3.3k
D835 3V
R826 10k
D836 1N4005S OR ERA15-02
0 (8.7) [8.3]
C830 1200µ16V
RF821 1/4FR2.2
D827 HT15G OR HER105G OR AG01
C826 120µ16V OR 120µ10V
7.2 (5.3) [5.4]
R828 10K
Q822 2SA1585S-Q
D832 10V
D833 10V
D834 11V
R810 1/2R150
D807 AK06
Q801 FS5KM-16A
D806 HT15G OR HER105G OR AG01
R809 56
C809 27µ35V
11.3 (14.6) [14.7]
R808 1R1.0
R807 10K
C808 1000P50V
D808 6.8V
R818 56K
R804 510k
R805 510k
R816 1R330K
R806 18k
R817 18k
C803 250V 220P OR 250V 1000P
C804 250V 220P OR 250V 1000P
C811 220V250V OR 1000P250V
C802 10000P275V
T801 183Y0R5
C801 10000P275V
R801 KETU
F801 125VT1.6A
Q802 TA1319AP
GND PULSE OUT OPP OCL
VCC FREQ SET STB SET FB
R814 1.2k
C812 0.1µ50V
R811 24k
R812 24k
R813 1/2R680
R815 2.7k
R821 330
Q803 TLP621(GR)
R823 1k
R822 2.7k
C828 0.22µ50V
R824 2.7kG
R825 2kG
R830 10k
Q821 TA76431S
K R A
Q830 RN1201
Q804 TLP621(GR)
CN803 KETU
1 E+12V
2 GND
3 VDD+5V
CN802 5PIN
1 E+9V
2 GND
3 E-9V
4 GND
5 VDD+5V
CN801 12PIN
1 PWON
2 E+5V
3 VDD+5V
4 VDD+3.3V
5 VDD+2.5V
6 GND
7 GND
8 M+8V
9 MGND
10 VKK-34V
11 F-
12 F+
L N
P801 AC100-120V 50/60HZ
① ②

	Q802						Q821			Q822			Q823			Q824			Q825		
	①	②	③	④	⑥	⑧	K	R	A	E	C	B	E	C	B	E	C	B	E	C	B
OFF	11.3	1.5	0.5	2.8	1.5	0	3.9	2.5	0	0	-7.2	0	9.2	0	9.2	0	9.2	0	0	-39.0	0
ON	14.6	1.0	1.7	2.0	1.5	0	4.1	2.5	0	-30.3	-30.4	-31.0	9.4	9.3	8.7	0	0.1	0.7	0.7	-13.3	0
PLAY	14.7	1.0	1.7	2.0	1.5	0	4.1	2.5	0	-30.3	-30.4	-31.0	9.1	9.0	8.4	0	0.1	0.7	0.7	-13.3	0

	Q826			Q827				Q828				Q830		
	E	C	B	①	②	③	④	①	②	③	④	E	C	B
OFF	-39.5	0	-39.0	5.9	5.0	0	0	5.1	3.3	0	0	0	1.0	0
ON	-34.0	-34.0	-33.0	5.8	5.0	0	5.0	4.8	3.3	0	2.5	0	0.01	5.0
PLAY	-34.0	-34.0	-33.0	5.8	5.0	0	5.0	4.8	3.3	0	2.5	0	0.01	5.0

NOTE: "KETU" MEANS "NOT USED" ON THIS MODEL

Fig. 3-5-1

Power Supply Circuit Diagram

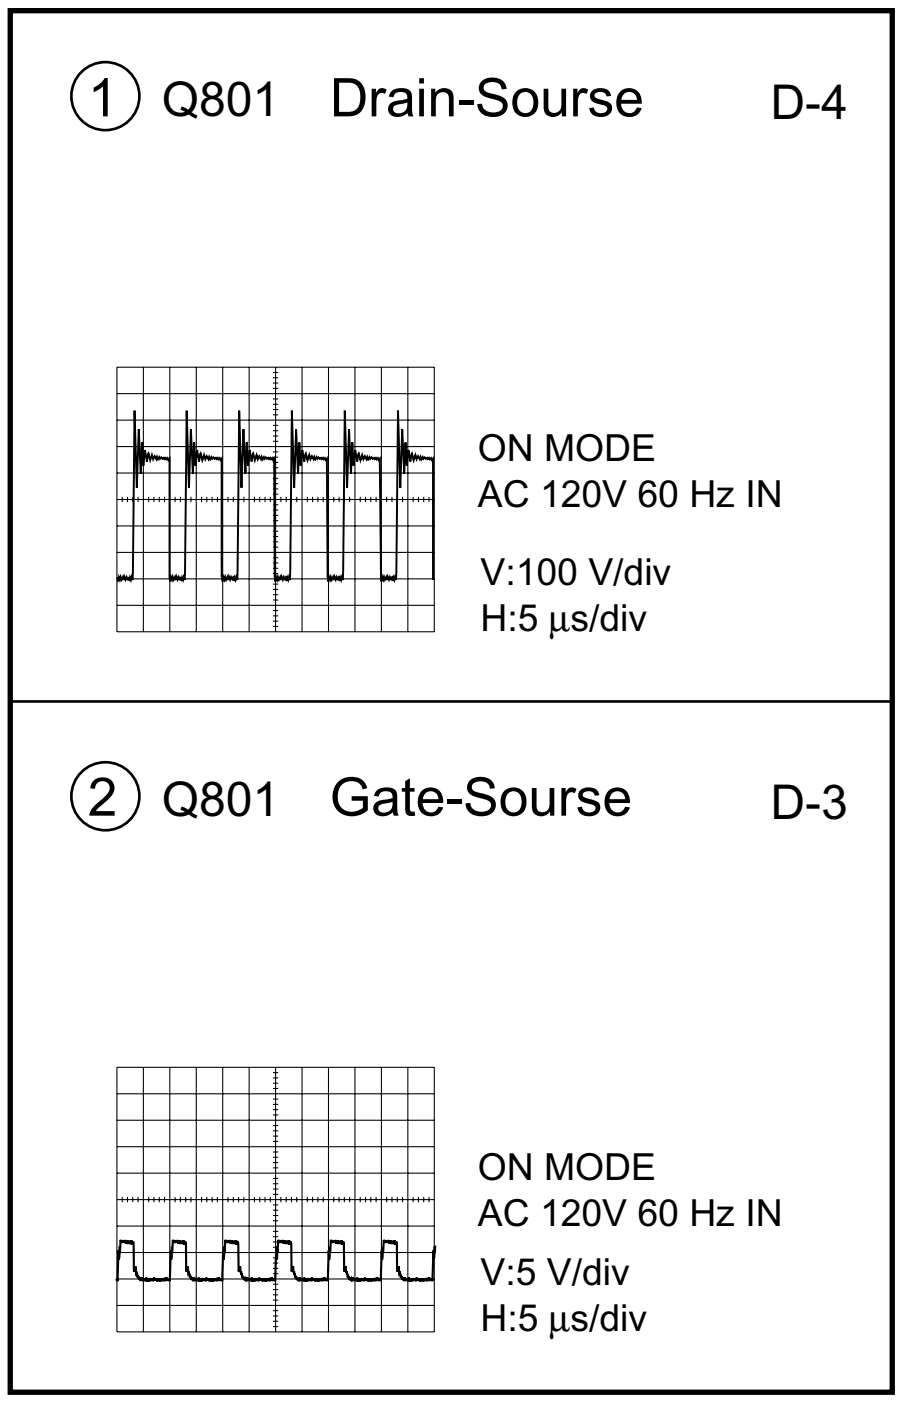

Fig. 3-5-2

5-2. Front Display, Power Switch Circuit Diagram

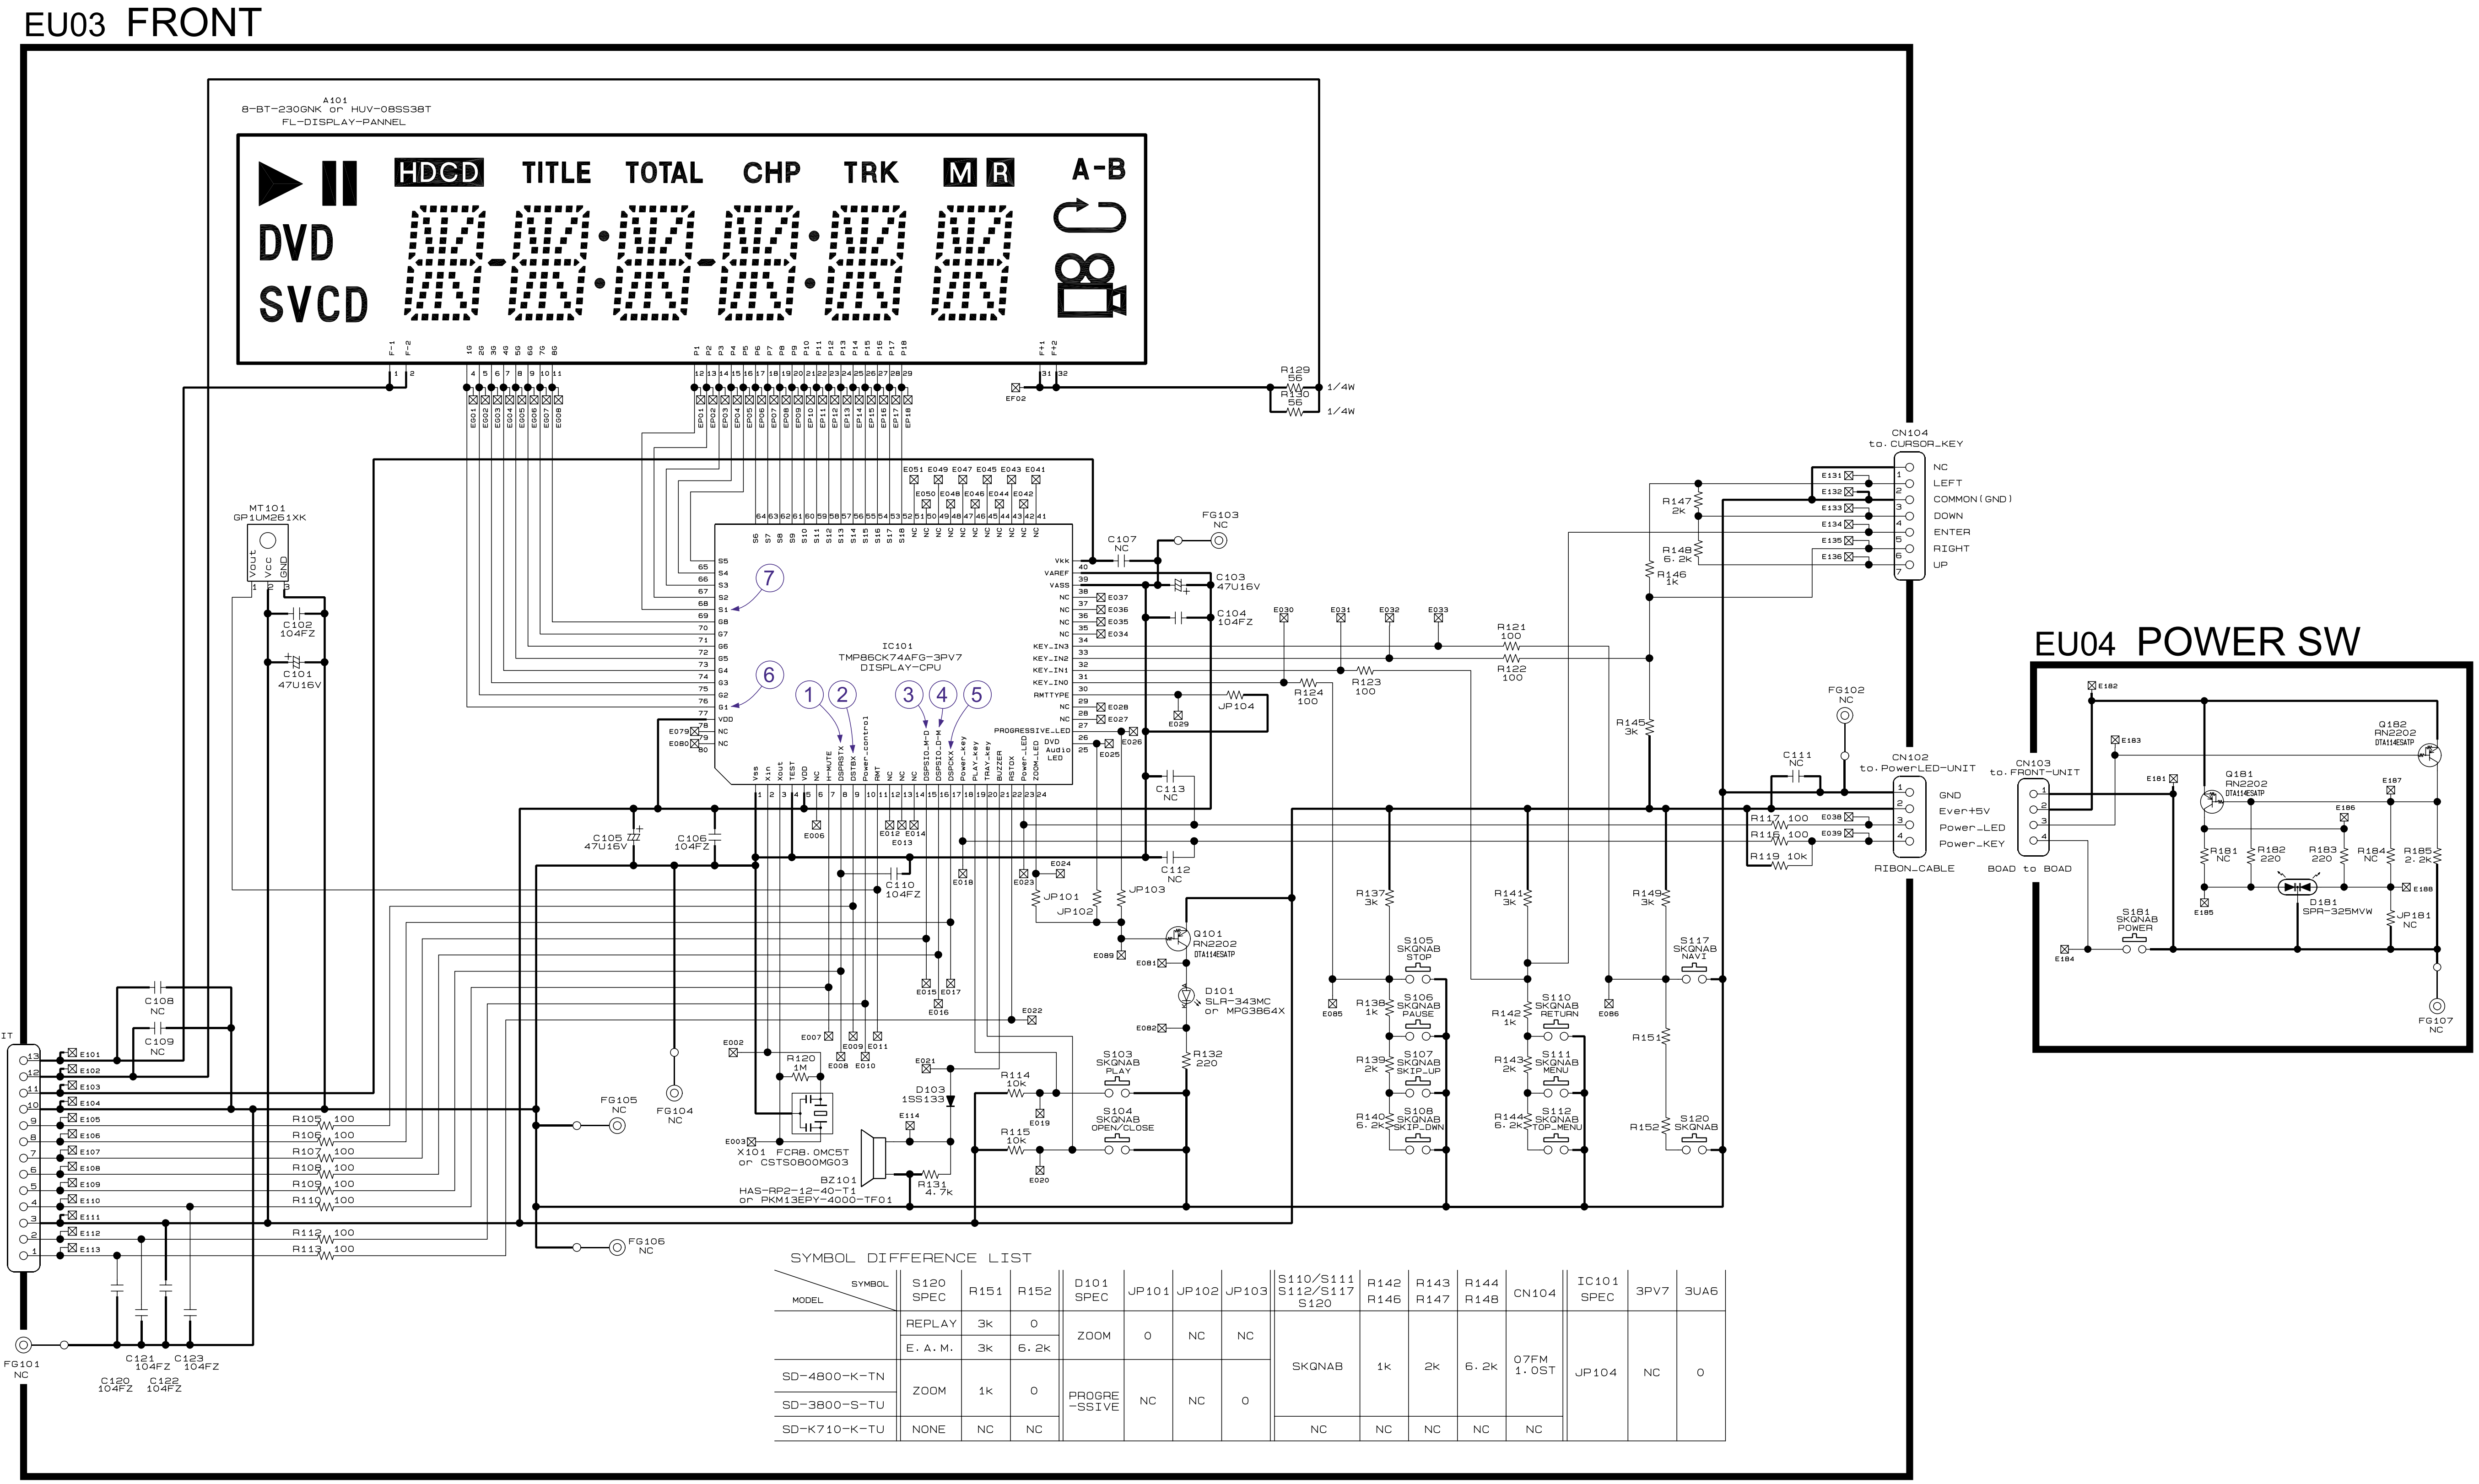
EU03 FRONT
A101
8-BT-230GNK or HUV-08SS38T
FL-DISPLAY-PANNEL
HDCD TITLE TOTAL CHP TRK M R A-B
DVD
SVCD
IC101
TMP86CK74AFG-3PV7
DISPLAY-CPU
MT101
GP1UM261XK
CN101
to. MAIN-UNIT
F(-) -31.0V
F(+) -25.9V
Vkk -34.0V
GND
DSTBX
DSPCKX
DSPSIO_M-D
DSPSIO_D-M
DSPRSTX
HMUTE
Ever+5V
PWRCNT
RSTOX
CN104
to. CURSOR_KEY
NC
LEFT
COMMON(GND)
DOWN
ENTER
RIGHT
UP
CN102
to. PowerLED-UNIT
GND
Ever+5V
Power_LED
Power_KEY
RIBON_CABLE
X101 FCR8.0MC5T
or CSTS0800MG03
BZ101
HAS-RP2-12-40-T1
or PKM13EPY-4000-TF01
Q101
RN2202
DTA114ESATP
D101
SLR-343MC
or MPG3864X
D103
1SS133
S103 SKQNAB PLAY
S104 SKQNAB OPEN/CLOSE
S105 SKQNAB STOP
S106 SKQNAB PAUSE
S107 SKQNAB SKIP_UP
S108 SKQNAB SKIP_DWN
S110 SKQNAB RETURN
S111 SKQNAB MENU
S112 SKQNAB TOP_MENU
S117 SKQNAB NAVI
S120 SKQNAB
EU04 POWER SW
CN103
to. FRONT-UNIT
BOAD to BOAD
Q181
RN2202
DTA114ESATP
Q182
RN2202
DTA114ESATP
D181
SPR-325MVW
S181
SKQNAB
POWER
FG107
NC

SYMBOL DIFFERENCE LIST

SYMBOL / MODEL	S120 SPEC	R151	R152	D101 SPEC	JP101	JP102	JP103	S110/S111 S112/S117 S120	R142 R146	R143 R147	R144 R148	CN104	IC101 SPEC	3PV7	3UA6
	REPLAY	3k	0	ZOOM	0	NC	NC	SKQNAB	1k	2k	6.2k	07FM 1.0ST	JP104	NC	0
	E.A.M.	3k	6.2k												
SD-4800-K-TN	ZOOM	1k	0	PROGRE-SSIVE	NC	NC	0								
SD-3800-S-TU															
SD-K710-K-TU	NONE	NC	NC					NC	NC	NC	NC	NC			

Fig. 3-5-3

Front Display, Power Switch Circuit Diagram

① IC101, Pin ③ D-4

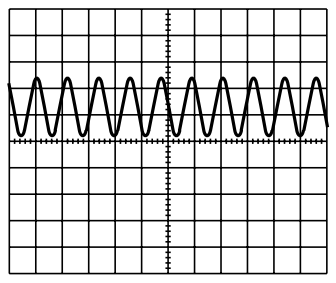

X-OUT

V: 2 V/div
H: 100 ns/div

② IC101, Pin ⑨ D-4

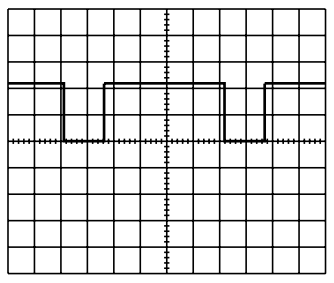

V: 2 V/div
H: 5 ms/div

③ IC101, Pin ⑮ D-5

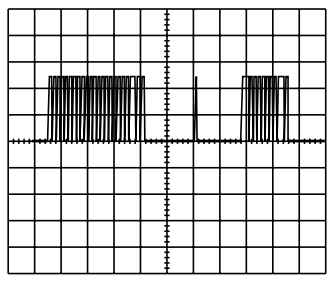

V: 2 V/div
H: 200 ms/div

④ IC101, Pin ⑯ D-5

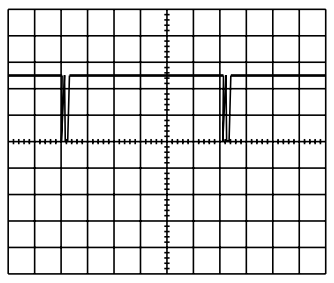

V: 2 V/div
H: 5 ms/div

⑤ IC101, Pin ⑰ D-5

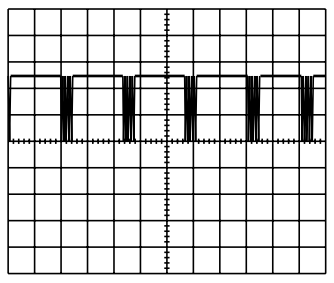

V: 2 V/div
H: 100 μs/div

⑥ IC101, Pin (77) D-4

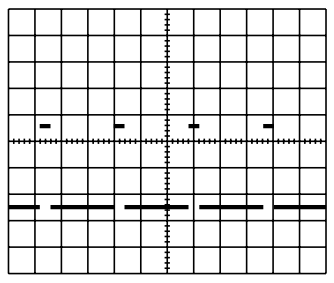

G1

V: 10 V/div
H: 500 μs/div

⑦ IC101, Pin (69) D-4

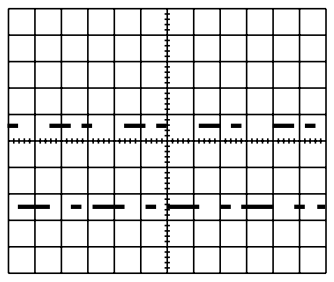

S1

V: 10 V/div
H: 500 μs/div

Fig. 3-5-4

5-3. Main Circuit Diagrams

5-3-1. Main ICs Information

TMP87CH75F

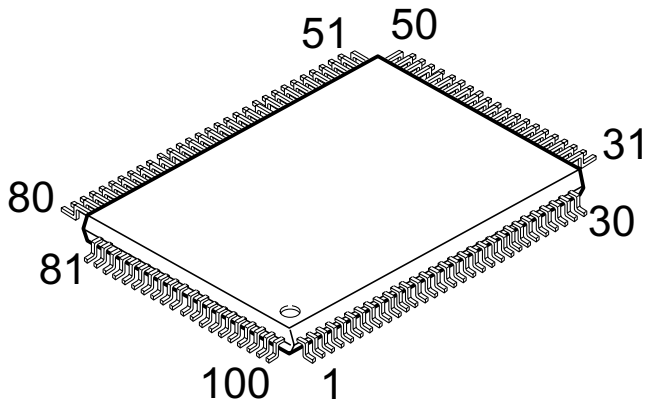
51
50
31
80
30
81
100
1

W986432DH

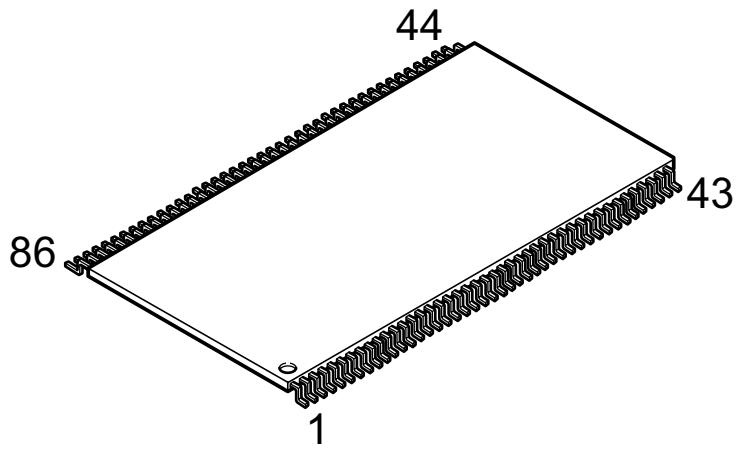

MBM29DL3240BE

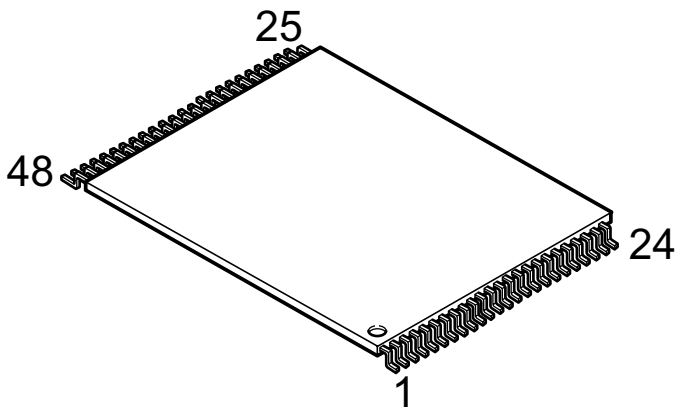

MM1568AJ

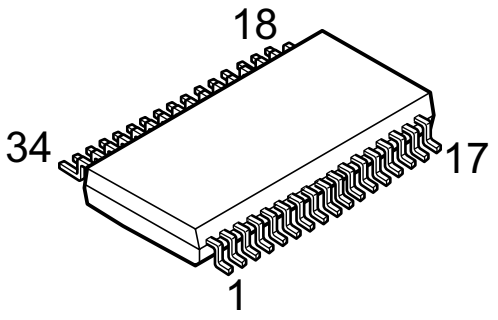

BH7863

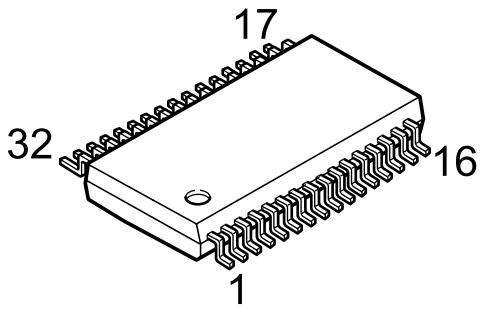

AD1958YRS

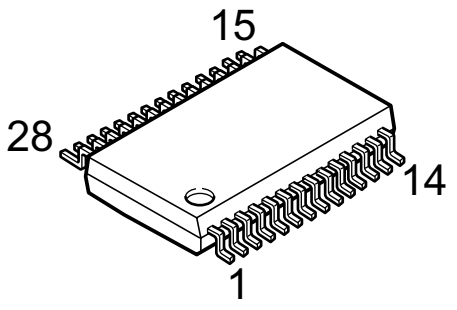

TC74VHCT
244AFT

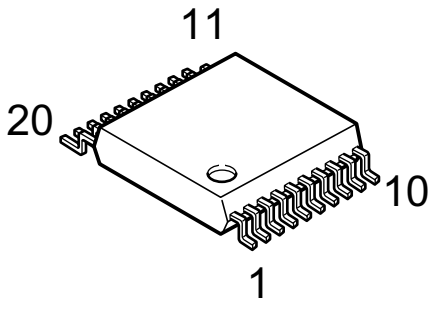

PCM1742

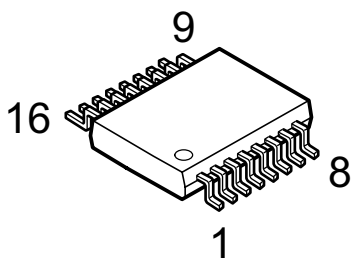

S24C02AFJA



PQ3RD23
PQ05RD11



MPC2948T



5-3-2. Main Circuit Diagram

LASER DRIVE SIGNAL
PICKUP ERROR SIGNAL
PU-HEAD-I/F
IC502
TA1323F
FOCUS ERROR
TRACKING ERROR
FEED MOTOR SERVO SIGNAL
DISC MOTOR SERVO SIGNAL
TRAY CONTROL SIGNAL
TC94A03F
IC401
IC503
DISC-MOTOR-I/F
FOCUS SERVO SIGNAL
TRACKING SERVO SIGNAL
JP301
OPEN:FLASH
CLOSE:DEBUG
IC306
ZR36750
AUDIO SIGNAL L
AUDIO SIGNAL R
CN302
VIDEO-SIGNAL I/F
AUDIO-SIGNAL I/F
CN901
IC902
IC903
IC904
IC905
MM1575A
IC307
S24C02AFJ-TB
IC308
J301
CN601
CN603
FRONT-MPU-I/F
IC301
IC302
IC303
IC304
IC309
IC305
POWER-SUPPLY
CN701

	SD3800	SD4800
CN901	52808-0791	52808-1591
D902	NC	1SS184
D903	NC	1SS184
R913	NC	33
R914	NC	33
R915	NC	33
R916	NC	33
R918	NC	4.7k
R919	NC	4.7k
IC901	NC	TC7SH08FU
C901	NC	FZ0.1u
IC903	NC	PCM1742KE
IC904	NC	PCM1742KE
C904	NC	10u16V
C905	NC	10u16V
C908	NC	10u16V
C909	NC	10u16V
C911	NC	10u16V
C912	NC	10u16V
C922	NC	FZ0.1u
C923	NC	FZ0.1u
C924	NC	FZ0.1u
C925	NC	FZ0.1u
IC308	NC	S24C02AFJ
IC905	NC	MM1575A
C926	NC	FZ0.1u
C927	NC	FZ1u
C928	NC	FZ1u

Fig. 3-5-5

5-3-2. Main Circuit Diagram

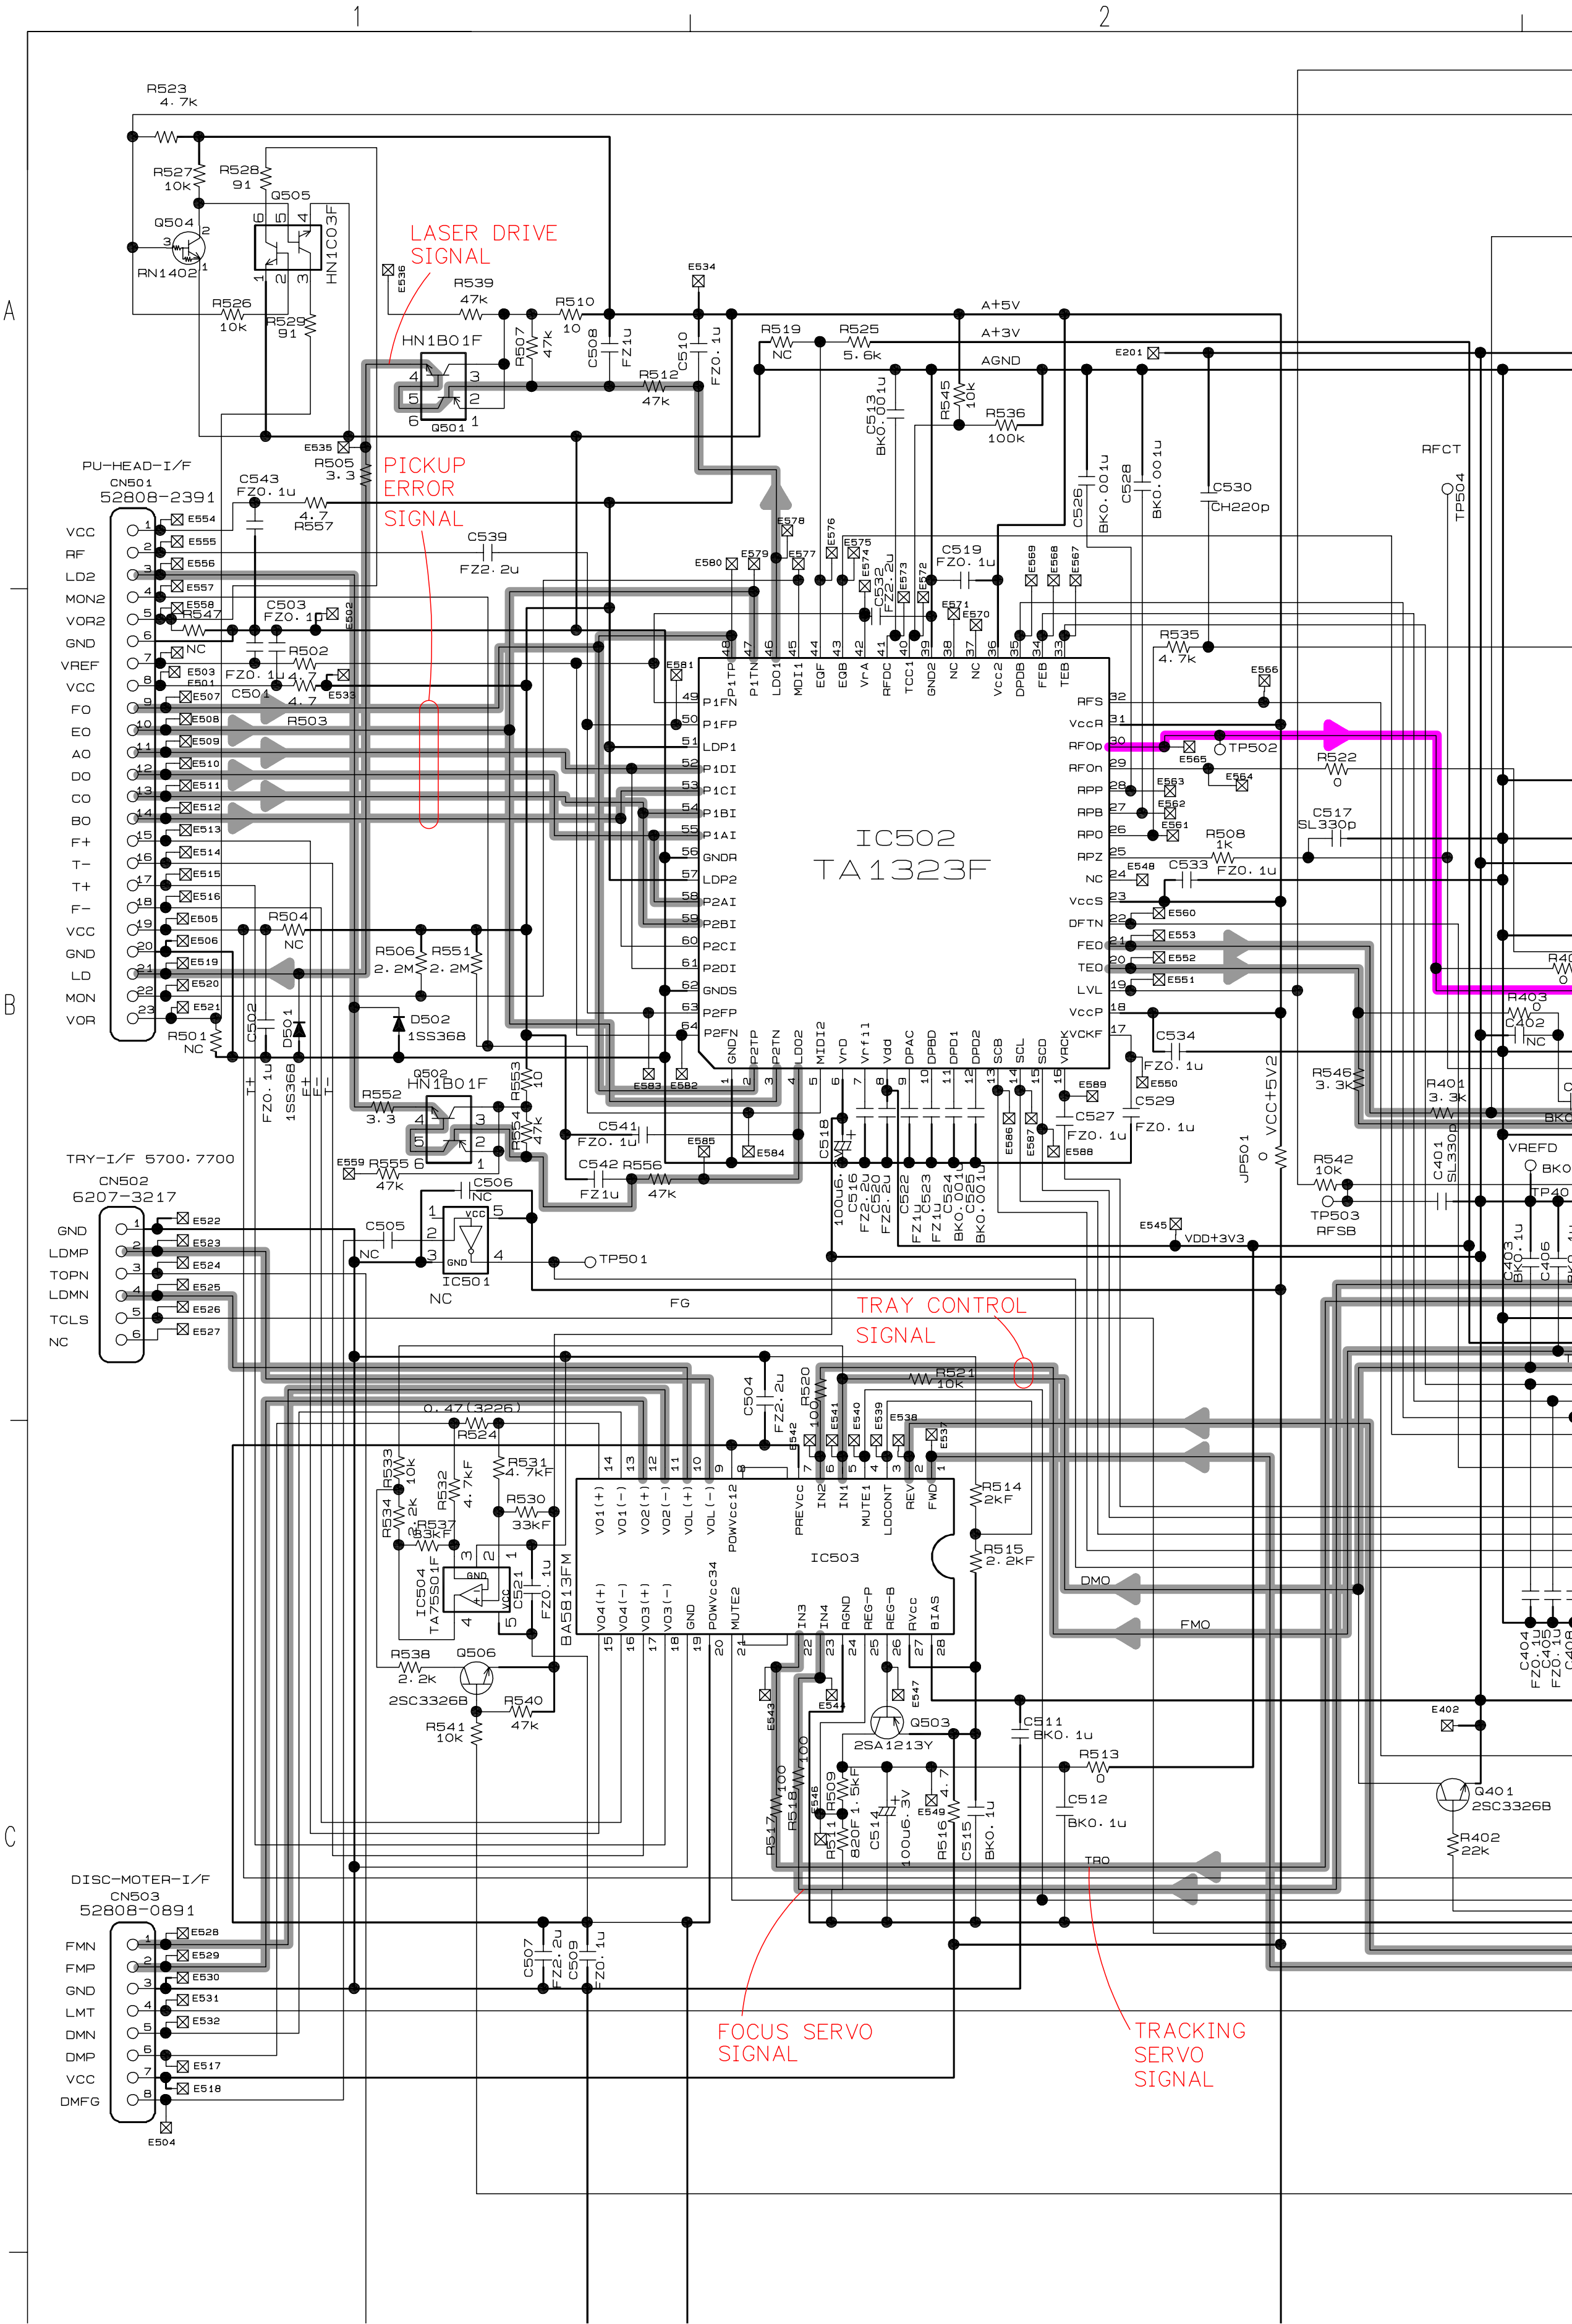
1
2
A
B
C
LASER DRIVE
SIGNAL
PICKUP
ERROR
SIGNAL
TRAY CONTROL
SIGNAL
FOCUS SERVO
SIGNAL
TRACKING
SERVO
SIGNAL
PU-HEAD-I/F
CN501
52808-2391
VCC
RF
LD2
MON2
VOR2
GND
VREF
VCC
FO
EO
AO
DO
CO
BO
F+
T-
T+
F-
VCC
GND
LD
MON
VOR
TRY-I/F 5700.7700
CN502
6207-3217
GND
LDMP
TOPN
LDMN
TCLS
NC
DISC-MOTER-I/F
CN503
52808-0891
FMN
FMP
GND
LMT
DMN
DMP
VCC
DMFG
IC502
TA1323F
IC503
BA5813FM
IC501
IC504
TA75S01F
Q501
HN1B01F
Q502
HN1B01F
Q503
2SA1213Y
Q504
RN1402
Q505
HN1C03F
Q506
2SC3326B
Q401
2SC3326B
D501
1SS368
D502
1SS368
A+5V
A+3V
AGND
VDD+3V3
VCC+5V2
FG
DMO
FMO
TRO
RFCT
TP501
TP502
TP503
TP504
RFSB
VREFD
JP501

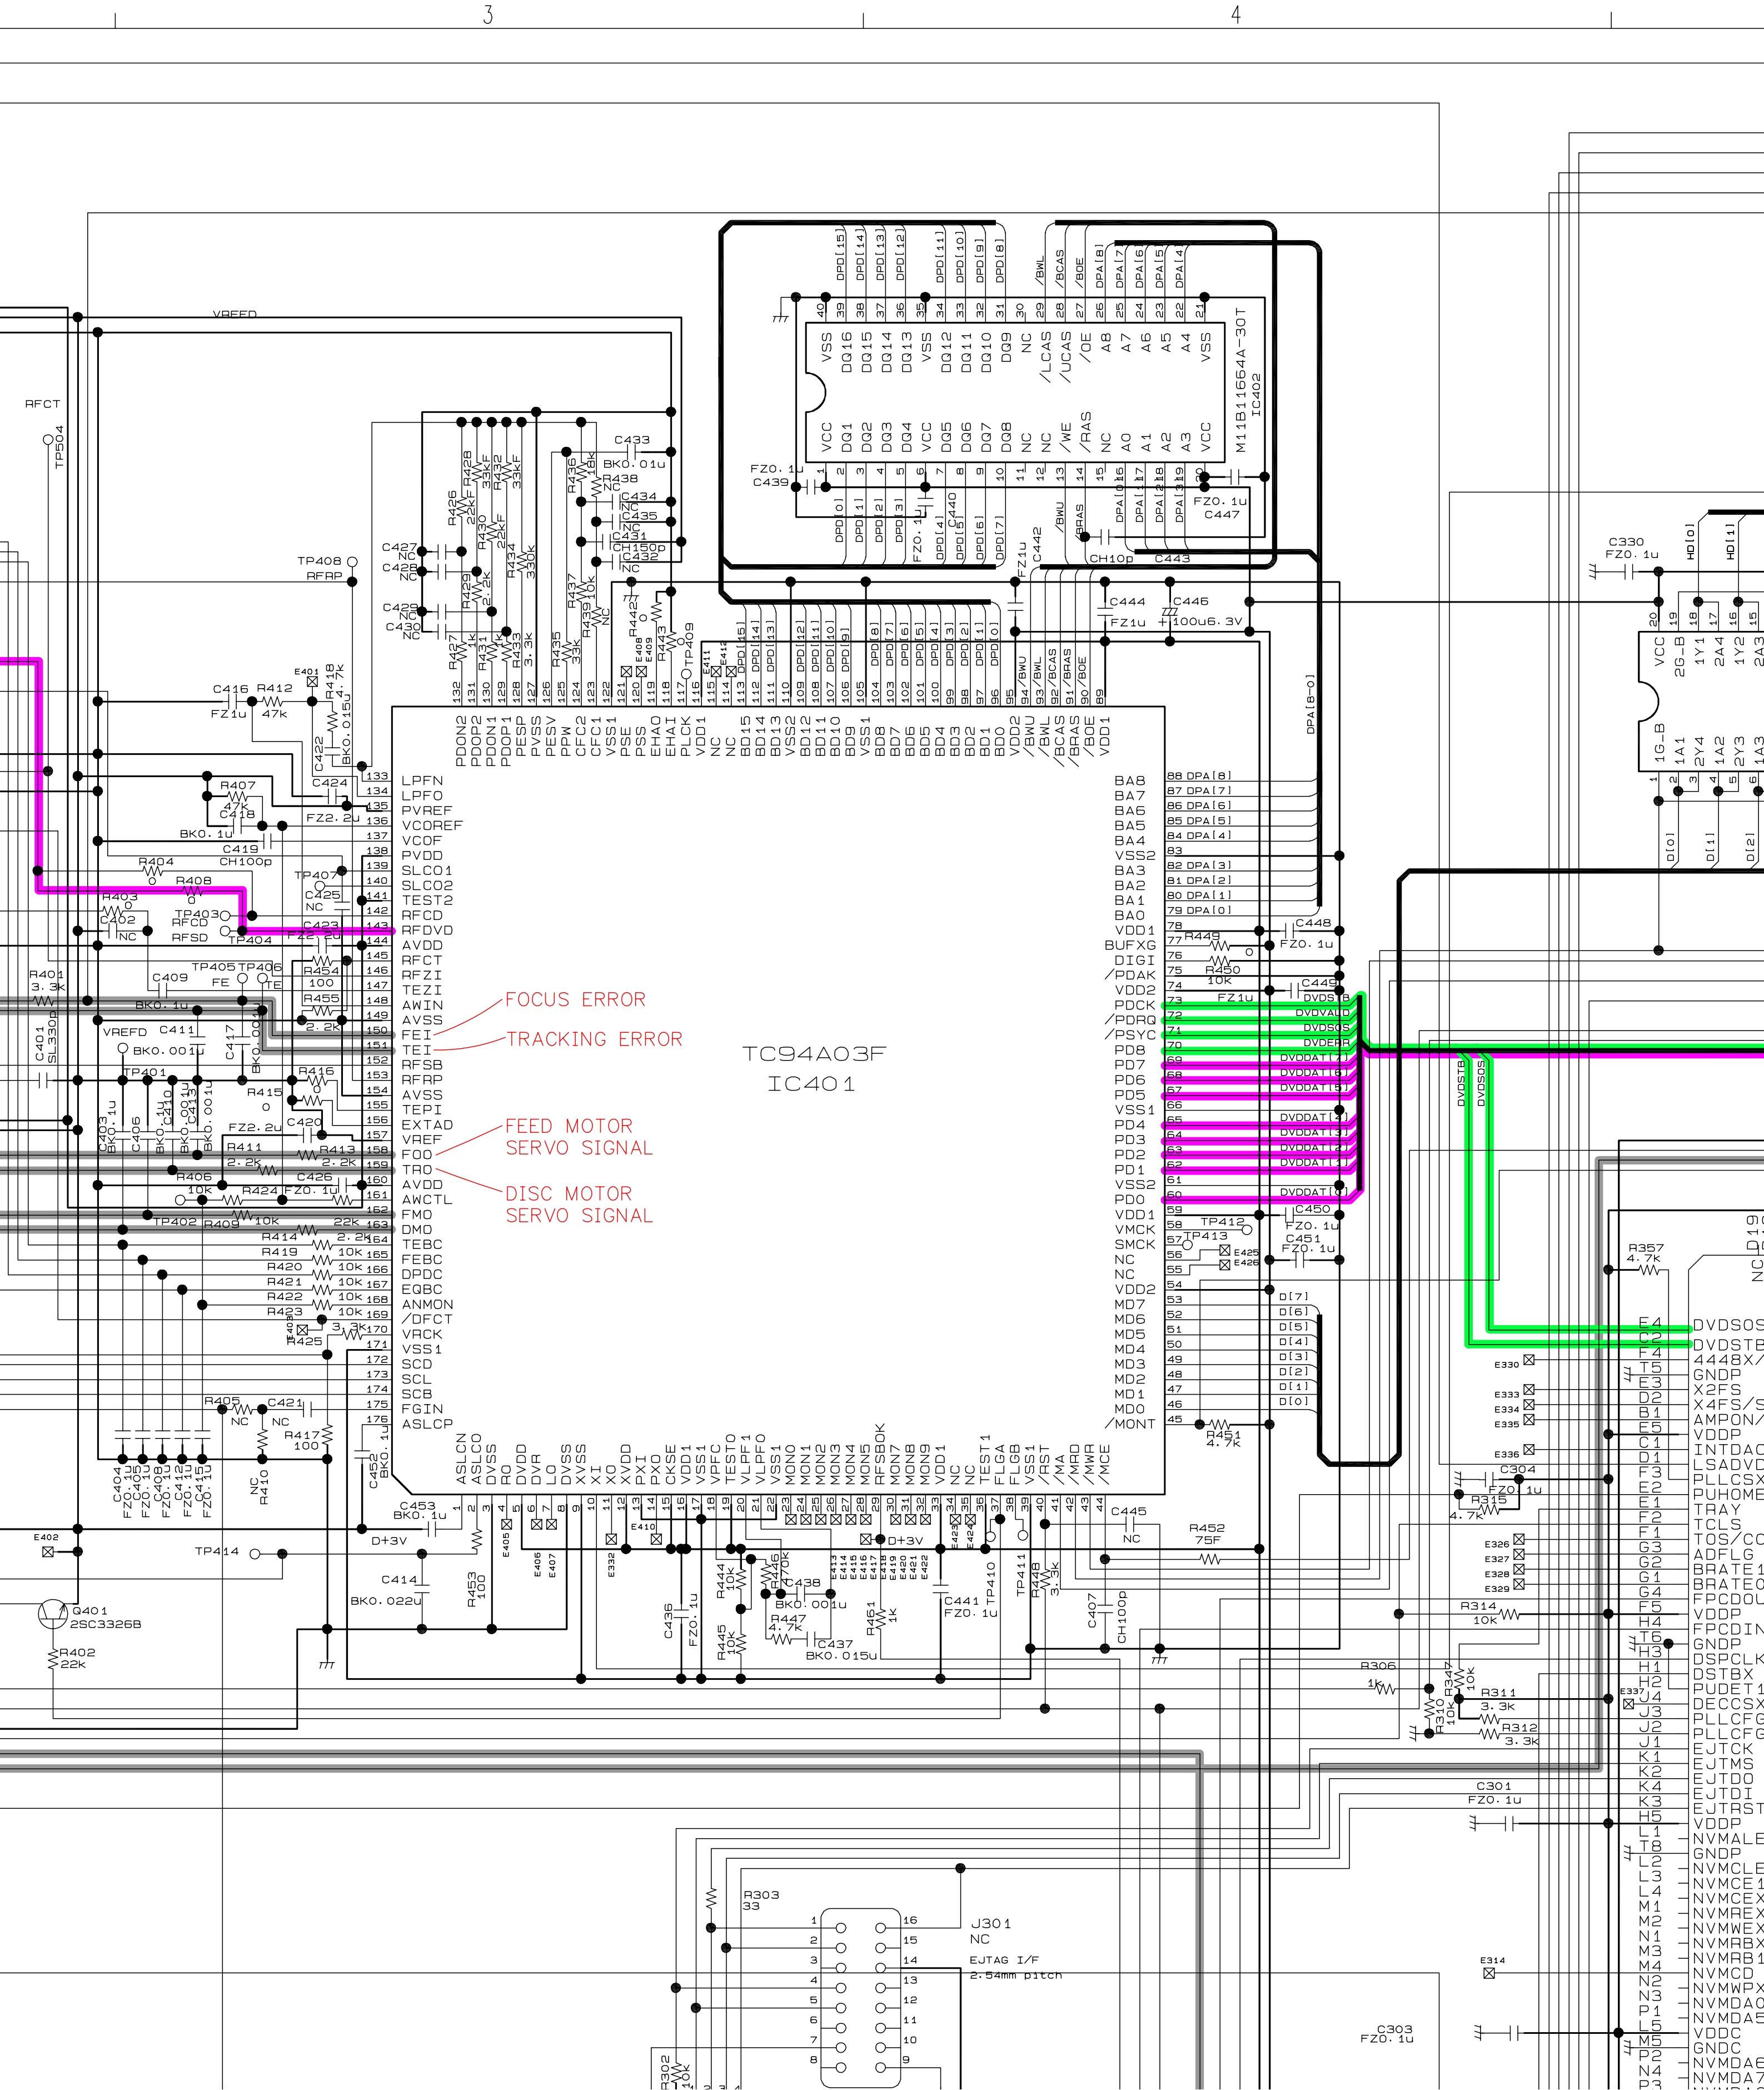
3
4
TC94A03F
IC401
M11B11664A-30T
IC402
J301
NC
EJTAG I/F
2.54mm pitch
Q401
2SC3326B
VREFD
RFCT
TP504
DVDSOS
DVDSTB
DVDVALID
DVDERR
DVDDAT[0]
DVDDAT[1]
DVDDAT[2]
DVDDAT[3]
DVDDAT[4]
DVDDAT[5]
DVDDAT[6]
DVDDAT[7]
DPA[8-0]
D[0]
D[1]
D[2]
D[3]
D[4]
D[5]
D[6]
D[7]

FOCUS ERROR

TRACKING ERROR

FEED MOTOR SERVO SIGNAL

DISC MOTOR SERVO SIGNAL

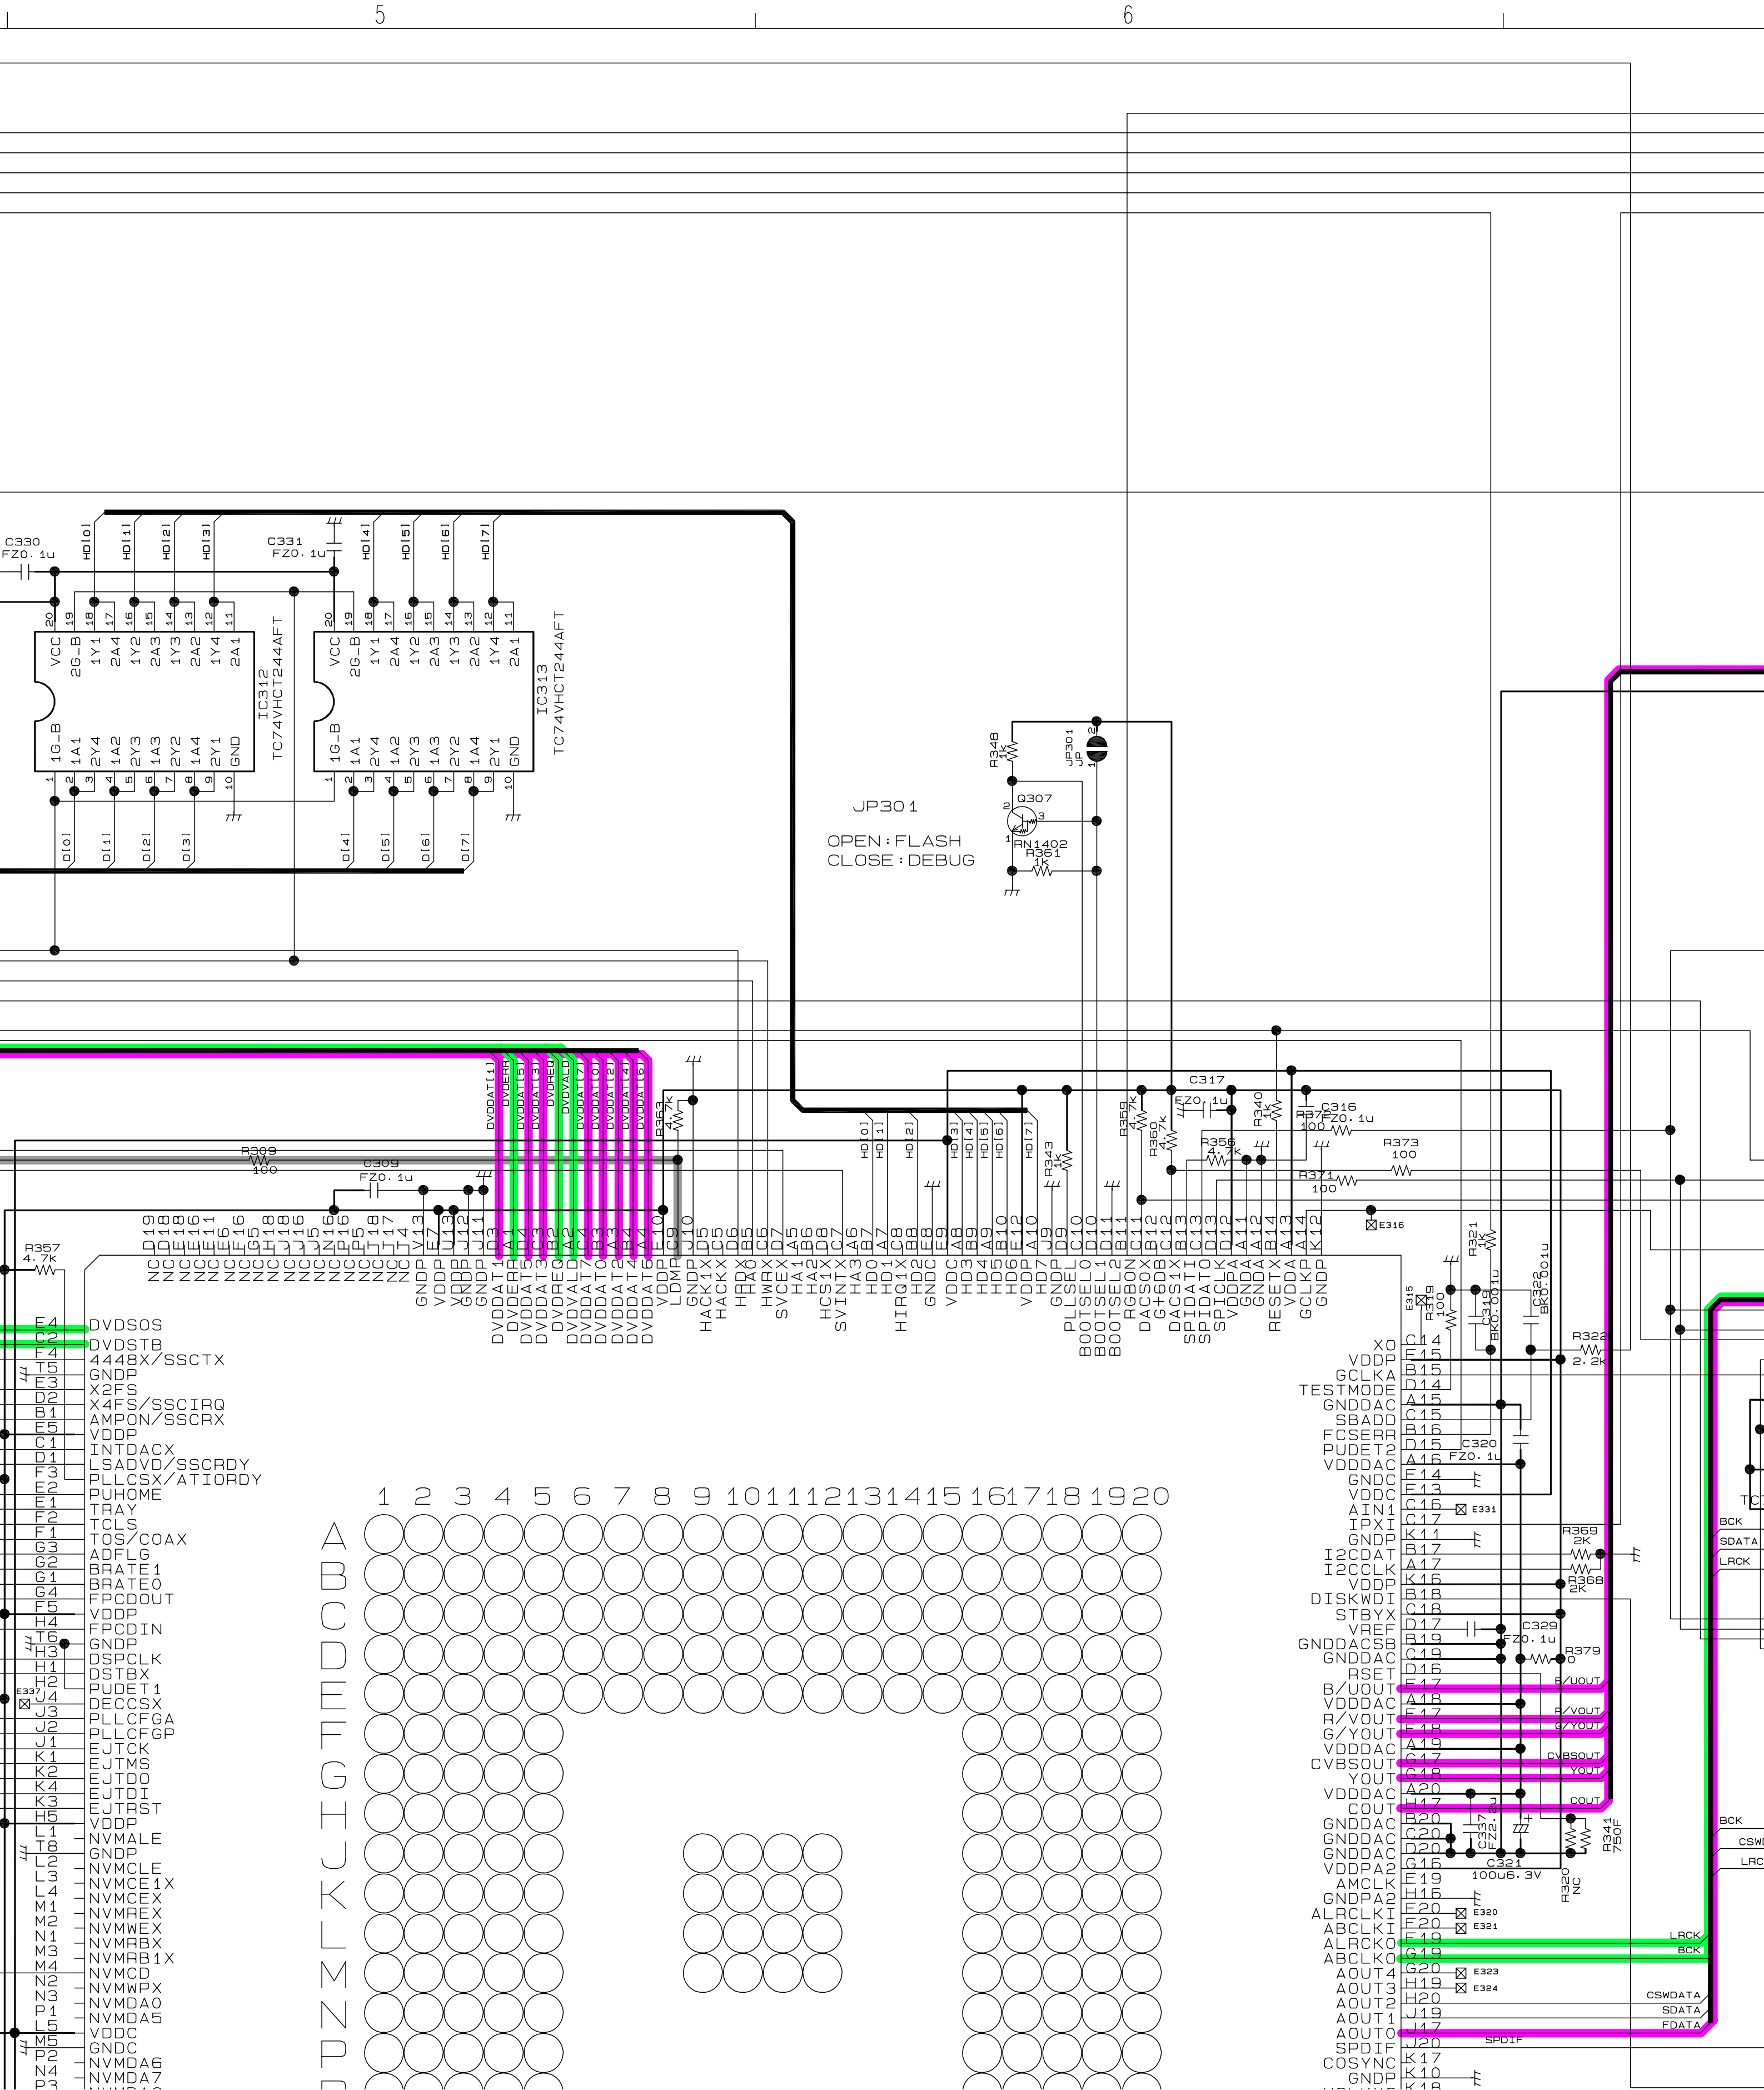
5
6
C330 FZ0.1u
C331 FZ0.1u
HD[0] HD[1] HD[2] HD[3] HD[4] HD[5] HD[6] HD[7]
D[0] D[1] D[2] D[3] D[4] D[5] D[6] D[7]
VCC 2G_B 1Y1 2A4 1Y2 2A3 1Y3 2A2 1Y4 2A1
1G_B 1A1 2Y4 1A2 2Y3 1A3 2Y2 1A4 2Y1 GND
IC312 TC74VHCT244AFT
IC313 TC74VHCT244AFT
R348 1k
JP301 JP
Q307 RN1402
R361 1k
JP301
OPEN : FLASH
CLOSE : DEBUG
C317 FZ0.1u
C316 FZ0.1u
R309 100
C309 FZ0.1u
R357 4.7k
R363 4.7k
R343 1k
R359 4.7k
R360 4.7k
R356 4.7k
R340 1k
R372 100
R373 100
R371 100
E316
E315
R319 100
C319 BK0.001u
R321 1k
C322 BK0.001u
R322 2.2k
C320 FZ0.1u
E331
R369 2K
R368 2K
C329 FZ0.1u
R379 0
C337 FZ2.2u
C321 100u6.3V
R320 NC
R341 750F
E320
E321
E323
E324
E337
D19 D18 E16 E11 E6 F16 G5 H18 J18 J16 J5 N16 P16 P5 T18 T17 J4 NC
V13 GNDP
E7 VDDP
U13 VDDP
J12 GNDP
J11 GNDP
D3 DVDDAT1
A1 DVDERR
D4 DVDDAT5
C3 DVDDAT3
B2 DVDREQ
A2 DVDVALD
C4 DVDDAT7
B3 DVDDAT0
A3 DVDDAT2
B4 DVDDAT4
A4 DVDDAT6
E10 VDDP
C9 LDMP
J10 GNDP
D5 HACK1X
C5 HACKX
D6 HRDX
B5 HA0
C6 HWRX
D7 SVCEX
A5 HA1
B6 HA2
D8 HCS1X
C7 SVINTX
A6 HA3
B7 HD0
A7 HD1
C8 HIRQ1X
B8 HD2
E8 GNDC
E9 VDDC
A8 HD3
B9 HD4
A9 HD5
B10 HD6
E12 VDDP
A10 HD7
J9 GNDP
D9 PLLSEL0
C10 BOOTSEL0
D10 BOOTSEL1
D11 BOOTSEL2
B11 RGBON
C11 DACS0X
B12 G+6DB
C12 DACS1X
B13 SPIDATI
C13 SPIDATO
D13 SPICLK
D12 VDDPA
A11 GNDA
A12 GNDA
B14 RESETX
A13 VDDA
A14 GCLKP
K12 GNDP
E4 DVDSOS
C2 DVDSTB
F4 4448X/SSCTX
T5 GNDP
E3 X2FS
D2 X4FS/SSCIRQ
B1 AMPON/SSCRX
E5 VDDP
C1 INTDACX
D1 LSADVD/SSCRDY
F3 PLLCSX/ATIORDY
E2 PUHOME
E1 TRAY
F2 TCLS
F1 TOS/COAX
G3 ADFLG
G2 BRATE1
G1 BRATE0
G4 FPCDOUT
F5 VDDP
H4 FPCDIN
T6 GNDP
H3 DSPCLK
H1 DSTBX
H2 PUDET1
J4 DECCSX
J3 PLLCFGA
J2 PLLCFGP
J1 EJTCK
K1 EJTMS
K2 EJTDO
K4 EJTDI
K3 EJTRST
H5 VDDP
L1 NVMALE
T8 GNDP
L2 NVMCLE
L3 NVMCE1X
L4 NVMCEX
M2 NVMREX
N1 NVMWEX
M3 NVMRBX
M4 NVMRB1X
N2 NVMCD
N3 NVMWPX
P1 NVMDA0
L5 NVMDA5
M5 VDDC
P2 GNDC
N4 NVMDA6
P3 NVMDA7
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20
A B C D E F G H J K L M N P R
XO C14
VDDP E15
GCLKA B15
TESTMODE D14
GNDDAC A15
SBADD C15
FCSERR B16
PUDET2 D15
VDDDAC A16
GNDC F14
VDDC F13
AIN1 C16
IPXI C17
GNDP K11
I2CDAT B17
I2CCLK A17
VDDP K16
DISKWDI B18
STBYX C18
VREF D17
GNDDACSB B19
GNDDAC C19
RSET D16
B/UOUT E17
VDDDAC A18
R/VOUT F17
G/YOUT F18
VDDDAC A19
CVBSOUT G17
YOUT G18
VDDDAC A20
COUT H17
GNDDAC B20
GNDDAC C20
GNDDAC D20
VDDPA2 G16
AMCLK E19
GNDPA2 H16
ALRCLKI E20
ABCLKI F20
ALRCKO F19
ABCLKO G19
AOUT4 G20
AOUT3 H19
AOUT2 H20
AOUT1 J19
AOUT0 J17
SPDIF J20
COSYNC K17
GNDP K10
B/UOUT
R/VOUT
G/YOUT
CVBSOUT
YOUT
COUT
LRCK
BCK
CSWDATA
SDATA
FDATA
SPDIF
BCK
SDATA
LRCK
BCK
CSWD
LRC
TC

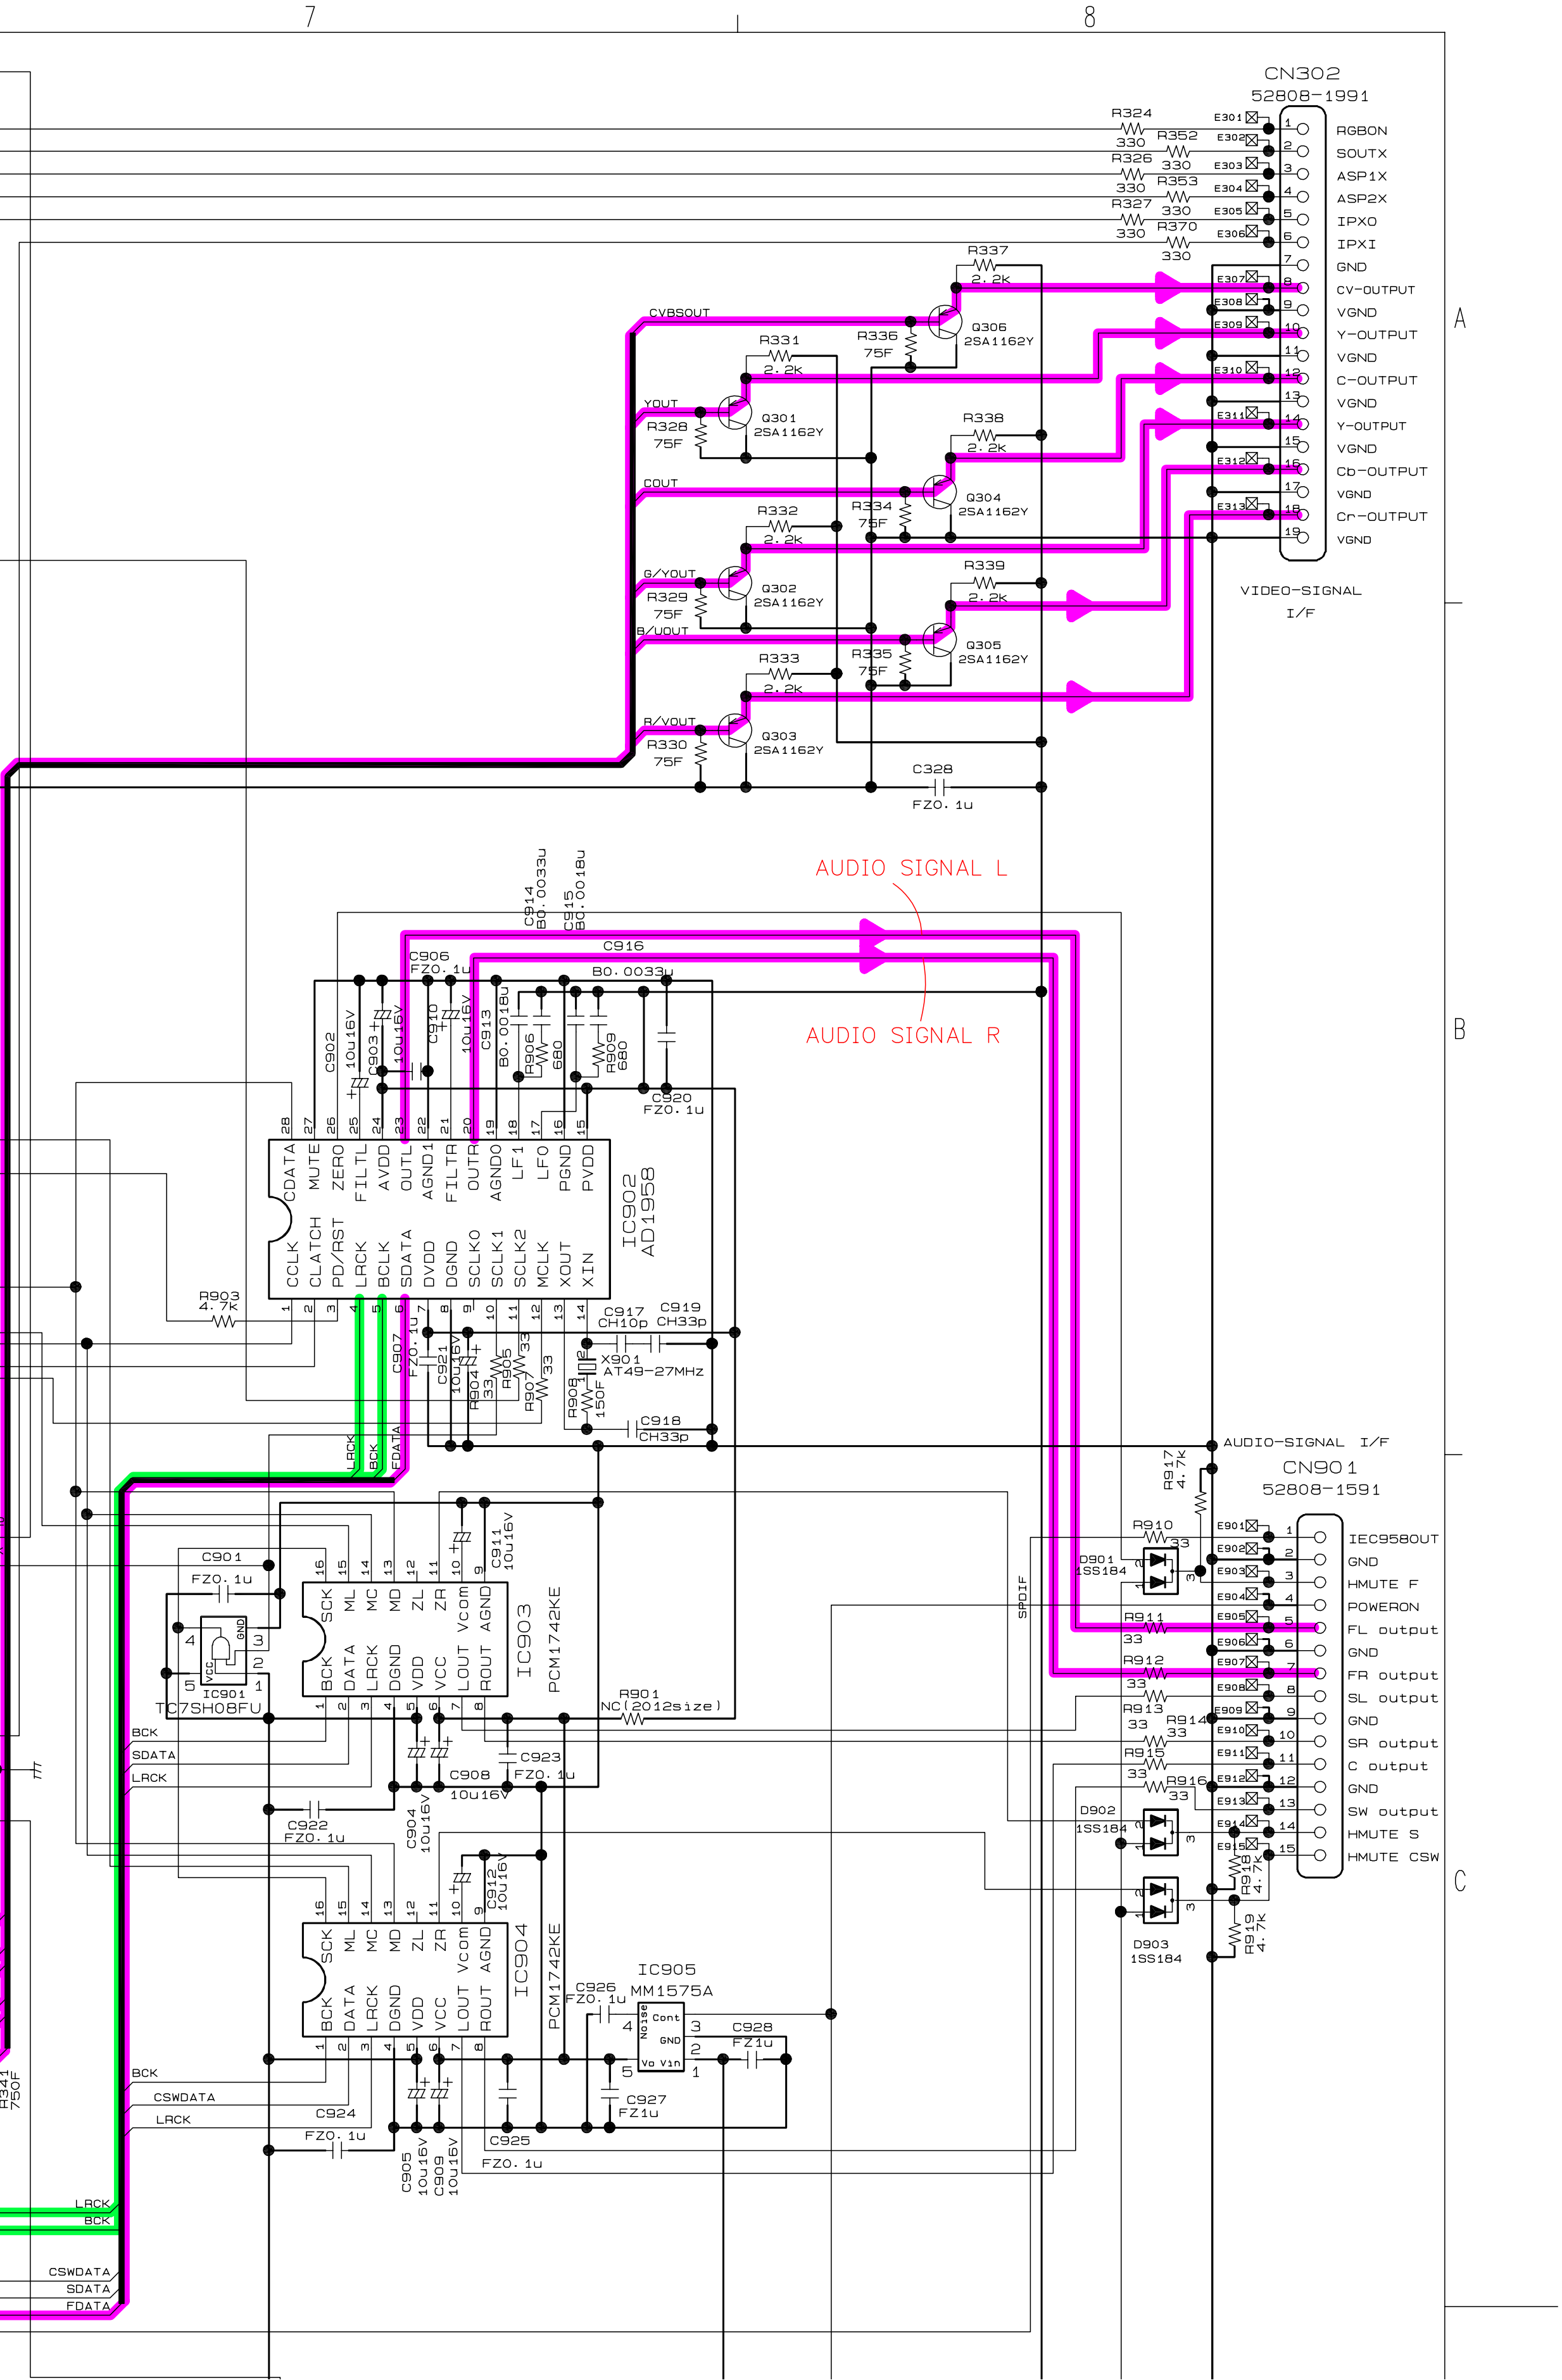

7
8
A
B
C
CN302
52808-1991
RGBON
SOUTX
ASP1X
ASP2X
IPXO
IPXI
GND
CV-OUTPUT
VGND
Y-OUTPUT
C-OUTPUT
Cb-OUTPUT
Cr-OUTPUT
VIDEO-SIGNAL I/F
CVBSOUT
YOUT
COUT
G/YOUT
B/UOUT
R/VOUT
Q301 2SA1162Y
Q302 2SA1162Y
Q303 2SA1162Y
Q304 2SA1162Y
Q305 2SA1162Y
Q306 2SA1162Y
C328 FZ0.1u
AUDIO SIGNAL L
AUDIO SIGNAL R
IC902 AD1958
CDATA
MUTE
ZERO
FILTL
AVDD
OUTL
AGND1
FILTR
OUTR
AGND0
LF1
LF0
PGND
PVDD
CCLK
CLATCH
PD/RST
LRCK
BCLK
SDATA
DVDD
DGND
SCLK0
SCLK1
SCLK2
MCLK
XOUT
XIN
X901 AT49-27MHz
R903 4.7k
IC903 PCM1742KE
IC904 PCM1742KE
SCK
ML
MC
MD
ZL
ZR
Vcom
AGND
BCK
DATA
LRCK
DGND
VDD
VCC
LOUT
ROUT
IC901 TC7SH08FU
IC905 MM1575A
Cont
Noise
GND
Vo
Vin
R901 NC(2012size)
SPDIF
AUDIO-SIGNAL I/F
CN901
52808-1591
IEC958OUT
GND
HMUTE F
POWERON
FL output
FR output
SL output
SR output
C output
SW output
HMUTE S
HMUTE CSW
D901 1SS184
D902 1SS184
D903 1SS184
R917 4.7k
R918 4.7k
R919 4.7k
BCK
SDATA
LRCK
CSWDATA
FDATA
R341 750F

D

	SD3800	SD4800
CN901	52808-0791	52808-1591
D902	NC	1SS184
D903	NC	1SS184
R913	NC	33
R914	NC	33
R915	NC	33
R916	NC	33
R918	NC	4.7k
R919	NC	4.7k
IC901	NC	TC7SH08FU
C901	NC	FZ0.1u
IC903	NC	PCM1742KE
IC904	NC	PCM1742KE
C904	NC	10u16V
C905	NC	10u16V
C908	NC	10u16V
C909	NC	10u16V
C911	NC	10u16V
C912	NC	10u16V
C922	NC	FZ0.1u
C923	NC	FZ0.1u
C924	NC	FZ0.1u
C925	NC	FZ0.1u
IC308	NC	S24C02AFJ
IC905	NC	MM1575A
C926	NC	FZ0.1u
C927	NC	FZ1u
C928	NC	FZ1u

E

F

1

2

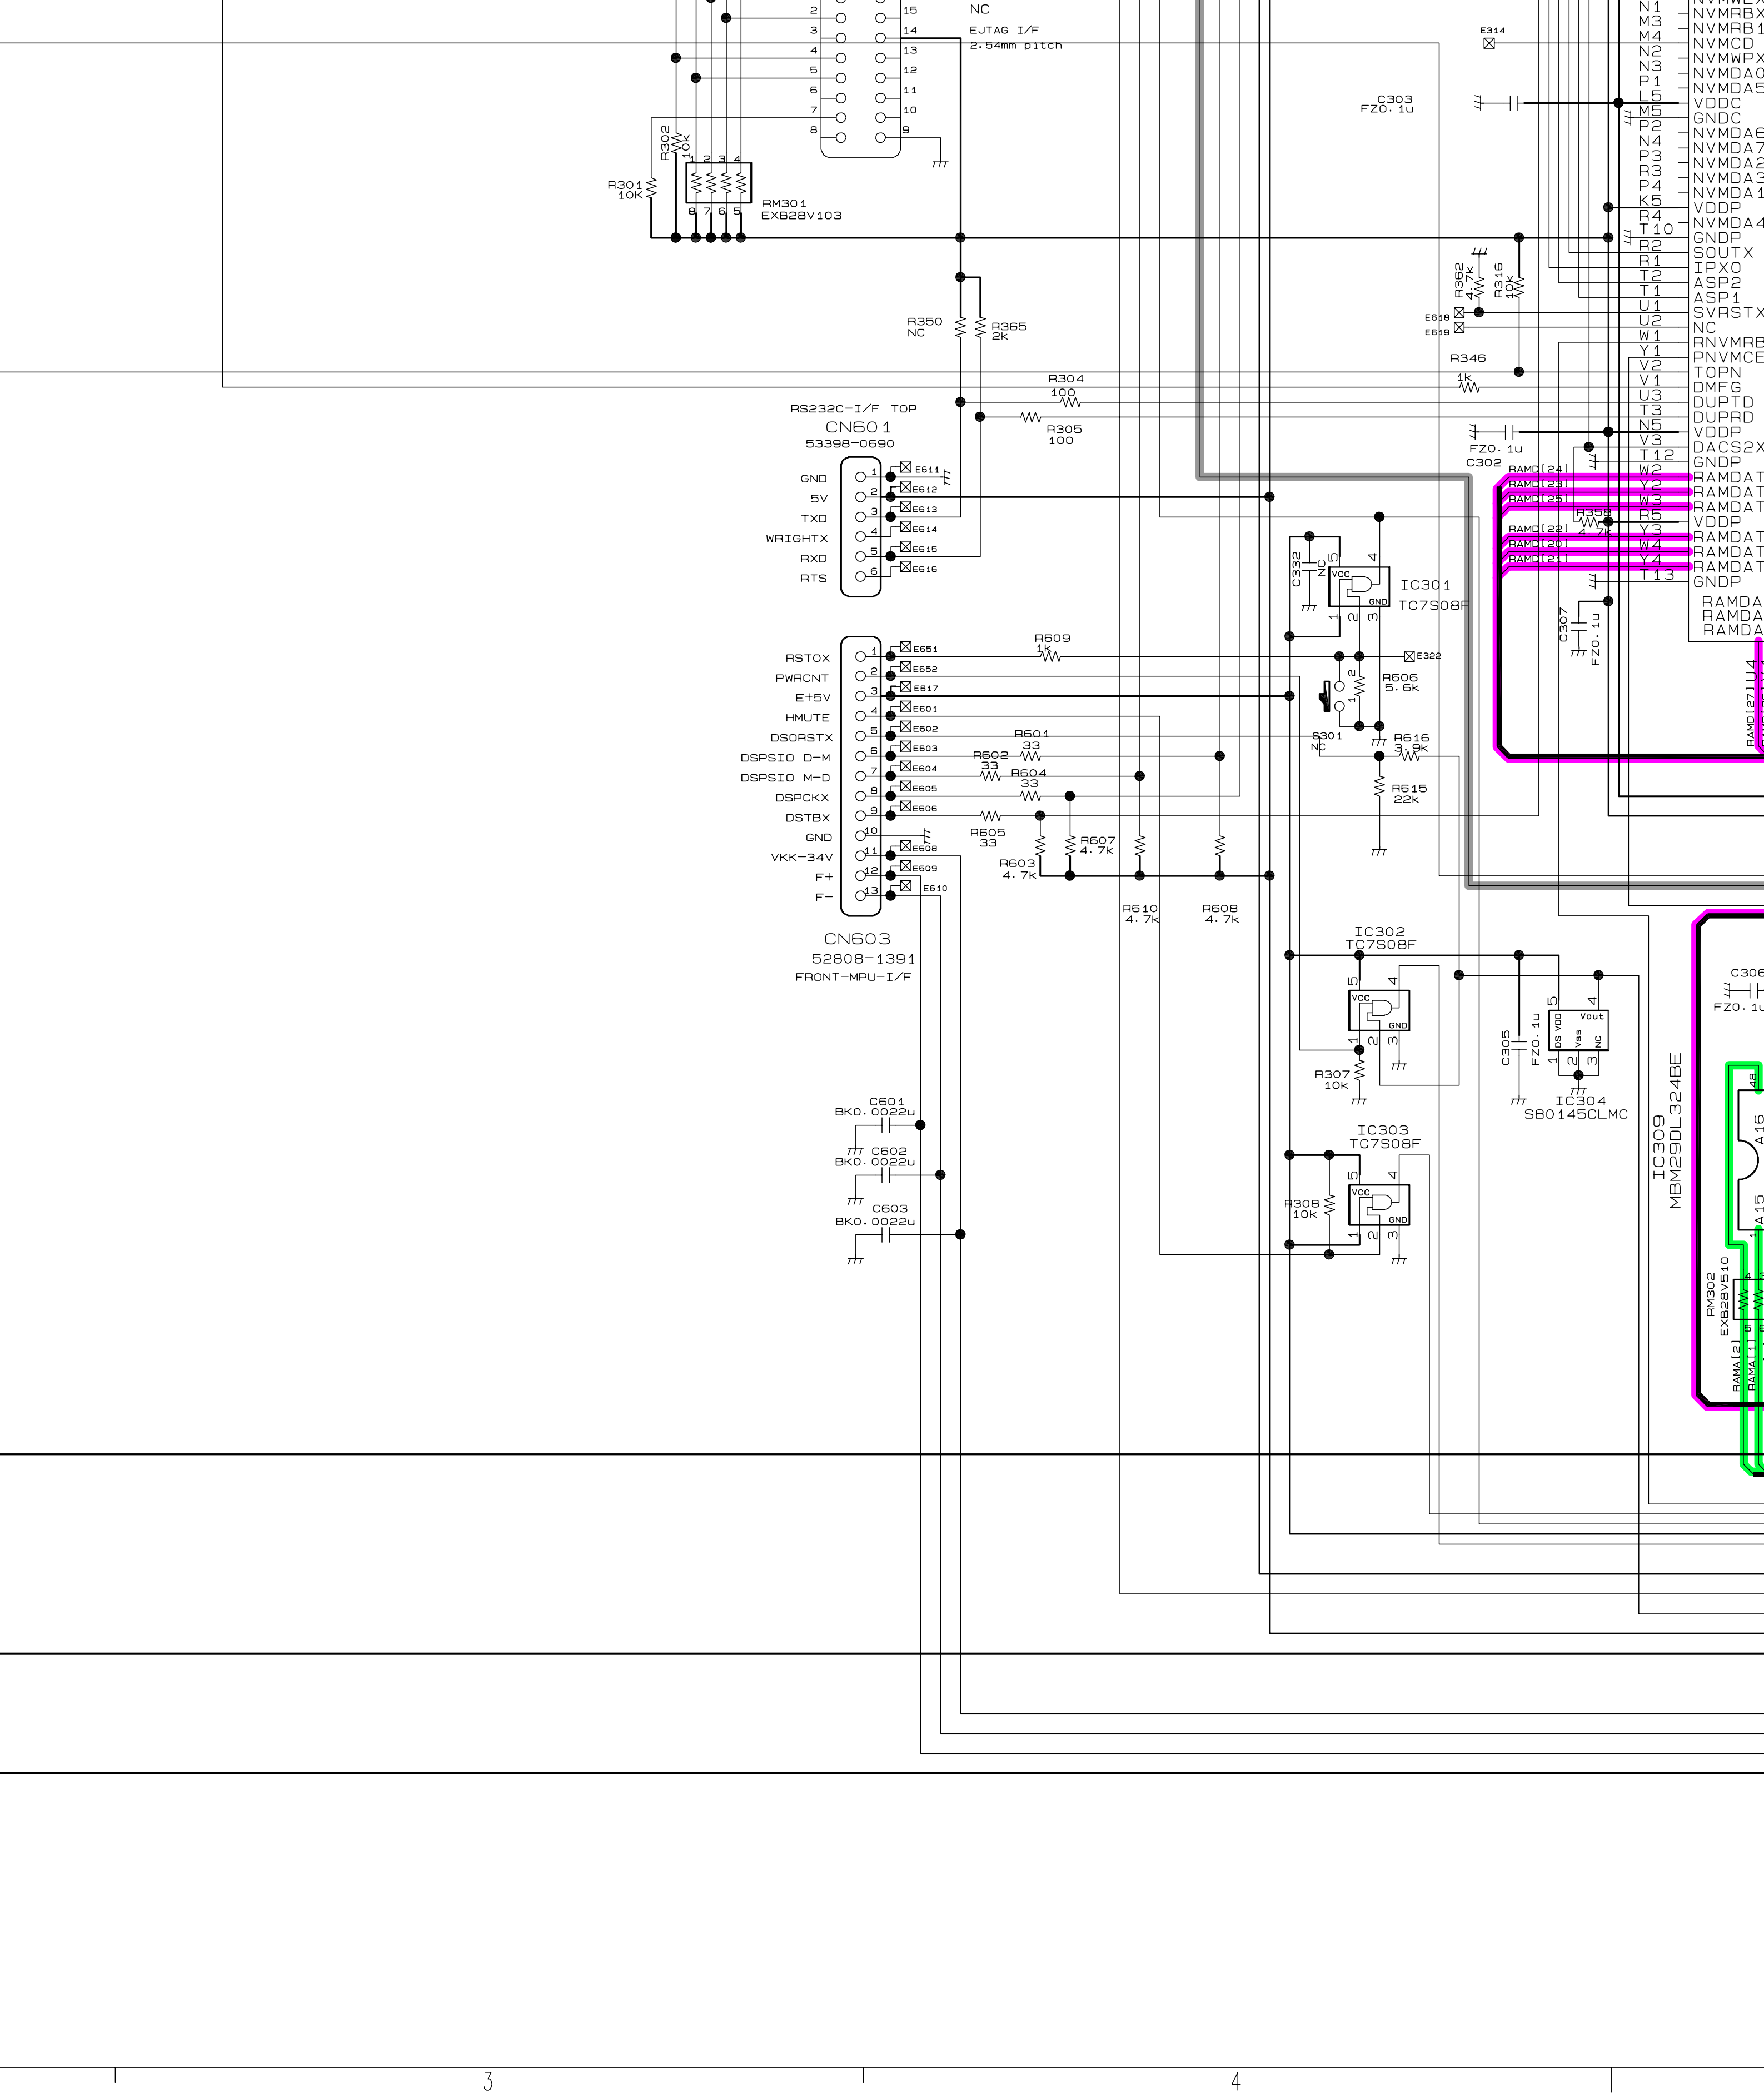
NC
EJTAG I/F
2.54mm pitch
R302 10k
R301 10K
RM301 EXB28V103
R350 NC
R365 2k
R304 100
R305 100
RS232C-I/F TOP
CN601
53398-0690
GND
5V
TXD
WRIGHTX
RXD
RTS
E611
E612
E613
E614
E615
E616
RSTOX
PWRCNT
E+5V
HMUTE
DSORSTX
DSPSIO D-M
DSPSIO M-D
DSPCKX
DSTBX
GND
VKK-34V
F+
F-
E651
E652
E617
E601
E602
E603
E604
E605
E606
E608
E609
E610
R609 1k
R601 33
R602 33
R604 33
R605 33
R603 4.7k
R607 4.7k
R610 4.7k
R608 4.7k
CN603
52808-1391
FRONT-MPU-I/F
C601 BK0.0022u
C602 BK0.0022u
C603 BK0.0022u
C303 FZ0.1u
C302 FZ0.1u
E314
E618
E619
R362 4.7k
R316 10k
R346 1k
C332 NC
IC301 TC7S08F
VCC GND
E322
R606 5.6k
S301 NC
R616 3.9k
R615 22k
C307 FZ0.1u
R358 4.7k
IC302 TC7S08F
R307 10k
C305 FZ0.1u
IC304 S80145CLMC
DS VDD Vout Vss NC
IC303 TC7S08F
R308 10k
IC309 MBM29DL324BE
C306 FZ0.1u
A16
A15
RM302 EXB28V510
RAMA[2]
RAMA[1]
N1 NVMRE
M3 NVMRBX
M4 NVMRB1
N2 NVMCD
N3 NVMWPX
P1 NVMDA0
L5 NVMDA5
M5 VDDC
P2 GNDC
N4 NVMDA6
P3 NVMDA7
R3 NVMDA2
P4 NVMDA3
K5 NVMDA1
R4 VDDP
T10 NVMDA4
R2 GNDP
R1 SOUTX
T2 IPX0
T1 ASP2
U1 ASP1
U2 SVRSTX
W1 NC
Y1 RNVMRB
V2 PNVMCE
V1 TOPN
U3 DMFG
T3 DUPTD
N5 DUPRD
V3 VDDP
T12 DACS2X
W2 GNDP
Y2 RAMDAT
W3 RAMDAT
R5 RAMDAT
Y3 VDDP
W4 RAMDAT
Y4 RAMDAT
T13 RAMDAT
GNDP
RAMDA
RAMDA
RAMDA
RAMD[24]
RAMD[23]
RAMD[25]
RAMD[22]
RAMD[20]
RAMD[21]
RAMD[27] U4
3
4

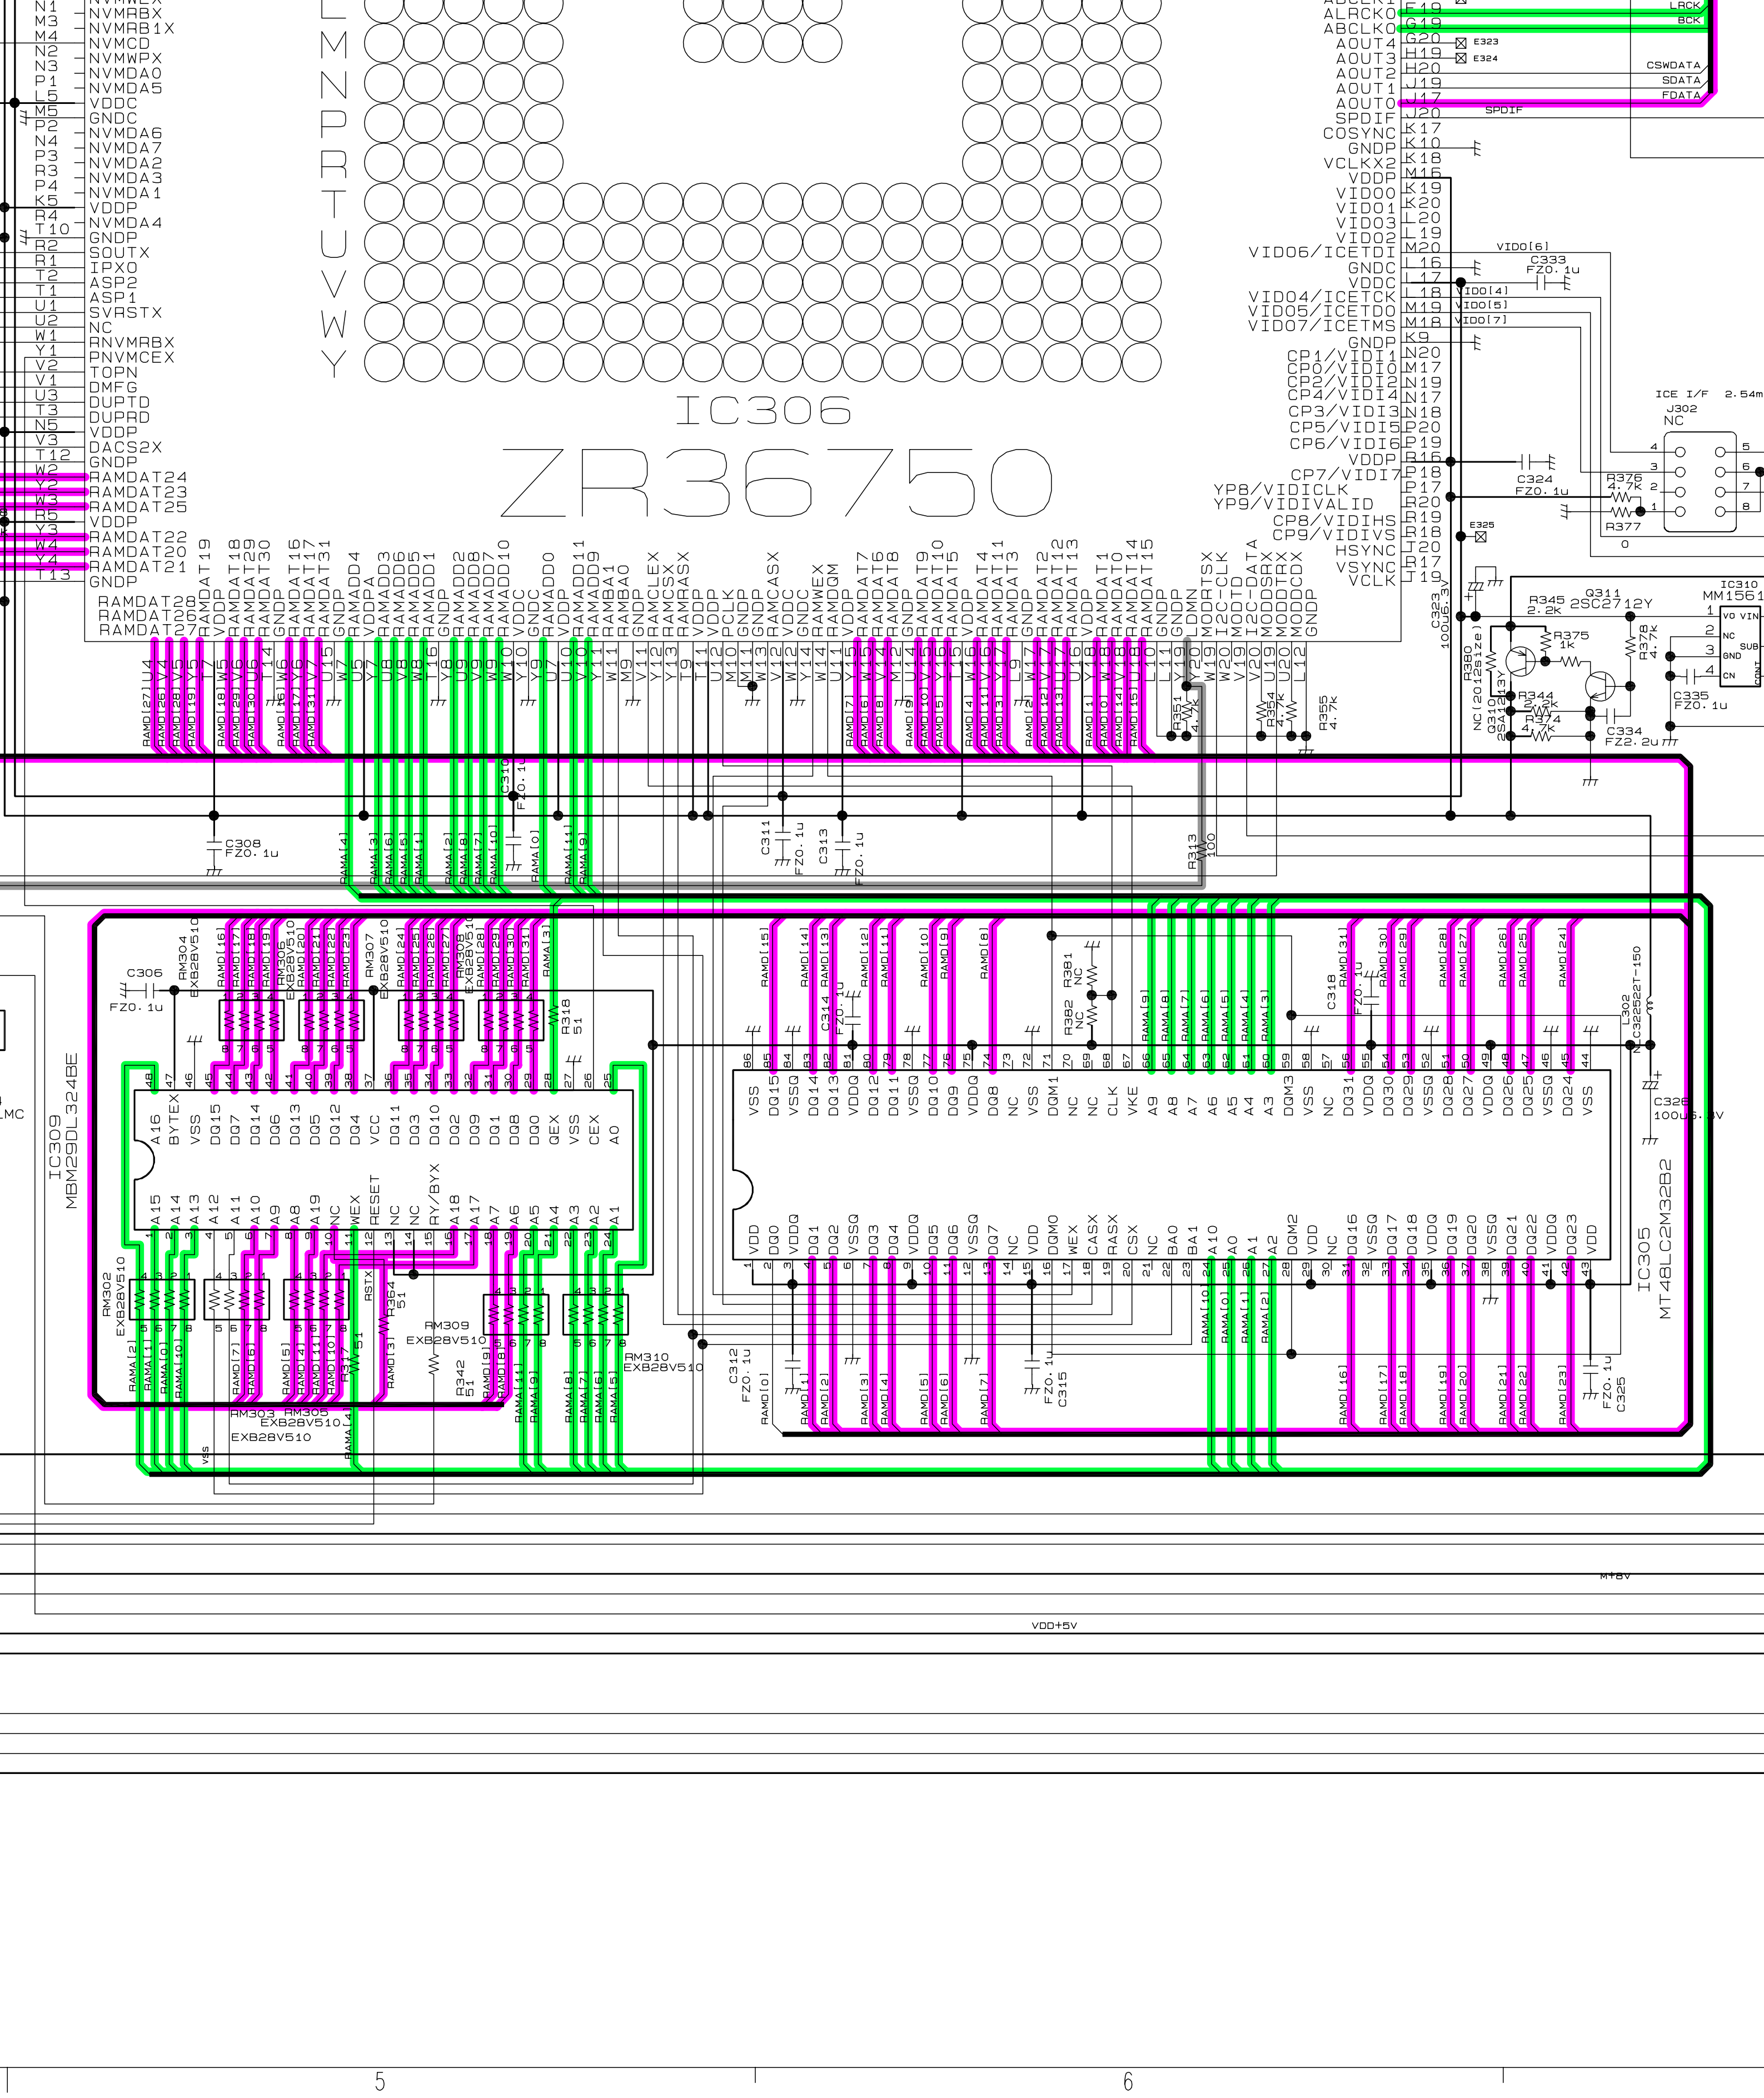
IC306
ZR36750
IC305
MT48LC2M32B2
IC309
MBM29DL324BE
IC310
MM1561
ICE I/F
J302
NC
Q311
2SC2712Y
Q310
2SA1213Y
L302
C3225ZZT-150
RM302 EXB28V510
RM303 EXB28V510
RM304 EXB28V510
RM305 EXB28V510
RM306 EXB28V510
RM307 EXB28V510
RM308 EXB28V510
RM309 EXB28V510
RM310 EXB28V510
R317 51
R318 51
R342 51
R364 51
R313 100
R345 2.2K
R375 1K
R376 4.7K
R377 0
R378 4.7K
R380 NC (2012size)
R381 NC
R382 NC
R344 2.2K
R374 4.7K
R351 4.7K
R354 4.7K
R355 4.7K
C306 FZ0.1u
C308 FZ0.1u
C310 FZ0.1u
C311 FZ0.1u
C312 FZ0.1u
C313 FZ0.1u
C314 FZ0.1u
C315 FZ0.1u
C318 FZ0.1u
C323 100u6.3V
C324 FZ0.1u
C325 FZ0.1u
C326 100u6.3V
C333 FZ0.1u
C334 FZ2.2u
C335 FZ0.1u
E323
E324
E325
LRCK
BCK
CSWDATA
SDATA
FDATA
SPDIF
VIDO[4]
VIDO[5]
VIDO[6]
VIDO[7]
M+8V
VDD+5V
5
6

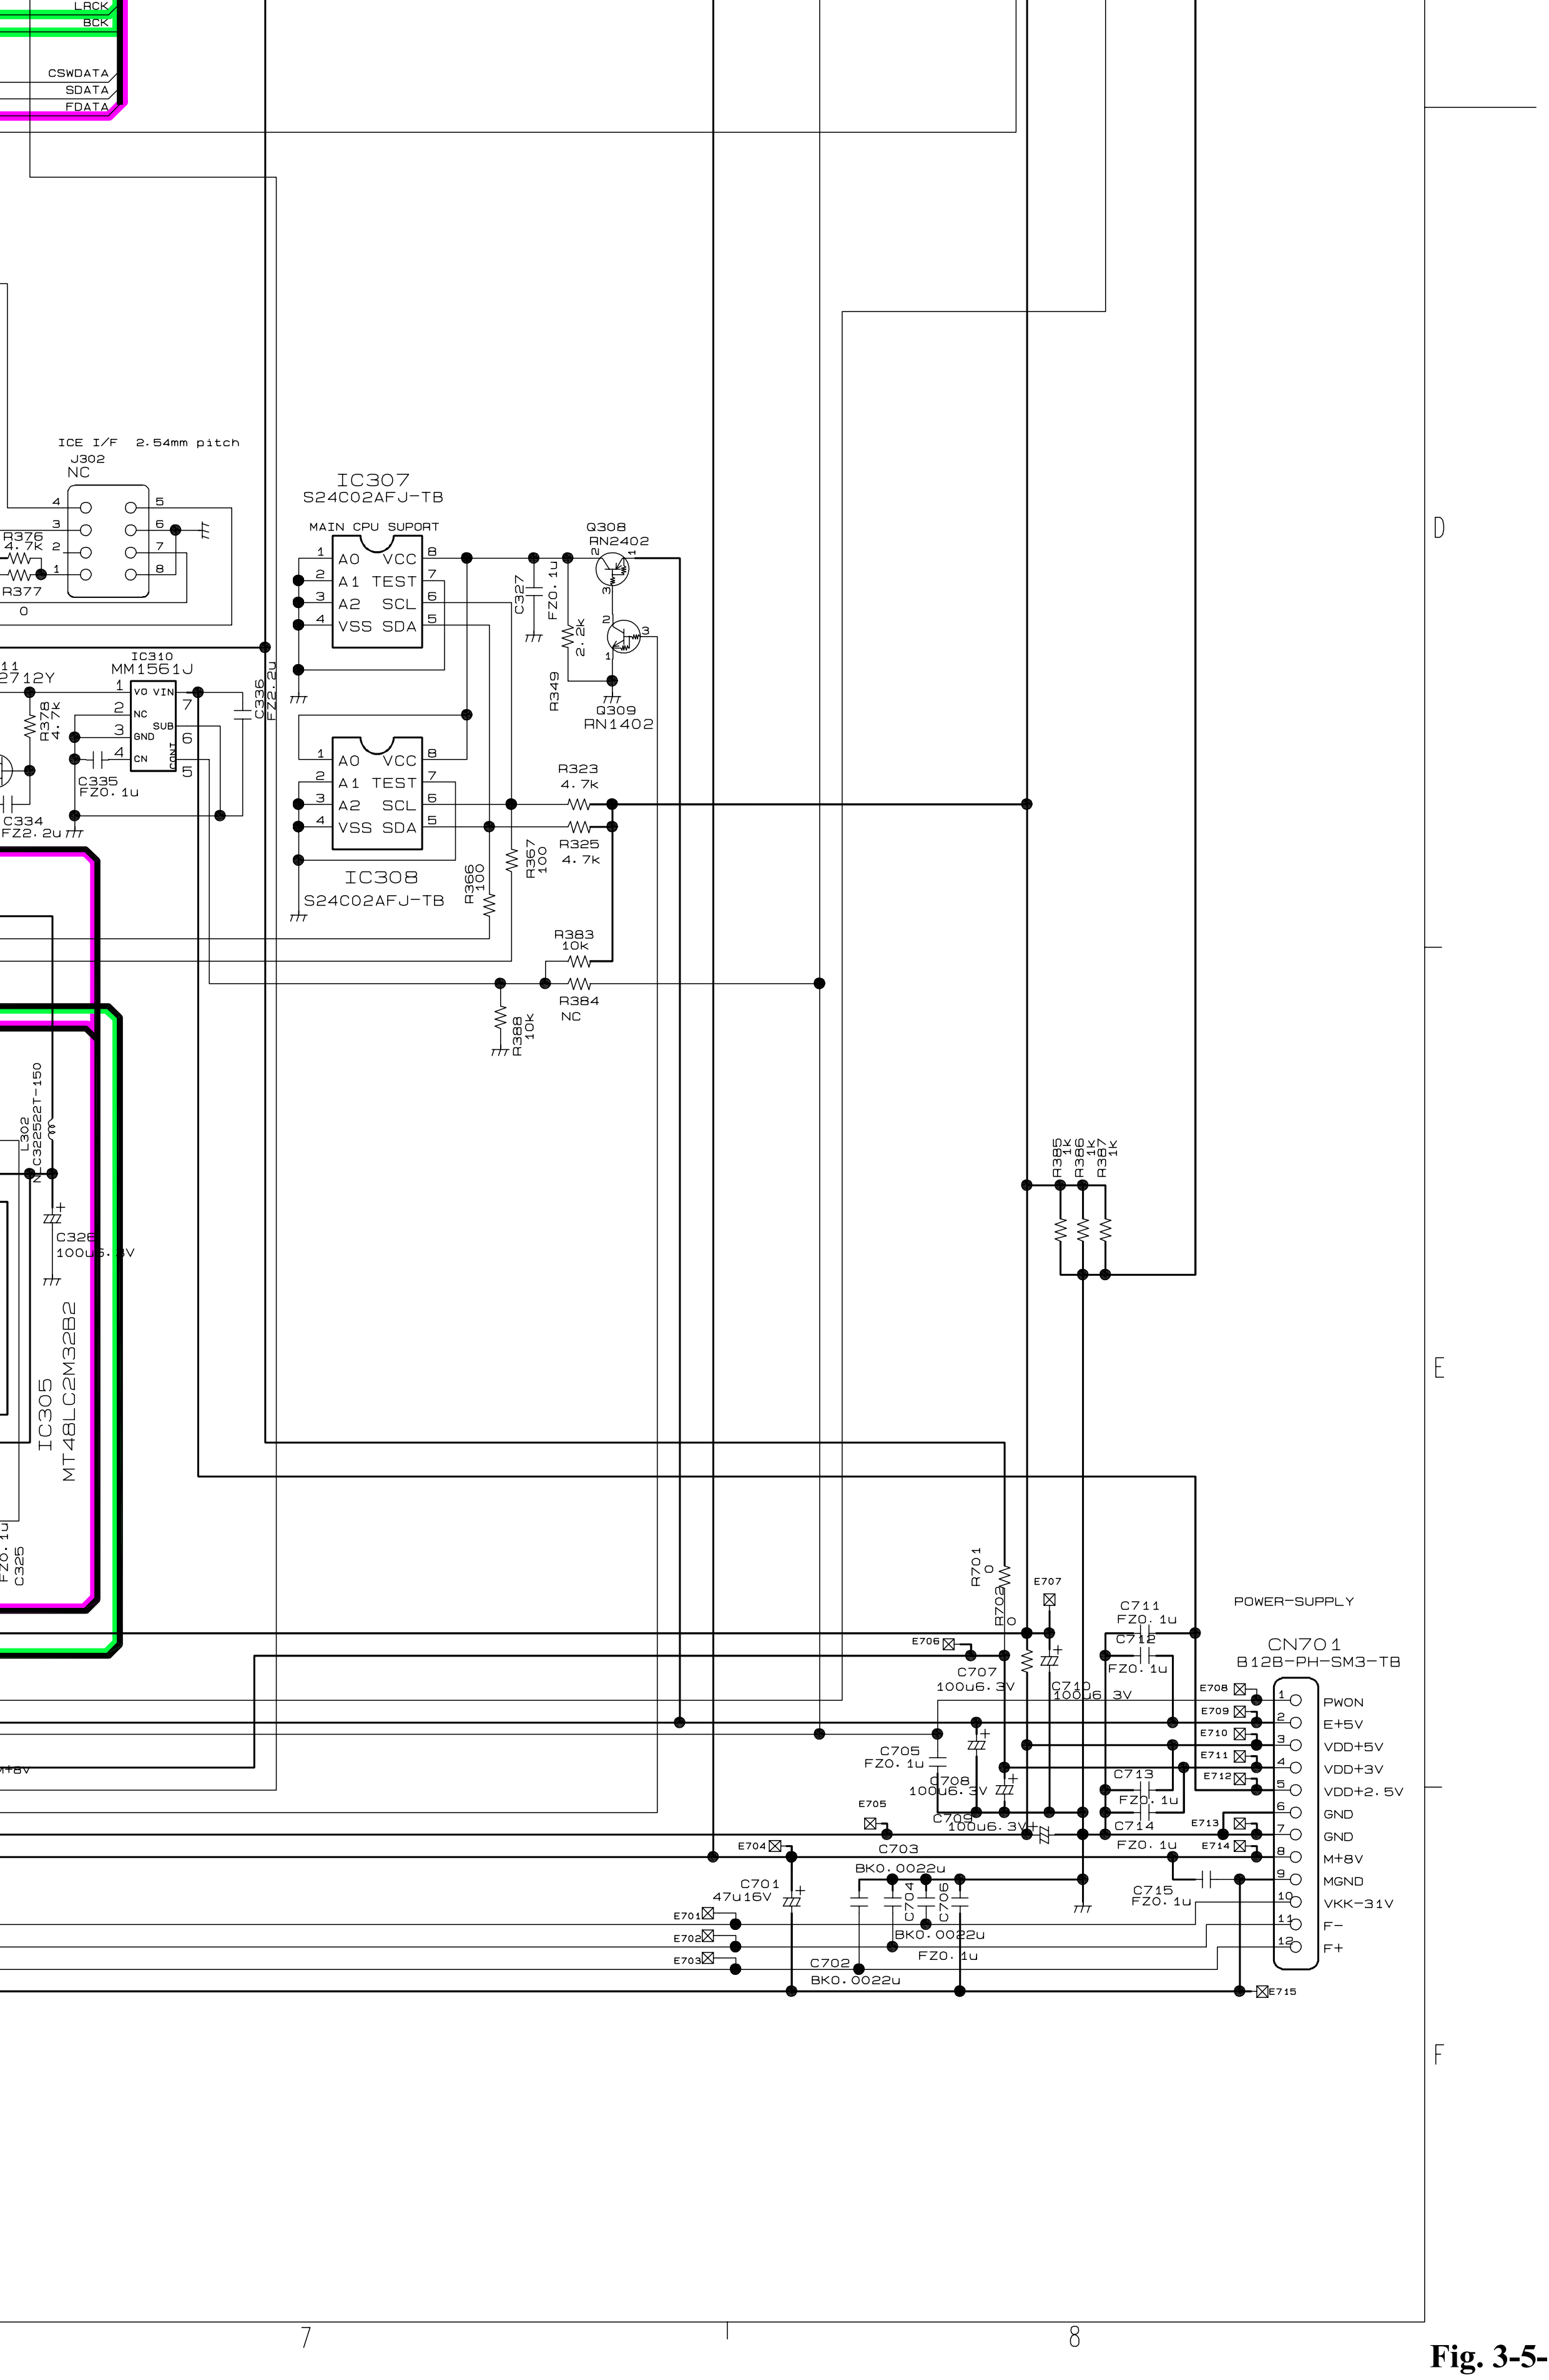
LRCK
BCK
CSWDATA
SDATA
FDATA
ICE I/F 2.54mm pitch
J302
NC
R376
4.7K
R377
0
IC307
S24C02AFJ-TB
MAIN CPU SUPORT
A0
A1
A2
VSS
VCC
TEST
SCL
SDA
C327
FZ0.1u
Q308
RN2402
R349
2.2k
Q309
RN1402
IC310
MM1561J
VO
VIN
NC
GND
CN
SUB
CONT
R378
4.7k
C336
FZ2.2u
C335
FZ0.1u
C334
FZ2.2u
IC308
S24C02AFJ-TB
R323
4.7k
R325
4.7k
R366
100
R367
100
R383
10k
R384
NC
R388
10k
L302
NC322522T-150
C326
100u6.3V
IC305
MT48LC2M32B2
FZ0.1u
C325
R385
1k
R386
1k
R387
1k
R701
0
R702
0
E707
E706
C707
100u6.3V
C710
100u6.3V
C711
FZ0.1u
C712
FZ0.1u
POWER-SUPPLY
CN701
B12B-PH-SM3-TB
E708
E709
E710
E711
E712
E713
E714
E715
PWON
E+5V
VDD+5V
VDD+3V
VDD+2.5V
GND
GND
M+8V
MGND
VKK-31V
F-
F+
C705
FZ0.1u
C708
100u6.3V
C709
100u6.3V
C713
FZ0.1u
C714
FZ0.1u
C715
FZ0.1u
E705
E704
C703
BK0.0022u
C701
47u16V
C704
BK0.0022u
C706
FZ0.1u
C702
BK0.0022u
E701
E702
E703
M+8V
D
E
F
7
8

Fig. 3-5-5

5-4. Output Circuit Diagram

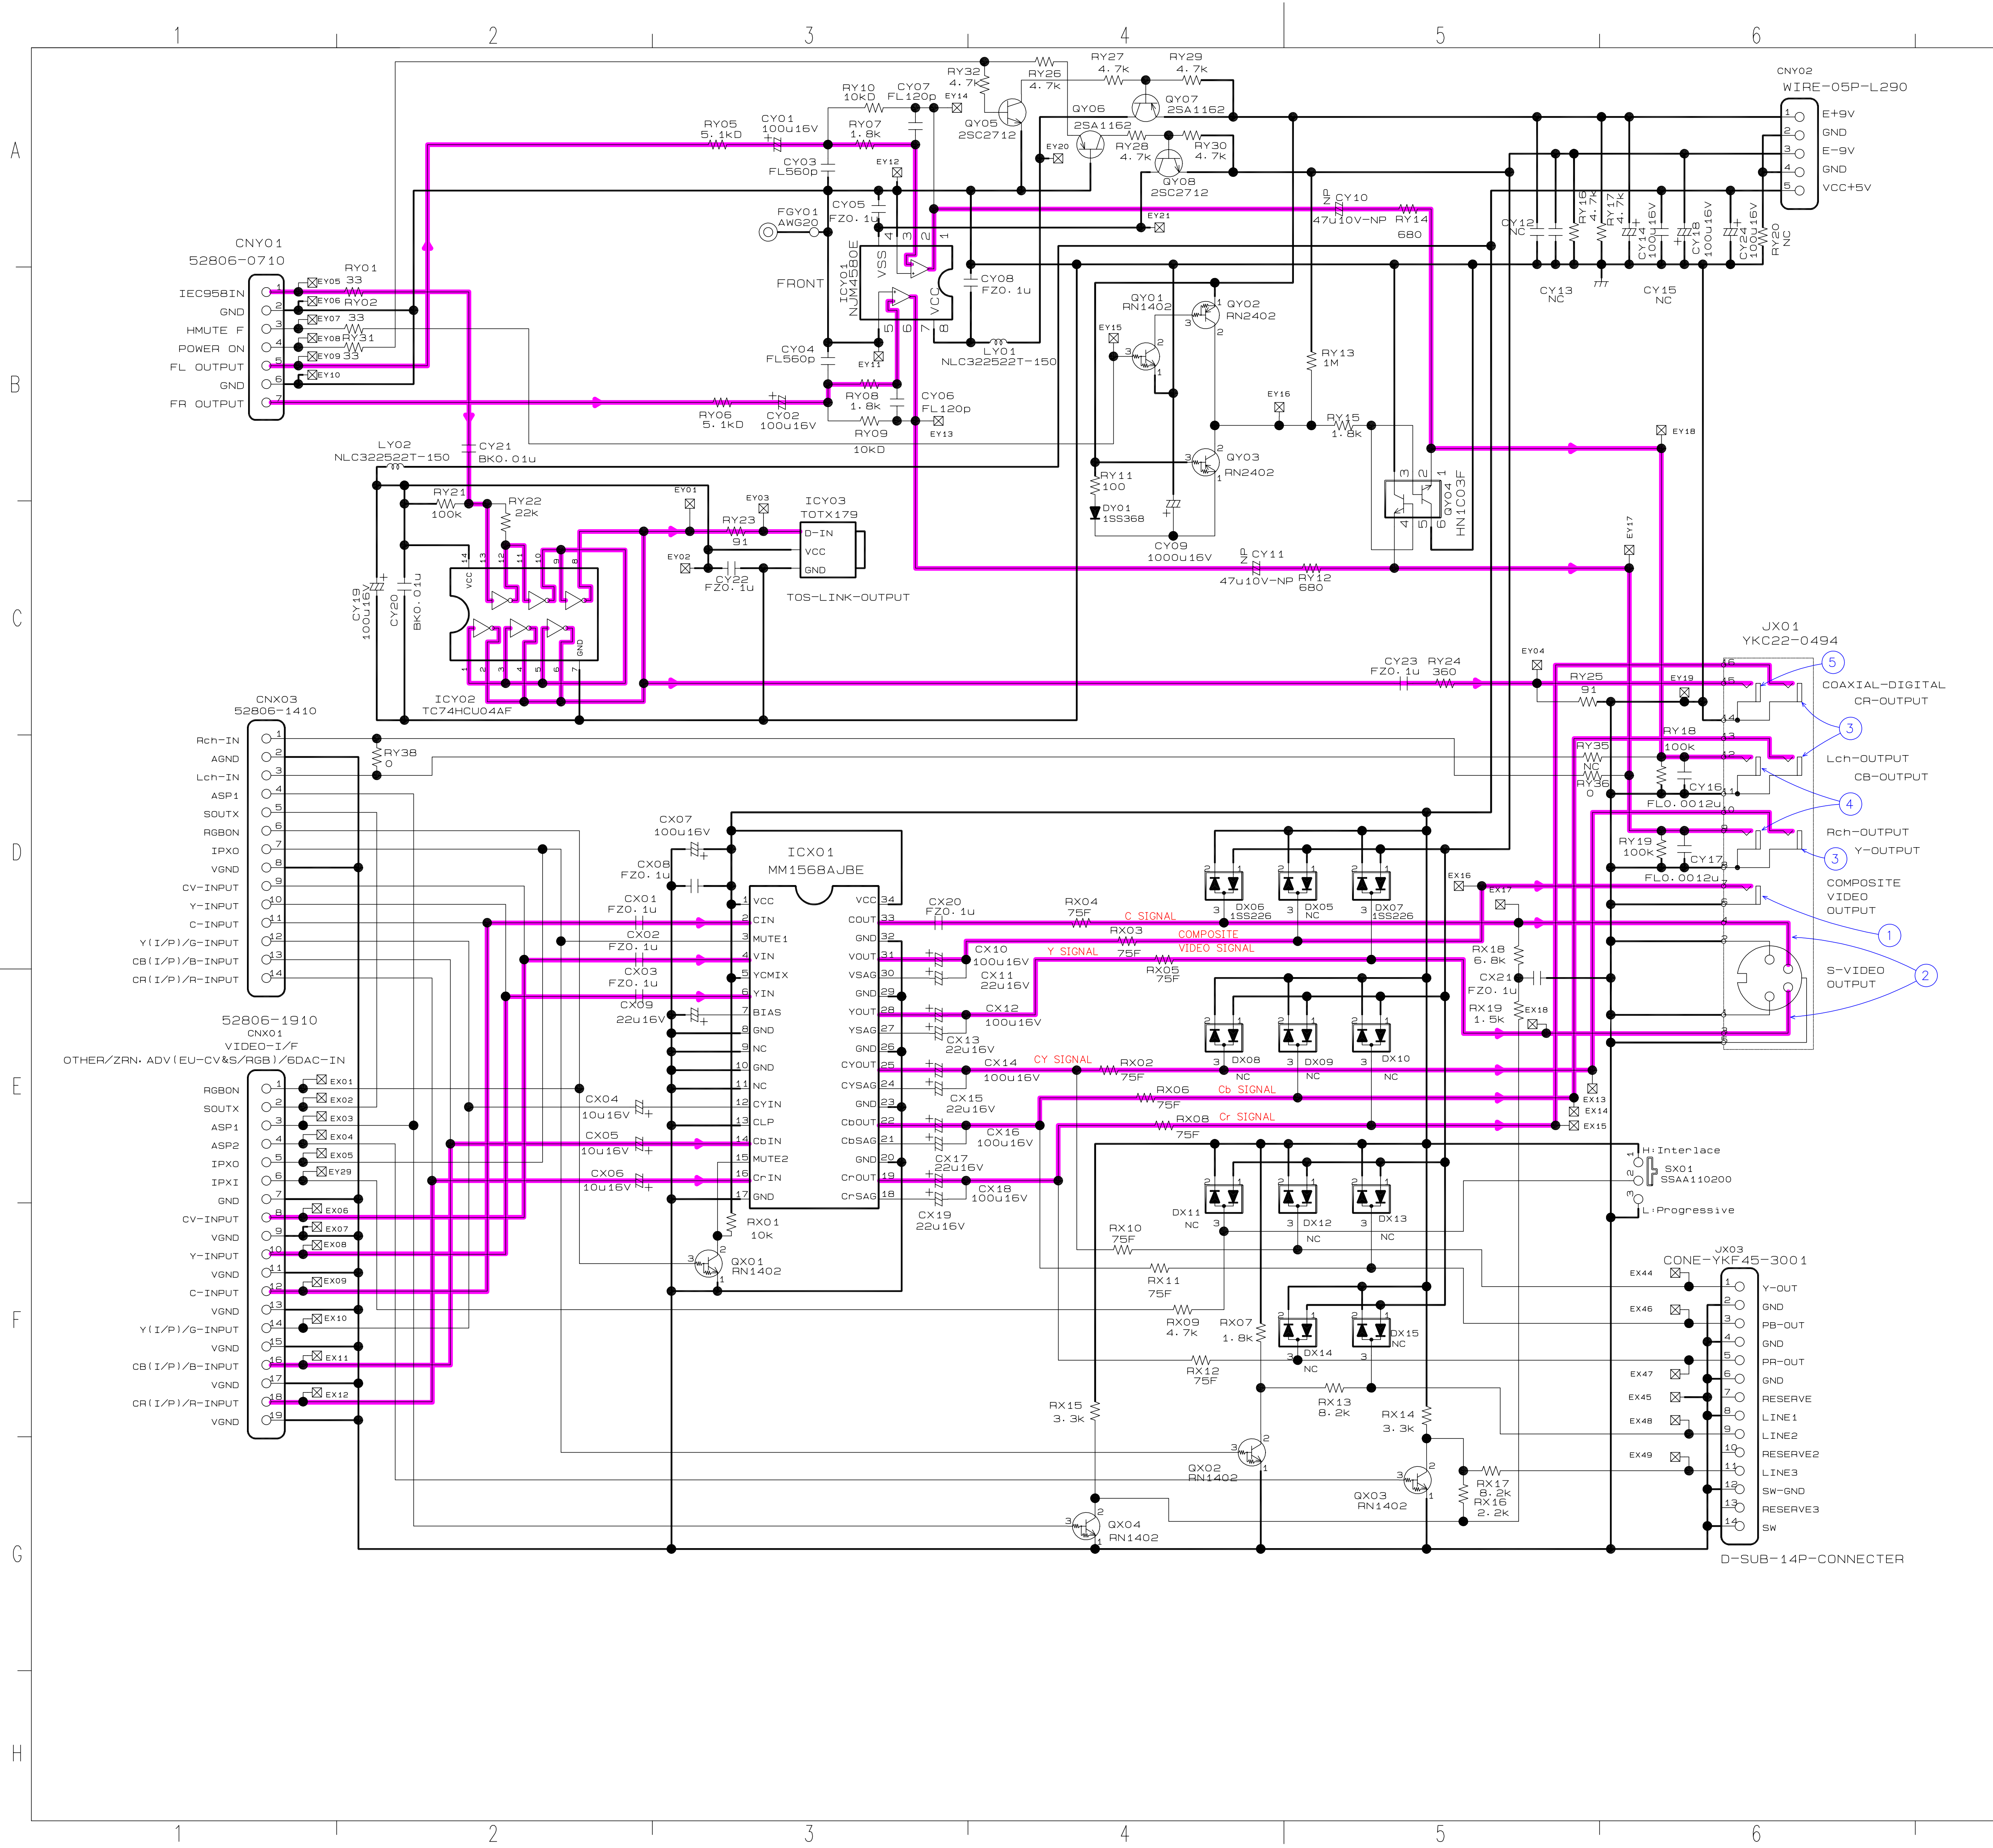

CNY01
52806-0710
IEC958IN
GND
HMUTE F
POWER ON
FL OUTPUT
GND
FR OUTPUT
RY01 33
RY02
RY07 33
RY31
RY09 33
RY05 5.1kΩ
CY01 100u16V
CY03 FL560p
RY10 10kΩ
CY07 FL120p
RY07 1.8k
RY32 4.7k
RY26 4.7k
QY05 2SC2712
RY27 4.7k
RY29 4.7k
QY06 2SA1162
QY07 2SA1162
RY28 4.7k
RY30 4.7k
QY08 2SC2712
FGY01 AWG20
CY05 FZ0.1u
ICY01 NJM4580E
FRONT
CY08 FZ0.1u
CY04 FL560p
LY01 NLC322522T-150
RY08 1.8k
CY06 FL120p
RY06 5.1kΩ
CY02 100u16V
RY09 10kΩ
CY10 47u10V-NP
RY14 680
QY01 RN1402
QY02 RN2402
RY13 1M
RY15 1.8k
QY03 RN2402
RY11 100
DY01 1SS368
CY09 1000u16V
CY11 47u10V-NP
RY12 680
QY04 HN1C03F
CY12 NC
RY16 4.7k
RY17 4.7k
CY14 100u16V
CY18 100u16V
CY24 100u16V
RY20 NC
CY13 NC
CY15 NC
CNY02
WIRE-05P-L290
E+9V
GND
E-9V
GND
VCC+5V
LY02 NLC322522T-150
CY21 BK0.01u
RY21 100k
RY22 22k
RY23 91
ICY03 TOTX179
D-IN
VCC
GND
TOS-LINK-OUTPUT
CY22 FZ0.1u
CY19 100u16V
CY20 BK0.01u
ICY02 TC74HCU04AF
CY23 FZ0.1u
RY24 360
RY25 91
JX01 YKC22-0494
COAXIAL-DIGITAL
CR-OUTPUT
Lch-OUTPUT
CB-OUTPUT
Rch-OUTPUT
Y-OUTPUT
COMPOSITE VIDEO OUTPUT
S-VIDEO OUTPUT
RY18 100k
RY35 NC
RY36 0
CY16 FL0.0012u
RY19 100k
CY17 FL0.0012u
CNX03
52806-1410
Rch-IN
AGND
Lch-IN
ASP1
SOUTX
RGBON
IPXO
VGND
CV-INPUT
Y-INPUT
C-INPUT
Y(I/P)/G-INPUT
CB(I/P)/B-INPUT
CR(I/P)/R-INPUT
RY38 0
52806-1910
CNX01
VIDEO-I/F
OTHER/ZRN.ADV(EU-CV&S/RGB)/6DAC-IN
RGBON
SOUTX
ASP1
ASP2
IPXO
IPXI
GND
CV-INPUT
VGND
Y-INPUT
VGND
C-INPUT
VGND
Y(I/P)/G-INPUT
VGND
CB(I/P)/B-INPUT
VGND
CR(I/P)/R-INPUT
VGND
CX07 100u16V
CX08 FZ0.1u
CX01 FZ0.1u
CX02 FZ0.1u
CX03 FZ0.1u
CX09 22u16V
CX04 10u16V
CX05 10u16V
CX06 10u16V
ICX01 MM1568AJBE
VCC
CIN
MUTE1
VIN
YCMIX
YIN
BIAS
GND
NC
GND
NC
CYIN
CLP
CbIN
MUTE2
CrIN
GND
VCC
COUT
GND
VOUT
VSAG
GND
YOUT
YSAG
GND
CYOUT
GND
CYSAG
GND
CbOUT
CbSAG
GND
CrOUT
CrSAG
RX01 10k
QX01 RN1402
CX20 FZ0.1u
RX04 75F
C SIGNAL
RX03 75F
COMPOSITE VIDEO SIGNAL
Y SIGNAL
RX05 75F
CX10 100u16V
CX11 22u16V
CX12 100u16V
CX13 22u16V
CX14 100u16V
CY SIGNAL
RX02 75F
CX15 22u16V
RX06 75F
Cb SIGNAL
CX16 100u16V
RX08 75F
Cr SIGNAL
CX17 22u16V
CX18 100u16V
CX19 22u16V
DX06 1SS226
DX05 NC
DX07 1SS226
DX08
DX09 NC
DX10 NC
DX11 NC
DX12 NC
DX13 NC
DX14 NC
DX15 NC
RX18 6.8k
CX21 FZ0.1u
RX19 1.5k
H: Interlace
SX01 SSAA110200
L: Progressive
RX10 75F
RX11 75F
RX09 4.7k
RX07 1.8k
RX12 75F
RX13 8.2k
RX14 3.3k
RX15 3.3k
QX02 RN1402
QX03 RN1402
RX17 8.2k
RX16 2.2k
QX04 RN1402
JX03
CONE-YKF45-3001
Y-OUT
GND
PB-OUT
GND
PR-OUT
GND
RESERVE
LINE1
LINE2
RESERVE2
LINE3
SW-GND
RESERVE3
SW
D-SUB-14P-CONNECTER

	SD3800	SD3800 JPN	SD3800 EURO
CNX03	NC	NC	52806-1410
JX03	NC	YKC22-0494	NC
QX02, QX03	NC	RN1402	NC
RX10, RX11, RX12	NC	75F	NC
RX07	NC	1.8k	NC
RX13	NC	8.2k	NC
RX14	NC	3.3k	NC
RX16	NC	2.2k	NC
RX17	NC	8.2k	NC
RY38	0	0	NC
RY35	NC	NC	0

Fig. 3-5-6

5-4. Output Circuit Diagram

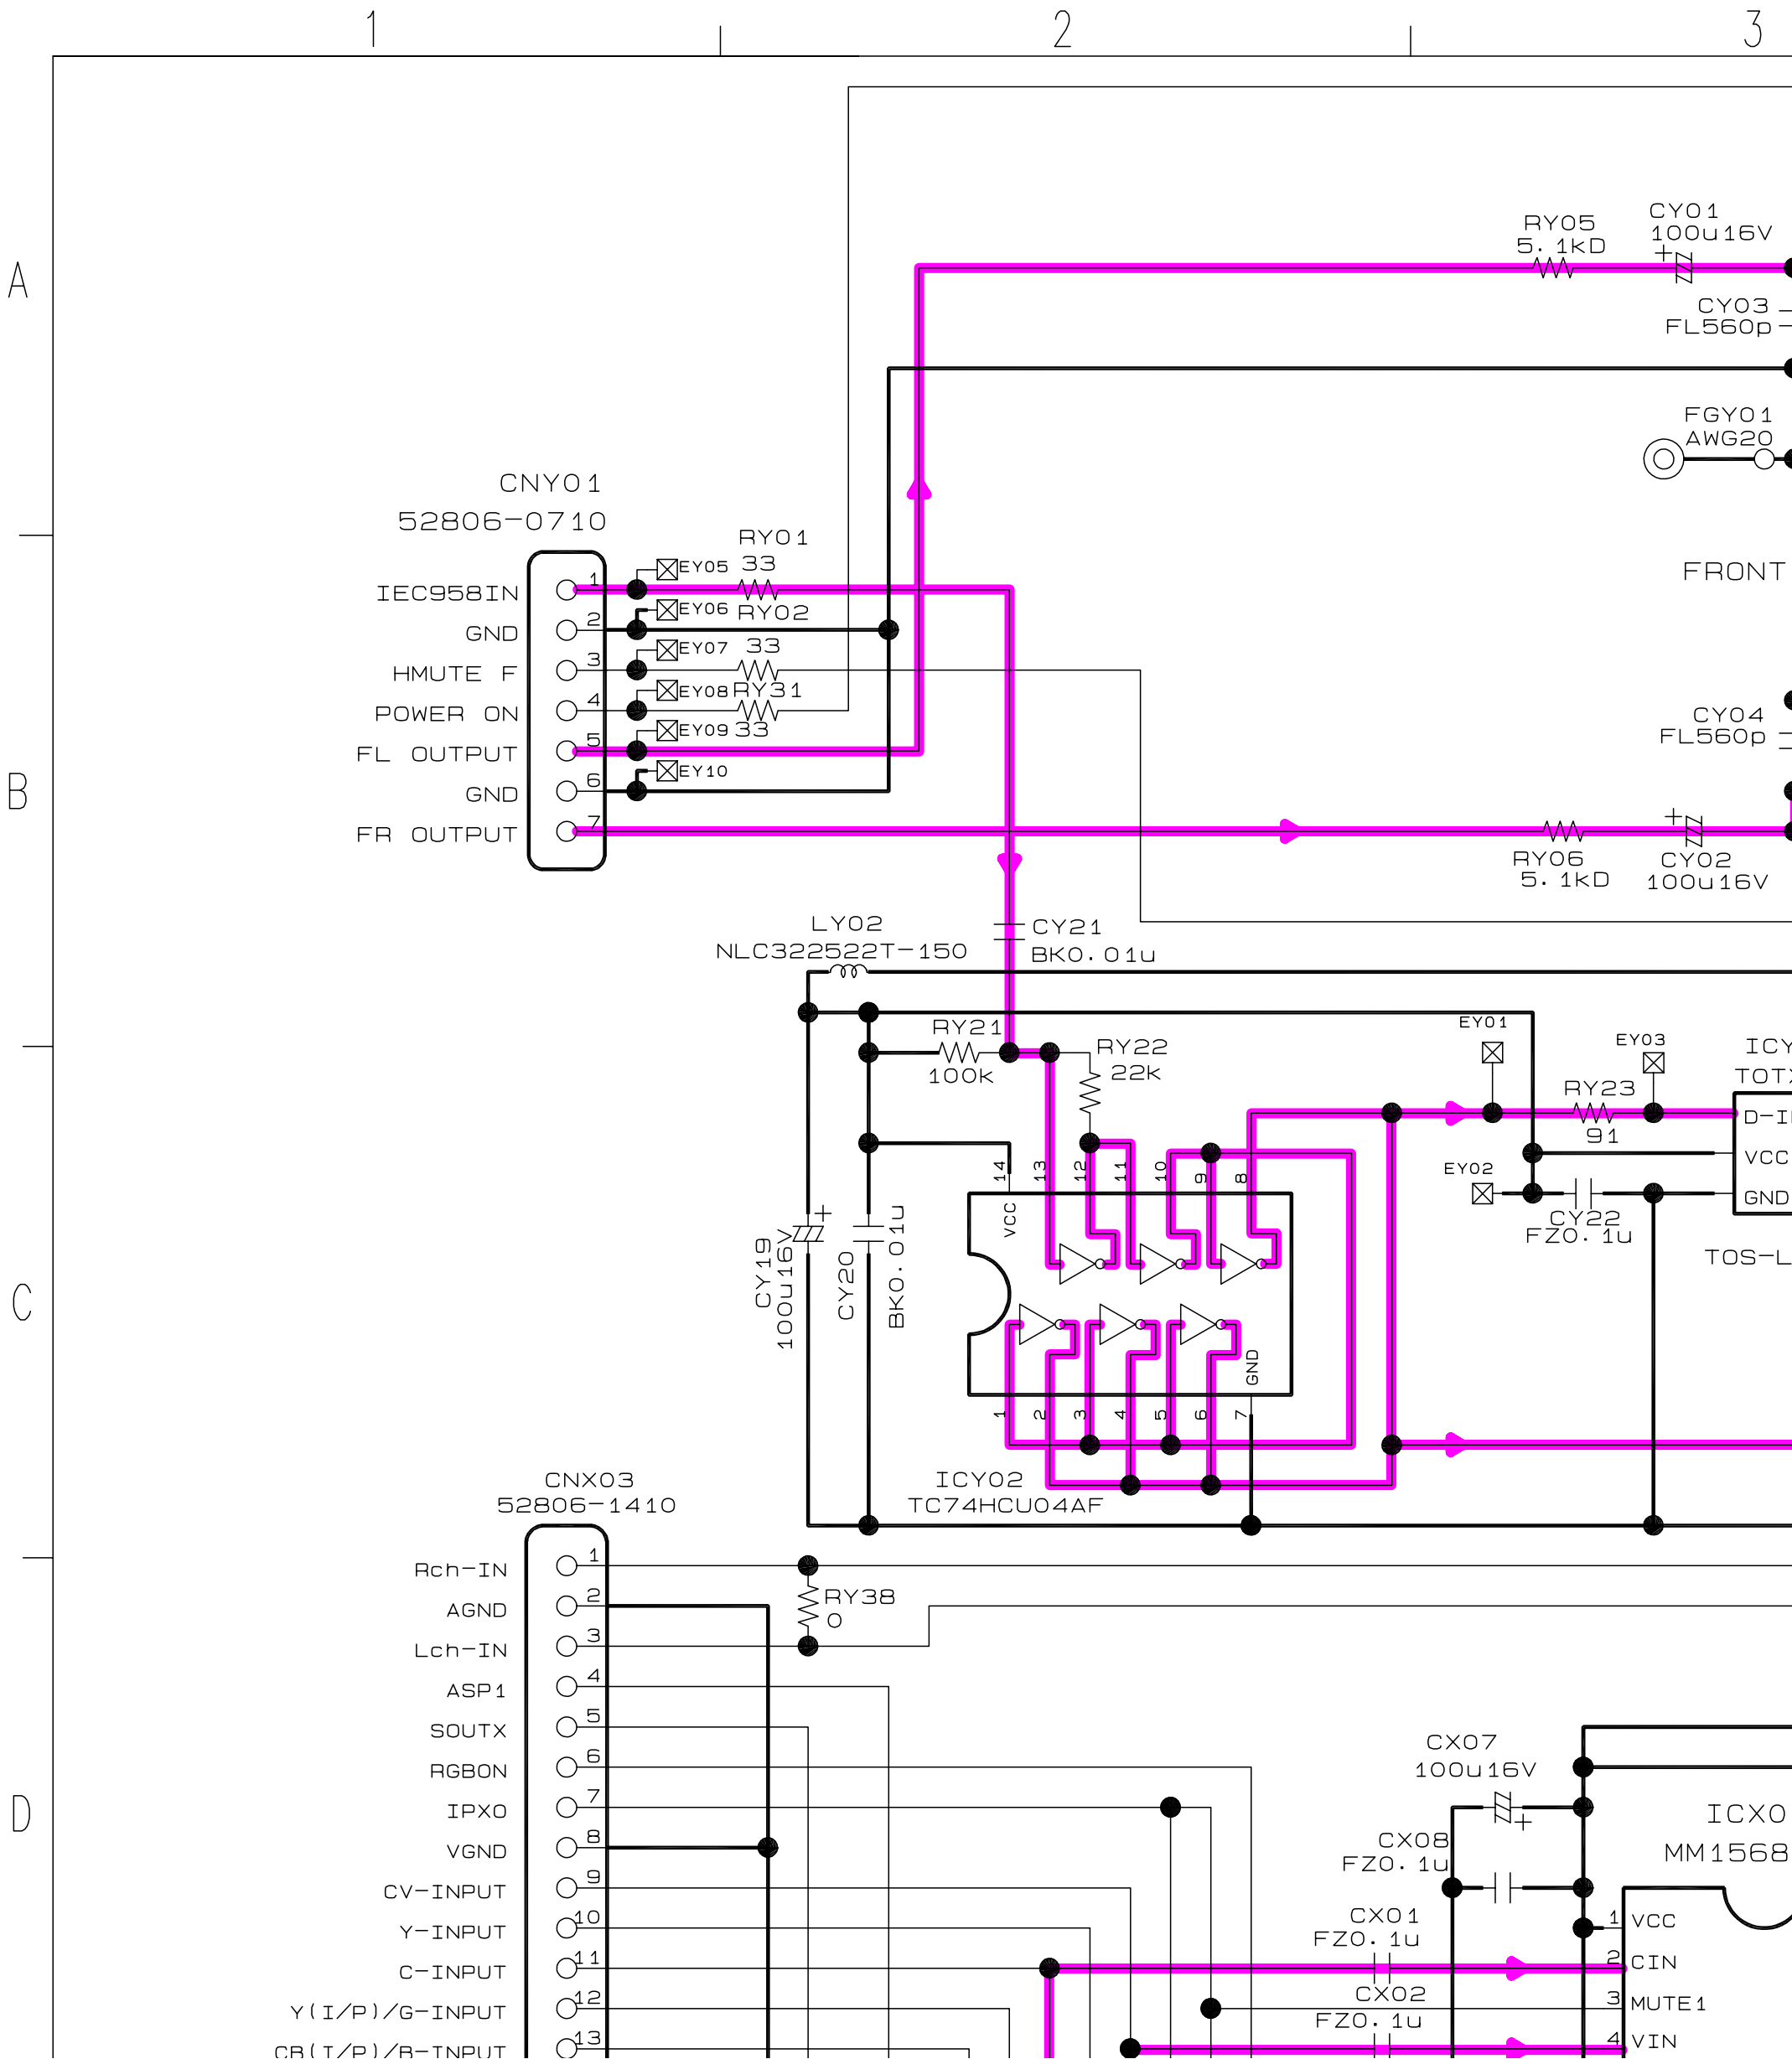

1
2
3
A
B
C
D
RY05
5.1kD
CY01
100u16V
CY03
FL560p
FGY01
AWG20
FRONT
CNY01
52806-0710
RY01
33
RY02
33
RY31
33
EY05
EY06
EY07
EY08
EY09
EY10
IEC958IN
GND
HMUTE F
POWER ON
FL OUTPUT
GND
FR OUTPUT
CY04
FL560p
RY06
5.1kD
CY02
100u16V
LY02
NLC322522T-150
CY21
BK0.01u
RY21
100k
RY22
22k
EY01
EY03
EY02
RY23
91
D-I
VCC
GND
CY22
FZ0.1u
TOS-L
CY19
100u16V
CY20
BK0.01u
VCC
GND
ICY02
TC74HCU04AF
CNX03
52806-1410
Rch-IN
AGND
Lch-IN
ASP1
SOUTX
RGBON
IPX0
VGND
CV-INPUT
Y-INPUT
C-INPUT
Y(I/P)/G-INPUT
CB(I/P)/B-INPUT
RY38
0
CX07
100u16V
CX08
FZ0.1u
CX01
FZ0.1u
CX02
FZ0.1u
ICX0
MM1568
VCC
CIN
MUTE1
VIN

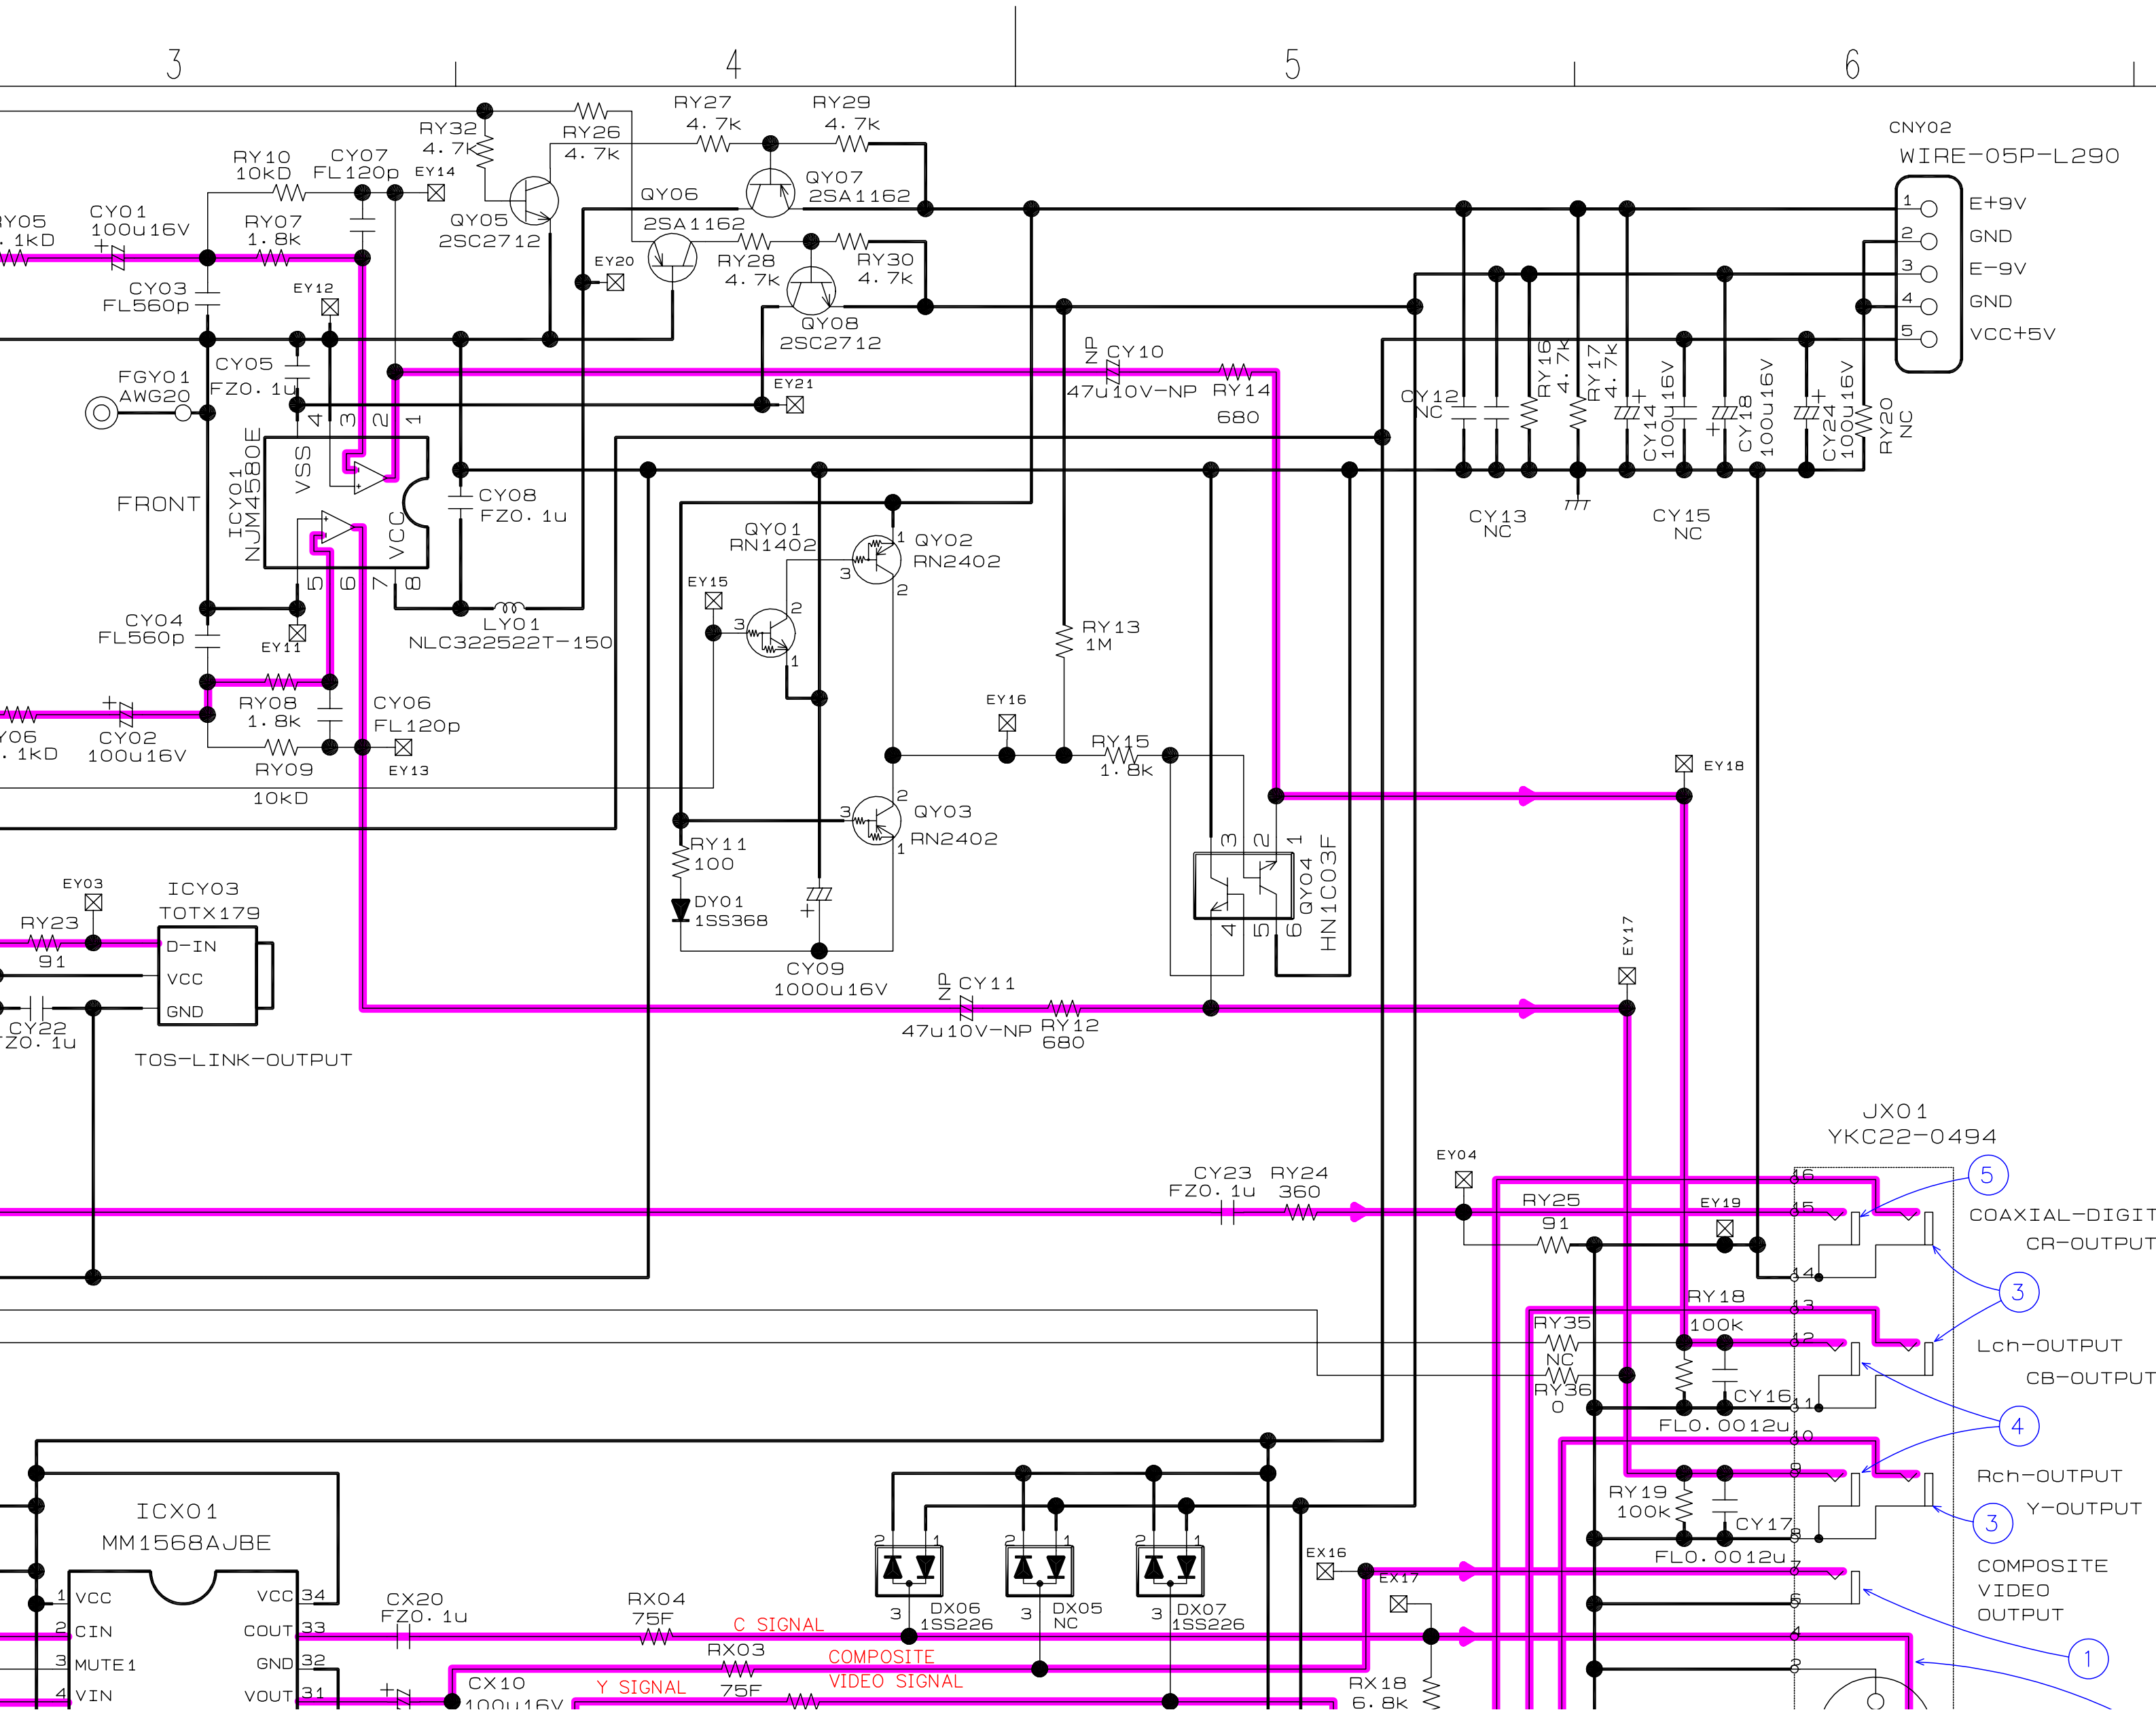
3
4
5
6
RY32 4.7k
RY26 4.7k
RY27 4.7k
RY29 4.7k
QY07 2SA1162
QY06 2SA1162
QY05 2SC2712
RY28 4.7k
RY30 4.7k
QY08 2SC2712
RY10 10kD
CY07 FL120p
EY14
RY05 .1kD
CY01 100u16V
RY07 1.8k
CY03 FL560p
EY12
EY20
FGY01 AWG20
CY05 FZ0.1u
EY21
FRONT
ICY01 NJM4580E
VSS
VCC
CY08 FZ0.1u
LY01 NLC322522T-150
CY04 FL560p
EY11
RY06 .1kD
CY02 100u16V
RY08 1.8k
CY06 FL120p
RY09 10kD
EY13
CY10 47u10V-NP
RY14 680
QY01 RN1402
QY02 RN2402
EY15
RY13 1M
EY16
RY15 1.8k
QY03 RN2402
RY11 100
DY01 1SS368
CY09 1000u16V
QY04 HN1C03F
CY11 47u10V-NP
RY12 680
EY18
EY17
CNY02 WIRE-05P-L290
E+9V
GND
E-9V
GND
VCC+5V
CY12 NC
RY16 4.7k
RY17 4.7k
CY14 100u16V
CY18 100u16V
CY24 100u16V
RY20 NC
CY13 NC
CY15 NC
EY03
RY23 91
ICY03 TOTX179
D-IN
VCC
GND
CY22 FZ0.1u
TOS-LINK-OUTPUT
CY23 FZ0.1u
RY24 360
EY04
RY25 91
EY19
JX01 YKC22-0494
COAXIAL-DIGIT
CR-OUTPUT
Lch-OUTPUT
CB-OUTPUT
Rch-OUTPUT
Y-OUTPUT
COMPOSITE VIDEO OUTPUT
RY18 100k
RY35 NC
RY36 0
CY16 FL0.0012u
RY19 100k
CY17 FL0.0012u
ICX01 MM1568AJBE
VCC
CIN
MUTE1
VIN
VCC
COUT
GND
VOUT
CX20 FZ0.1u
RX04 75F
C SIGNAL
RX03 75F
COMPOSITE VIDEO SIGNAL
CX10 100u16V
Y SIGNAL
DX06 1SS226
DX05 NC
DX07 1SS226
EX16
EX17
RX18 6.8k
①
③
④
⑤

7
8
A
B
C
D
E-05P-L290
E+9V
GND
E-9V
GND
VCC+5V
494
5
COAXIAL-DIGITAL
CR-OUTPUT
3
Lch-OUTPUT
CB-OUTPUT
4
Rch-OUTPUT
Y-OUTPUT
3
COMPOSITE
VIDEO
OUTPUT
1

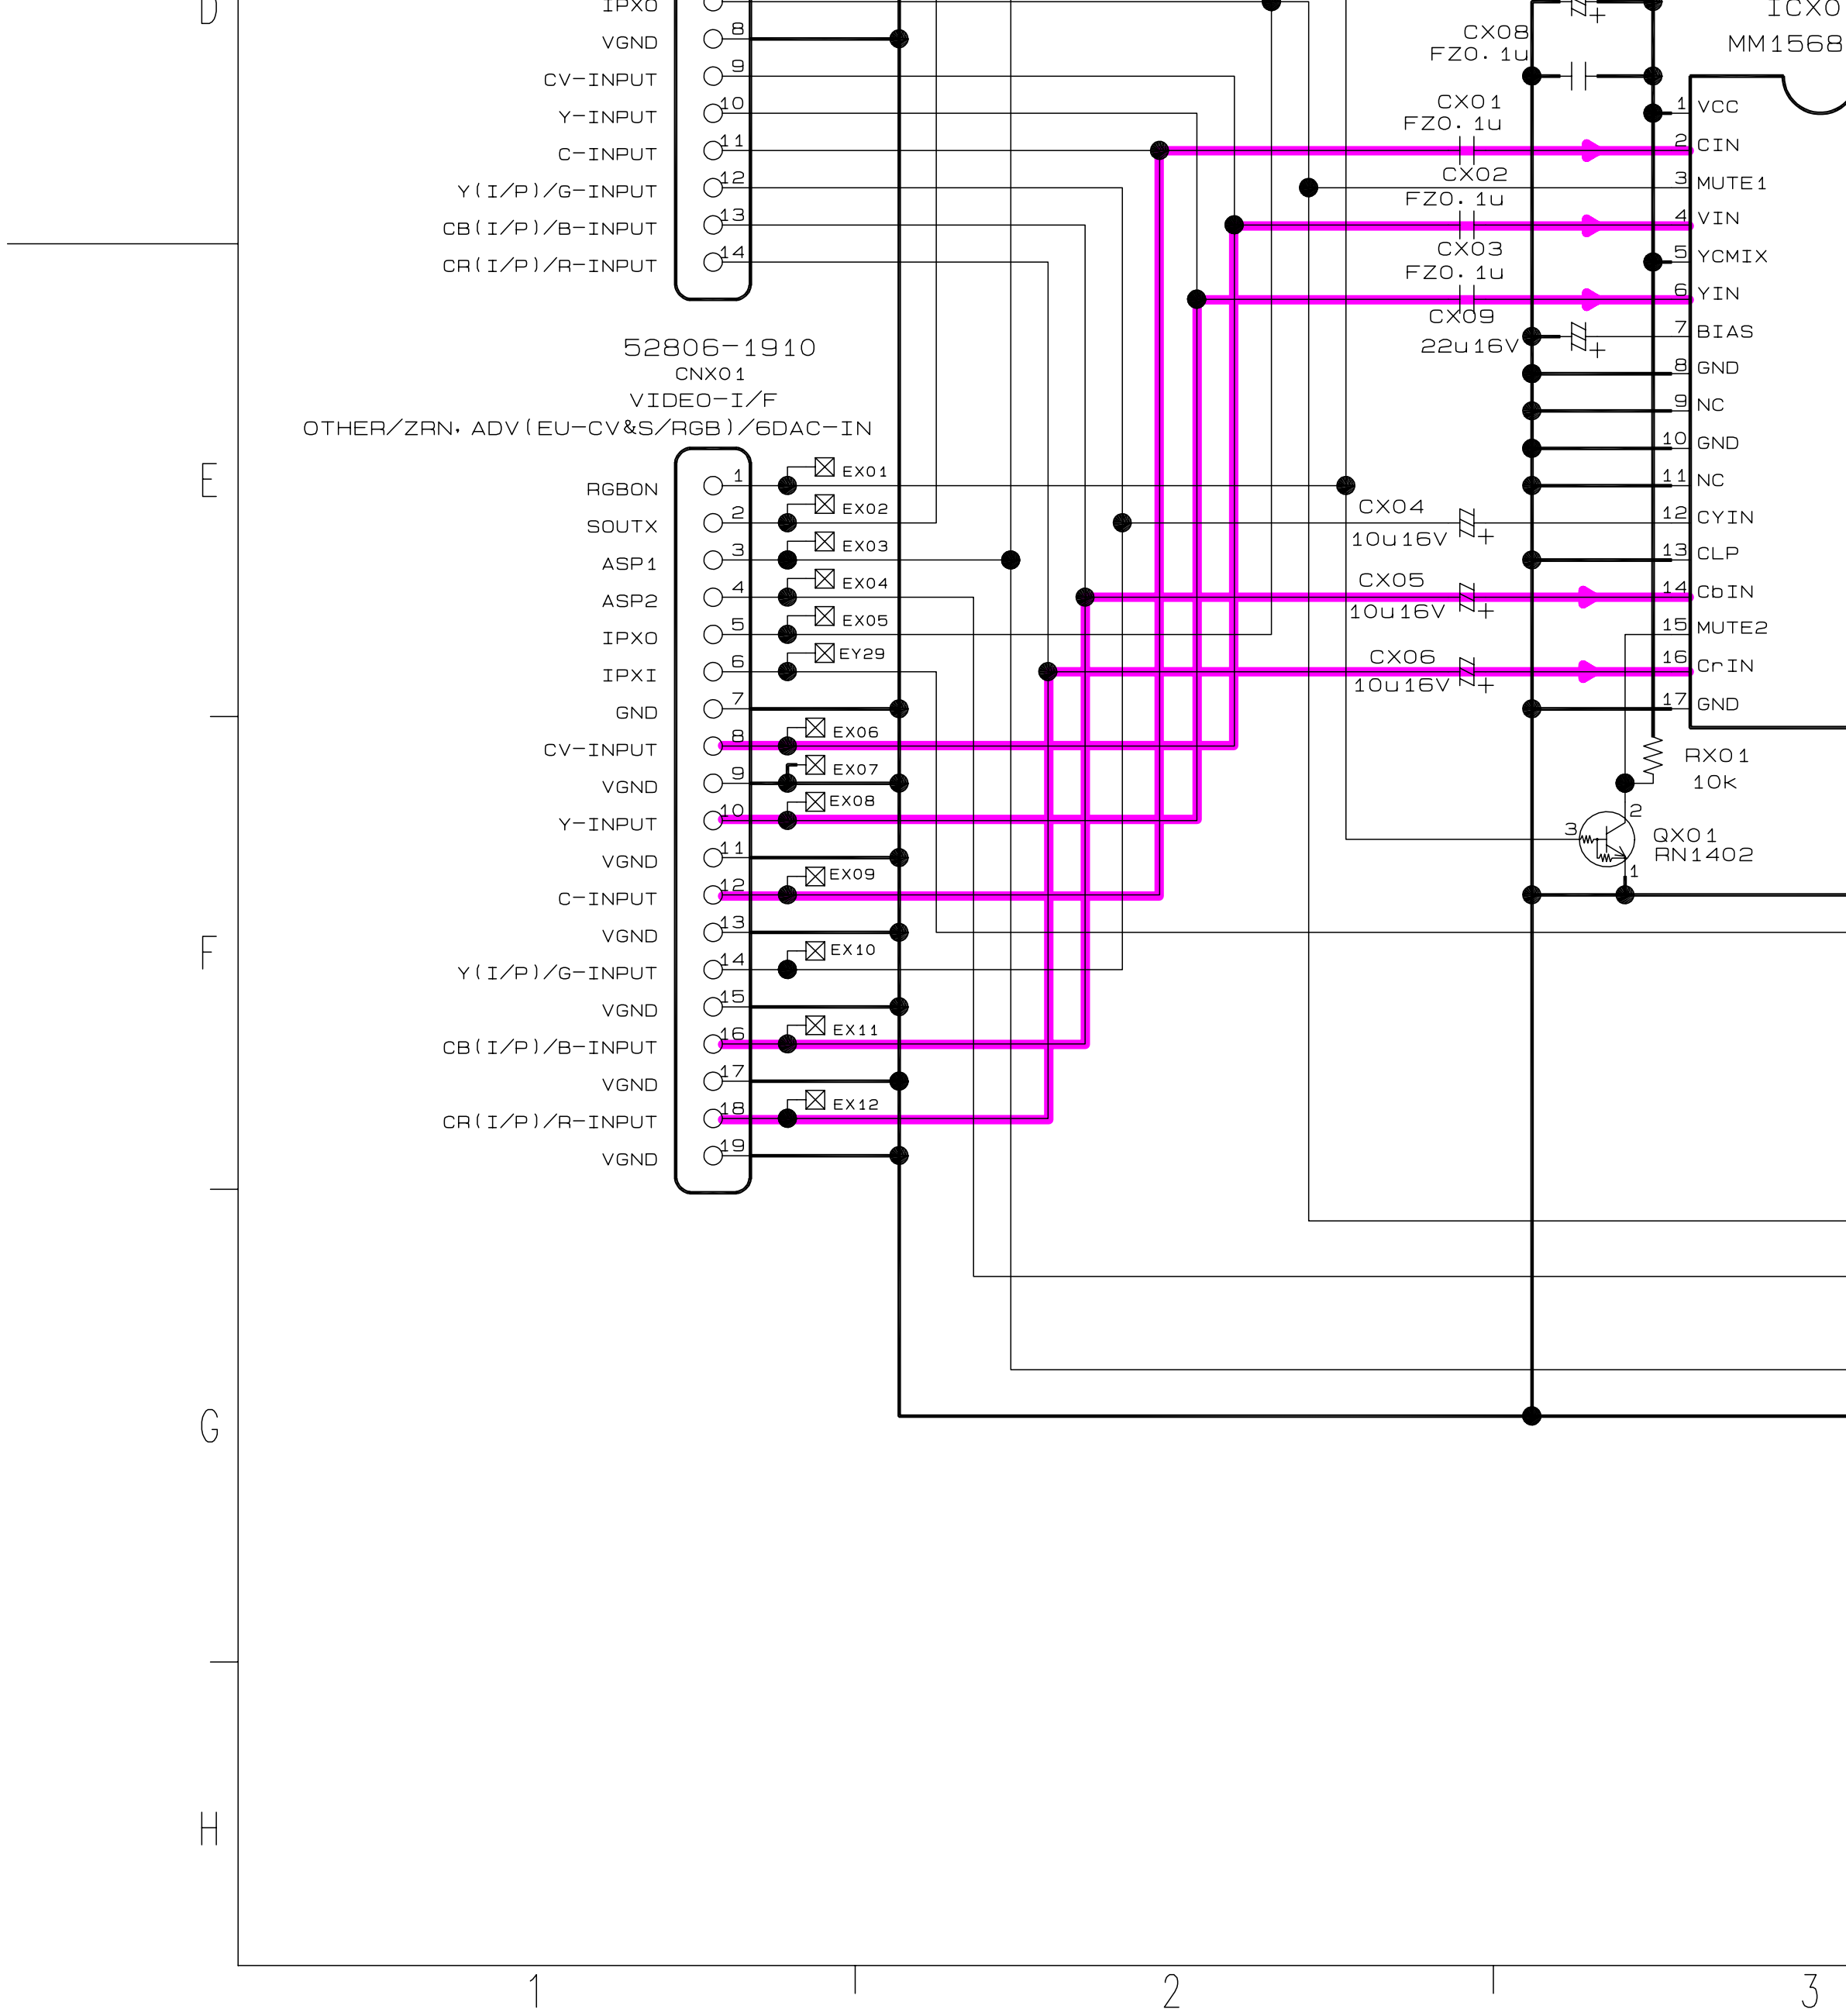
D
IPXO
VGND
CV-INPUT
Y-INPUT
C-INPUT
Y(I/P)/G-INPUT
CB(I/P)/B-INPUT
CR(I/P)/R-INPUT
8
9
10
11
12
13
14
52806-1910
CNX01
VIDEO-I/F
OTHER/ZRN, ADV(EU-CV&S/RGB)/6DAC-IN
E
RGBON
SOUTX
ASP1
ASP2
IPXO
IPXI
GND
CV-INPUT
VGND
Y-INPUT
VGND
C-INPUT
VGND
Y(I/P)/G-INPUT
VGND
CB(I/P)/B-INPUT
VGND
CR(I/P)/R-INPUT
VGND
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
EX01
EX02
EX03
EX04
EX05
EY29
EX06
EX07
EX08
EX09
EX10
EX11
EX12
F
G
H
CX08
FZ0.1u
CX01
FZ0.1u
CX02
FZ0.1u
CX03
FZ0.1u
CX09
22u16V
CX04
10u16V
CX05
10u16V
CX06
10u16V
ICX0
MM1568
1 VCC
2 CIN
3 MUTE1
4 VIN
5 YCMIX
6 YIN
7 BIAS
8 GND
9 NC
10 GND
11 NC
12 CYIN
13 CLP
14 CbIN
15 MUTE2
16 CrIN
17 GND
RX01
10k
QX01
RN1402
1
2
3
1
2
3

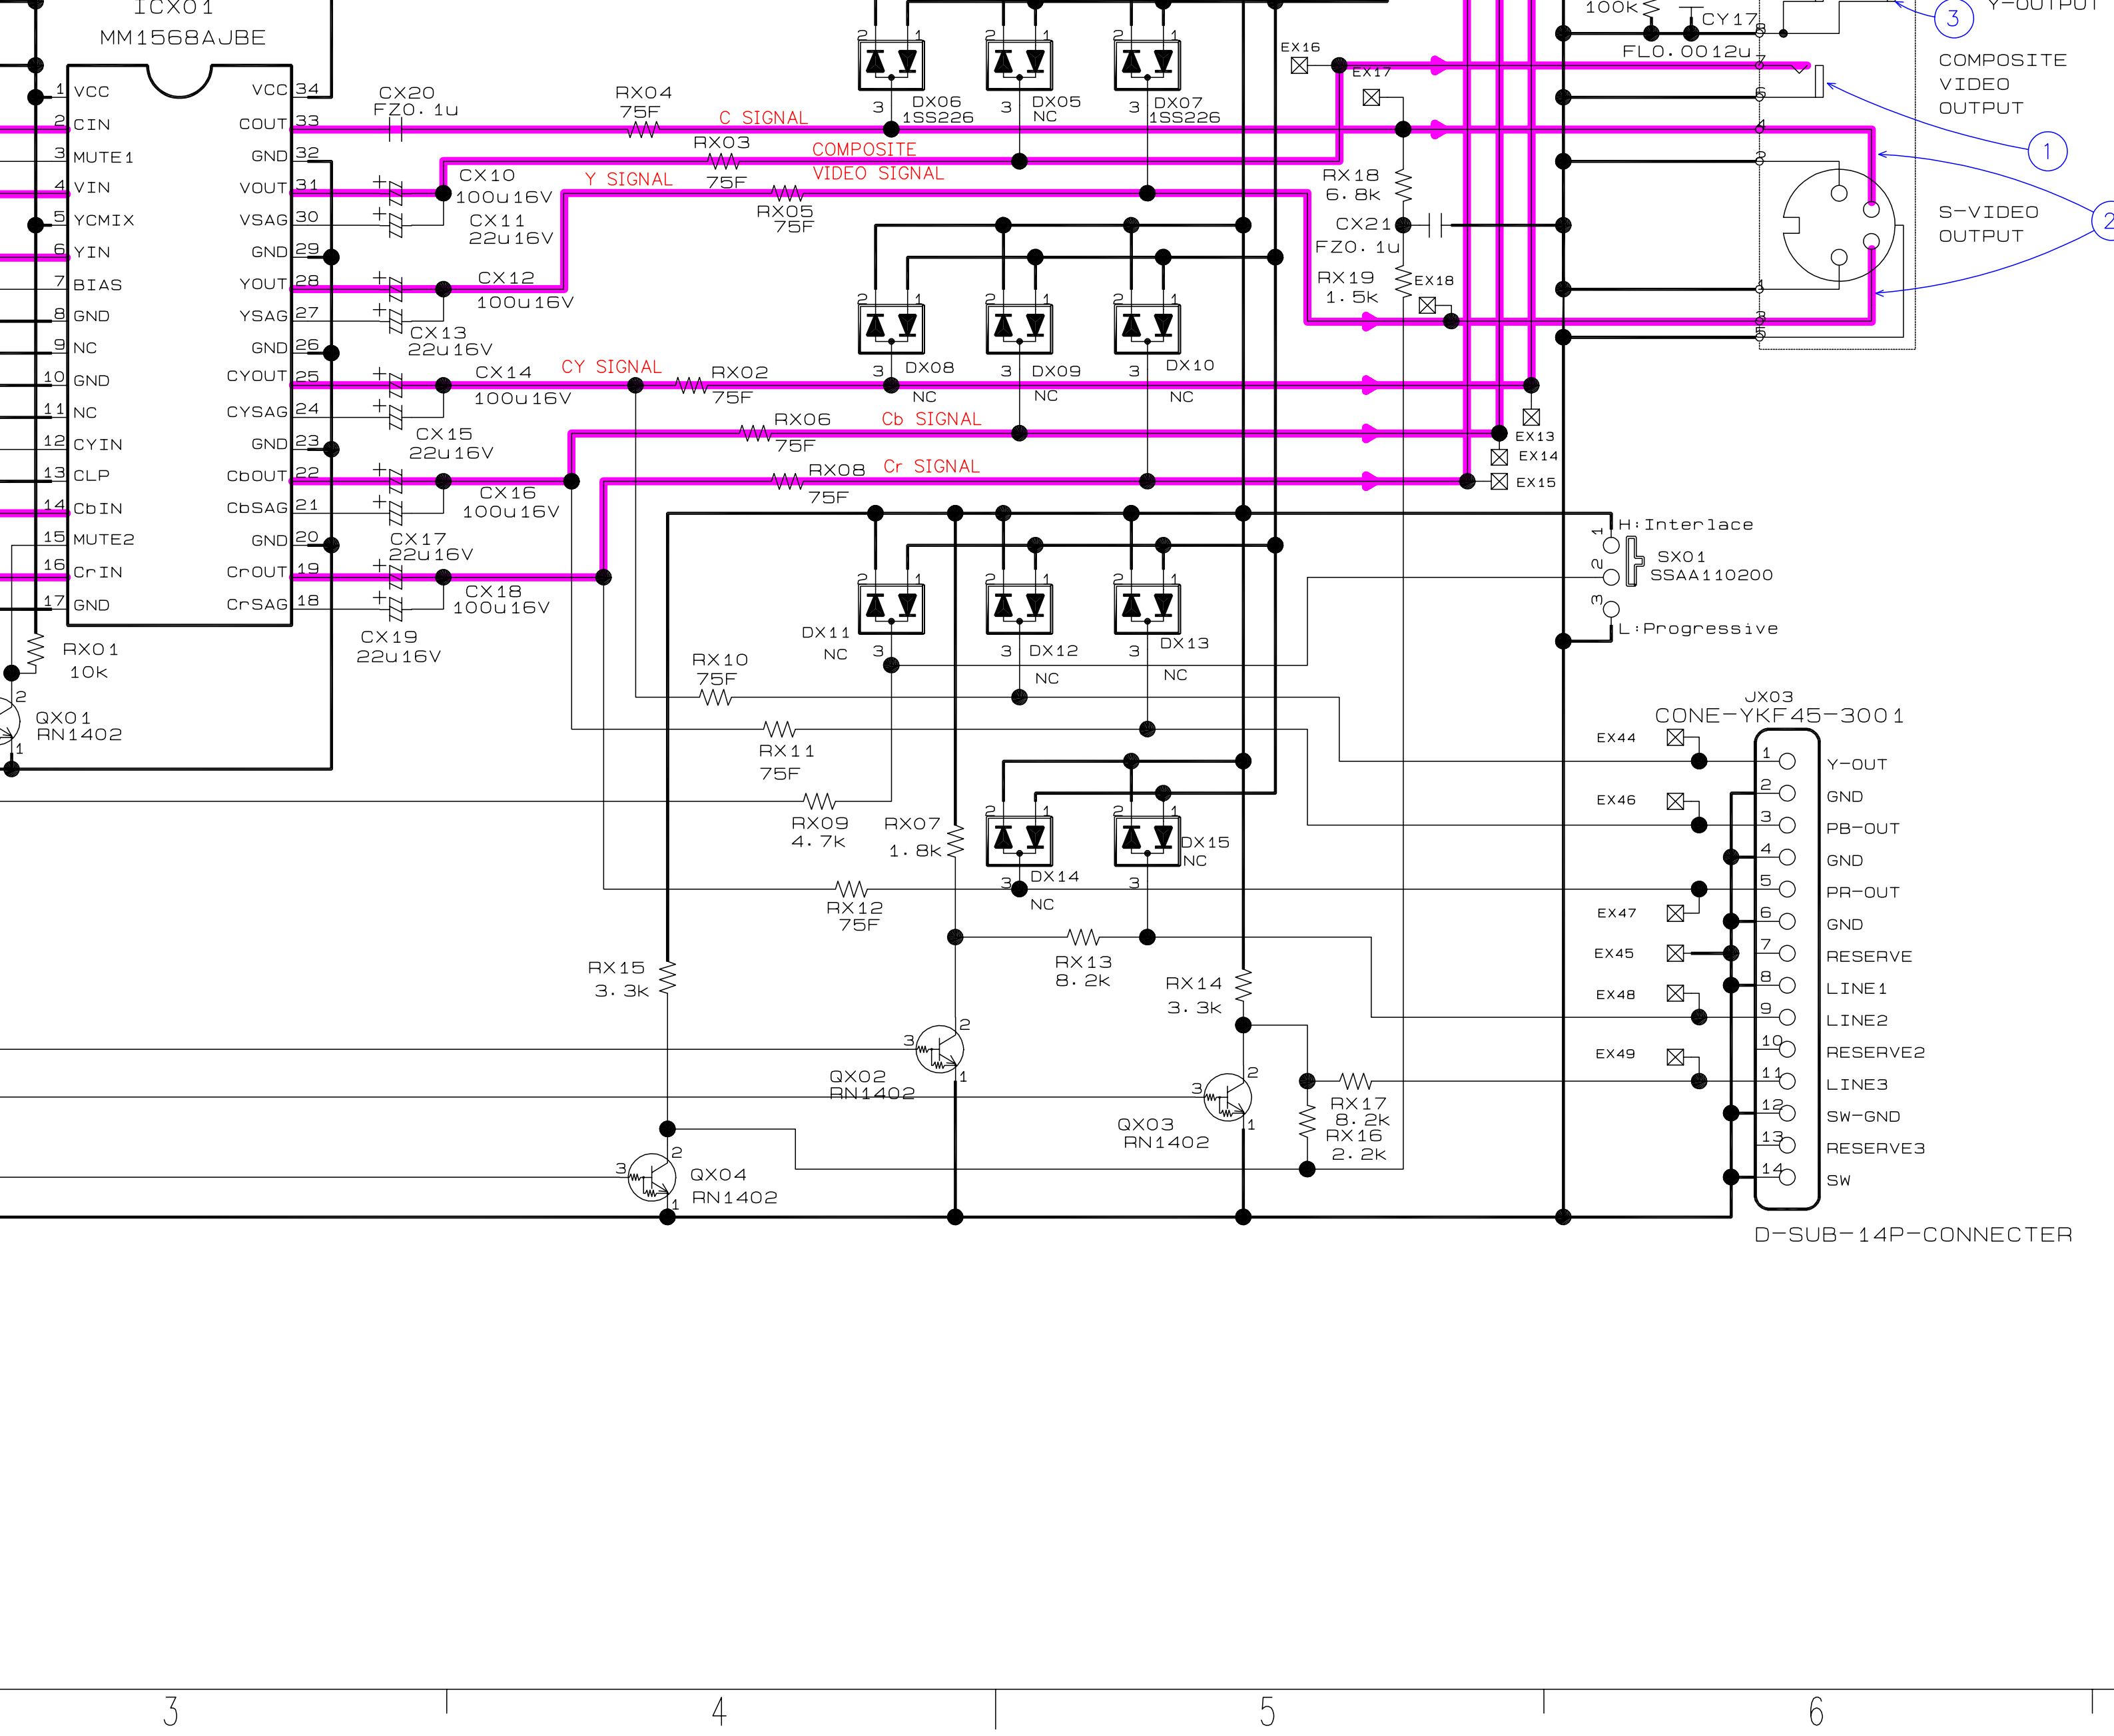
ICX01
MM1568AJBE
1 VCC
2 CIN
3 MUTE1
4 VIN
5 YCMIX
6 YIN
7 BIAS
8 GND
9 NC
10 GND
11 NC
12 CYIN
13 CLP
14 CbIN
15 MUTE2
16 CrIN
17 GND
VCC 34
COUT 33
GND 32
VOUT 31
VSAG 30
GND 29
YOUT 28
YSAG 27
GND 26
CYOUT 25
CYSAG 24
GND 23
CbOUT 22
CbSAG 21
GND 20
CrOUT 19
CrSAG 18
RX01
10k
QX01
RN1402
CX20
FZ0.1u
CX10
100u16V
CX11
22u16V
CX12
100u16V
CX13
22u16V
CX14
100u16V
CX15
22u16V
CX16
100u16V
CX17
22u16V
CX18
100u16V
CX19
22u16V
RX04
75F
C SIGNAL
RX03
75F
COMPOSITE
VIDEO SIGNAL
Y SIGNAL
RX05
75F
CY SIGNAL
RX02
75F
RX06
75F
Cb SIGNAL
RX08
75F
Cr SIGNAL
DX06
1SS226
DX05
NC
DX07
1SS226
DX08
NC
DX09
NC
DX10
NC
DX11
NC
DX12
NC
DX13
NC
DX14
NC
DX15
NC
RX10
75F
RX11
75F
RX09
4.7k
RX07
1.8k
RX12
75F
RX13
8.2k
RX15
3.3k
RX14
3.3k
QX02
RN1402
QX03
RN1402
QX04
RN1402
RX17
8.2k
RX16
2.2k
EX16
EX17
RX18
6.8k
CX21
FZ0.1u
RX19
1.5k
EX18
EX13
EX14
EX15
100k
CY17
FL0.0012u
3
Y-OUTPUT
COMPOSITE
VIDEO
OUTPUT
1
S-VIDEO
OUTPUT
2
H:Interlace
SX01
SSAA110200
L:Progressive
JX03
CONE-YKF45-3001
EX44
EX46
EX47
EX45
EX48
EX49
1 Y-OUT
2 GND
3 PB-OUT
4 GND
5 PR-OUT
6 GND
7 RESERVE
8 LINE1
9 LINE2
10 RESERVE2
11 LINE3
12 SW-GND
13 RESERVE3
14 SW
D-SUB-14P-CONNECTER
3
4
5
6

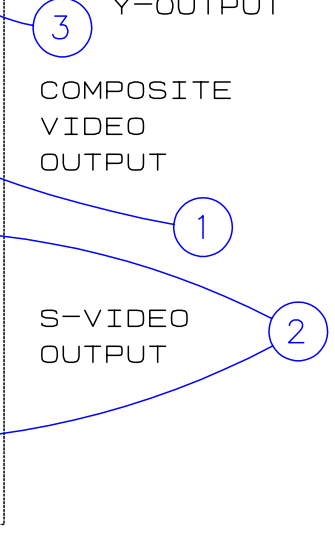
3
Y-OUTPUT
COMPOSITE
VIDEO
OUTPUT
1
S-VIDEO
OUTPUT
2

D

	SD3800	SD3800 JPN	SD3800 EURO
CNX03	NC	NC	52806-1410
JX03	NC	YKC22-0494	NC
QX02, QX03	NC	RN1402	NC
RX10, RX11, RX12	NC	75F	NC
RX07	NC	1.8k	NC
RX13	NC	8.2k	NC
RX14	NC	3.3k	NC
RX16	NC	2.2k	NC
RX17	NC	8.2k	NC
RY38	0	0	NC
RY35	NC	NC	0

E

F

2

3

-CONNECTER

G

Fig. 3-5-6

7

Output Circuit Diagram

① JX01 Composite video output D-7

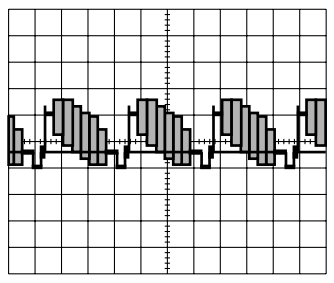

CVBS output
75Ω terminated
100% color bar

V: 500 mV/div
H: 20 μs/div

② JX01
(a) S-video output Y E-7
(b) S-video output C E-7

S-Y/C
75Ω terminated
100% color bar

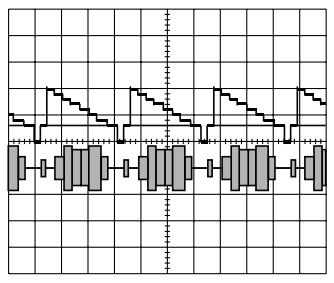

(a) Y
(b) C
V: 500 mV/div
H: 20 μs/div

③ JX01 Y/P_B/P_R output D-6

Component output
75Ω terminated
100% color bar
(Play)

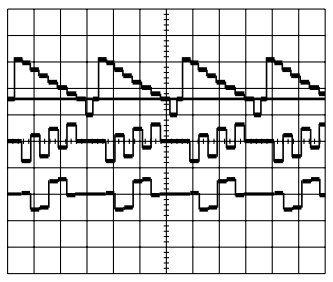

Y
P_B
P_R
V: 500 mV/div
H: 20 μs/div

④ JX01 L ch output D-6
/ R ch output D-6
(1 kHz, FS)

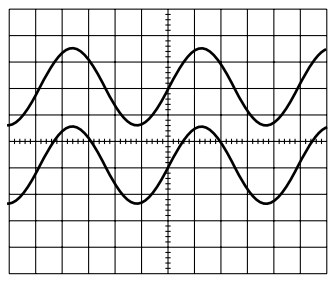

L ch output
R ch output
V: 2 V/div
H: 200 μs/div

⑤ JX01 COAXIAL -DIGITAL OUTPUT C-6

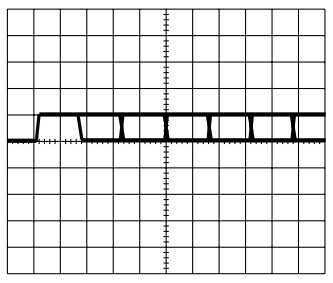

75Ω terminated

V: 500 mV/div
H: 0.1 μs/div

Fig. 3-5-7

5-5. Motor System Circuit Diagram

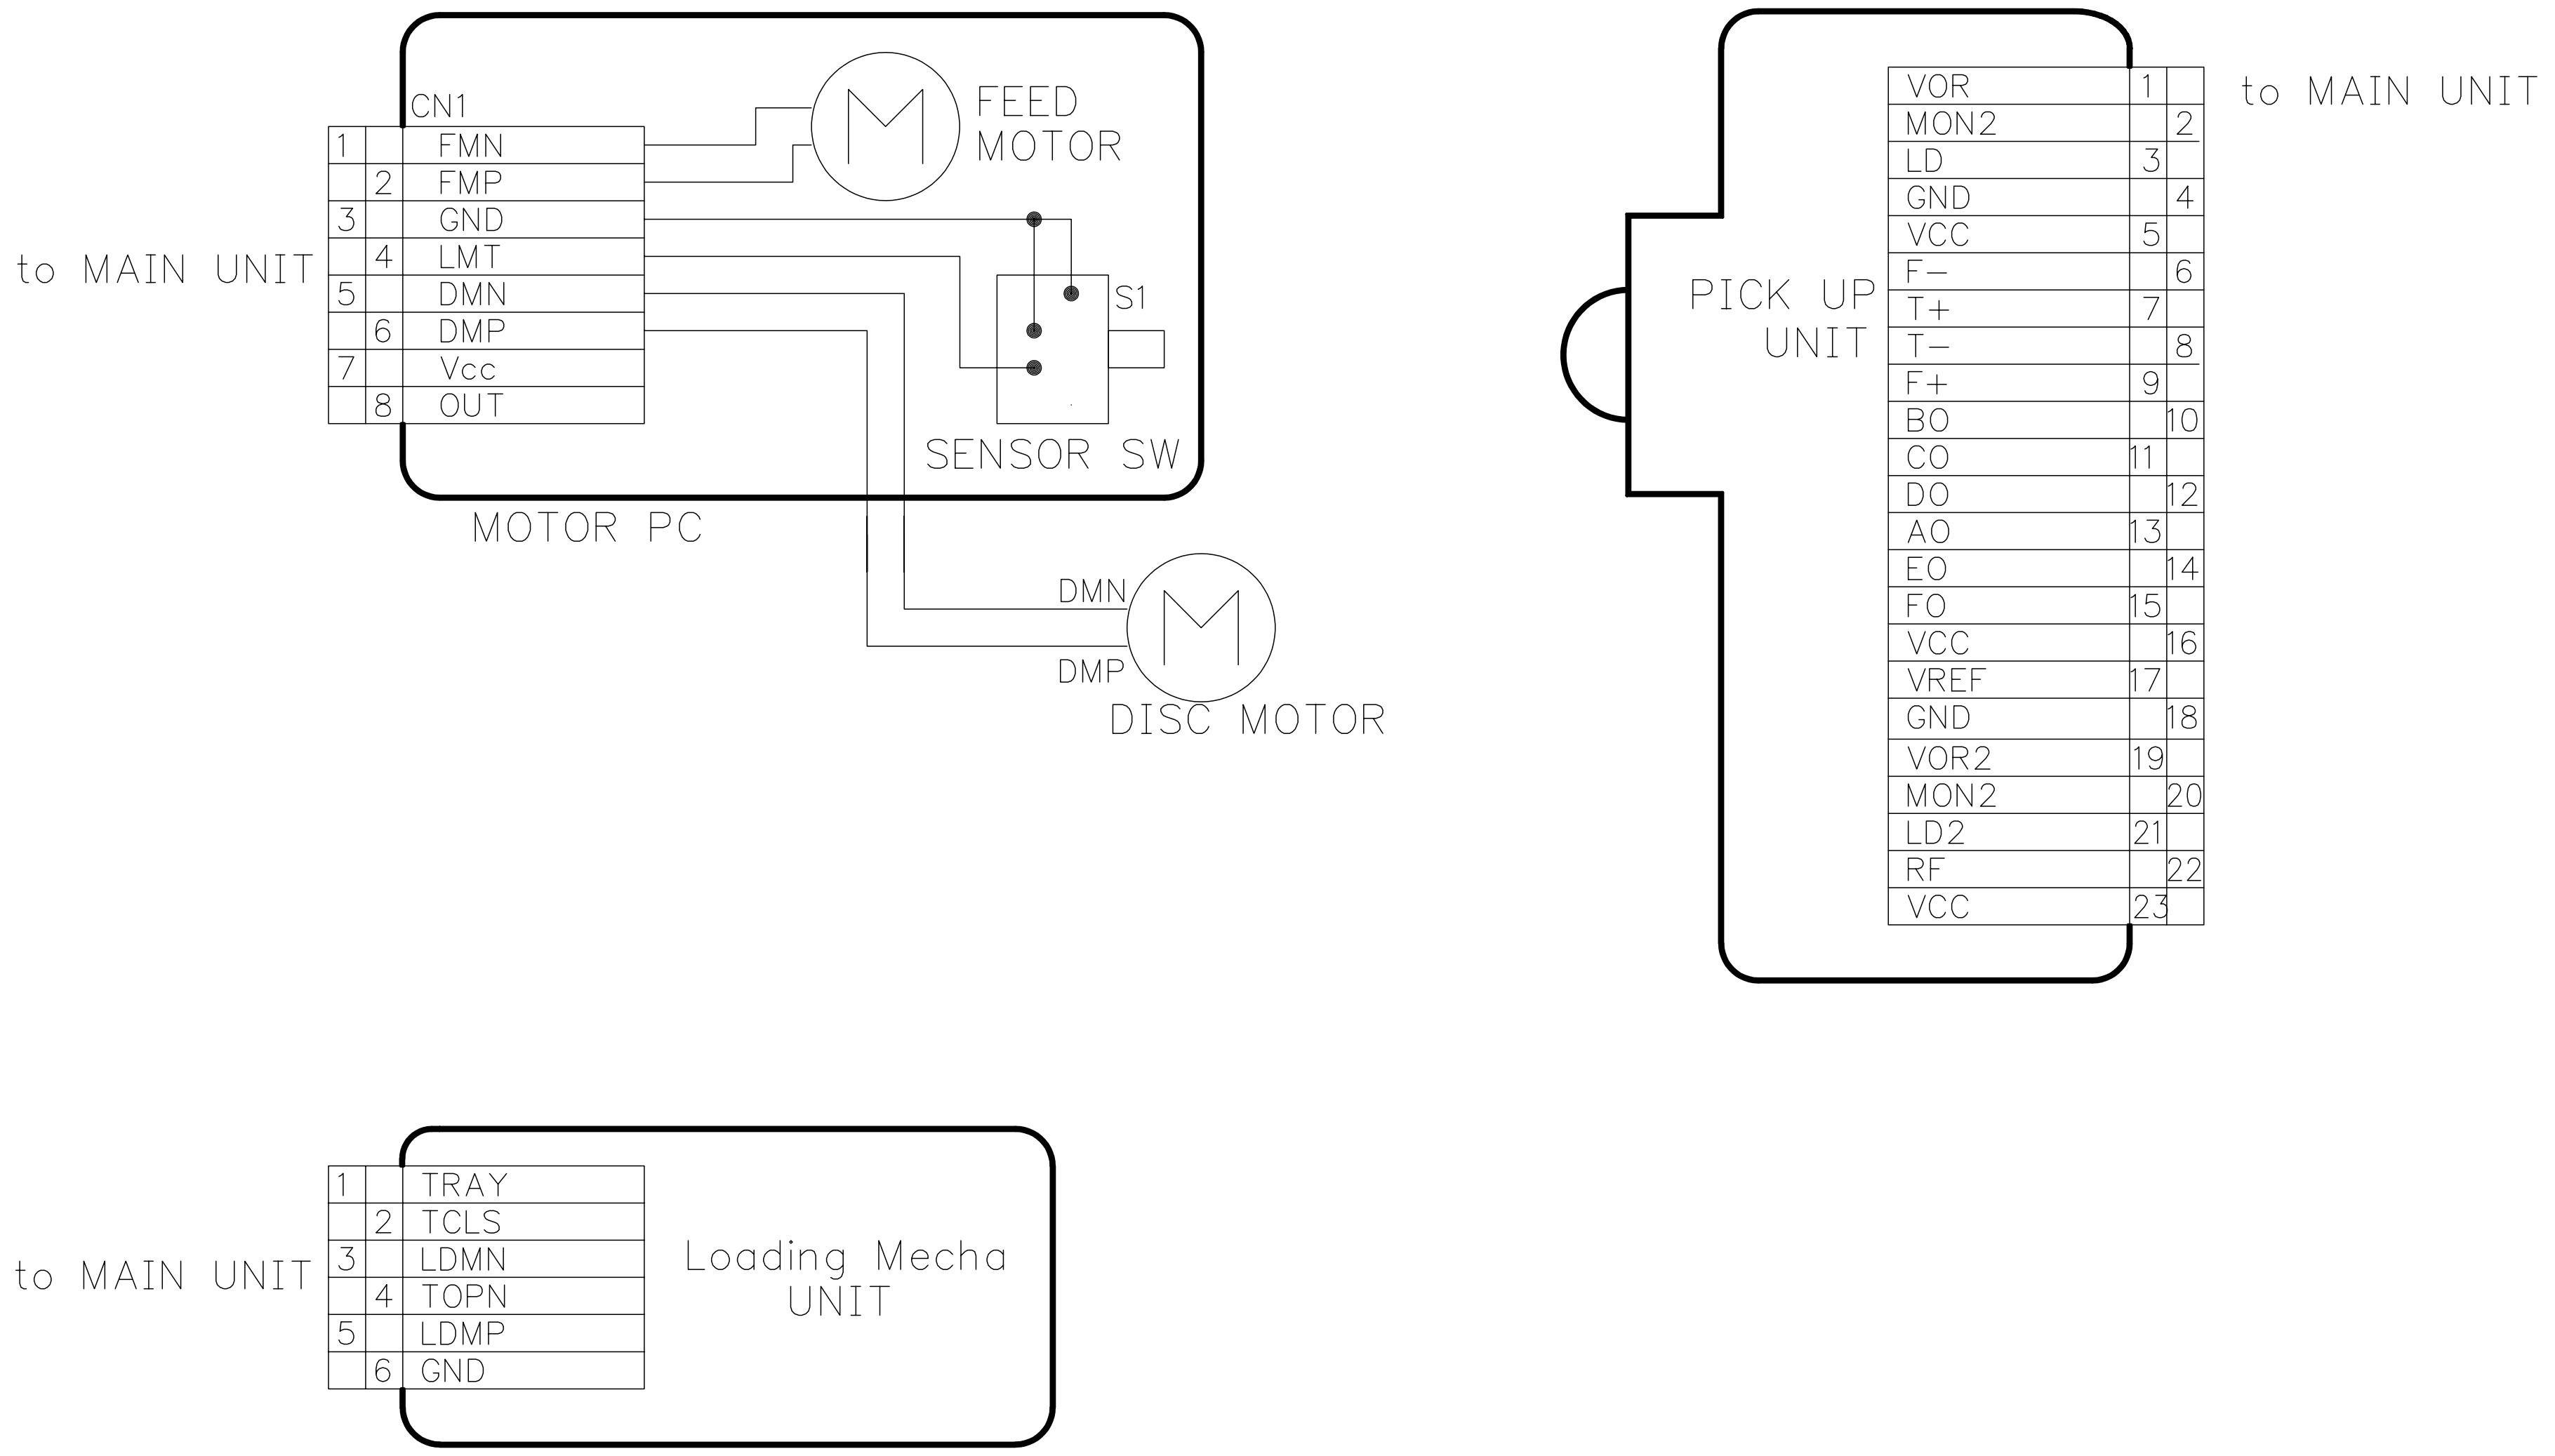
to MAIN UNIT
CN1
1 FMN
2 FMP
3 GND
4 LMT
5 DMN
6 DMP
7 Vcc
8 OUT
FEED MOTOR
S1
SENSOR SW
MOTOR PC
DMN
DMP
DISC MOTOR
PICK UP UNIT
to MAIN UNIT
VOR 1
MON2 2
LD 3
GND 4
VCC 5
F− 6
T+ 7
T− 8
F+ 9
BO 10
CO 11
DO 12
AO 13
EO 14
FO 15
VCC 16
VREF 17
GND 18
VOR2 19
MON2 20
LD2 21
RF 22
VCC 23
to MAIN UNIT
1 TRAY
2 TCLS
3 LDMN
4 TOPN
5 LDMP
6 GND
Loading Mecha UNIT

Fig. 3-5-8

6. PC BOARDS

6-1. Power Supply PC Board

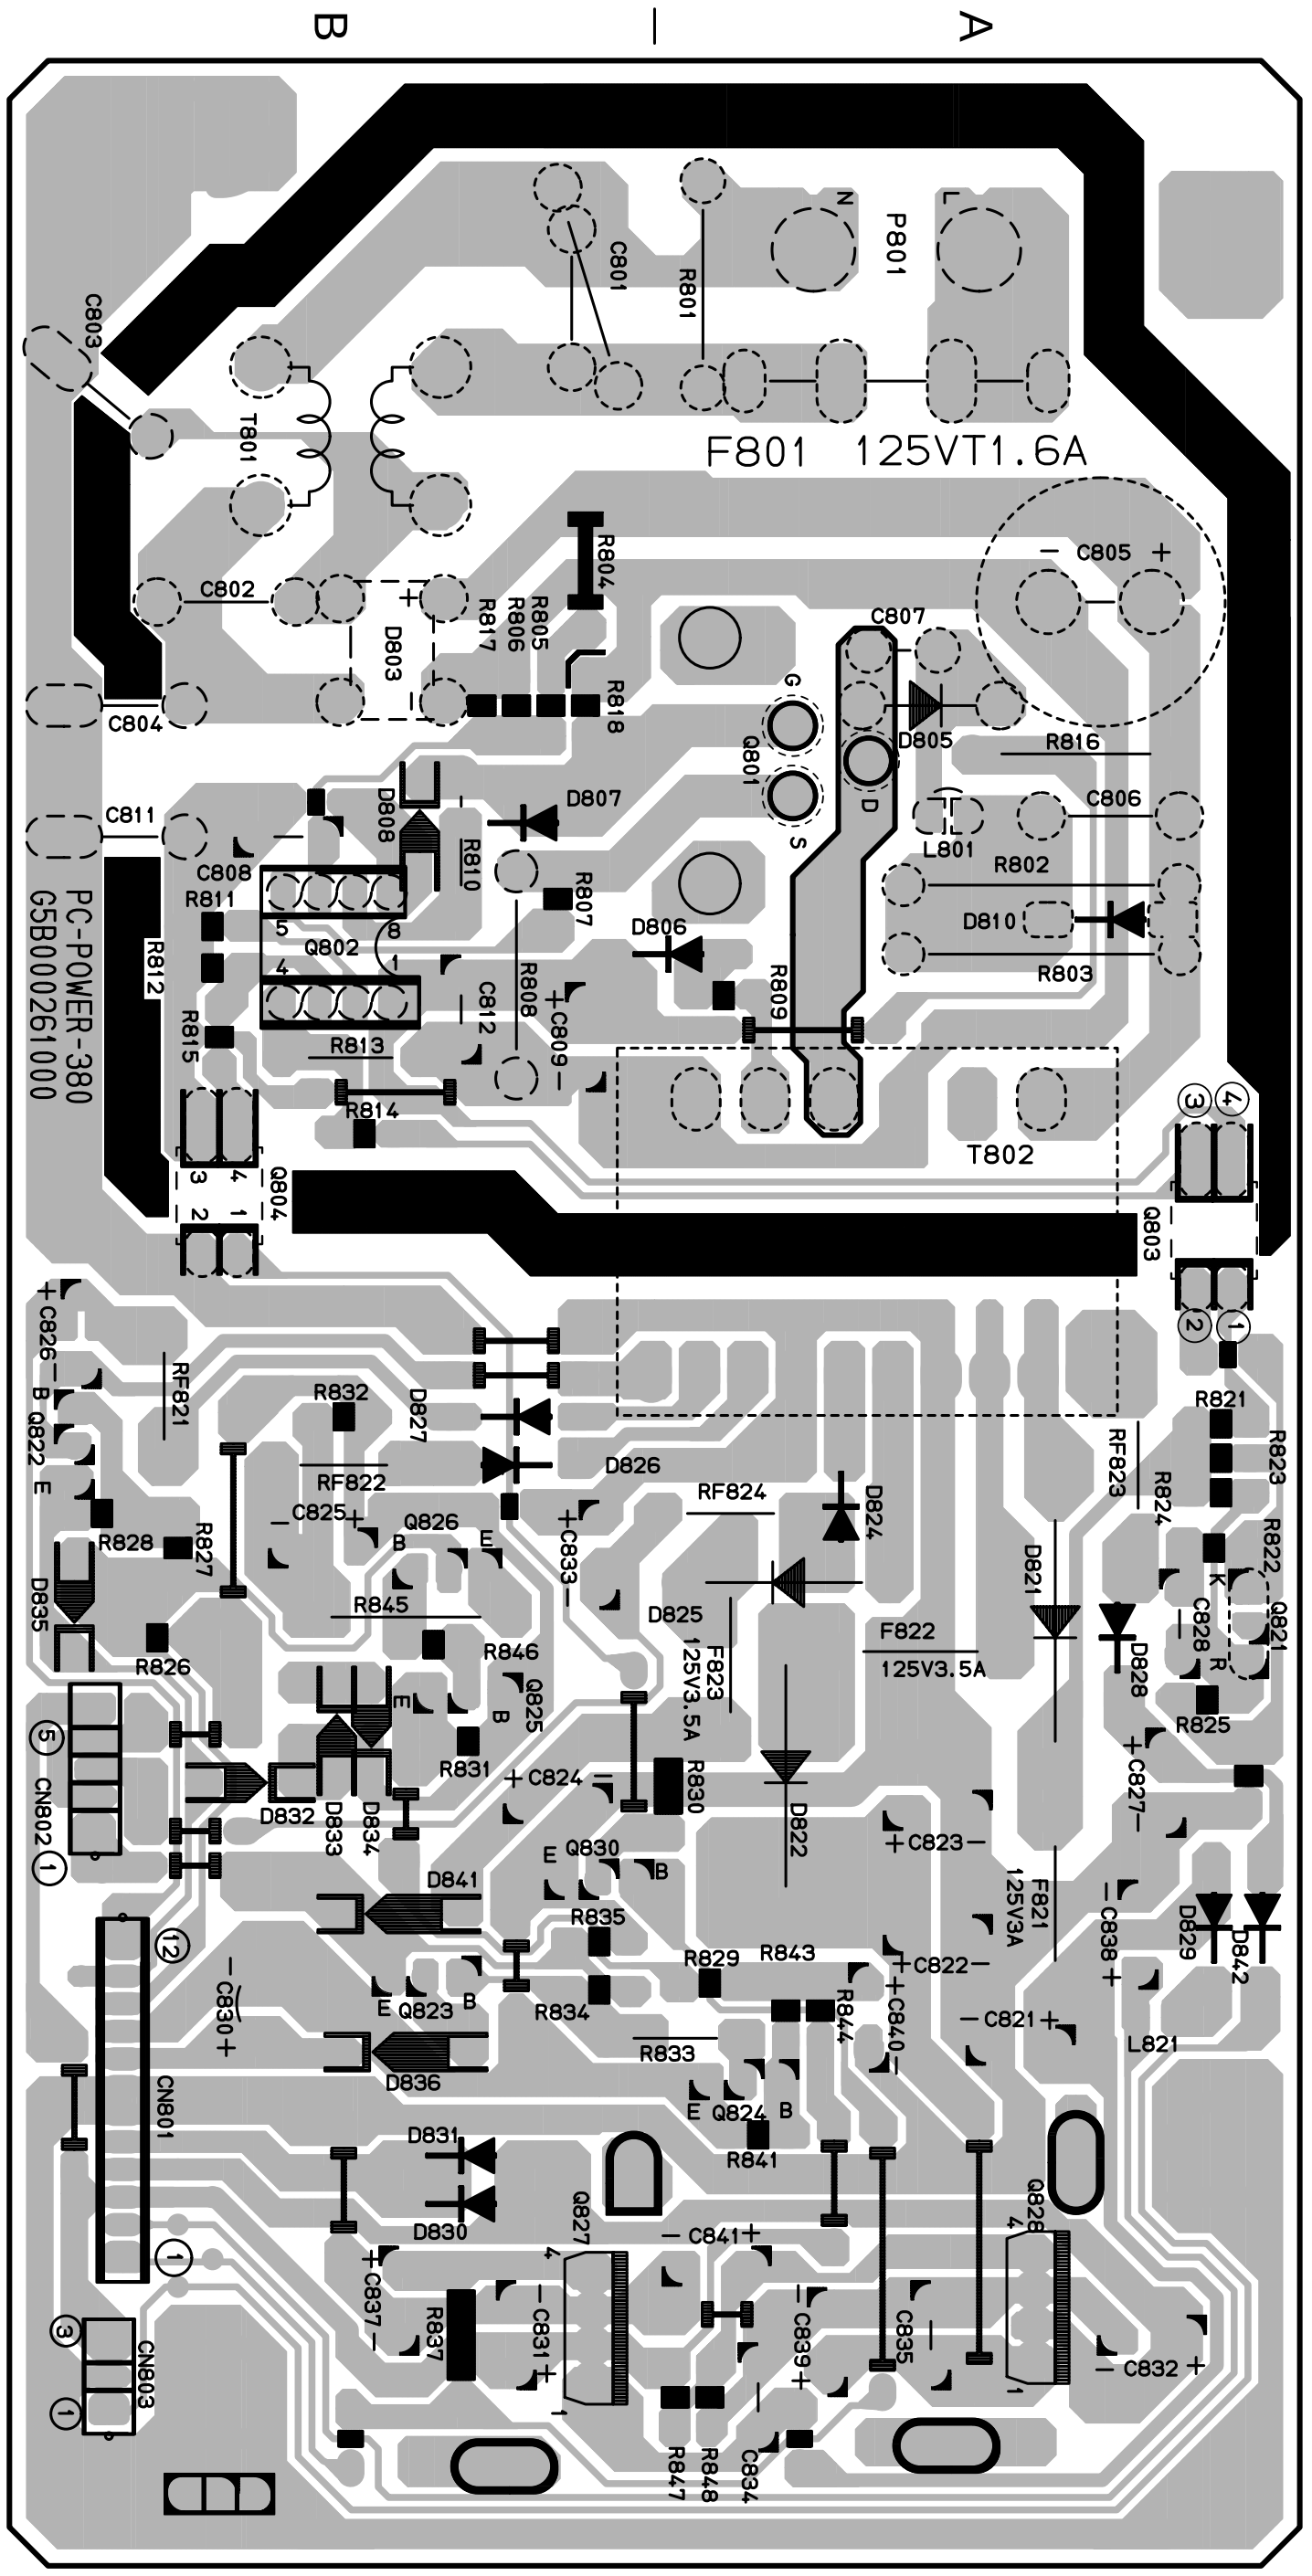
B
A
1
2
3
4
5
F801 125VT1.6A
P801
C801
R801
C803
T801
C802
C804
C805
R804
R805
R806
R817
D803
R818
C807
Q801
D805
R816
C811
C808
R811
D808
R810
D807
R807
L801
C806
R802
D806
D810
R803
Q802
R812
R815
R813
R814
R808
C812
C809
R809
T802
Q804
Q803
PC-POWER-380
G5B00261000
C826
Q822
RF821
R832
D827
D826
RF822
C825
Q826
C833
RF824
D824
R828
R827
R845
D825
F823
125V3.5A
F822
125V3.5A
D821
D828
C828
Q821
R821
R823
RF823
R824
R822
R825
D835
R826
R846
Q825
CN802
R831
C824
R830
D822
C827
D832
D833
D834
D841
Q830
C823
F821
125V3A
C838
D829
D842
R835
C830
R829
R843
C822
R834
R844
C840
C821
L821
Q823
R833
D836
Q824
CN801
R841
D831
D830
Q827
C841
Q828
C837
R837
C831
C839
C835
C832
CN803
R847
R848
C834

Fig. 3-6-1 EU02 Power Supply PC Board (Bottom side)

Part No.	Location
C801	B1
C802	B2
C803	B1
C804	B2
C805	A1
C806	A2
C807	A2
C808	B2
C809	B2
C811	B2
C812	B2
C821	A4
C822	A4
C823	A4
C824	B4
C825	B3
C826	B3
C827	A4
C828	A4
C830	B4
C831	B5
C832	A5
C833	B3
C834	A5
C835	A5
C837	B5
C838	A4
C839	A5
C840	A4
C841	A5
CN801	B5
CN802	B4
CN803	B5
D803	B2
D805	A2
D806	A2
D807	B2
D808	B2
D810	A2
D821	A4
D822	A4
D824	A3
D825	A4
D826	B3
D827	B3
D828	A4
D829	A4
D830	B5
D831	B5
D832	B4
D833	B4
D834	B4
D835	B4
D836	B5
D841	B4
D842	A4
F821	A4
F822	A4
F823	A4
L801	A2
L821	A4
P801	A1
Q801	A2
Q802	B2
Q804	B3
Q821	A4
Q822	B3
Q823	B4
Q824	A5
Q825	B4
Q826	B3
Q827	B5
Q828	A5
Q830	B4
R801	A1
R802	A2
R803	A2
R804	B1
R805	B2
R806	B2
R807	B2
R808	B2
R809	A2
R810	B2
R811	B2
R812	B2
R813	B2
R814	B3
R815	B2
R816	A2
R817	B2
R818	B2
R821	A3
R822	A3
R823	A3
R824	A3
R825	A4
R826	B4
R827	B3
R828	B3
R829	A4
R830	A4
R831	B4
R832	B3
R833	A4
R834	B4
R835	B4
R837	B5
R841	A5
R843	A4
R844	A4
R845	B4
R846	B4
R847	A5
R848	A5
RF821	B3
RF822	B3
RF823	A3
RF824	A3
T801	B1
T802	A3

6-2. Power Switch PC Board

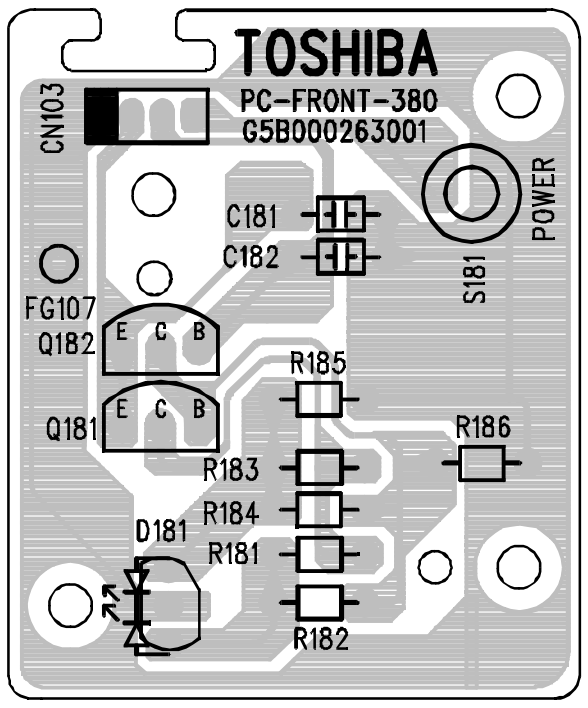
TOSHIBA
PC-FRONT-380
G5B000263001
CN103
POWER
S181
C181
C182
FG107
Q182
Q181
E C B
E C B
R185
R186
R183
R184
R181
R182
D181

Fig. 3-6-2 EU04
Power Switch PC Board
(Top side)

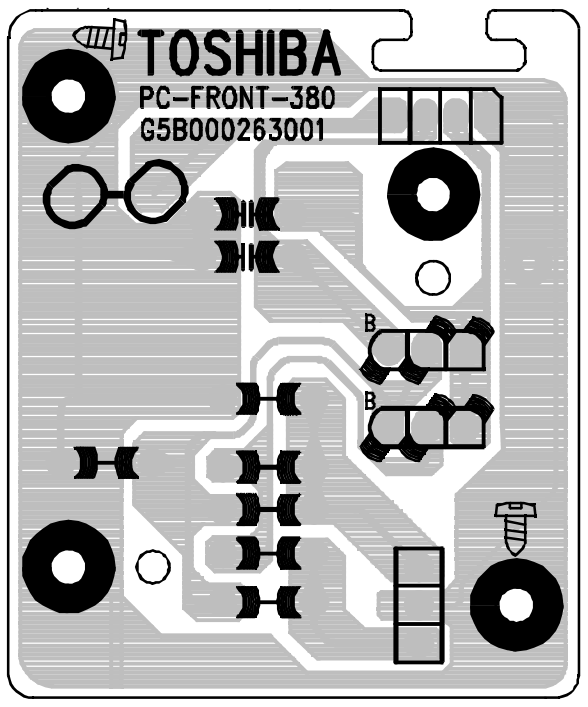
TOSHIBA
PC-FRONT-380
G5B000263001
B
B

Fig. 3-6-3 EU04
Power Switch PC Board
(Bottom side)

Part No.	Location
C181	B2
C182	B2
CN103	B2
D181	B2
FG107	B2
Q181	B2
Q182	B2
R181	B2
R182	B2
R183	B2
R184	B2
R185	B2
R186	B2
S181	B2

6-3. Main PC Board

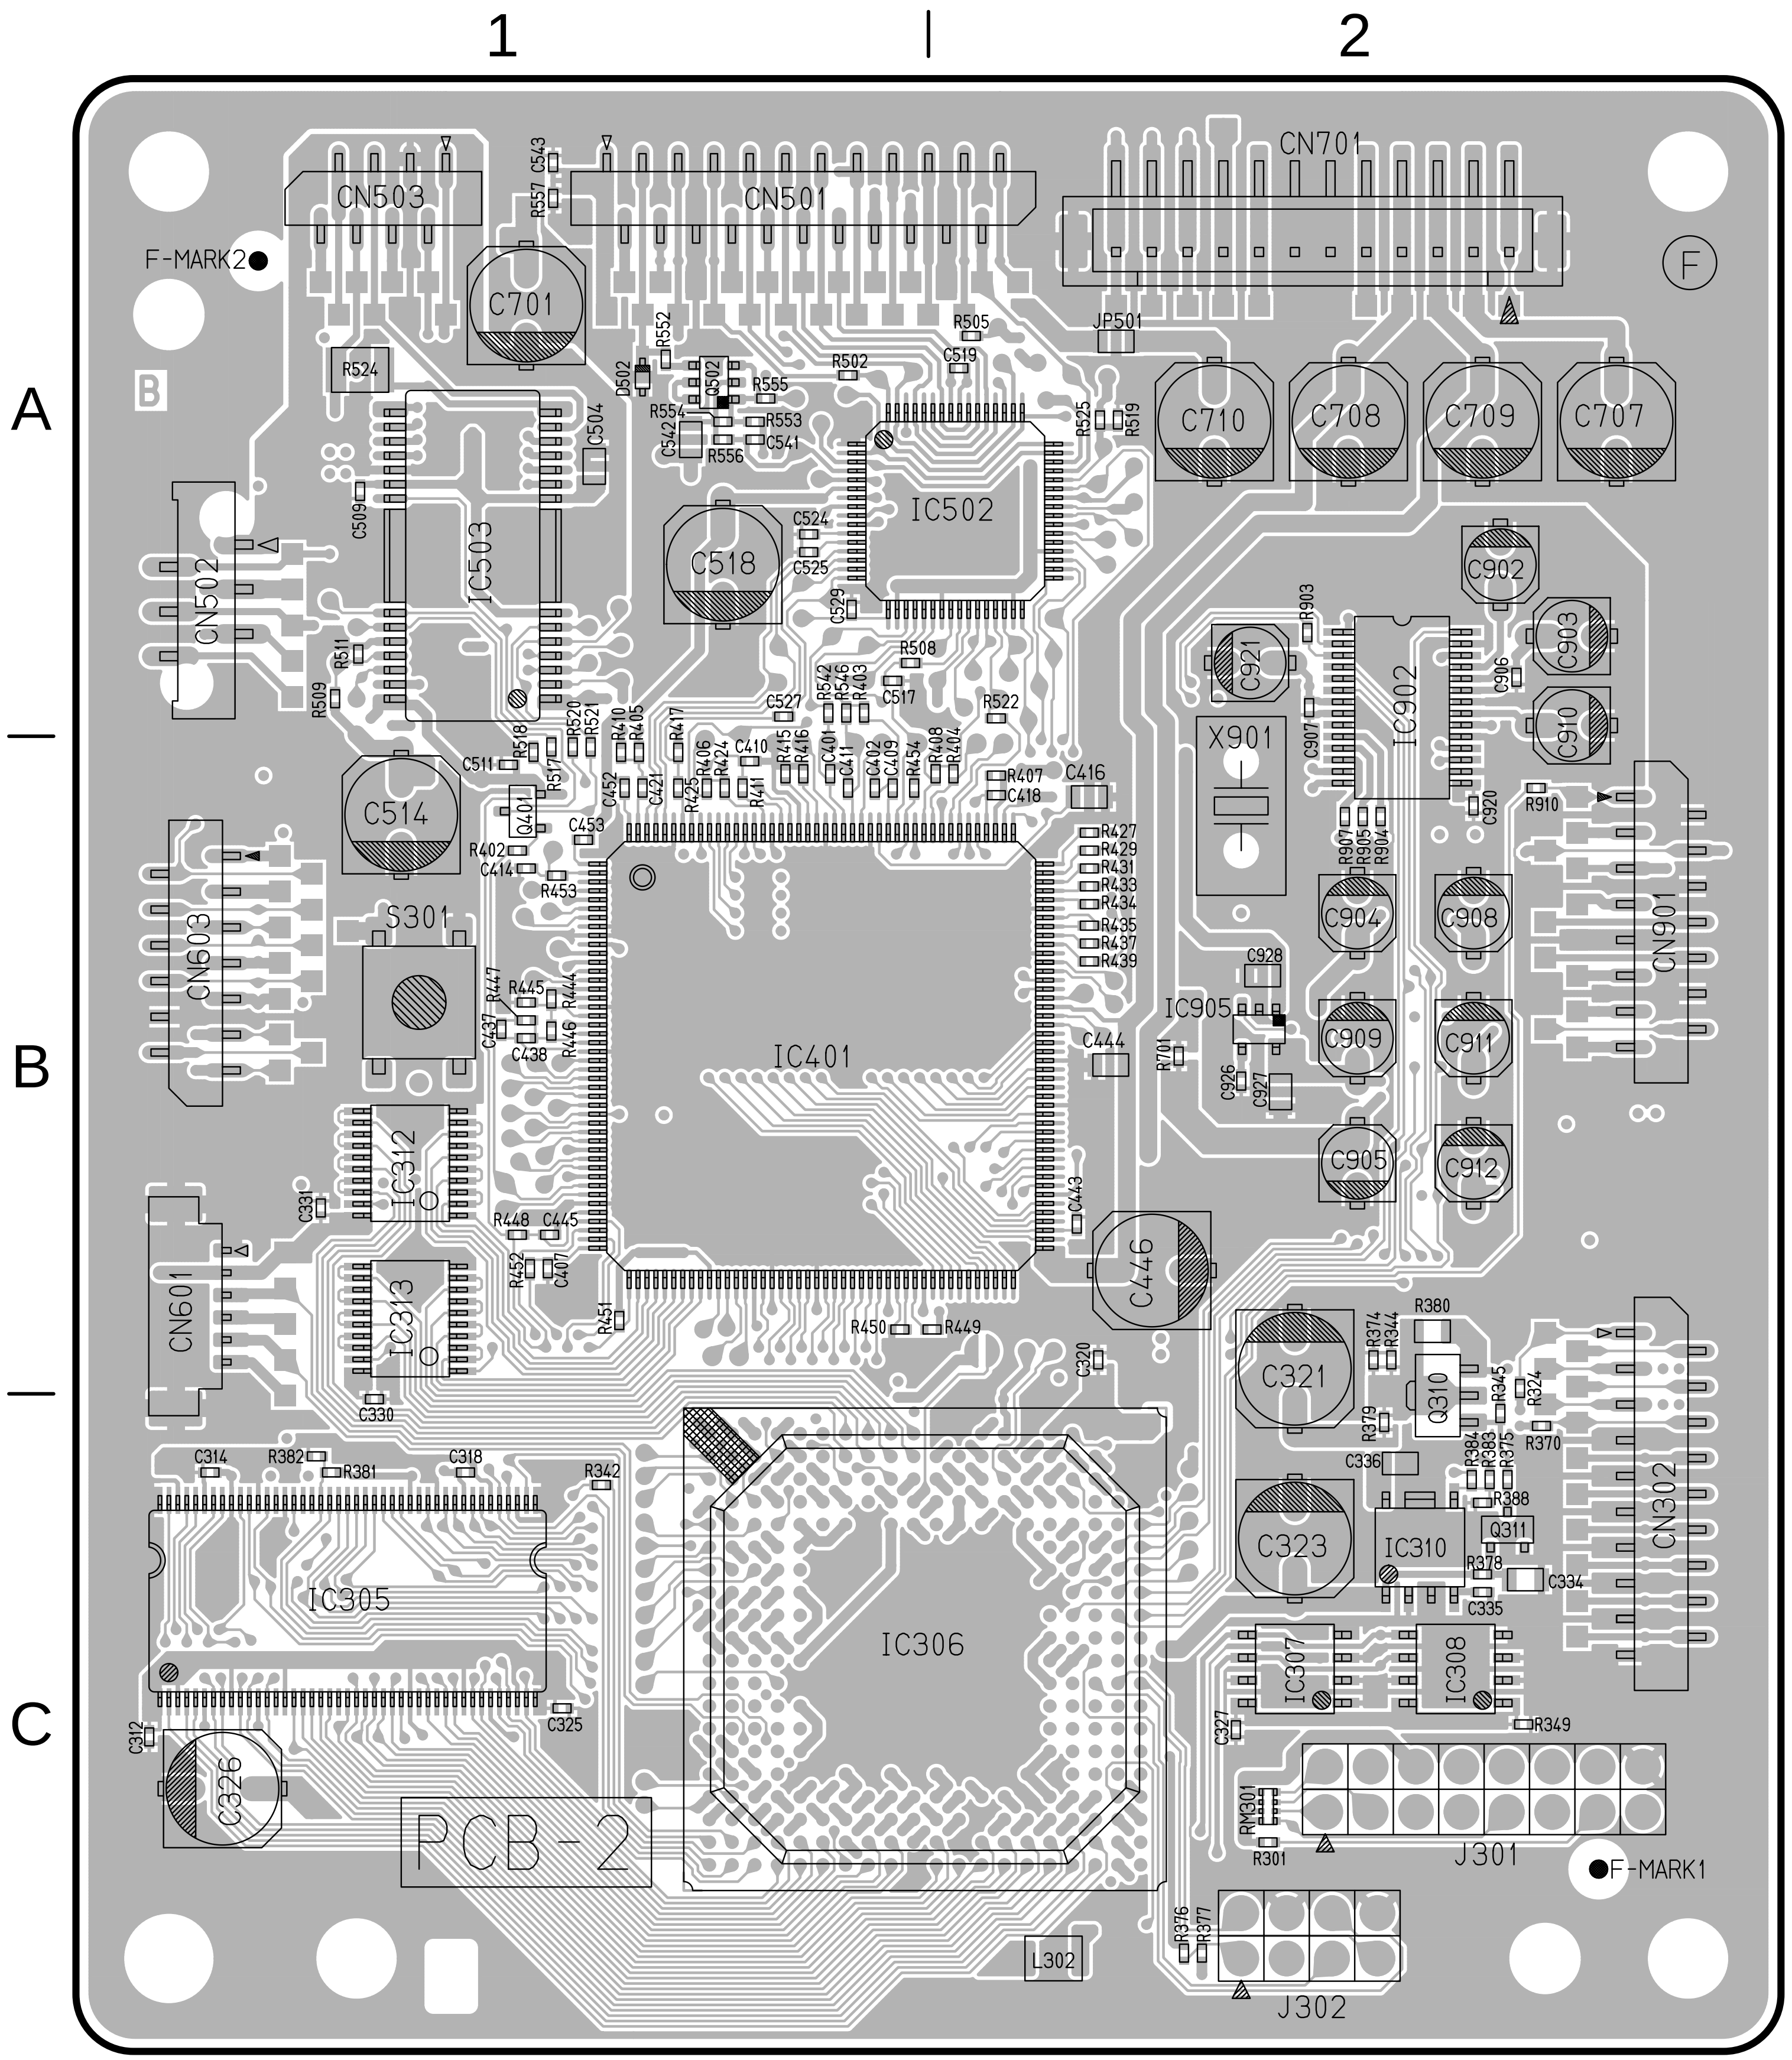
1
2
A
B
C
CN503
CN501
CN701
F-MARK2
F-MARK1
C701
R524
C543
R557
R552
D502
Q502
R555
R554
R553
C542
R556
C541
R502
R505
C519
JP501
R525
R519
C710
C708
C709
C707
F
B
C504
C509
IC503
CN502
R511
R509
C518
C524
C525
C529
IC502
R508
C517
R522
C527
R542
R546
R543
C902
C903
C910
R903
C921
C906
IC902
X901
C907
R910
C920
R907
R905
R904
CN901
C514
C511
R518
R517
R520
R521
R410
R405
R417
R406
R424
C410
R415
R416
C401
C411
C402
C409
R454
R408
R404
R407
C418
C416
R426
R411
C452
C421
Q401
R402
C414
C453
R453
R427
R429
R431
R433
R434
R435
R437
R439
S301
CN603
R447
R445
R444
R446
C437
C438
IC401
C928
IC905
R701
C444
C926
C927
C904
C908
C909
C911
C905
C912
IC312
C331
R448
C445
R452
C407
C443
C446
CN601
IC313
R451
R450
R449
C320
C330
C321
R374
R344
R380
Q310
R345
R324
R379
R370
R384
R383
R375
C336
R388
CN302
C314
R382
R381
C318
R342
IC306
C323
IC310
Q311
R378
C334
C335
IC305
IC307
IC308
C325
C327
R349
C312
C326
PCB-2
RM301
R301
J301
R376
R377
L302
J302

Fig. 3-6-4 EU01 Main PC Board (Top pattern and Top parts location diagram)

Main PC Board (Top Side)

Part No.	Location
C312	C1
C314	C1
C318	C1
C320	B2
C321	B2
C323	C2
C325	C1
C326	C1
C327	C2
C330	C1
C331	B1
C334	C2
C335	C2
C336	C2
C401	B1
C402	B1
C407	B1
C409	B1
C410	B1
C411	B1
C414	B1
C416	B2
C418	B2
C421	B1
C437	B1
C438	B1
C443	B2
C444	B2
C445	B1
C446	B2
C452	B1
C453	B1
C504	A1
C509	A1
C511	B1
C514	B1
C517	A1
C518	A1
C519	A2
C524	A1
C525	A1
C527	A1
C529	A1
C541	A1
C542	A1
C543	A1
C701	A1
C707	A2
C708	A2
C709	A2
C710	A2
C902	A2
C903	A2
C904	B2
C905	B2
C906	A2
C907	A2
C908	B2
C909	B2
C910	A2
C911	B2
C912	B2
C920	B2
C921	A2
C926	B2
C927	B2
C928	B2
CN302	C2
CN501	A1
CN502	A1
CN503	A1
CN601	B1
CN603	B1
CN701	A2
CN901	B2
D502	A1
E201	B2
E301	B2
E302	B2
E303	B2
E304	B2
E305	C2
E306	C2
E307	C2
E308	C2
E309	C2
E310	C2
E311	C2
E312	C2
E313	C2
E314	C1
E315	B2
E316	B2
E320	C2
E321	C2
E322	B1
E323	C2
E324	C2
E325	C2
E326	C1
E327	C1
E328	C1
E329	C1
E330	C1
E331	C2
E332	B1
E333	C1
E334	C1
E335	C1
E336	C1
E337	C1
E401	B2
E402	B1
E403	A1
E405	B1
E406	B1
E407	B1
E408	B2
E409	B2
E410	B1
E411	B2
E412	B2
E413	B1
E414	B1
E415	B1
E416	B1
E417	B1
E418	B1
E419	B1
E420	B1
E421	B1
E422	B1
E423	B1
E424	B1
E425	B1
E426	B1
E501	A1
E502	A1
E503	A1
E504	A1
E505	A2
E506	A2
E507	A1
E508	A1
E509	A1
E510	A1
E511	A1
E512	A1
E513	A1
E514	A1
E515	A1
E516	A1
E517	A1
E518	A1
E519	A2
E520	A2
E521	A2
E522	A1
E523	A1
E524	A1
E525	A1
E526	A1
E527	A1
E528	A1
E529	A1
E530	A1
E531	A1
E532	A1
E533	A2
E534	A1
E535	A2
E536	A2
E537	A1
E538	A1
E539	A1
E540	A1
E541	A1
E542	A1
E543	A1
E544	A1
E545	A2
E546	A1
E547	A1
E548	A2
E549	A1
E550	A1
E551	A1
E552	A1
E553	A1
E554	A1
E555	A1
E556	A1
E557	A1
E558	A1
E559	A1
E560	A1
E561	A2
E562	A2
E563	A2
E564	A2
E565	A2
E566	A2
E567	A2
E568	A2
E569	A2
E570	A2
E571	A2
E572	A2
E573	A2
E574	A2
E575	A2
E576	A2
E577	A2
E578	A2
E579	A1
E580	A1
E581	A1
E582	A1
E583	A2
E584	A1
E585	A1
E586	A1
E587	A1
E588	A1
E589	A1
E601	B1
E602	B1
E603	B1
E604	B1
E605	B1
E606	B1
E608	B1
E609	B1
E610	B1
E611	B1
E612	B1
E613	B1
E614	B1
E615	B1
E616	C1
E617	B1
E618	C1
E619	C1
E651	B1
E652	B1
E701	A2
E702	A2
E703	A2
E704	A1
E705	A2
E706	A2
E707	A2
E708	A2
E709	A2
E710	A2
E711	A2
E712	A2
E713	A2
E714	A2
E715	A2
E901	B2
E902	B2
E903	B2
E904	B2
E905	B2
E906	B2
E907	B2
E908	B2
E909	B2
E910	B2
E911	B2
E912	B2
E913	B2
E914	B2
E915	B2
F-MARK1	C2
F-MARK2	A1
IC305	C1
IC306	C1
IC307	C2
IC308	C2
IC310	C2
IC312	B1
IC313	B1
IC401	B1
IC502	A2
IC503	A1
IC902	A2
IC905	B2
J301	C2
J302	C2
JP301	B2
JP501	A2
L302	C2
Q310	C2
Q311	C2
Q401	B1
Q502	A1
R301	C2
R324	B2
R342	C1
R344	B2
R345	C2
R349	C2
R370	C2
R374	B2
R375	C2
R376	C2
R377	C2
R378	C2
R379	C2
R380	B2
R381	C1
R382	C1
R383	C2
R384	C2
R388	C2
R402	B1
R403	A1
R404	B2
R405	B1
R406	B1
R407	B2
R408	B2
R410	B1
R411	B1
R415	B1
R416	B1
R417	B1
R424	B1
R425	B1
R427	B2
R429	B2
R431	B2
R433	B2
R434	B2
R435	B2
R437	B2
R439	B2
R444	B1
R445	B1
R446	B1
R447	B1
R448	B1
R449	B2
R450	B1
R451	B1
R452	B1
R453	B1
R454	B1
R502	A1
R505	A2
R508	A1
R509	A1
R511	A1
R517	B1
R518	B1
R519	A2
R520	B1
R521	B1
R522	A2
R524	A1
R525	A2
R542	A1
R546	A1
R552	A1
R553	A1
R554	A1
R555	A1
R556	A1
R557	A1
R701	B2
R903	A2
R904	B2
R905	B2
R907	B2
R910	B2
RM301	C2
S301	B1
TP401	B1
TP402	B1
TP403	B2
TP404	B2
TP405	B1
TP406	B1
TP407	B2
TP408	B1
TP409	B2
TP410	B1
TP411	B1
TP412	B1
TP413	B1
TP414	B1
TP501	B1
TP502	A2
TP503	B1
TP504	B1
X901	B2

Main PC Board (Bottom Side)

Part No.	Location
C301	C1
C302	C2
C303	C1
C304	C2
C305	B2
C306	B2
C307	C1
C308	C1
C309	C2
C310	C2
C311	C1
C313	C2
C315	C2
C316	C2
C317	C2
C319	C1
C322	C1
C324	C1
C328	C1
C329	C1
C332	B2
C333	C2
C337	C1
C403	B2
C404	B2
C405	B2
C406	B2
C408	B2
C412	B2
C413	B2
C415	B2
C417	A2
C419	B1
C420	B2
C422	B1
C423	B2
C424	B1
C425	B1
C426	B1
C427	B1
C428	B1
C429	B1
C430	B1
C431	B1
C432	B1
C433	B1
C434	B1
C435	B1
C436	B2
C439	B1
C440	B1
C441	B2
C442	B1
C447	B2
C448	B1
C449	B2
C450	B2
C451	B2
C501	A2
C502	A2
C503	A2
C505	A2
C506	A2
C507	A2
C508	A1
C510	A1
C512	B2
C513	A1
C515	A2
C516	A2
C520	A2
C521	A2
C522	A1
C523	A1
C526	A1
C528	A1
C530	A2
C532	A1
C533	A1
C534	A2
C539	A2
C601	B2
C602	B2
C603	B2
C702	A1
C703	A1
C704	A1
C705	A1
C706	A1
C711	A1
C712	A1
C713	A1
C714	A1
C715	A1
C901	B1
C913	A1
C914	A1
C915	B1
C916	B1
C917	B1
C918	B1
C919	B1
C922	B1
C923	B1
C924	B1
C925	B1
D501	A1
D901	B1
D902	B1
D903	B1
F-MARK3	C1
F-MARK4	A2
IC301	B2
IC302	B2
IC303	B2
IC304	B2
IC309	B2
IC402	B2
IC501	A2
IC504	A2
IC901	B1
IC903	B1
IC904	B1
Q301	C1
Q302	C1
Q303	C1
Q304	C1
Q305	C1
Q306	C1
Q307	C2
Q308	C1
Q309	C1
Q501	A1
Q503	B2
Q504	A2
Q505	A2
Q506	A2
R302	C2
R303	C1
R304	C2
R305	C2
R306	C1
R307	B2
R308	B2
R309	C2
R310	C1
R311	C2
R312	C2
R313	C1
R314	C2
R315	C2
R316	C2
R317	C2
R318	C2
R319	C1
R320	C1
R321	C1
R322	C1
R323	C1
R325	C1
R326	B1
R327	C1
R328	C1
R329	C1
R330	C1
R331	C1
R332	C1
R333	C1
R334	C1
R335	C1
R336	C1
R337	C1
R338	C1
R339	C1
R340	B2
R341	C1
R343	C2
R346	C2
R347	C2
R348	C2
R350	C2
R351	C1
R352	B1
R353	B1
R354	C1
R355	C1
R356	C1
R357	C2
R358	C2
R359	C1
R360	C1
R361	C2
R362	C2
R363	C2
R364	C2
R365	C2
R366	C1
R367	C1
R368	C1
R369	C1
R371	C1
R372	C1
R373	B1
R385	A1
R386	A1
R387	A1
R401	A2
R409	B2
R412	B1
R413	B2
R414	B2
R418	B1
R419	B2
R420	B2
R421	B2
R422	B2
R423	B2
R426	B1
R428	B1
R430	B1
R432	B1
R436	B1
R438	B1
R442	B1
R443	B1
R455	B2
R461	B2
R501	A2
R503	A2
R504	A2
R506	A1
R507	A1
R510	A1
R512	A1
R513	B2
R514	A2
R515	A2
R516	A2
R523	A2
R526	A2
R527	A2
R528	A2
R529	A2
R530	A2
R531	A2
R532	A2
R533	A2
R534	A2
R535	A1
R536	A1
R537	A2
R538	A2
R539	A1
R540	A2
R541	A2
R545	A1
R547	A2
R551	A2
R601	B2
R602	B2
R603	B2
R604	B2
R605	B2
R606	B2
R607	B2
R608	B2
R609	B2
R610	B2
R615	B2
R616	B2
R702	A1
R901	B1
R906	B1
R908	B1
R909	B1
R911	B1
R912	B1
R913	B1
R914	B1
R915	B1
R916	B1
R917	B1
R918	B1
R919	B1
RM302	C2
RM303	C2
RM304	C2
RM305	C2
RM306	C2
RM307	C2
RM308	C2
RM309	C2
RM310	C2

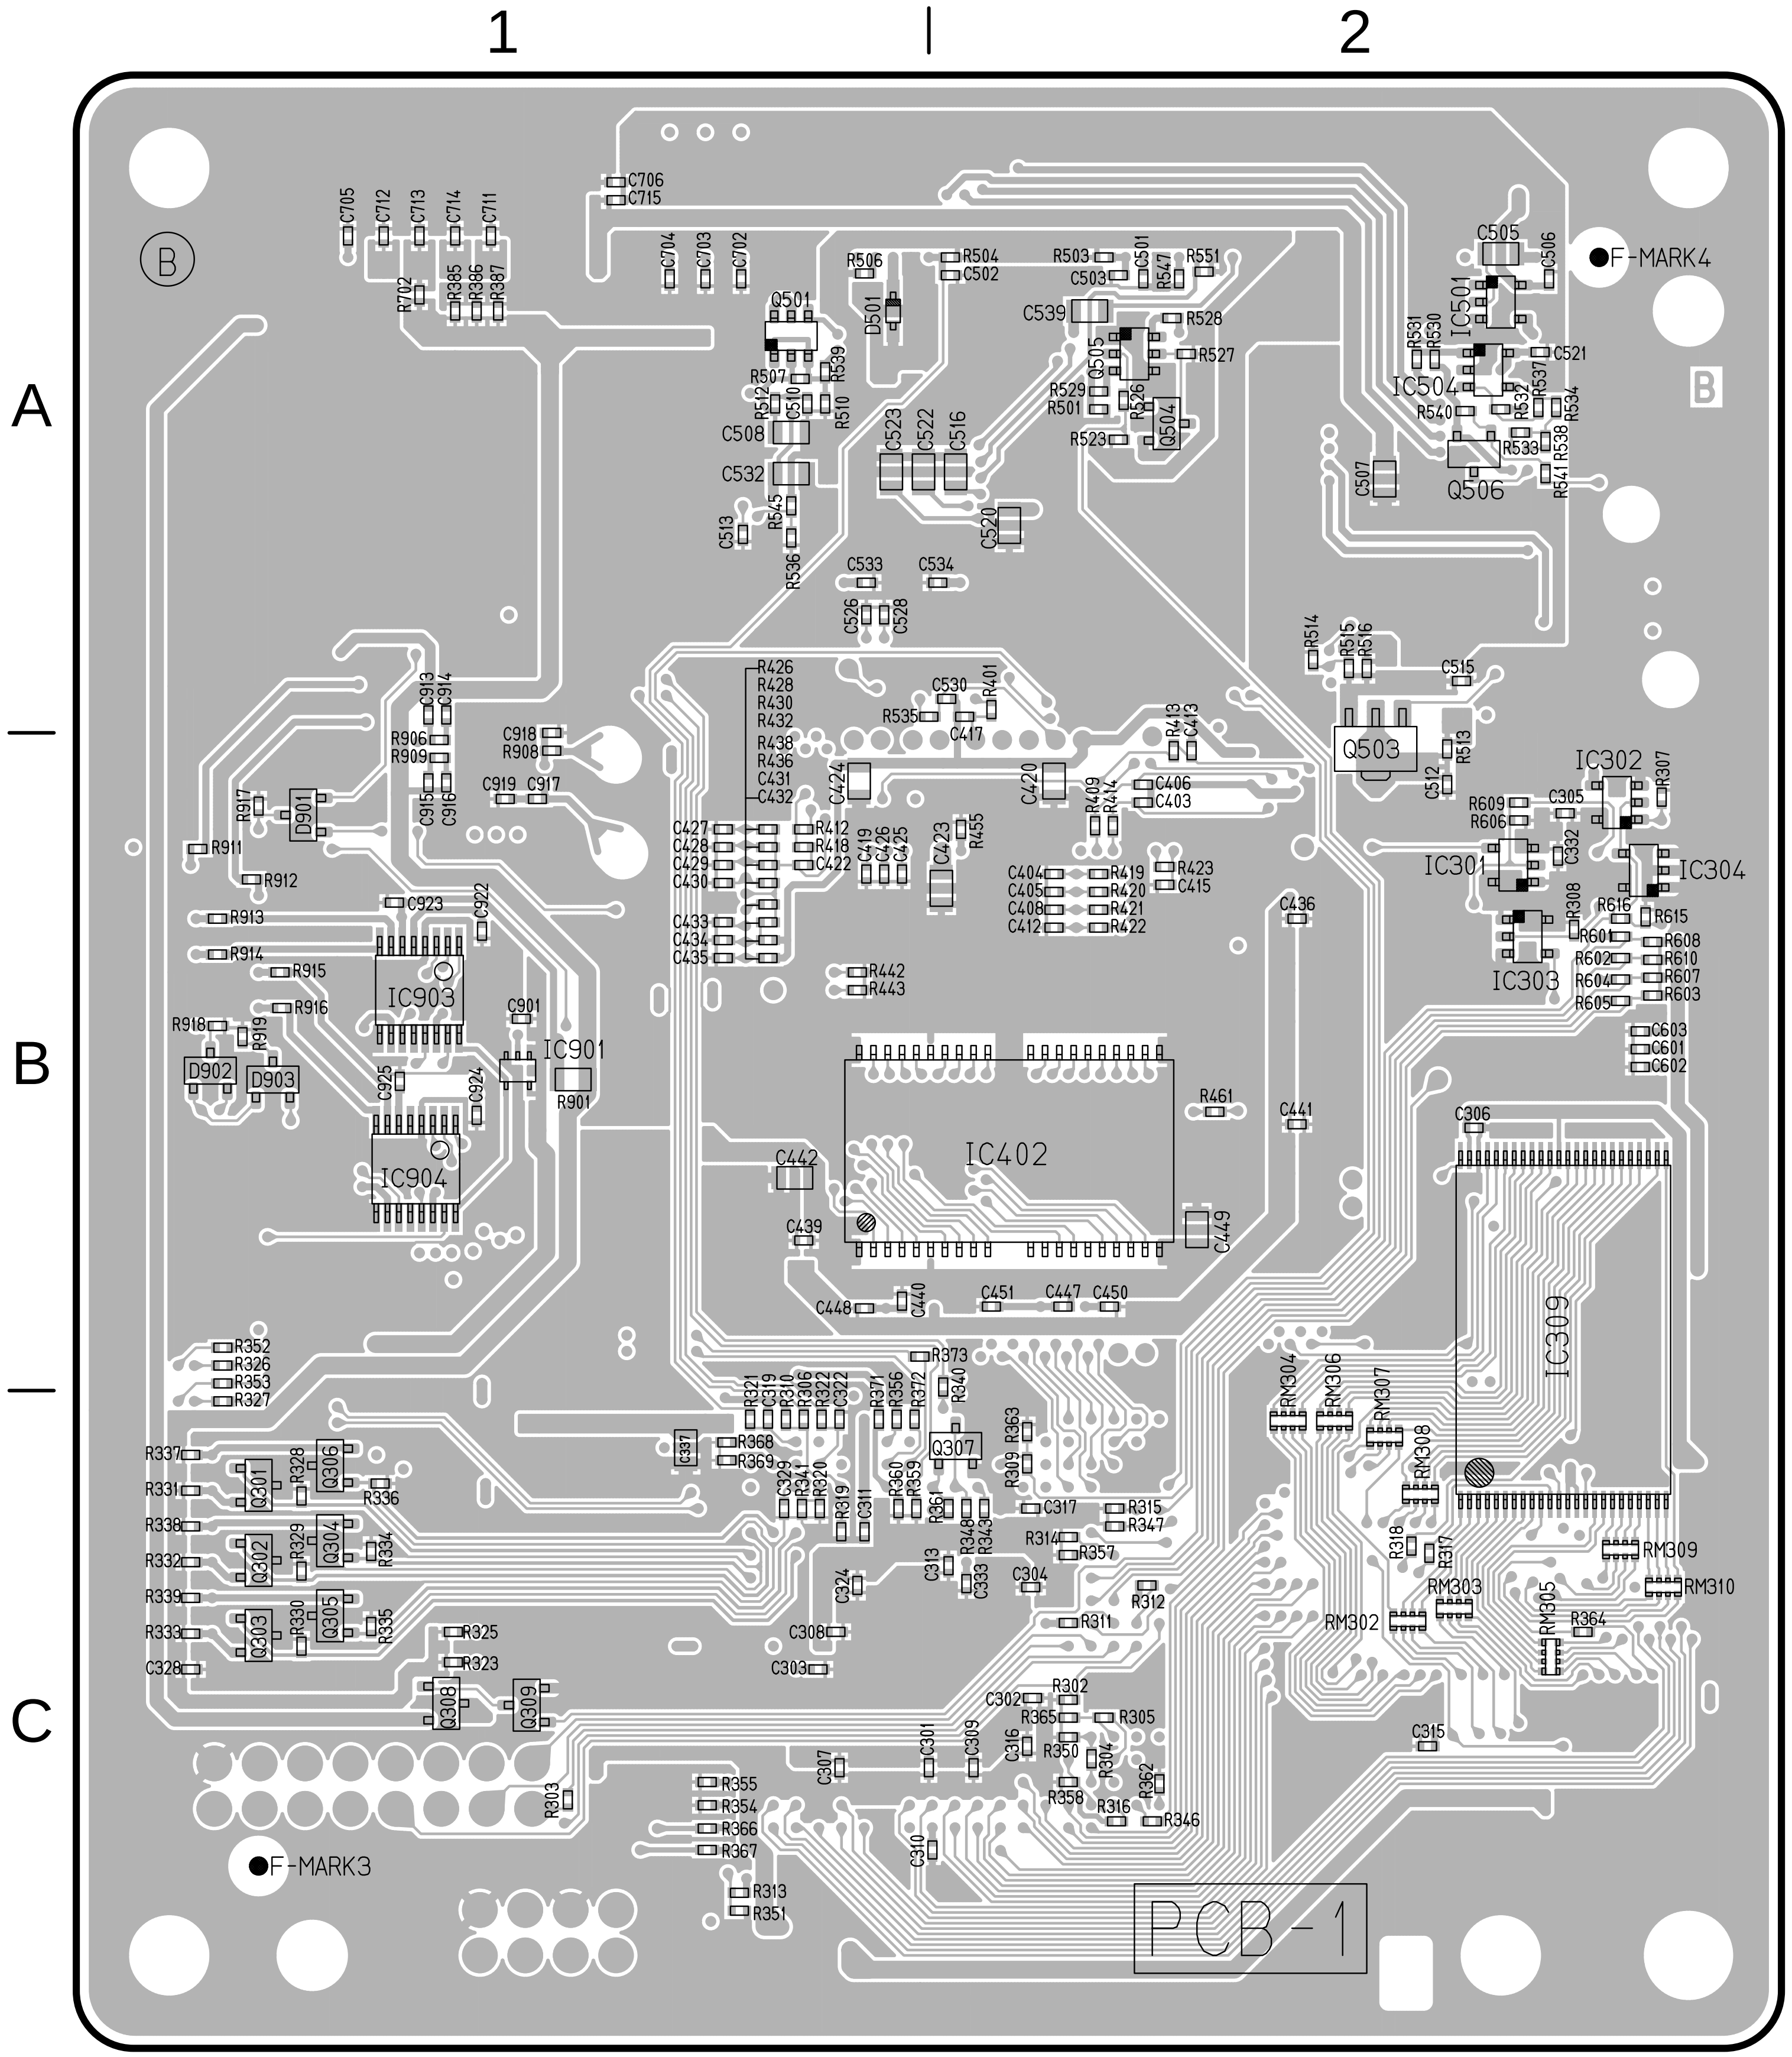
1
2
A
B
C
B
B
F-MARK4
F-MARK3
IC501
IC504
Q501
D501
Q503
Q504
Q505
Q506
IC301
IC302
IC303
IC304
IC309
IC402
IC901
IC903
IC904
D901
D902
D903
Q301
Q302
Q303
Q304
Q305
Q306
Q307
Q308
Q309
RM302
RM303
RM304
RM305
RM306
RM307
RM308
RM309
RM310
PCB-1

Fig. 3-6-5 EU01 Main PC Board (Bottom pattern and bottom parts location diagram)

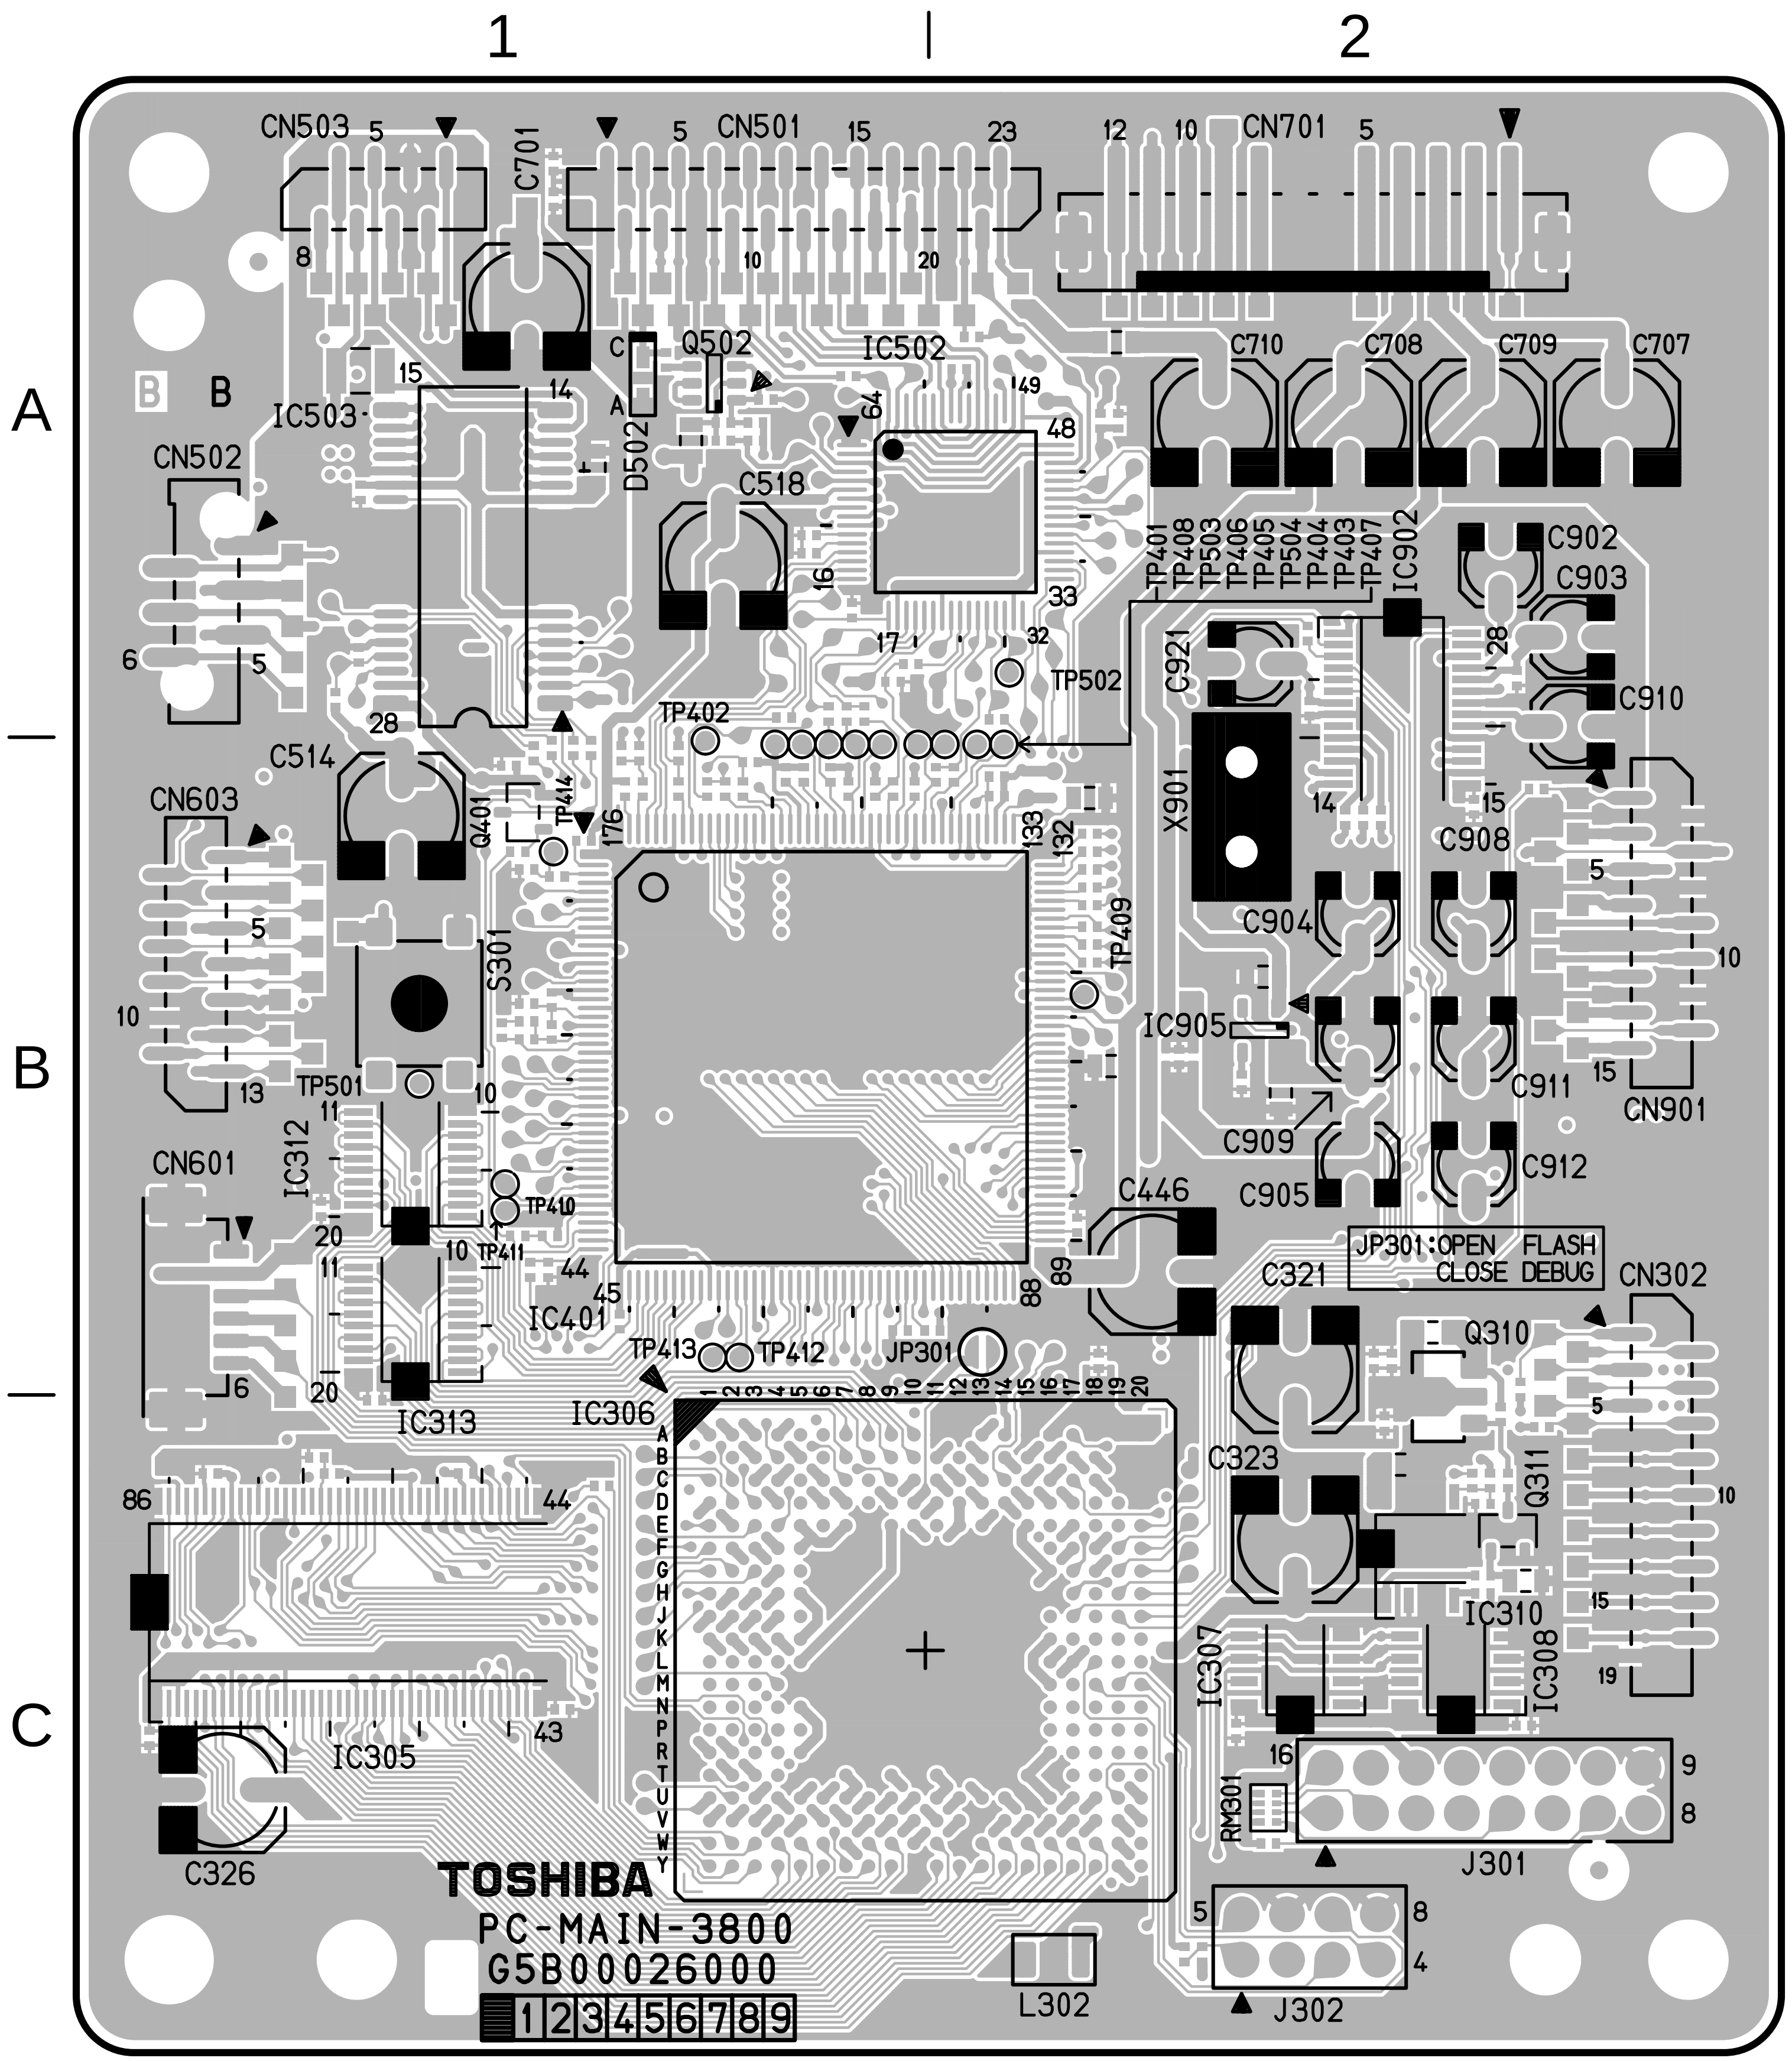
1
2
A
B
C
CN503
CN501
CN701
C701
Q502
IC502
C710
C708
C709
C707
IC503
CN502
D502
C518
C514
CN603
S301
Q401
TP402
TP502
TP501
X901
C921
IC902
C902
C903
C910
C908
C904
IC905
C909
C905
C911
C912
CN901
IC312
CN601
IC313
IC401
TP410
TP411
TP412
TP413
JP301
IC306
C446
C321
JP301:OPEN FLASH
CLOSE DEBUG
CN302
Q310
C323
Q311
IC310
IC307
IC308
RM301
J301
J302
L302
IC305
C326
TOSHIBA
PC-MAIN-3800
G5B00026000
1 2 3 4 5 6 7 8 9

Fig. 3-6-6 EU01 Main PC Board (Top pattern, character/symbol)

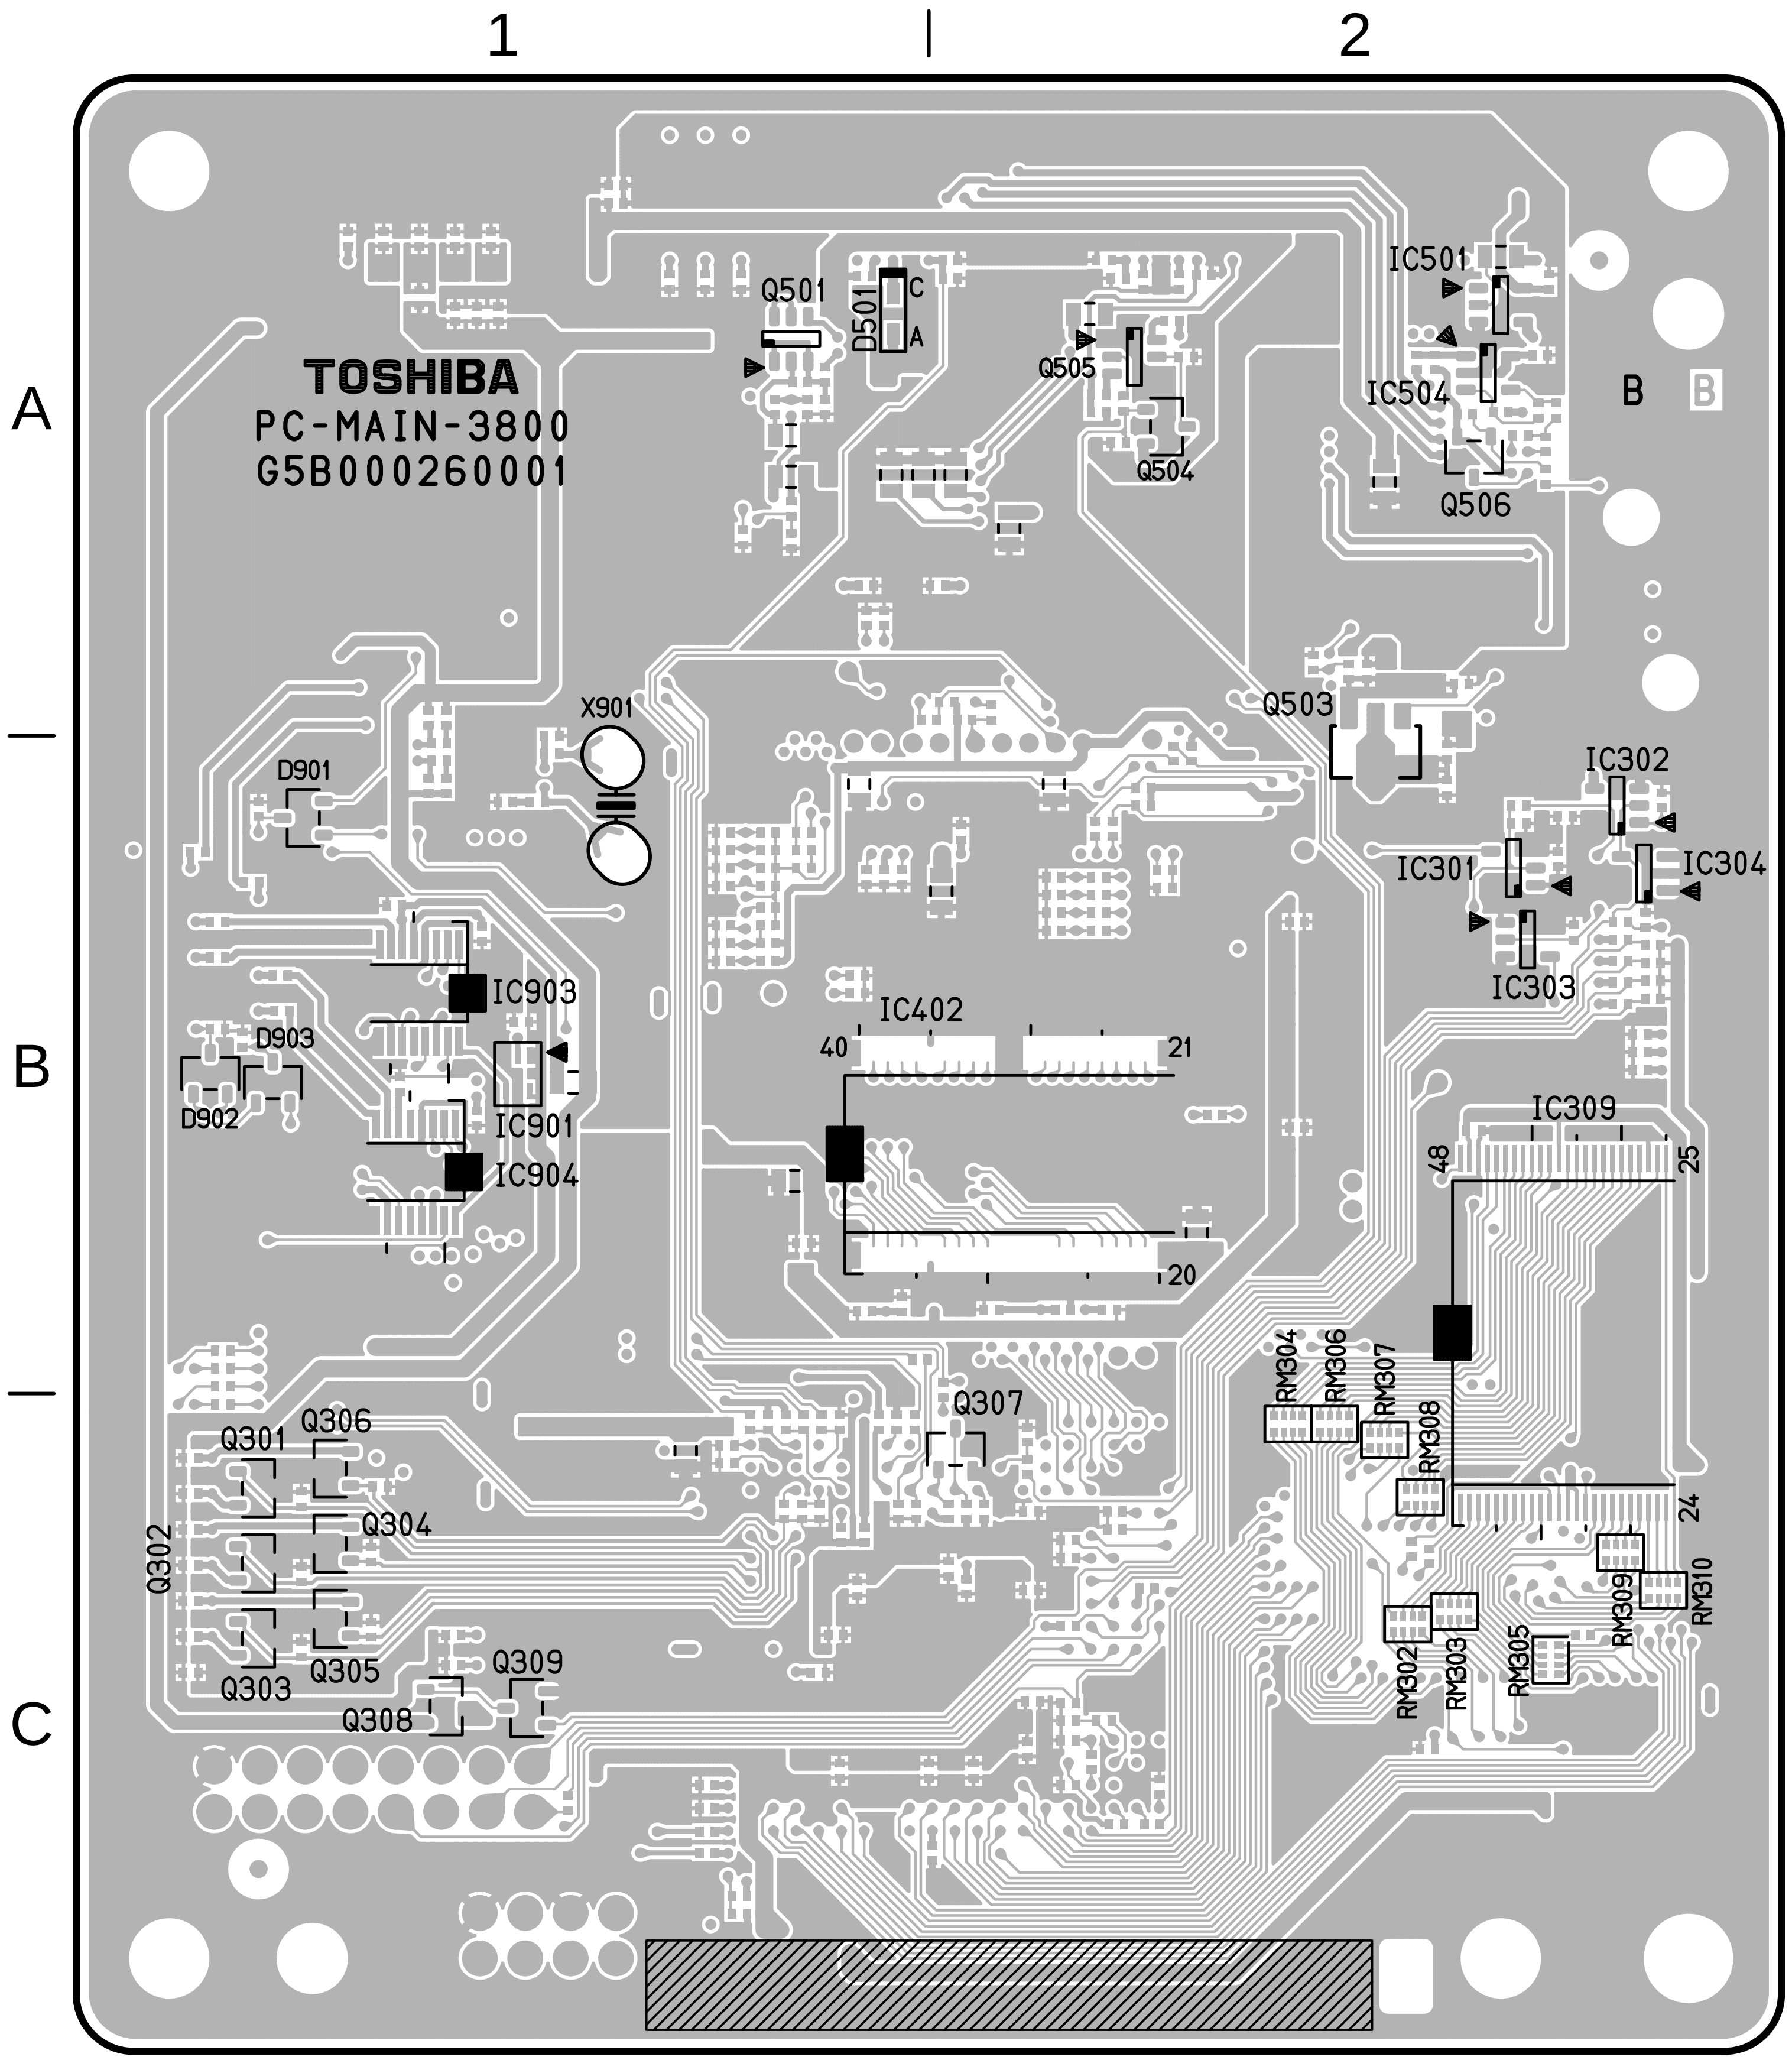
1
2
A
B
C
TOSHIBA
PC-MAIN-3800
G5B000260001
Q501
D501
C
A
Q505
Q504
IC501
IC504
Q506
B
Q503
IC302
IC301
IC304
IC303
X901
D901
IC903
D903
D902
IC901
IC904
IC402
40
21
20
IC309
48
25
24
RM304
RM306
RM307
RM308
RM302
RM303
RM305
RM309
RM310
Q307
Q301
Q306
Q304
Q302
Q303
Q305
Q308
Q309

Fig. 3-6-7 EU01 Main PC Board (Bottom pattern, character/symbol)

6-4. Output PC Board

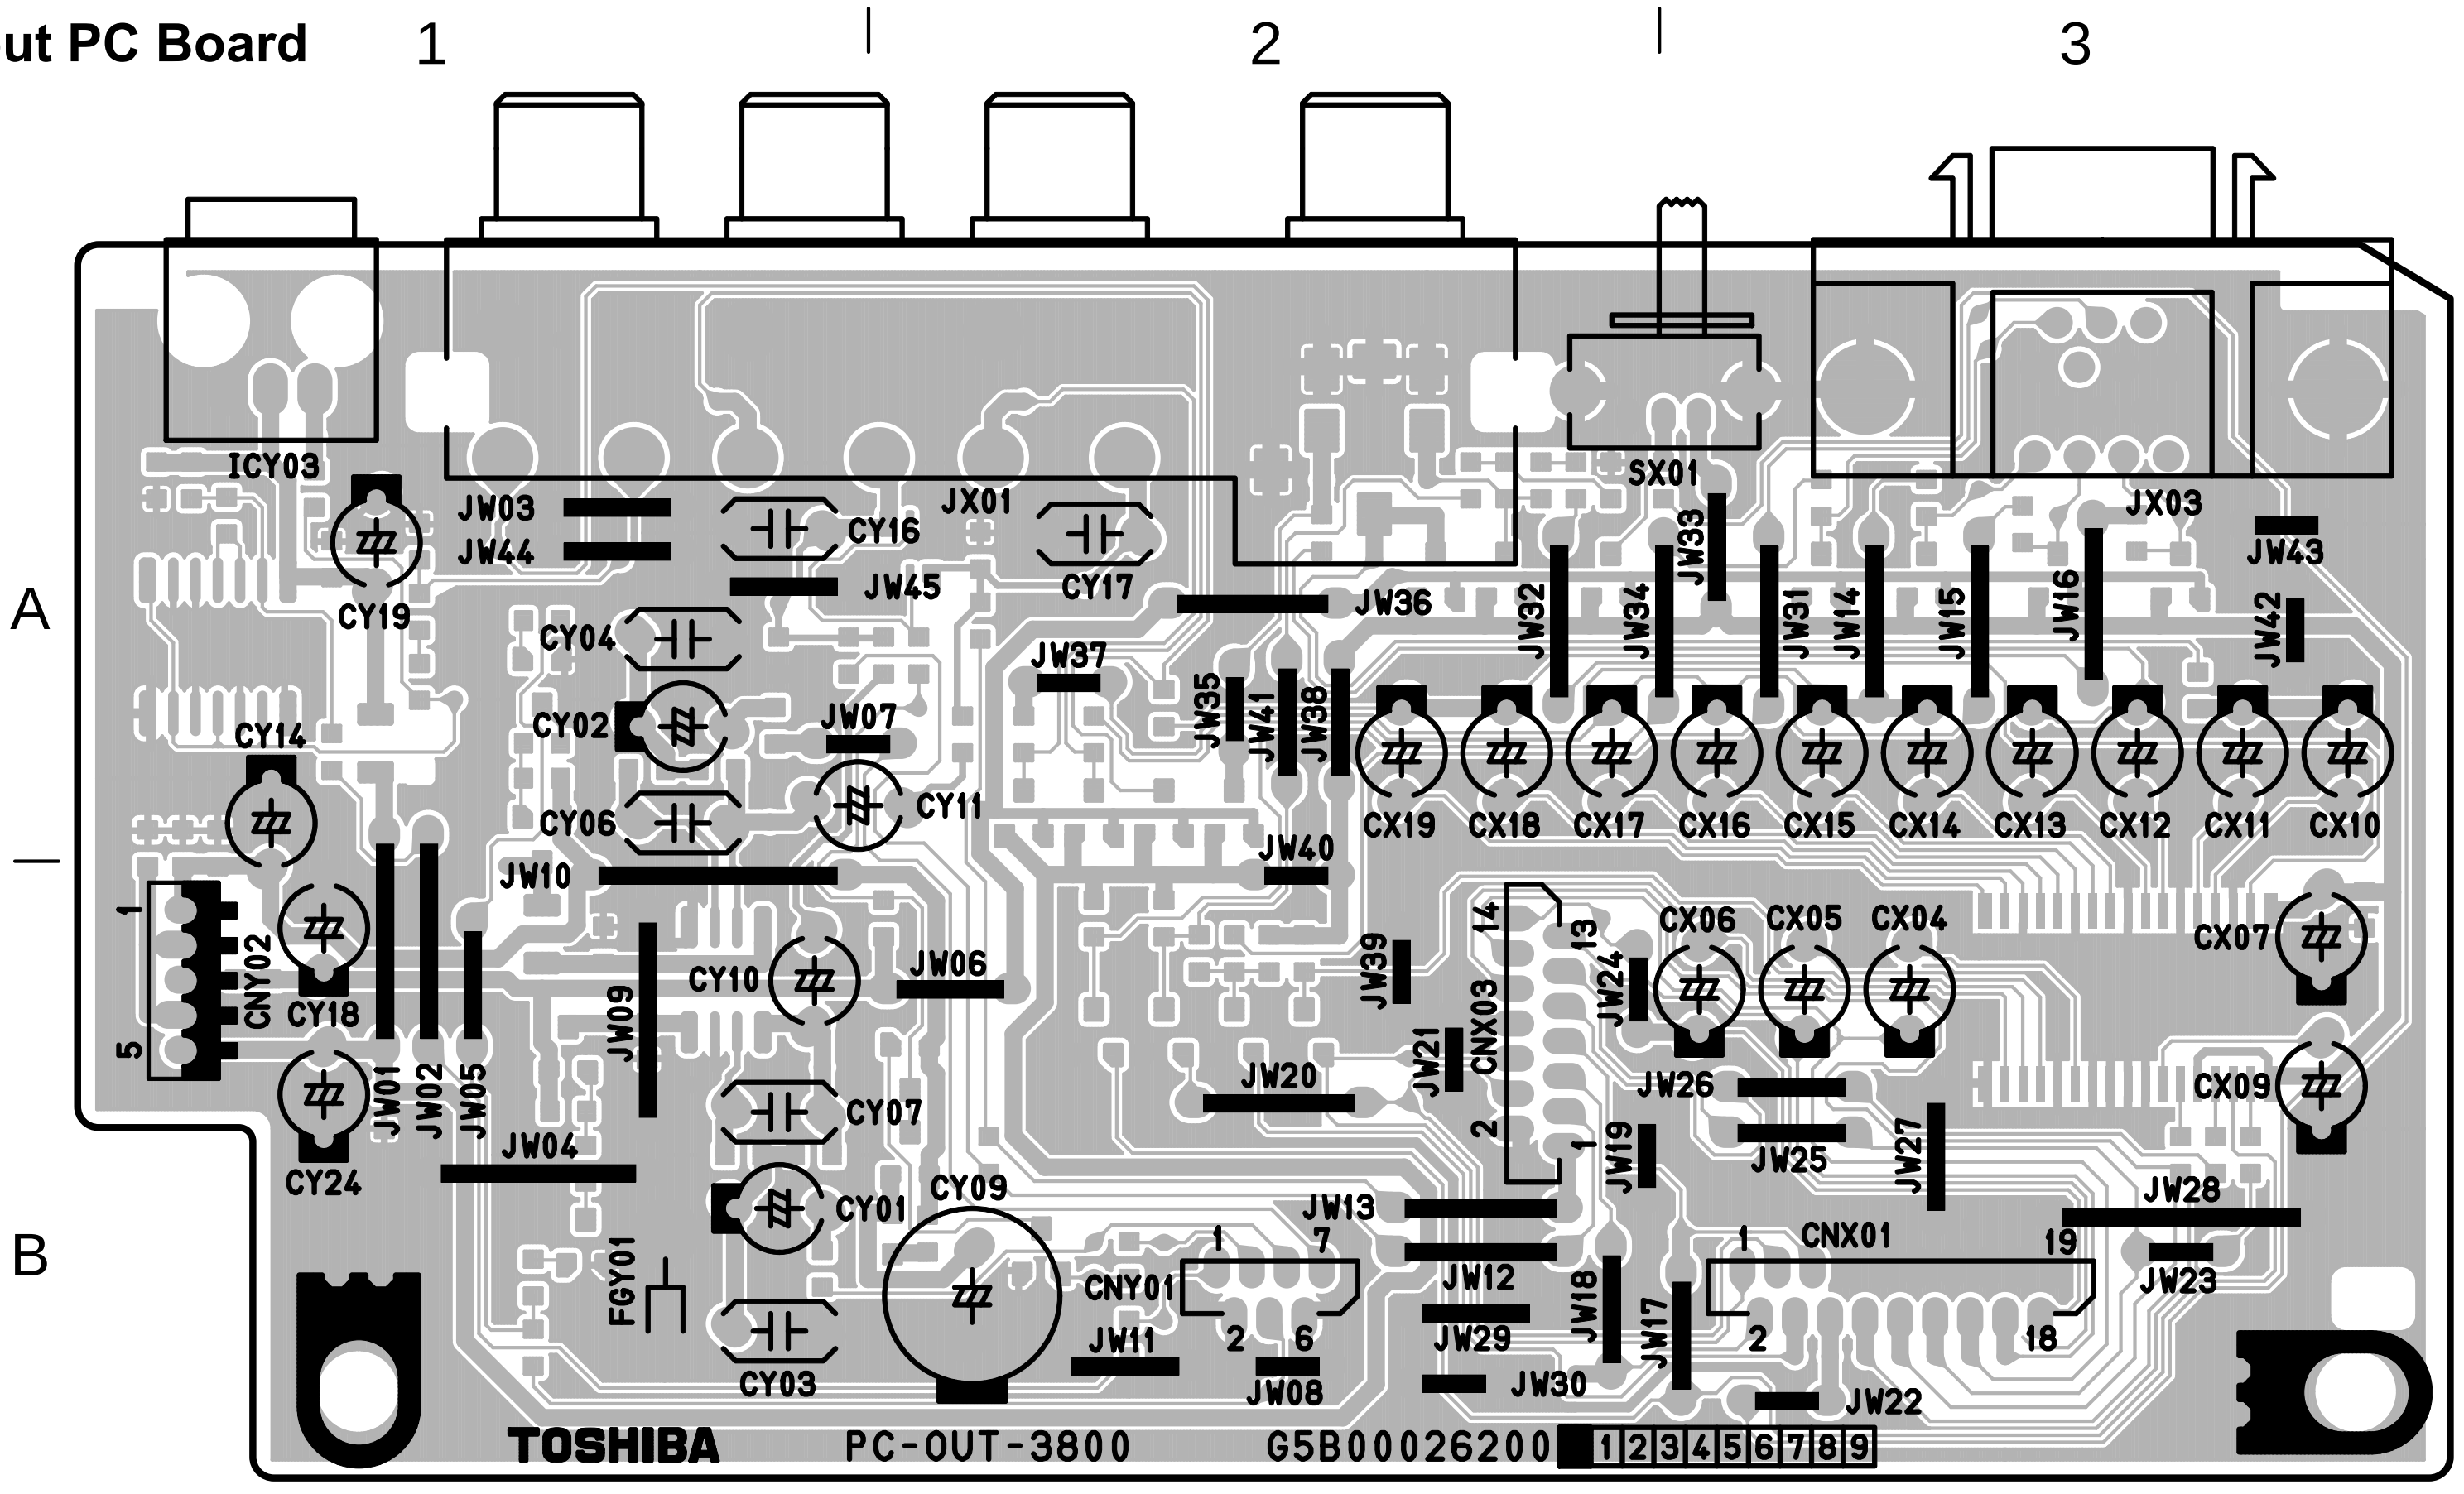
1
2
3
A
B
ICY03
CY19
JW03
JW44
CY16
JX01
CY17
JW45
JW36
SX01
JX03
JW43
JW32
JW33
JW34
JW31
JW14
JW15
JW16
JW42
CY04
CY02
JW07
JW37
JW35
JW41
JW38
CY14
CY06
CY11
CX19
CX18
CX17
CX16
CX15
CX14
CX13
CX12
CX11
CX10
JW10
JW40
CNY02
CY18
CY10
JW06
JW09
JW39
CX06
CX05
CX04
CX07
JW24
CNX03
JW21
JW20
JW26
CX09
JW01
JW02
JW05
JW04
CY07
JW25
JW27
CY24
CY01
CY09
JW13
JW19
JW28
CNX01
FGY01
CNY01
JW12
JW18
JW17
JW23
CY03
JW11
JW29
JW08
JW30
JW22
TOSHIBA
PC-OUT-3800
G5B00026200
1 2 3 4 5 6 7 8 9

Fig. 3-6-8 EU05 Output PC Board (Top side)

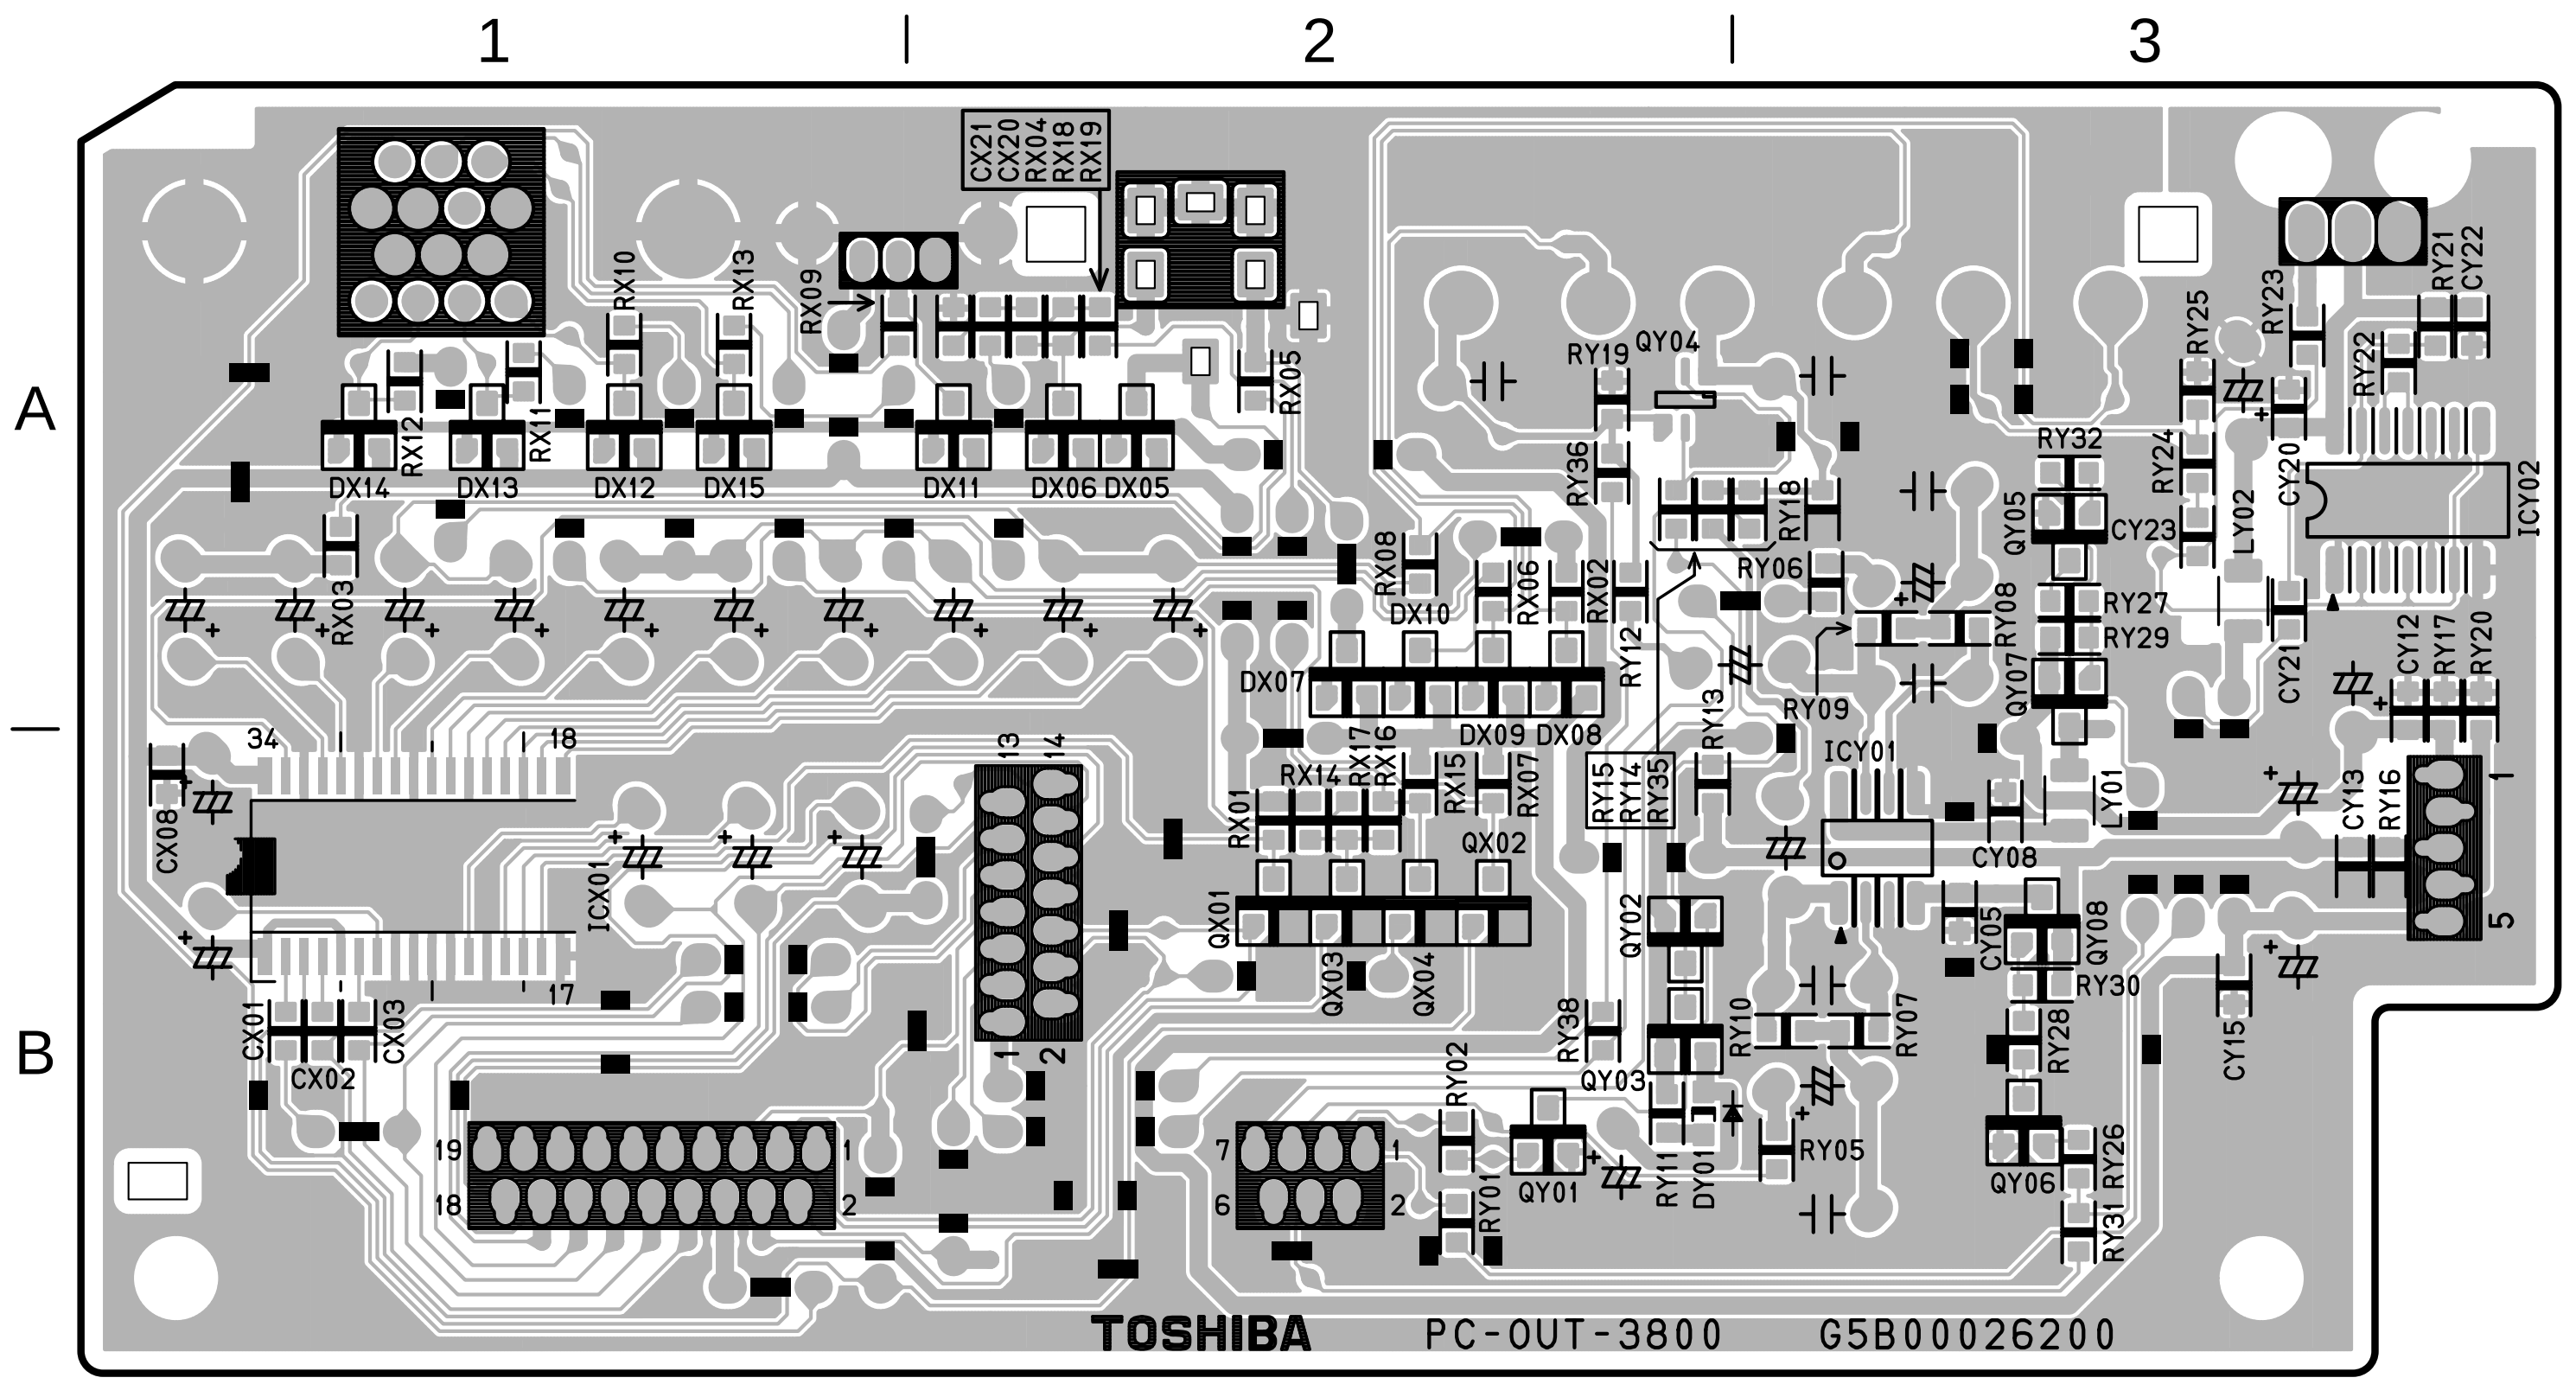
1
2
3
A
B
CX21 CX20 RX04 RX18 RX19
RX10
RX13
RX09
RX05
RX12
RX11
DX14
DX13
DX12
DX15
DX11
DX06
DX05
RX03
RX08
DX10
RX06
RX02
DX07
DX09
DX08
RX17
RX16
RX14
RX15
RX07
RX01
QX02
QX01
QX03
QX04
CX08
ICX01
CX01
CX02
CX03
RY19
QY04
RY36
RY18
RY06
RY12
RY13
RY09
RY15
RY14
RY35
ICY01
QY02
RY38
QY03
RY02
RY01
QY01
RY11
DY01
RY10
RY05
RY07
RY32
QY05
CY23
RY08
RY27
RY29
QY07
CY08
CY05
QY08
RY30
RY28
QY06
RY26
RY31
CY15
RY25
RY23
RY24
LY02
RY22
RY21
CY22
CY20
ICY02
CY21
CY12
RY17
RY20
LY01
CY13
RY16
TOSHIBA
PC-OUT-3800
G5B00026200

Fig. 3-6-9 EU05 Output PC Board (Bottom side)

Part No.	Location	Part No.	Location
CNX01	B3	JW07	A1
CNX03	B2	JW08	B2
CNY01	B2	JW09	B1
CNY02	B1	JW10	B1
CX04	B3	JW11	B2
CX05	B3	JW12	B2
CX06	B3	JW13	B2
CX07	B3	JW14	A3
CX09	B3	JW15	A3
CX10	A3	JW16	A3
CX11	A3	JW17	B2
CX12	A3	JW18	B2
CX13	A3	JW19	B2
CX14	A3	JW20	B2
CX15	A3	JW21	B2
CX16	A3	JW22	B3
CX17	A2	JW23	B3
CX18	A2	JW24	B2
CX19	A2	JW25	B3
CY01	B1	JW26	B3
CY02	A1	JW27	B3
CY03	B1	JW28	B3
CY04	A1	JW29	B2
CY06	A1	JW30	B2
CY07	B1	JW31	A3
CY09	B2	JW32	A2
CY10	B1	JW33	A3
CY11	A2	JW34	A2
CY14	A1	JW35	A2
CY16	A2	JW36	A2
CY17	A2	JW37	A2
CY18	B1	JW38	A2
CY19	A1	JW39	B2
CY24	B1	JW40	A2
FGY01	B1	JW41	A2
ICY03	A1	JW42	A3
JW01	B1	JW43	A3
JW02	B1	JW44	A1
JW03	A1	JW45	A2
JW04	B1	JX01	A2
JW05	B1	JX03	A3
JW06	B2	SX01	A2

Part No.	Location	Part No.	Location	Part No.	Location
CX01	B1	QX01	B2	RY02	B2
CX02	B1	QX02	B2	RY05	B3
CX03	B1	QX03	B2	RY06	A3
CX08	B1	QX04	B2	RY07	B3
CX20	A2	QY01	B2	RY08	A3
CX21	A2	QY02	B2	RY09	A3
CY05	B3	QY03	B2	RY10	B3
CY08	B3	QY04	A2	RY11	B2
CY12	A3	QY05	A3	RY12	A2
CY13	B3	QY06	B3	RY13	B2
CY15	B3	QY07	A3	RY14	A2
CY20	A3	QY08	B3	RY15	A2
CY21	A3	RX01	B2	RY16	B3
CY22	A3	RX02	A2	RY17	A3
CY23	A3	RX03	A1	RY18	A3
DX05	A2	RX04	A2	RY19	A2
DX06	A2	RX05	A2	RY20	A3
DX07	A2	RX06	A2	RY21	A3
DX08	A2	RX07	B2	RY22	A3
DX09	A2	RX08	A2	RY23	A3
DX10	A2	RX09	A1	RY24	A3
DX11	A2	RX10	A1	RY25	A3
DX12	A1	RX11	A1	RY26	B3
DX13	A1	RX12	A1	RY27	A3
DX14	A1	RX13	A1	RY28	B3
DX15	A1	RX14	B2	RY29	A3
DY01	B2	RX15	B2	RY30	B3
ICX01	B1	RX16	B2	RY31	B3
ICY01	B3	RX17	B2	RY32	A3
ICY02	A3	RX18	A2	RY35	A3
LY01	B3	RX19	A2	RY36	A2
LY02	A3	RY01	B2	RY38	B2

6-5. Front Display PC Board

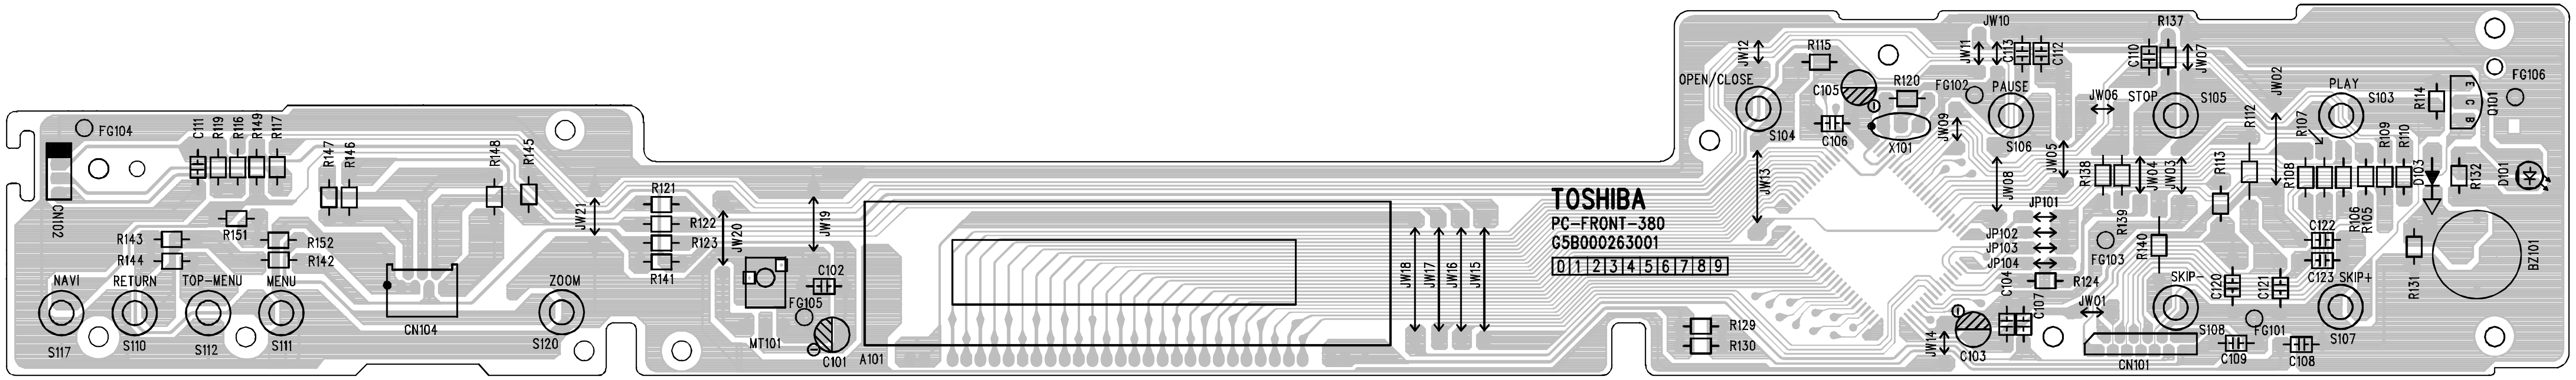
TOSHIBA
PC-FRONT-380
G5B000263001
0 1 2 3 4 5 6 7 8 9
NAVI
RETURN
TOP-MENU
MENU
ZOOM
OPEN/CLOSE
PAUSE
STOP
PLAY
SKIP-
SKIP+
S117
S110
S112
S111
S120
S104
S106
S105
S103
S108
S107
CN102
CN104
CN101
FG104
FG105
FG102
FG103
FG101
FG106
MT101
A101
C101
C102
C103
C105
C106
X101
BZ101
Q101
D101
D103
JP101
JP102
JP103
JP104
R129
R130

Fig. 3-6-10 EU03 Front Display PC Board (Top Side)

Part No.	Location
A101	C4
BZ101	B10
C101	C4
C102	C4
C103	C8
C104	C8
C105	B8
C106	B8
C107	C8
C108	C9
C109	C9
C110	B9
C111	B2
C112	B9
C113	B8
C120	C9
C121	C9
C122	B10
C123	C10
CN101	C9
CN102	B1
CN104	C2
D101	B10
D103	B10
FG101	C9
FG102	B8
FG103	C9
FG104	B1
FG105	C4
FG106	B10
JP101	B8
JP102	B8
JP103	B8
JP104	C8
JW01	C9
JW02	B9
JW03	B9
JW04	B9
JW05	B9
JW06	B9
JW07	B9
JW08	B8
JW09	B8
JW10	B8
JW11	B8
JW12	B7
JW13	B7
JW14	C8
JW15	C6
JW16	C6
JW17	C6
JW18	C6
JW19	B4
JW20	B4
JW21	B3
MT101	C4
Q101	B10
R105	B10
R106	B10
R107	B9
R108	B9
R109	B10
R110	B10
R112	B9
R113	B9
R114	B10
R115	B8
R116	B2
R117	B2
R119	B2
R120	B8
R121	B3
R122	B3
R123	B3
R124	C9
R129	C7
R130	C7
R131	C10
R132	B10
R137	B9
R138	B9
R139	B9
R140	B9
R141	C3
R142	C2
R143	B1
R144	C1
R145	B3
R146	B2
R147	B2
R148	B3
R149	B2
R151	B2
R152	B2
S103	B10
S104	B8
S105	B9
S106	B8
S107	C10
S108	C9
S110	C1
S111	C2
S112	C2
S117	C1
S120	C3
X101	B8

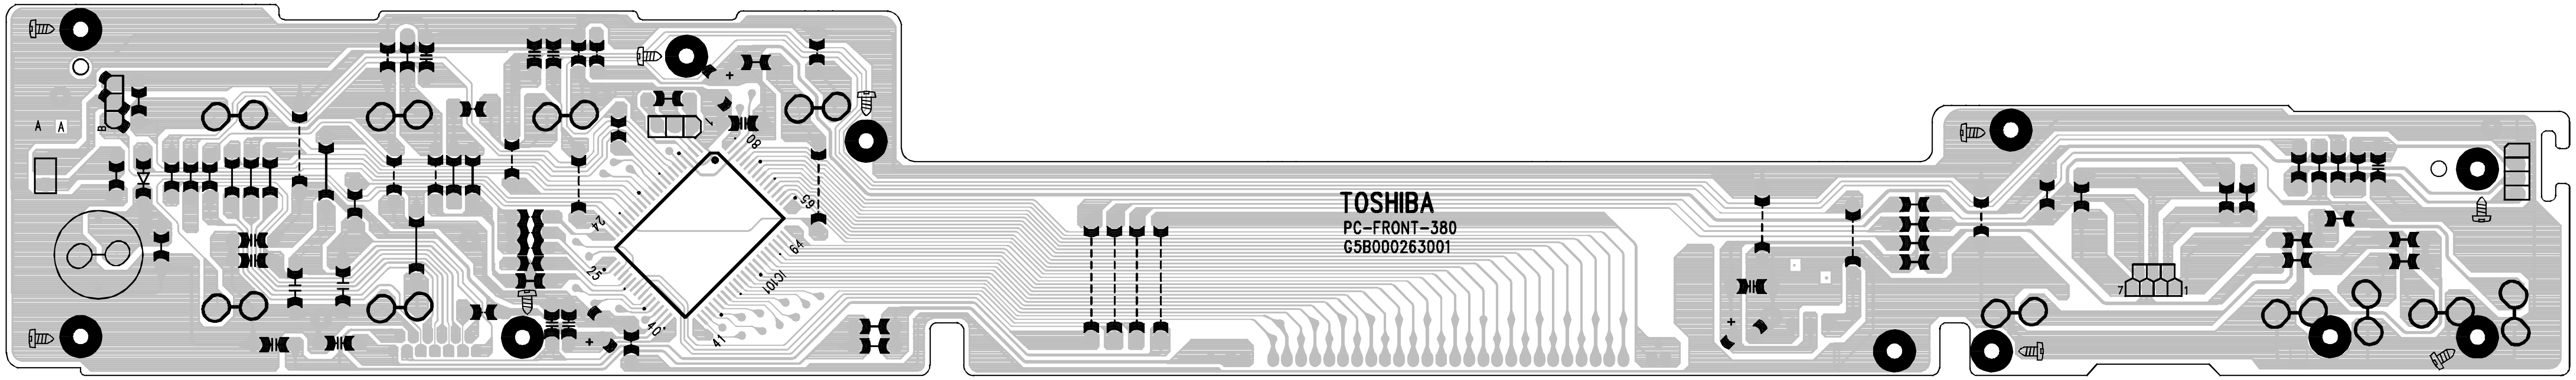
TOSHIBA
PC-FRONT-380
G5B000263001
IC101

Fig. 3-6-11 EU03 Front Display PC Board (Bottom Side)

Part No.	Location
IC101	F4

SECTION 4
PARTS LIST

SAFETY PRECAUTION

The parts identified by ! (⚠) mark are critical for safety. Replace only with part number specified.

The mounting position of replacement is to be identical with originals.

The substitute replacement parts which do not have the same safety characteristics as specified in the parts list may create shock, fire or other hazards.

NOTICE

The part number must be used when ordering parts in order to assist in processing, be sure to include the model number and description.
The parts marked with * are used for SD-220 only.

ABBREVIATIONS

1. Integrated Circuit (IC)

2. Capacitor (Cap)

- **Capacitance Tolerance (for Nominal Capacitance more than 10pF)**

Table 4-2-1

Symbol	B	C	D	F	G	J	K	M	N
Tolerance %	± 0.1	± 0.25	± 0.5	± 1	± 2	± 5	± 10	± 20	± 30

Symbol	P	Q	T	U	V	W	X	Y	Z
Tolerance %	+ 100 0	+ 30 – 10	+ 50 – 10	+ 75 – 10	+ 20 – 10	+ 100 – 10	+ 40 – 20	+ 150 – 10	+ 80 – 20

Ex. 10MF J = 10µF ± 5%

- **Capacitance Tolerance (for Nominal Capacitance 10pF or less)**

Table 4-2-2

Symbol	B	C	D	F	G
Tolerance pF	± 0.1	± 0.25	± 0.5	± 1	± 2

Ex. 10pF G = 10pF ± 2pF

3. Resistor (Res)

- **Resistance tolerance**

Table 4-3-1

Symbol	B	C	D	F	G	J	K	M
Tolerance %	± 0.1	± 0.25	± 0.5	± 1	± 2	± 5	± 10	± 20

Ex. 470ohmJ = 470ohm± 5%

4. EXPLODED VIEWS

4-1. Packing Assembly

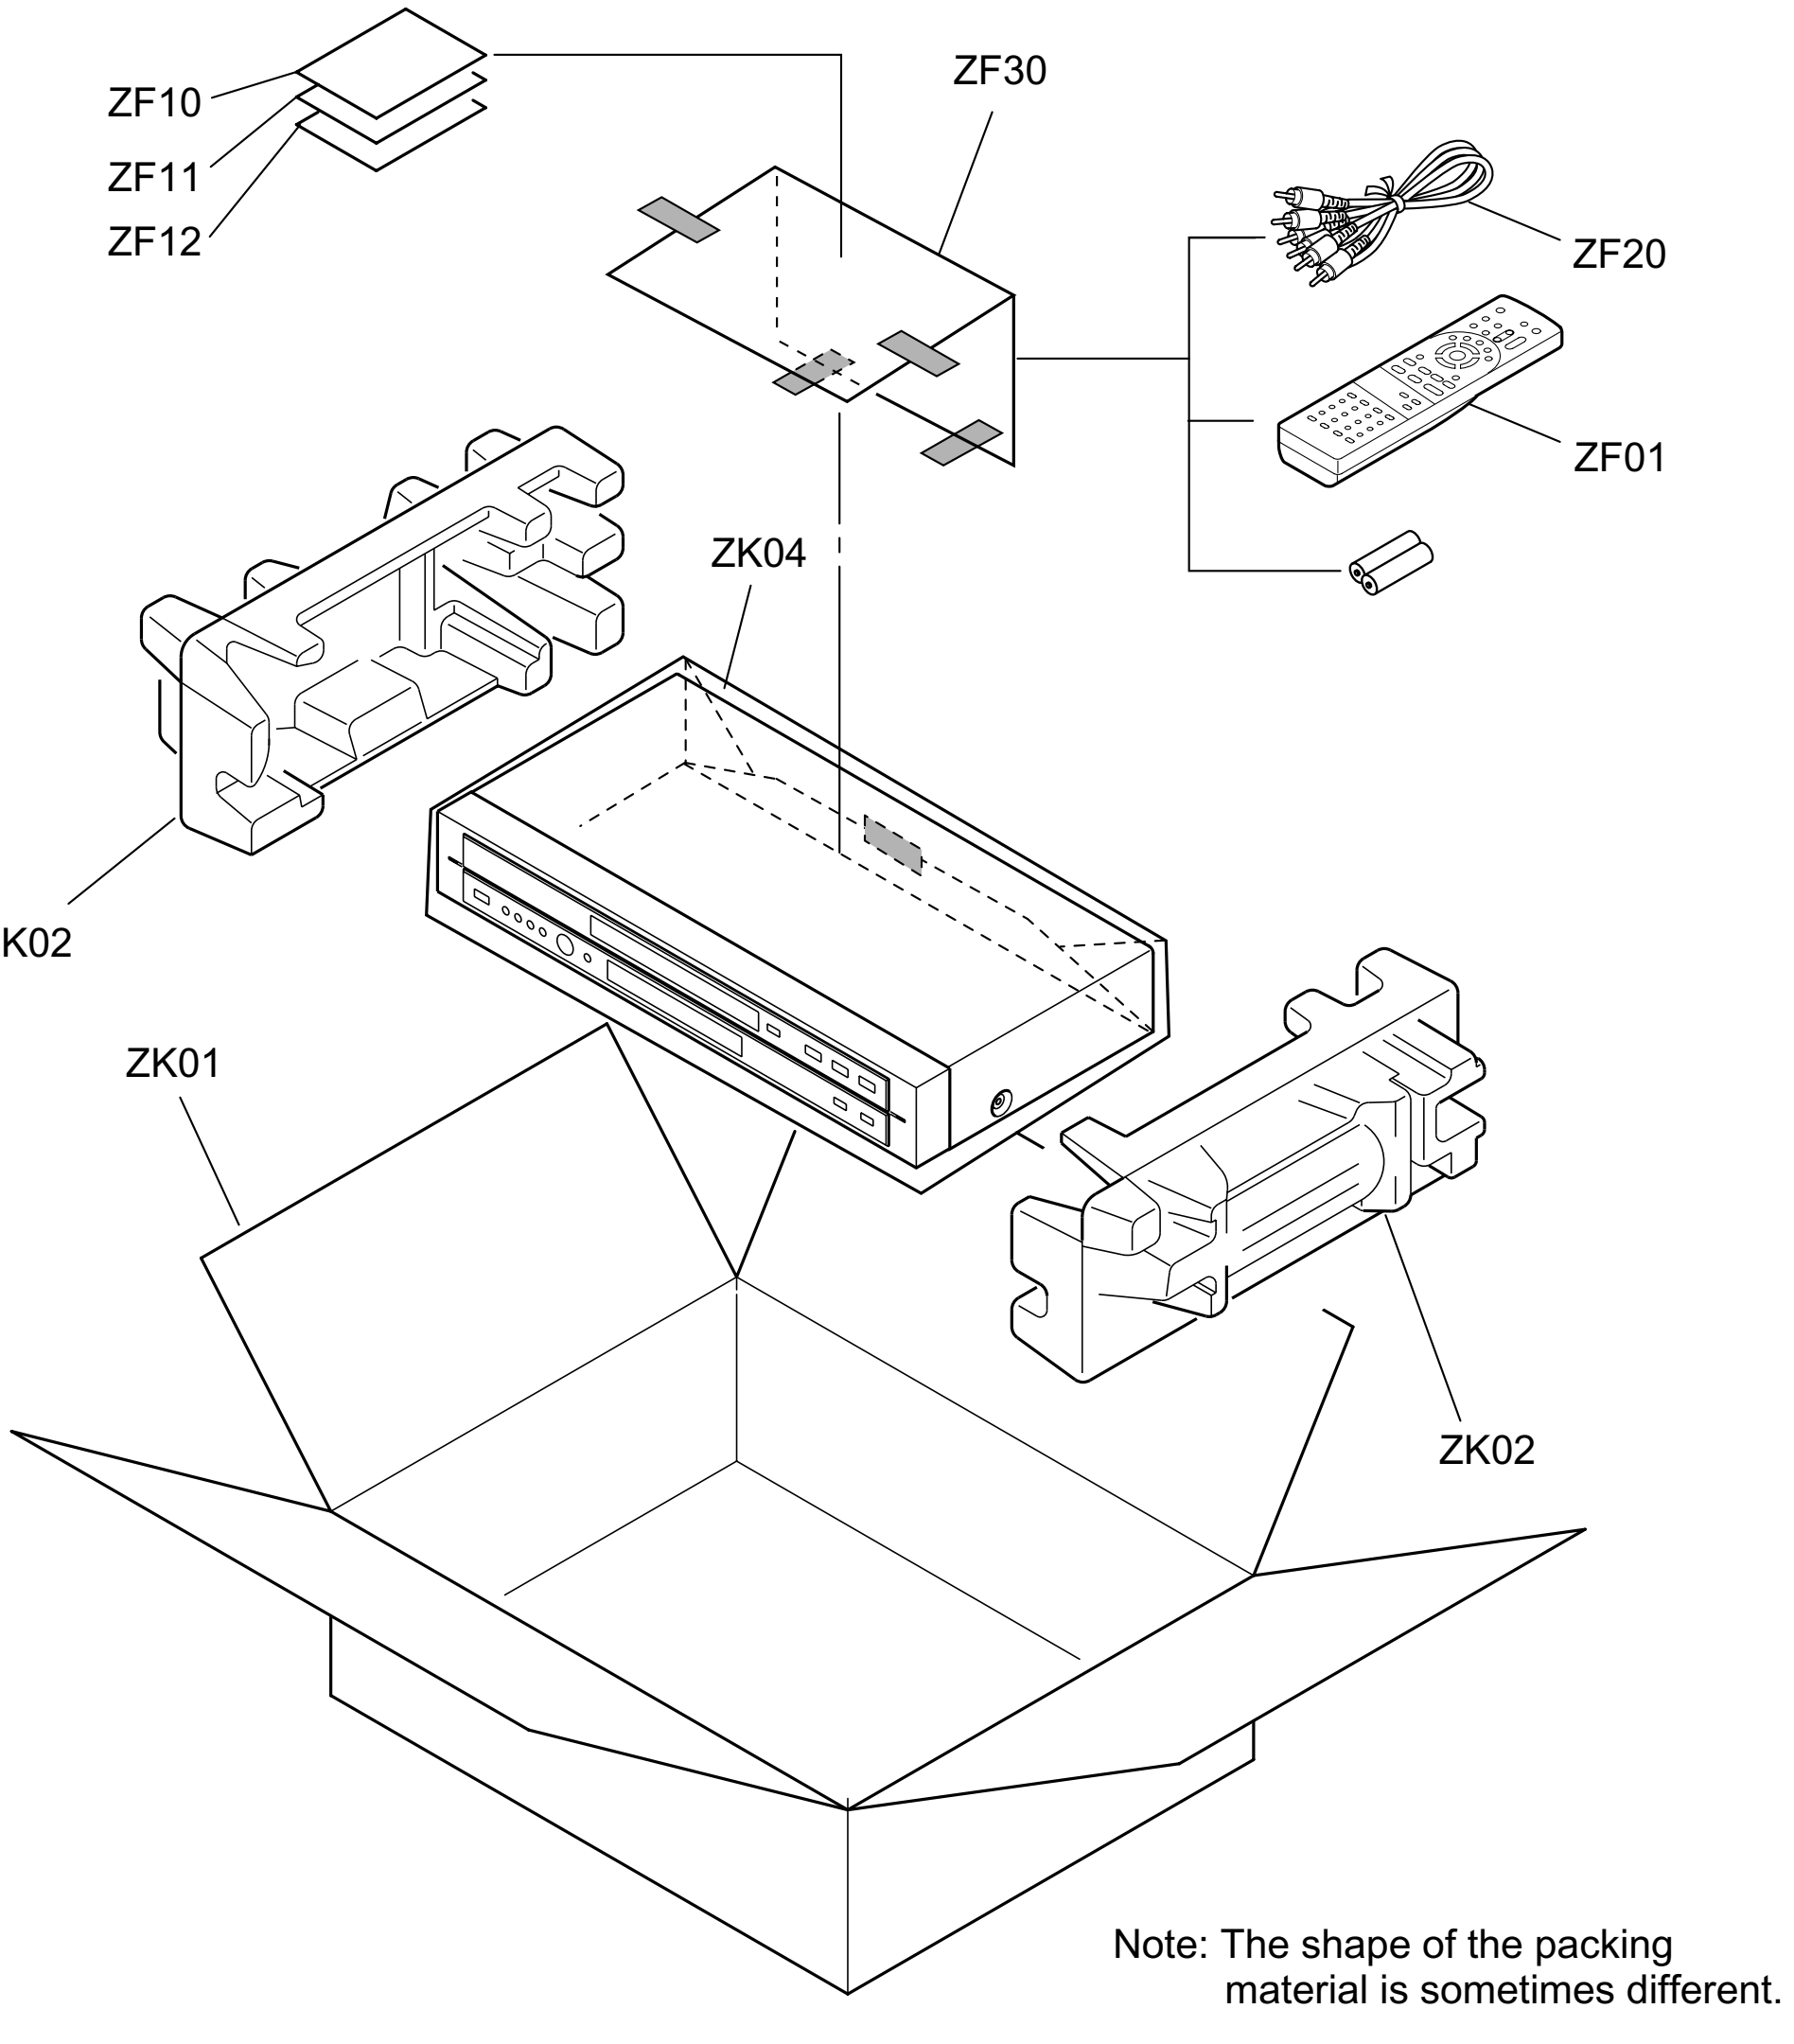
ZF10
ZF11
ZF12
ZF30
ZF20
ZF01
ZK04
ZK02
ZK01
ZK02
Note: The shape of the packing material is sometimes different.

Fig. 4-4-1

4-2. Chassis Assembly (Type A)

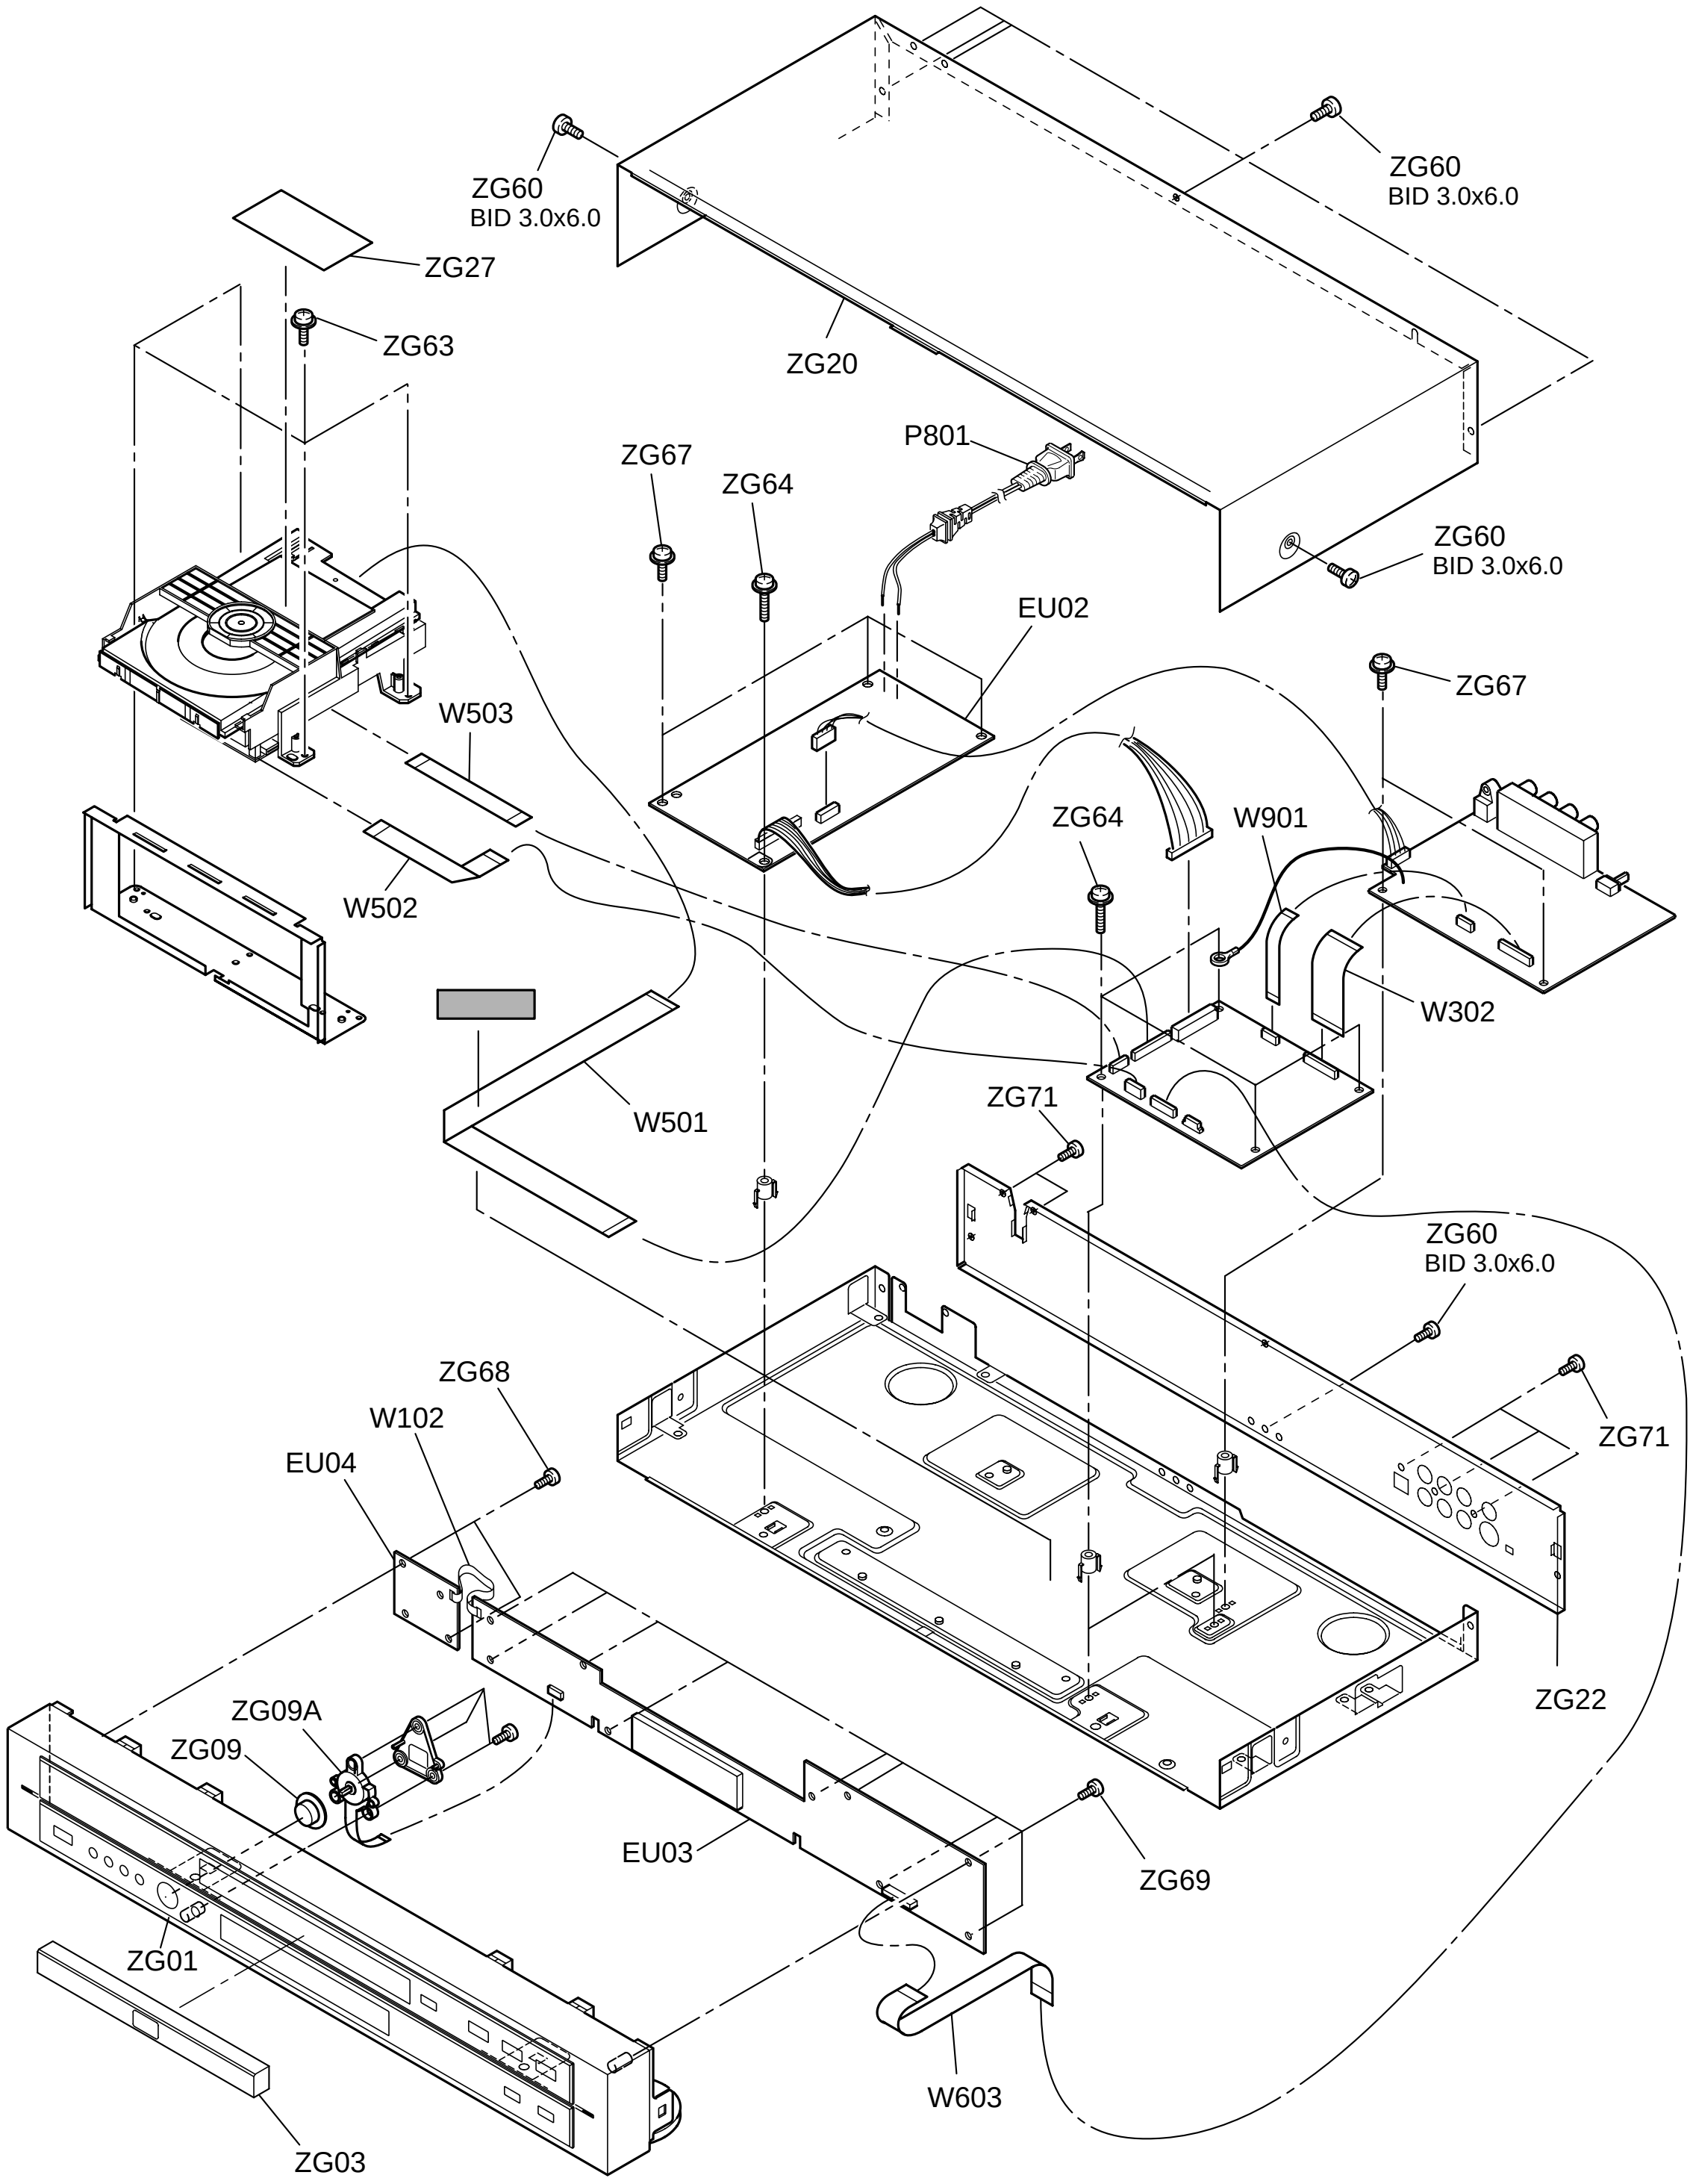
ZG60
BID 3.0x6.0
ZG60
BID 3.0x6.0
ZG27
ZG63
ZG20
P801
ZG67
ZG64
ZG60
BID 3.0x6.0
EU02
ZG67
W503
ZG64
W901
W502
W302
W501
ZG71
ZG60
BID 3.0x6.0
ZG68
W102
ZG71
EU04
ZG22
ZG09A
ZG09
EU03
ZG69
ZG01
W603
ZG03

Fig. 4-4-2

4-3. Mechanism Assembly (Type A)

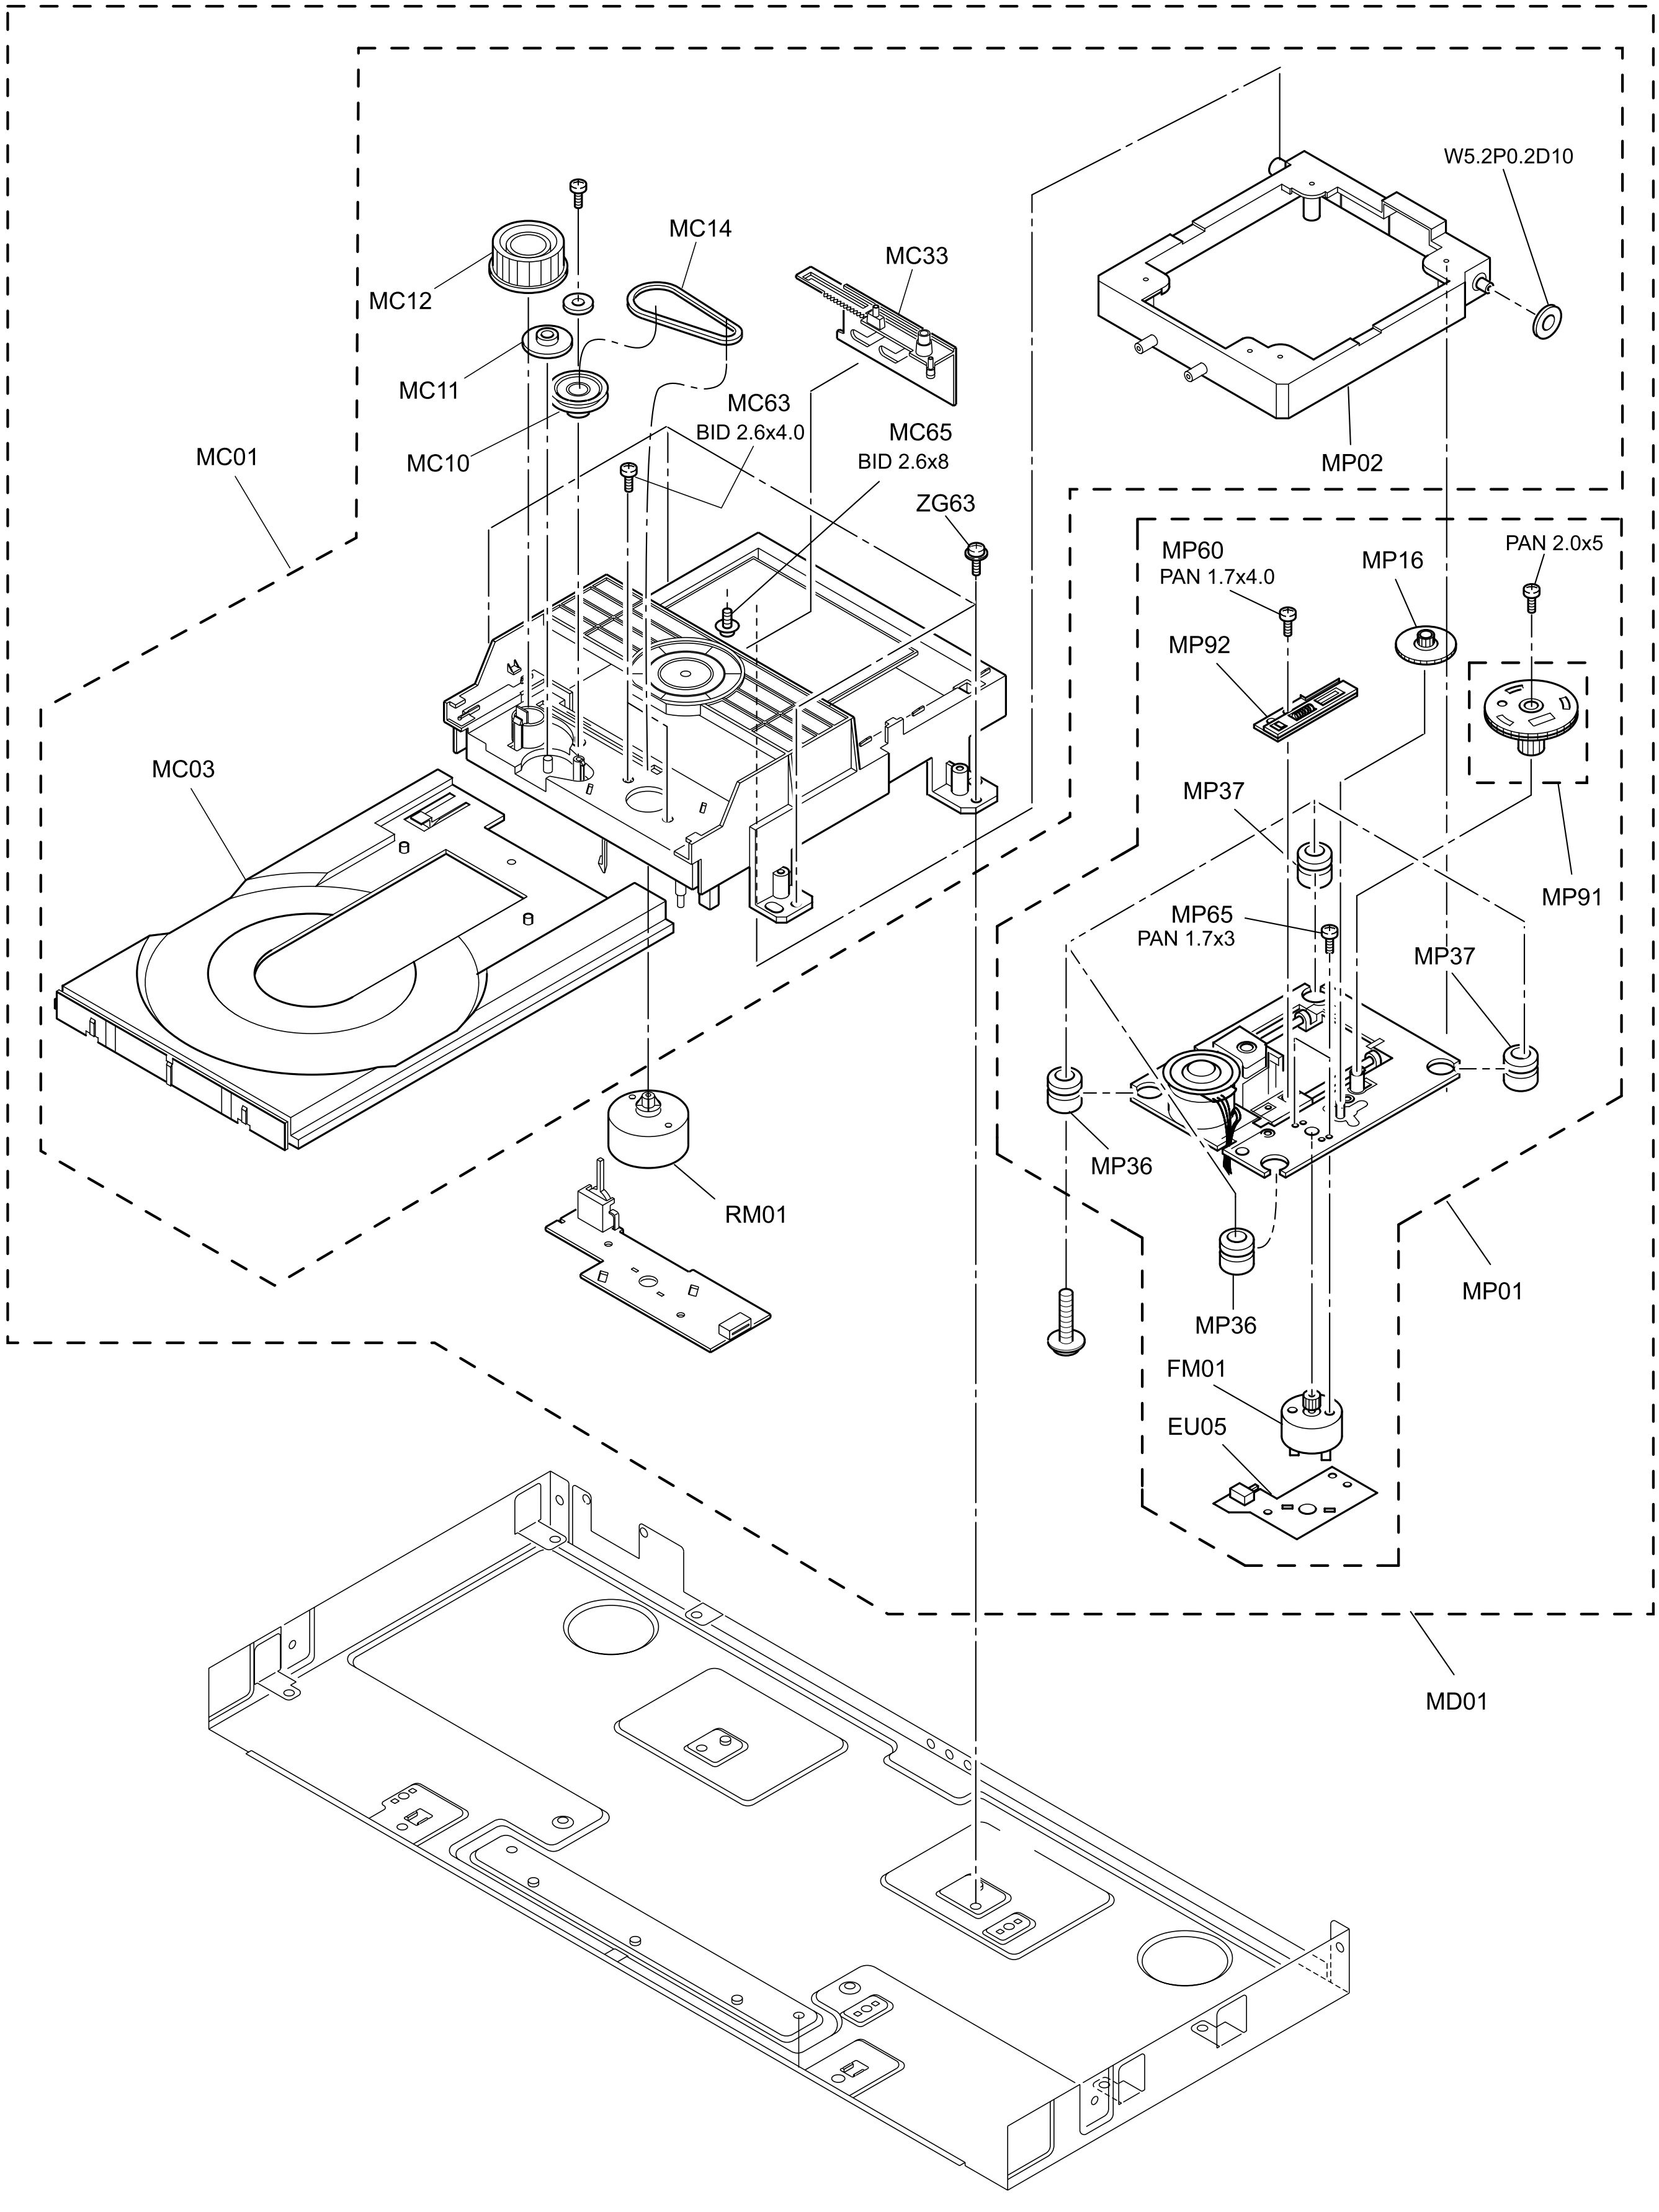
W5.2P0.2D10
MC14
MC33
MC12
MC11
MC63
BID 2.6x4.0
MC65
BID 2.6x8
MC10
MC01
MP02
ZG63
MP60
PAN 1.7x4.0
MP16
PAN 2.0x5
MP92
MC03
MP37
MP91
MP65
PAN 1.7x3
MP37
MP36
RM01
MP01
MP36
FM01
EU05
MD01

Fig. 4-4-3

4-4. Chassis Assembly (Type B)

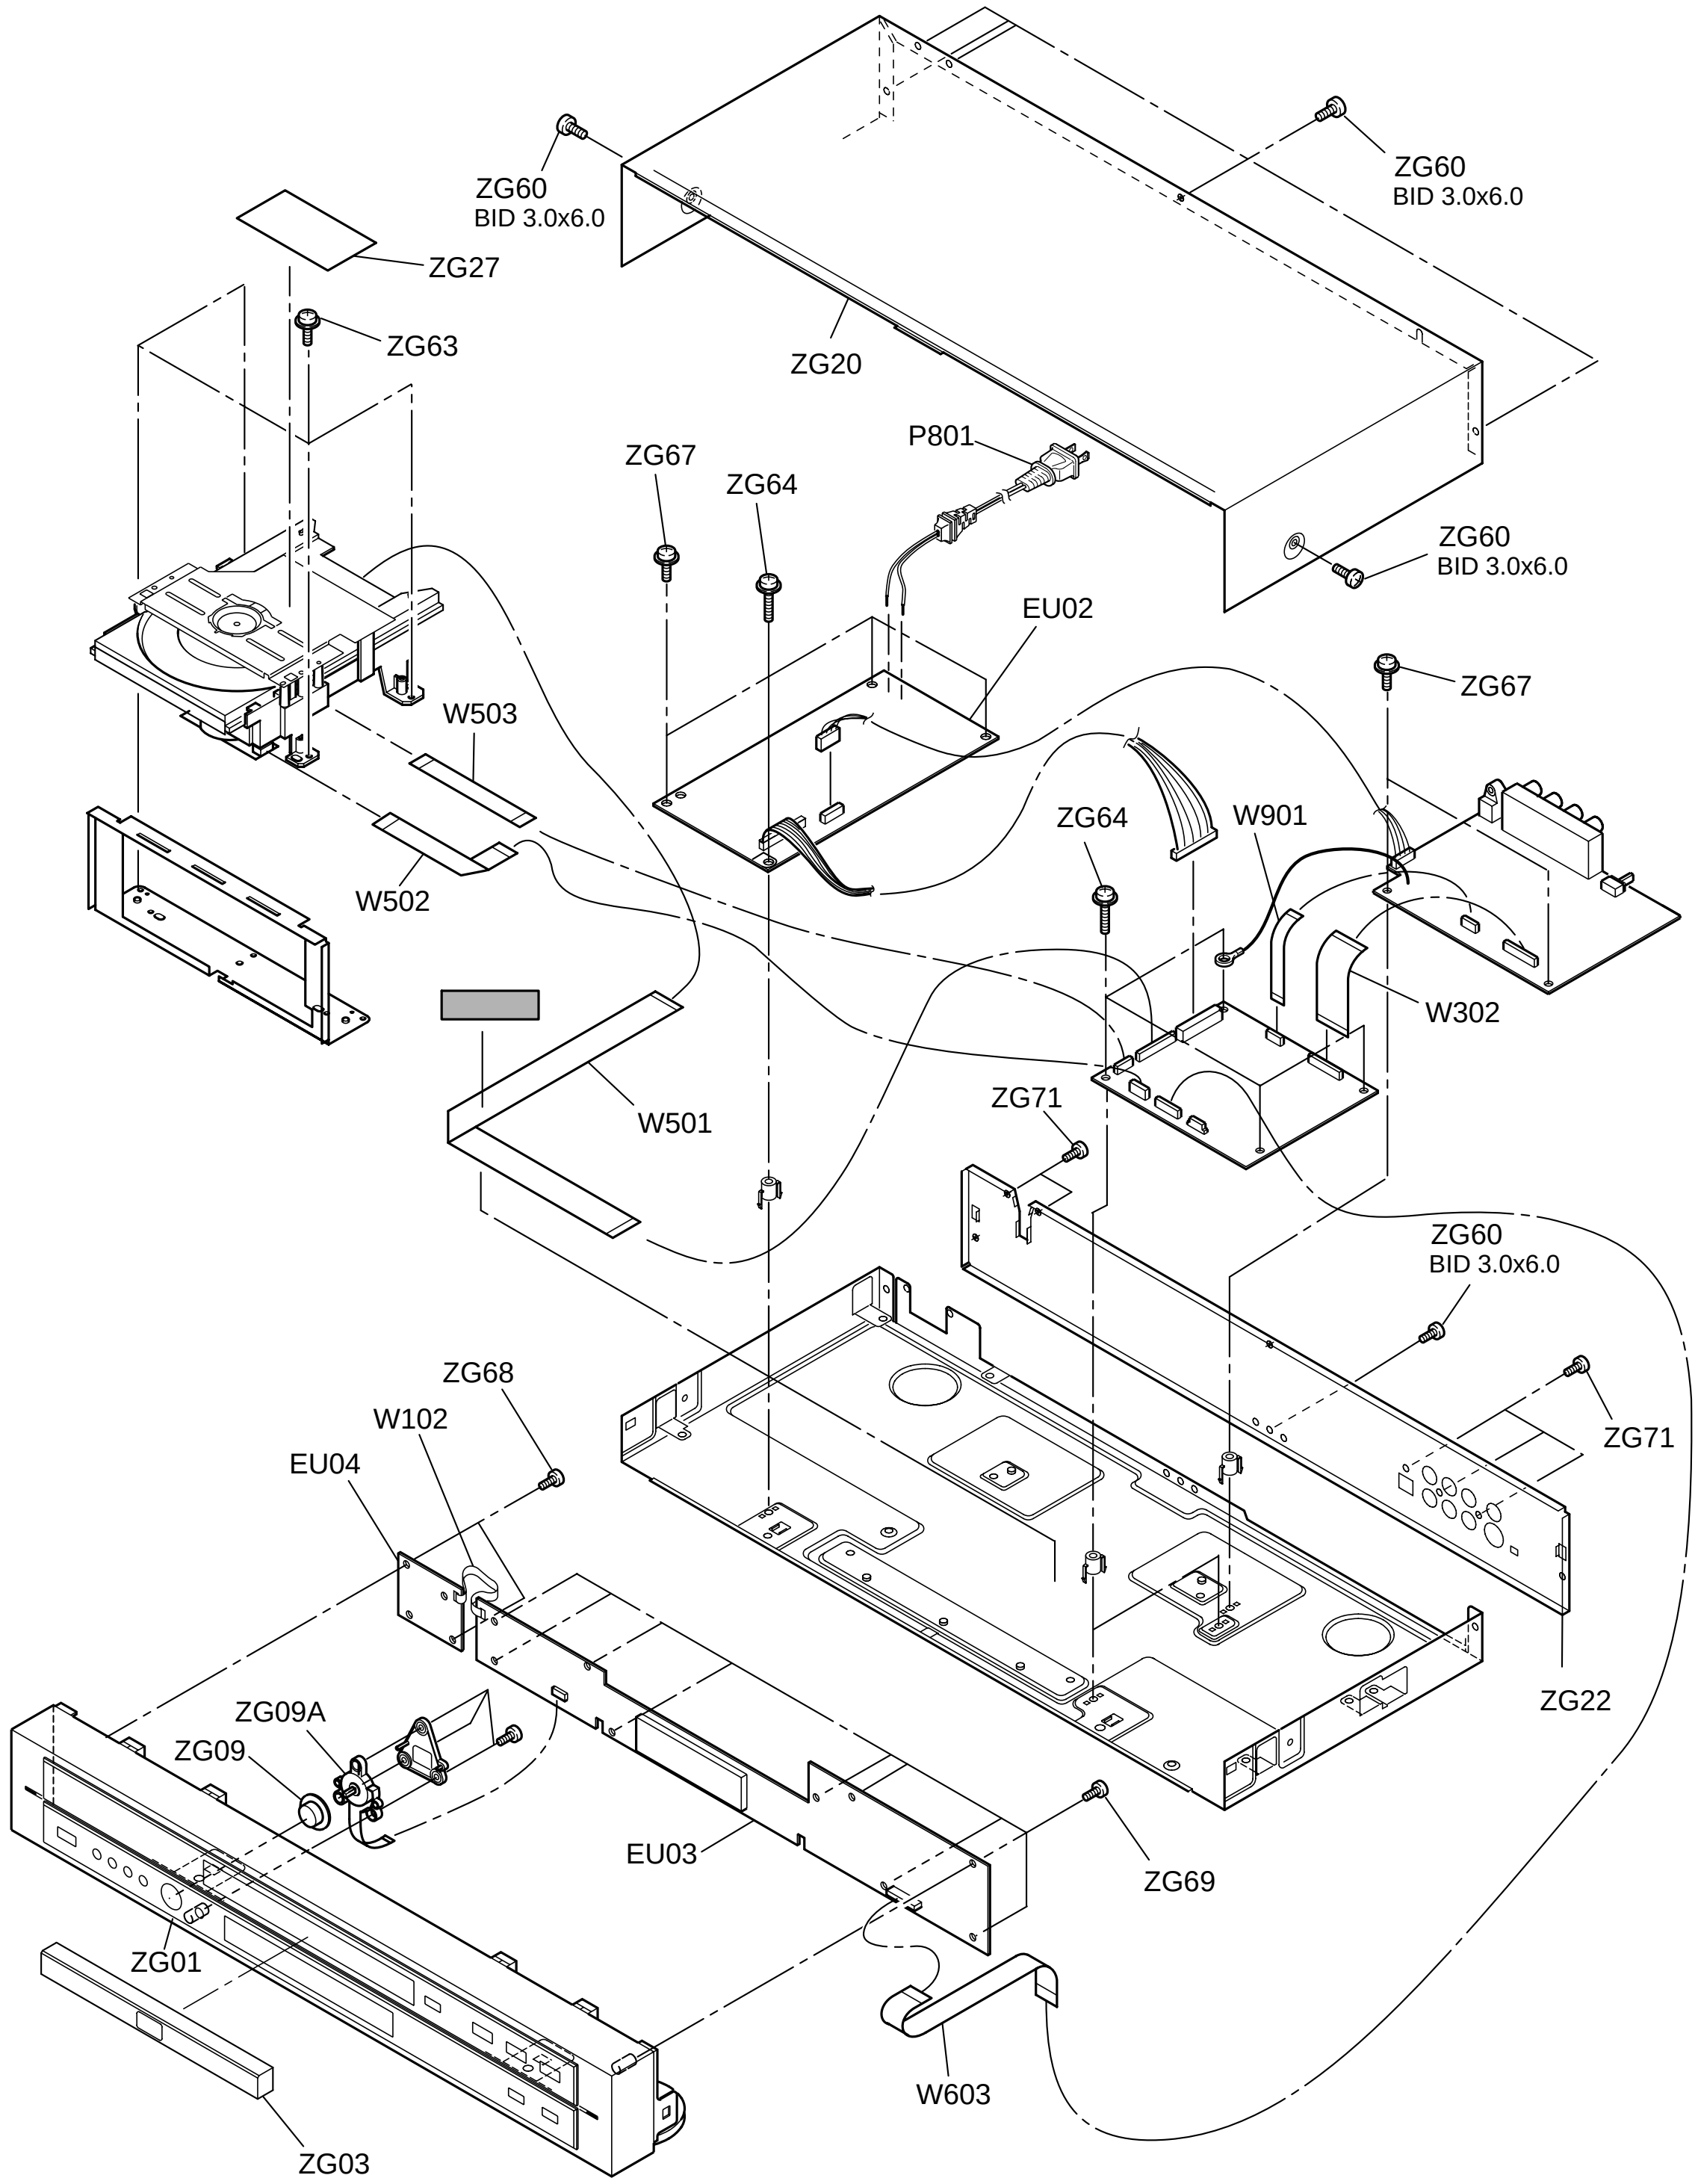
ZG60
BID 3.0x6.0
ZG60
BID 3.0x6.0
ZG27
ZG63
ZG20
ZG67
ZG64
P801
ZG60
BID 3.0x6.0
EU02
ZG67
W503
W502
ZG64
W901
W302
W501
ZG71
ZG60
BID 3.0x6.0
ZG68
W102
EU04
ZG71
ZG22
ZG09A
ZG09
EU03
ZG69
ZG01
W603
ZG03

Fig. 4-4-4

4-5. Mechanism Assembly (Type B)

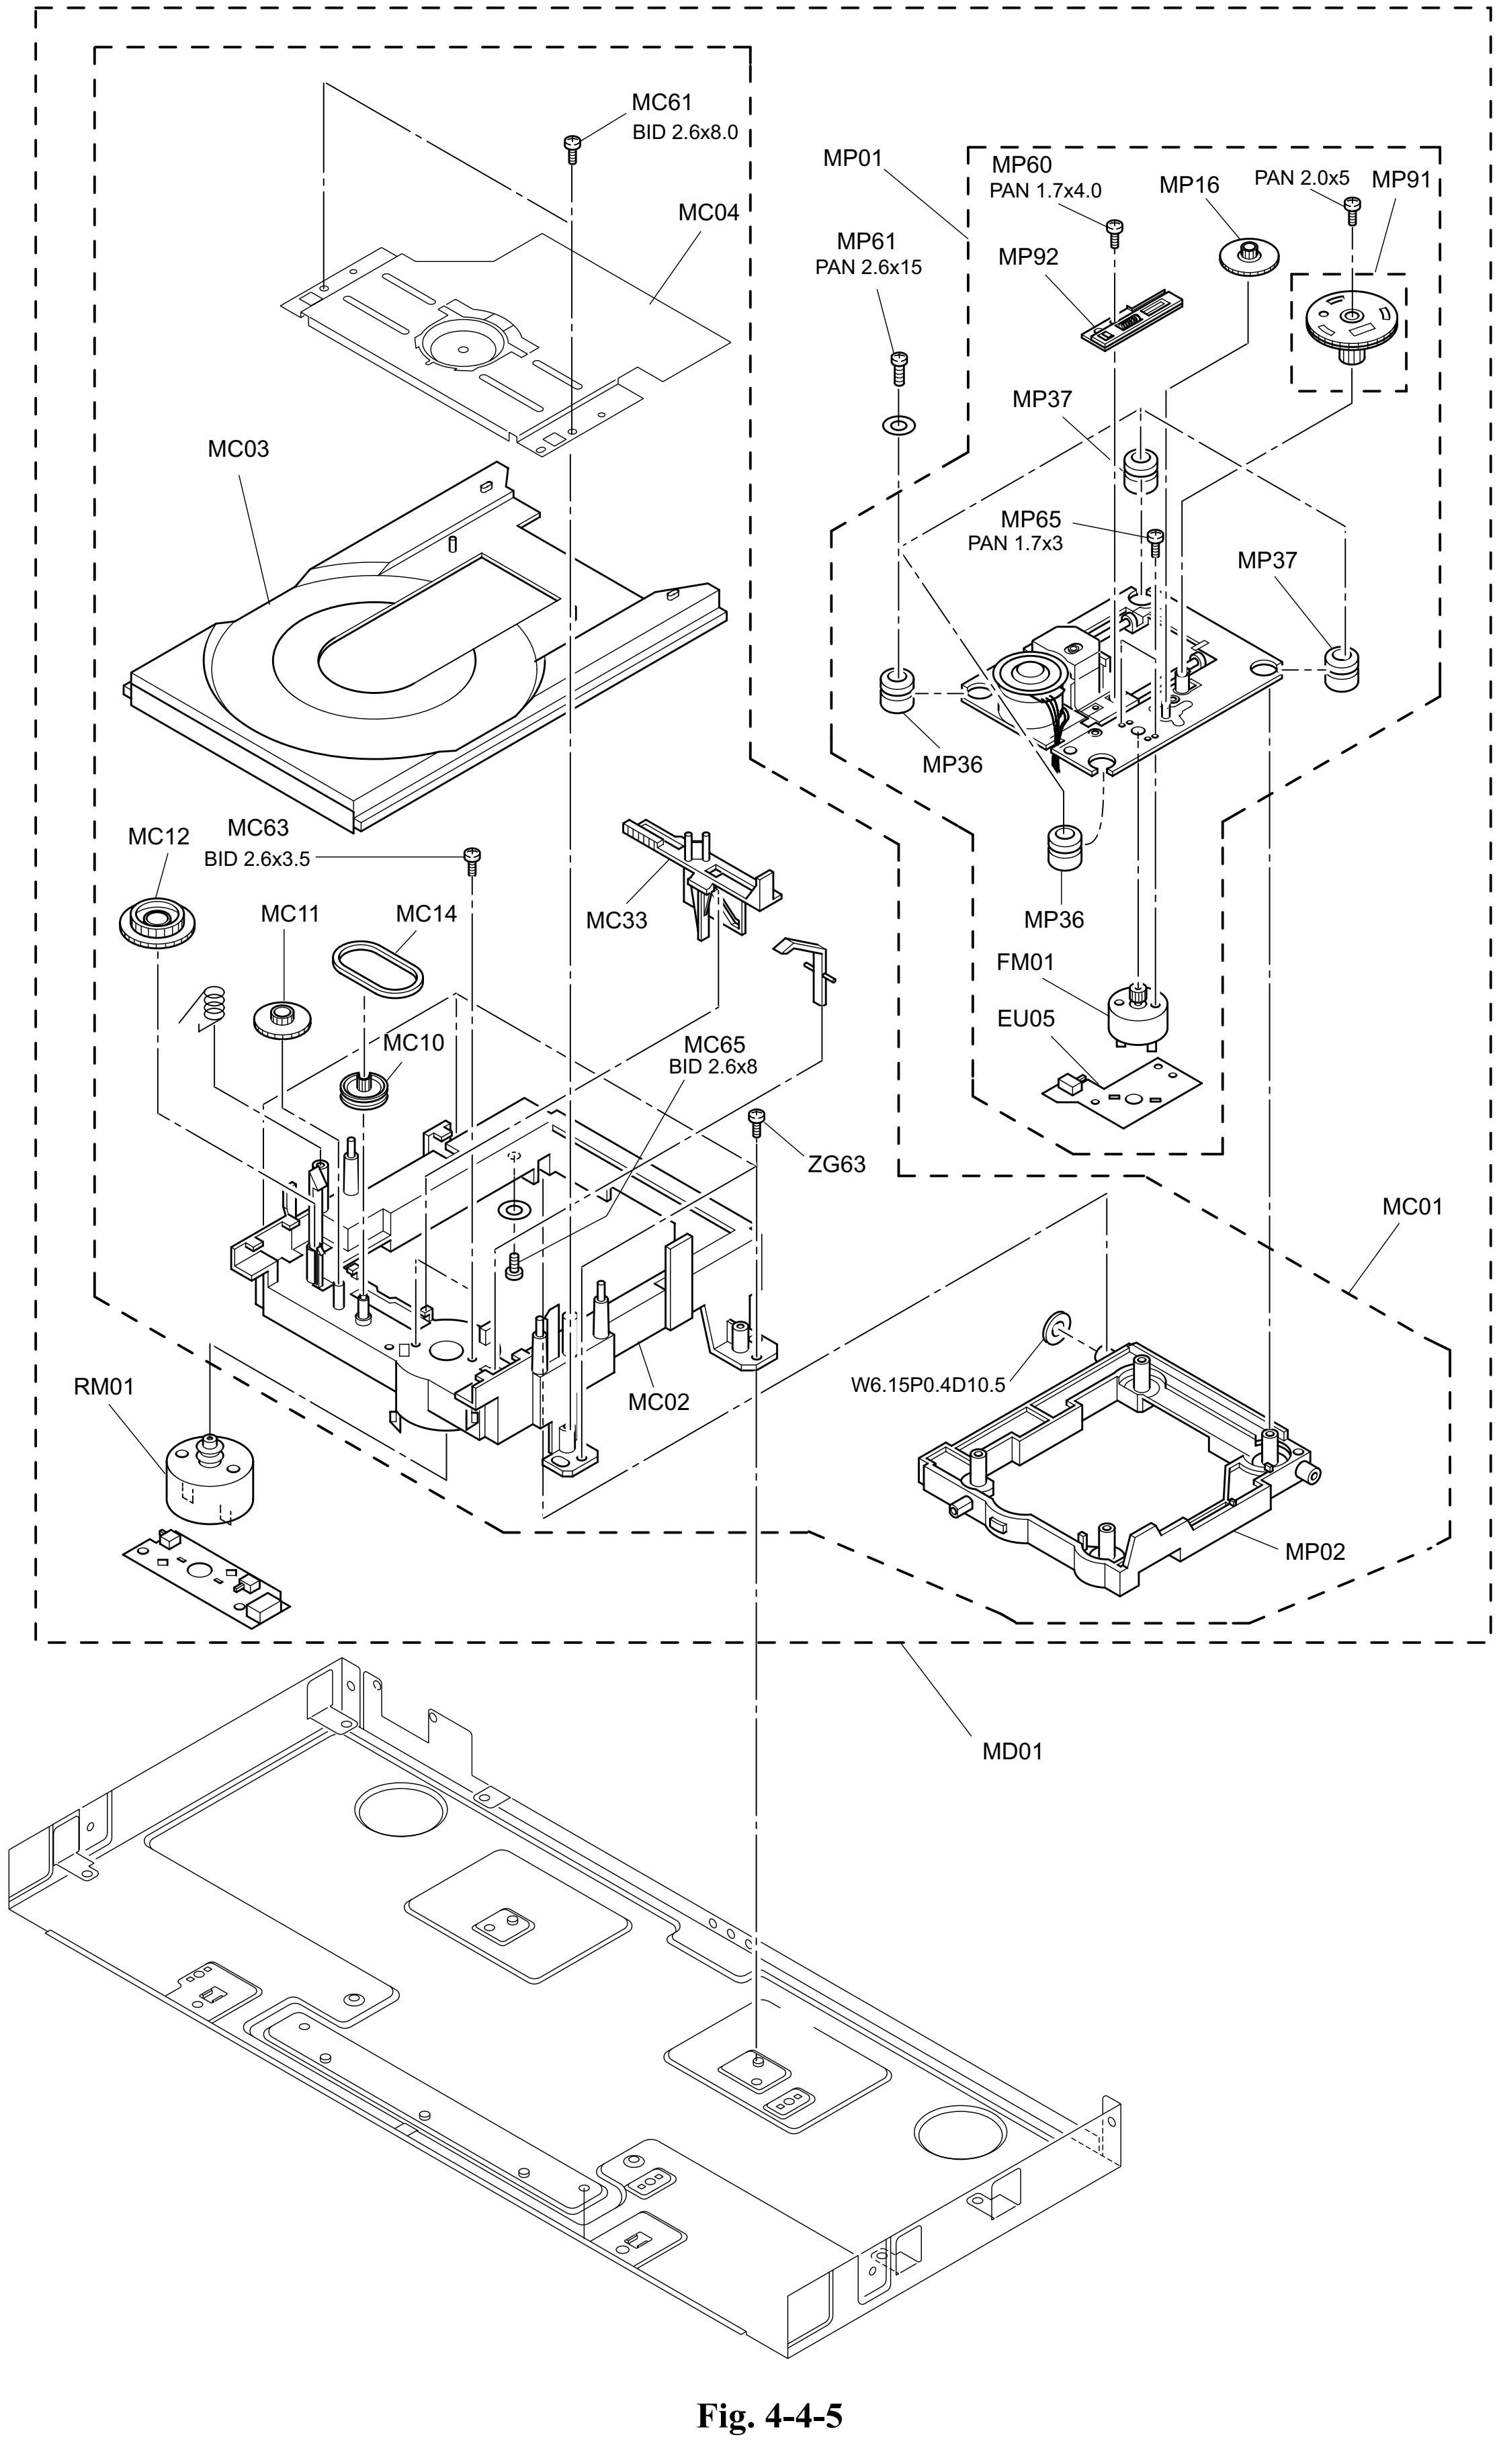
MC61
BID 2.6x8.0
MC04
MC03
MP01
MP60
PAN 1.7x4.0
MP16
PAN 2.0x5
MP91
MP61
PAN 2.6x15
MP92
MP37
MP65
PAN 1.7x3
MP37
MP36
MP36
FM01
EU05
MC12
MC63
BID 2.6x3.5
MC11
MC14
MC33
MC10
MC65
BID 2.6x8
ZG63
MC01
W6.15P0.4D10.5
RM01
MC02
MP02
MD01

Fig. 4-4-5

5. PARTS LIST

	LOCATION NUMBER	PART NUMBER	DESCRIPTION	
			- MECHANICAL PARTS -	
!	MD01	79070499	DVD Mechanism	Single/CD-R
	W302	79080184	Cable,Flexible	FFC,19P,L70
	W501	79080273	Cable,Flexible	FFC,23P,L297
	W502	79080192	Cable,Flexible	FFC,6P,L110
	W503	79080299	Cable,Flexible	FFC,8P,L115
	W603	79080300	Cable,Flexible	FFC,13P,L115
	W901	79080227	Cable,Flexible	FFC,7P,L70
!	ZF01	79078085	Remote Control Unit,	SE-R0070
!	ZF01	79078086	Remote Control Unit,	SE-R0073
!	ZF10	79077213	Owners Manual	English
!	ZF10	79077217	Owners Manual	English/French
!	ZF11	79077218	Additional Manual	English
!	ZF11	79077223	Additional Manual	English/French
!	ZF12	79077220	Owners Manual	Spanish
	ZG01	79071266	Front Panel(Silver)	
	ZG01	79071270	Front Panel(Black)	
	ZG03	79071267	Panel,Tray(Silver)	
	ZG03	79071271	Panel,Tray(Black)	
	ZG09	79071275	Key,Cursor(Silver)	
	ZG09	79071276	Key,Cursor(Black)	
	ZG20	79073096	Cover,Top(Silver)	
	ZG20	79073095	Cover,Top(Black)	
	ZG27	79070469	Label,Caution	
	ZZ03	79080074	Kit,Data Update	

	LOCATION NUMBER	PART NUMBER	DESCRIPTION		
			- ELECTRICAL PARTS -		
	EU01	79083126	PC Board Assy	Main	
			- INTEGRATED CIRCUITS -		
	IC301	79040007	IC	TC7S08F	
	IC302	79040007	IC	TC7S08F	
	IC303	79040007	IC	TC7S08F	
	IC304	79040248	IC	S-80145CLMC-J16	
	IC305	79040356	IC	W986432DH	
	IC306	79040398	IC	ZR36750	
	IC307	79040357	IC	S-24C02AFJA-TB	
	IC308	79040357	IC	S-24C02AFJA-TB	
	IC309	79040284	IC	MBM29DL324BD	
	IC310	79040399	IC	MM1561JFBE	
	IC312	79040354	IC	TC74VHCT244AFTE	
	IC313	79040354	IC	TC74VHCT244AFTE	
	IC401	79040282	IC	TC94A03F	
	IC402	79040323	IC	M11B11664A-30T	
	IC502	79040296	IC	TA1323F	
	IC503	79040324	IC	BA5813FM-E2	
	IC504	79040014	IC	TA75S01F	
	IC902	79040365	IC	AD1958YRS	
			- TRANSISTORS -		
	Q301	79050018	Transistor,Chip	2SA1162	
	Q302	79050018	Transistor,Chip	2SA1162	
	Q303	79050018	Transistor,Chip	2SA1162	
	Q304	79050018	Transistor,Chip	2SA1162	
	Q305	79050018	Transistor,Chip	2SA1162	
	Q306	79050018	Transistor,Chip	2SA1162	
	Q307	79050043	Transistor,Chip	RN1402	
	Q308	79050001	Transistor,Chip	RN2402	
	Q309	79050043	Transistor,Chip	RN1402	
	Q310	79050079	Transistor,Chip	2SA1213-Y	
	Q311	79050016	Transistor,Chip	2SC2712	
	Q401	79050085	Transistor,Chip	2SC3326-B	
	Q501	79050015	Transistor,Chip	HN1B01F	
	Q502	79050015	Transistor,Chip	HN1B01F	
	Q503	79050079	Transistor,Chip	2SA1213-Y	
	Q504	79050043	Transistor,Chip	RN1402	
	Q505	79050014	Transistor,Chip	HN1C03F	
	Q506	79050085	Transistor,Chip	2SC3326-B	
			- DIODES -		
	D501	79060022	Diode,Chip	1SS368	
	D502	79060022	Diode,Chip	1SS368	
	D901	79060102	Diode	1SS184	
			- MISCELLANEOUS -		
	X901	79089003	Oscillator	SMD49,27MHz	
!	EU02	79085104	PC Board Assy	Power	
			- TRANSISTORS -		
	Q801	79050095	Transistor	FS5KM-16A	
!	Q802	79040327	IC	TA1319AP	
!	Q803	79050041	Photo Coupler	TLP621(GR)	
!	Q804	79050041	Photo Coupler	TLP621(GR)	
	Q821	79040146	IC	TA76431S	
	Q822	79050076	Transistor	2SA1585STP-Q	
	Q823	79050099	Transistor	2SA1020-Y	
	Q824	79050077	Transistor	2SC1740STP-Q	
	Q825	79050040	Transistor	2SA1048-Y	
	Q826	79050077	Transistor	2SC1740STP-Q	
	Q827	79040288	IC	PQ05RD11	
	Q828	79040289	IC	PQ3RD13	
	Q830	79050008	Transistor	RN1201	
			- DIODES -		
!	D803	79060087	Diode	S1WB(A)60	
	D805	79060069	Diode	HER108G	
	D806	79060070	Diode	HT15G	
	D807	79060080	Diode	AK06	
	D808	79060029	Diode,Zener	6.8V	
	D821	79060073	Diode	SR306	
	D822	79060073	Diode	SR306	
	D824	79060070	Diode	HT15G	
	D825	79060071	Diode	HER152G	
	D826	79060070	Diode	HT15G	
	D827	79060070	Diode	HT15G	
	D829	79060072	Diode	1N4005S	
	D830	79060080	Diode	AK06	
	D831	79060080	Diode	AK06	
	D832	79060027	Diode,Zener	UZ12BSB	
	D833	79060027	Diode,Zener	UZ12BSB	
	D834	79060005	Diode,Zener	UZ11BSB	
	D835	79060007	Diode,Zener	UZ3.0BSB	
	D836	79060072	Diode	1N4005S	
	D841	79060072	Diode	1N4005S	
			- CAPACITORS -		
!	C801	79020198	Cap,Film	10000pF	M 275V
!	C802	79020198	Cap,Film	10000pF	M 275V
!	C803	79020193	Cap,Ceramic	220pF	K 250V
!	C804	79020193	Cap,Ceramic	220pF	K 250V
!	C811	79020193	Cap,Ceramic	220pF	K 250V
			- RESISTORS -		
			- MISCELLANEOUS -		
!	F801	79087008	Fuse	1.6A,125V	
!	F821	79087013	Fuse	3.00A,125V	
!	F822	79087009	Fuse	3.50A,125V	
!	F823	79087009	Fuse	3.50A,125V	
!	P801	79088028	Power Cord	UL	
!	RF821	79030015	Res,Fusible	2.2ohm	J 1/4W
!	RF822	79030125	Res,Fusible	3.9ohm	J 1/4W
!	RF824	79030015	Res,Fusible	2.2ohm	J 1/4W
!	T801	79010025	Line Filter	183Y0R5	
!	T802	79010026	Power Transformer	SRW3020ED5-210	
	EU03	--------	PC Board Assy	Front	
			- INTEGRATED CIRCUITS -		
	IC101	79040394	IC	TMP86CK74AFG-3PV7	
			- TRANSISTORS -		
	Q101	79050086	Transistor,Chip	RN2202	
			- DIODES -		
	D101	79060094	Diode,LED	SLR-343MC	
	D103	79060015	Diode	1SS133	
			- MISCELLANEOUS -		
	A101	79089167	Display,FL	8-BT-230GNK	
	BZ101	79089156	Buzzer	PKM13EPY	
	MT101	79089146	Module,RMT	GP1U261XK	
	S101	79089157	Switch,Tact	RDSY0010	
	S103	79089020	Switch	Push	
	S104	79089020	Switch	Push	
	S105	79089020	Switch	Push	
	S106	79089020	Switch	Push	
	S107	79089020	Switch	Push	
	S108	79089020	Switch	Push	
	S110	79089020	Switch	Push	
	S111	79089020	Switch	Push	
	S112	79089020	Switch	Push	
	S117	79089020	Switch	Push	
	S120	79089020	Switch	Push	
	X101	79089095	Oscillator,Ceramic	8MHz	
	EU04	--------	PC Board Assy	Power Switch	
			- TRANSISTORS -		
	Q181	79050086	Transistor,Chip	RN2202	
	Q182	79050086	Transistor,Chip	RN2202	
			- DIODES -		
	D181	79060033	Diode,LED		
			- MISCELLANEOUS -		
	S181	79089020	Switch	Push	
	EU05	--------	PC Board Assy	Output	
			- INTEGRATED CIRCUITS -		
	ICX01	79040401	IC	MM1568AJBE	
	ICY01	79040044	IC	NJM4580E	
	ICY02	79040074	IC	TC74HCU04AF	
	ICY03	79089159	IC	TOTX179	
			- TRANSISTORS -		
	QX01	79050043	Transistor,Chip	RN1402	
	QX02	79050043	Transistor,Chip	RN1402	
	QX03	79050043	Transistor,Chip	RN1402	
	QX04	79050043	Transistor,Chip	RN1402	
	QY01	79050043	Transistor,Chip	RN1402	
	QY02	79050001	Transistor,Chip	RN2402	
	QY03	79050001	Transistor,Chip	RN2402	
	QY04	79050014	Transistor,Chip	HN1C03F	
	QY05	79050016	Transistor,Chip	2SC2712	
	QY06	79050018	Transistor,Chip	2SA1162	
	QY07	79050018	Transistor,Chip	2SA1162	
	QY08	79050016	Transistor,Chip	2SC2712	
			- DIODES -		
	DX06	79060028	Diode,Chip	1SS226	
	DX07	79060028	Diode,Chip	1SS226	
	DY01	79060022	Diode,Chip	1SS368	
			- MISCELLANEOUS -		

LOCATION NUMBER	PART NUMBER	DESCRIPTION	
JX01	79089094	Plate,Jack	
SX01	79089158	Switch,Slide	SSAA110200

LOCATION NUMBER	PART NUMBER	DESCRIPTION

TOSHIBA CORPORATION
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN